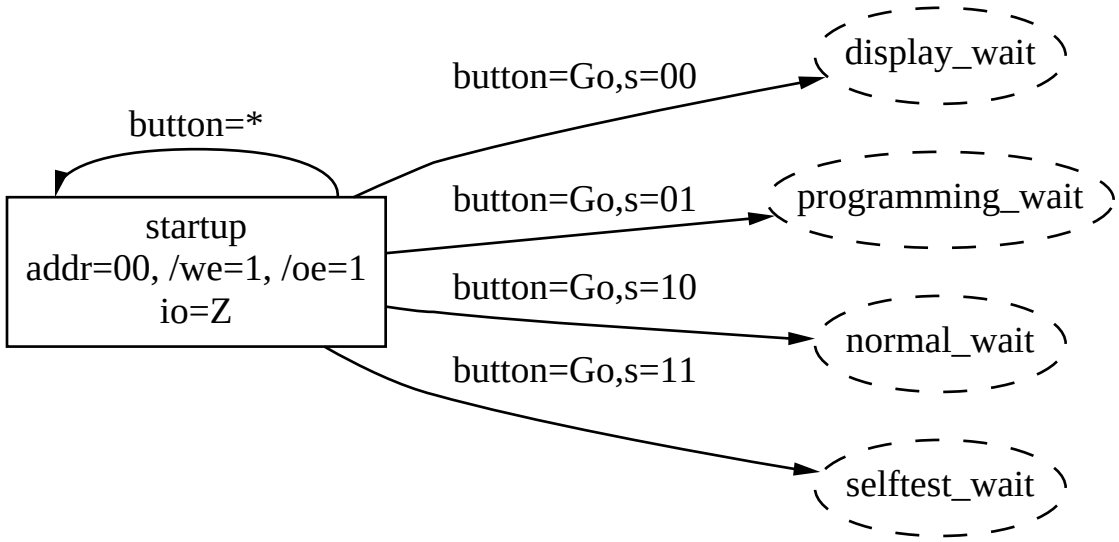
button=*
startup
addr=00, /we=1, /oe=1
io=Z
button=Go,s=00
display_wait
button=Go,s=01
programming_wait
button=Go,s=10
normal_wait
button=Go,s=11
selftest_wait