

IBM InfoPrint Manager for AIX



Reference

Version 3 Release 1

IBM InfoPrint Manager for AIX



Reference

Version 3 Release 1

Note

Before using this information and the product it supports, be sure to read the general information in "Notices" on page xxix.

First Edition (October 1998)

This edition of *IBM InfoPrint Manager for AIX: Reference* applies to Version 3 Release 1 Modification 0 and to all subsequent releases and modifications until otherwise indicated in new editions or technical newsletters. Be sure to use the correct edition for the level of the product.

Order publications through your IBM representative or the IBM branch office serving your locality. Publications are not stocked at the address given below.

The IBM Printing Systems Company welcomes your comments. For your convenience, a form for reader's comments is provided at the back of this publication. If the form has been removed, you may send your comments to the following address:

INFORMATION DEVELOPMENT
THE IBM PRINTING SYSTEMS COMPANY
DEPARTMENT H7FE BUILDING 003G
PO BOX 1900
BOULDER CO 80301-9191

If you prefer to send comments electronically, use one of the following methods:

- Internet: printpub@us.ibm.com
- Fax: 1-800-524-1519

Internet

Visit our home page at <http://www.printers.ibm.com>

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1998. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

Contents

Notices	xxix
Licenses	xxix
Trademarks	xxix
About This Publication	xxxi
Who Should Use This Publication	xxxi
About the Documentation for InfoPrint	xxxi
The InfoPrint Publication Library	xxxi
Other Publications Related to InfoPrint	xxxii
Manual (man) Pages for InfoPrint Commands, Utilities, and Transforms	xxxiii
Manual (man) Pages for InfoPrint Attributes	xxxiv
InfoPrint Online Message Catalog	xxxv
readme Files	xxxv
PDF Versions of the InfoPrint Library	xxxv
The Organization of This Publication	xxxvi
Conventions Used in This Publication	xxxvii
Highlighting	xxxvii
InfoPrint Command Notation	xxxvii
Chapter 1. Introduction	1
Objects	1
Object Classes	1
Object Name Restrictions	2
Object Attributes	2
Commands	5
Flags, Command Attributes, and Arguments	6
Command Output: Headings and Style	7
Tips for Using Commands	8
Administrative Utilities	10
Daemon Utilities	10
Transform Commands	10
Environment Variables	10
Chapter 2. InfoPrint Commands	11
lprafp Command: Submits Remote Jobs	12
Syntax	12
Description	12
Flags	12
Arguments	12
Examples	13
Files	13
mkfntmap Command: Maps PostScript Fonts	14
Syntax	14
Description	14
Arguments	14
Examples	14
pdclean Command: Removes All Jobs from the Specified Object	15
Syntax	15
Description	15
Flags	15

Command Attributes	16
Arguments	16
Examples	17
Suggested Reading	17
pdcreate Command: Creates InfoPrint Objects	18
Syntax	18
Description	18
Flags	19
Command Attributes	20
Arguments	21
Examples	21
Suggested Reading in Hardcopy	22
Suggested Reading Online	22
pdelete Command: Deletes InfoPrint Objects	23
Syntax	23
Description	23
Flags	23
Command Attributes	24
Arguments	25
Examples	26
Suggested Reading	26
pddisable Command: Stops Destinations from Accepting Jobs and Logs from Logging	27
Syntax	27
Description	27
Flags	27
Command Attributes	28
Arguments	29
Examples	29
Suggested Reading	30
pdenable Command: Enables Destinations to Accept Jobs and Logs to Log	31
Syntax	31
Description	31
Flags	31
Command Attributes	32
Arguments	32
Examples	33
Suggested Reading	33
pdl Command: Lists Selected Attribute Values	34
Syntax	34
Description	34
Flags	35
Command Attributes	36
Arguments	39
Examples	39
Suggested Reading in Hardcopy	43
Suggested Reading Online	43
pdmod Command: Modifies Attributes of Submitted Print Jobs	44
Syntax	44
Description	44
Flags	45
Command Attributes	46
Arguments	47
Examples	47

Suggested Reading in Hardcopy	48
Suggested Reading Online	48
pdpause Command: Pauses Jobs, Actual Destinations, Servers, or Queues	49
Syntax	49
Description	49
Flags	50
Command Attributes	51
Arguments	53
Examples	55
Suggested Reading	55
pdpr Command: Submits Jobs	56
Syntax	56
Description	56
Flags	57
Command Attributes	59
Job and Document Attributes Used with the Command	60
Arguments	60
Examples	61
Suggested Reading in Hardcopy	64
Suggested Reading Online	65
pdpromote Command: Advances a Job to the Top of a Queue	66
Syntax	66
Description	66
Flags	66
Command Attributes	67
Arguments	67
Example	67
Suggested Reading	67
pdq Command: Queries Job Status	68
Syntax	68
Description	68
Flags	68
Command Attributes	70
Arguments	71
Examples	71
Suggested Reading in Hardcopy	72
Suggested Reading Online	72
pdreorder Command: Reassigns Jobs	73
Syntax	73
Description	73
Flags	73
Command Attributes	74
Arguments	74
Examples	74
pdresubmit Command: Resubmits Jobs	75
Syntax	75
Description	75
Flags	75
Command Attributes	76
Arguments	77
Examples	78
Suggested Reading	78
pdresume Command: Enables Paused Objects to Resume Operation	79
Syntax	79

Description	79
Flags	79
Command Attributes	80
Arguments	80
Examples	81
Suggested Reading	82
pdrm Command: Removes Jobs	83
Syntax	83
Description	83
Flags	83
Command Attributes	84
Arguments	84
Examples	85
pdset Command: Defines Attribute Values	86
Syntax	86
Description	86
Flags	87
Command Attributes	88
Arguments	89
Examples	89
Suggested Reading in Hardcopy	90
Suggested Reading Online	90
pdshutdown Command: Stops Servers or Actual Destinations	91
Syntax	91
Description	91
Flags	92
Command Attributes	93
Argument	94
Examples	94
Suggested Reading	95
pdspace Command: Backspaces or Forward Spaces a Printer	96
Syntax	96
Description	96
Flags	97
Command Attributes	97
Arguments	98
Examples	98
Chapter 3. The -o Flag for AIX Print Commands	101
Syntax	101
Description	101
Limitations	101
Flag	102
Specifying -o Attribute-Value Pairs	102
-o Attribute-Value Pairs	103
-o Keywords and Values for Specific Data Types	116
Examples	122
Chapter 4. InfoPrint Administrative Utilities	123
adminGUI Utility: Opens the Print Administration Window of the Basic InfoPrint Administrator's GUI	124
Syntax	124
Description	124
Flags	124

Arguments	124
Examples	124
afpsplit Utility: Extracts Pages from a MO:DCA-P File	125
Syntax	125
Description	125
Flags	125
Arguments	125
Example	126
ainupod1 Utility: Generates Accounting Information by User	127
Syntax	127
Description	127
Example	127
Suggested Reading	127
ainupod2 Utility: Generates Accounting Information by Job	128
Syntax	128
Description	128
Example	128
Suggested Reading	128
ainupod3 Utility: Generates Accounting Information for a User	129
Syntax	129
Description	129
Example	129
Suggested Reading	129
ainurpt1 Utility: Generates Accounting Information by Actual Destination	130
Syntax	130
Description	130
Example	130
Suggested Reading	130
ainurpt2 Utility: Generates Accounting Information by User	131
Syntax	131
Description	131
Example	131
Suggested Reading	131
ainurpt3 Utility: Generates Accounting Information for a User	132
Syntax	132
Description	132
Example	132
Suggested Reading	132
ainurpt4 Utility: Generates Audit Information by Destination	133
Syntax	133
Description	133
Example	133
Suggested Reading	133
ainurpt5 Utility: Generates Audit Information by User	134
Syntax	134
Description	134
Example	134
Suggested Reading	134
ainurpt6 Utility: Generates Audit Information for a User	135
Syntax	135
Description	135
Example	135
Suggested Reading	135
cfu Utility: Displays and Builds Coded Fonts	136

Syntax	136
Description	136
Flags	136
Build File Format	136
Arguments	137
Examples	137
Suggested Reading	137
ipguiadv, ipguibasic, and ipguidist Utilities: Start the InfoPrint Operator's GUI	138
Syntax	138
Description	138
Example	138
jsmigr Utility: Migrates PSF for AIX Job Scripts	139
Syntax	139
Description	139
Arguments	140
Examples	140
opergui Utility: Opens the Print Management Window of the Basic InfoPrint Administrator's GUI	141
Syntax	141
Description	141
Flags	141
Arguments	141
Examples	141
pdadmin Utility: Opens the Servers Window of the Advanced InfoPrint Administrator's GUI	142
Syntax	142
Description	142
Examples	142
pdcrcls Utility: Creates Directories for DCE	143
Syntax	143
Description	143
Example	143
pdcrflt Utility: Creates Default Auxiliary Sheets, Media, and Queue	144
Syntax	144
Description	144
Flags	144
Arguments	145
Examples	145
pdcrmed Utility: Creates Commonly Used Media	146
Syntax	146
Description	146
Arguments	146
Example	146
pdinitports Utility: Initializes Ports	147
Syntax	147
Description	147
Flags	147
Arguments	147
Examples	148
pdmigpp Utility: Migrates Existing AIX Printers to InfoPrint	149
Syntax	149
Description	149
Arguments	149
Example	150

pdmincfg Utility: Sets up a Minimum InfoPrint Configuration	151
Syntax	151
Description	151
Flags	151
Arguments	151
Example	151
pdmsg Utility: Displays Information about a Message	153
Syntax	153
Description	153
Flags	153
Examples	153
pdnetifspri Utility: Sets Priorities for Network Adapters	155
Syntax	155
Description	155
Flags	155
Arguments	155
Example	155
rc.pd Utility: Restarts Servers	157
Syntax	157
Description	157
sense Utility: Senses Whether a Channel-Attached Printer is Attached to InfoPrint	158
Syntax	158
Description	158
Arguments	158
Messages and Return Codes	158
Example	159
setup Utility: Starts the InfoPrint Installer	160
Syntax	160
Description	160
Flags	160
Examples	161
startppo Utility: Starts the InfoPrint SMIT Production Print Operations Interface	163
Syntax	163
Description	163
Flags	163
Examples	163
start_server Utility: Starts a Server for a Basic InfoPrint Installation	164
Syntax	164
Description	164
Flags	164
Arguments	165
Examples	165
startsrv Utility: Starts a Server	166
Syntax	166
Description	166
Flags	166
Arguments	167
Examples	167
stop_server Utility: Shuts Down a Server	168
Syntax	168
Description	168
Flags	168
Arguments	168

Examples	168
tldump Utility: Outputs Tape Contents in Human-Readable Format	169
Syntax	169
Description	169
Flags	169
Examples	169
tlist Utility: Lists Files on a Tape	171
Syntax	171
Description	171
Flags	171
Examples	171
t2file Utility: Reads MVS Partitioned Data Sets from Tape	172
Syntax	172
Description	172
Flags	172
Examples	172
Chapter 5. InfoPrint Daemon Utilities	173
mvsprsd Utility: Starts the mvsprsd Daemon	174
Syntax	174
Description	174
Flags	174
Examples	175
Suggested Reading	176
pcl2afpd Utility: Starts the pcl2afpd Daemon	177
Syntax	177
Description	177
Flags	177
Configuration File Keywords and Values	177
Examples	179
Files	179
ps2afpd Utility: Starts the ps2afpd Daemon	180
Syntax	180
Description	180
Flags	180
Configuration File Keywords and Values	180
Examples	182
Files	182
Chapter 6. InfoPrint Transform Commands	183
db2afp Command: Transforms DBCS Data to AFP	184
Syntax	184
Description	184
Limitations	184
Flags and Values	184
Examples	186
Files	187
d2afp Command: Transforms ditroff Data to AFP	188
Syntax	188
Description	188
Limitations	188
Flags and Values	189
Examples	189
Files	190

gif2afp Command: Transforms GIF Data to AFP	191
Syntax	191
Description	191
Automatic Invocation	191
Input and Output	191
Errors and Error Recovery	193
Data Transformations	194
Parameters	195
Resource Search Path	197
Limitations	197
Acknowledgments	197
Options and Values	197
jpeg2afp Command: Transforms JPEG Data to AFP	206
Syntax	206
Description	206
Automatic Invocation	206
Input and Output	206
Errors and Error Recovery	208
Data Transformations	209
Parameters	210
Resource Search Path	211
Limitations	212
Acknowledgments	212
Options and Values	212
line2afp Command: Transforms S/370 Line Data and ASCII Data to AFP	220
Syntax	220
Description	221
Flags and Values	223
Examples	239
Files	241
Messages	242
pcl2afp Command: Transforms PCL Data to AFP	243
Syntax	243
Description	243
Limitations	244
Flags and Values	245
Transforming PCL Image Data	252
The pcl2afp and pcl2afpd Configuration Files	256
Simple Examples	258
More Complex Examples	259
Files	265
pdf2afp and ps2afp Transforms: Transform PDF or PostScript Data to AFP	266
Syntax	266
Description	266
Limitations	268
Flags and Values	268
The ps2afp and ps2afpd Configuration Files	276
Examples	278
Files	279
sap2afp Command: Transforms SAP OTF or ABAP Data to AFP	280
Syntax	280
Description	280
Flags	280
The sap2afp Configuration Files	280

Examples	291
tiff2afp Command: Transforms TIFF Data to AFP	292
Syntax	292
Description	292
Automatic Invocation	292
Input and Output	292
Errors and Error Recovery	294
Data Transformations	295
Parameters	297
Resource Search Path	298
Limitations	298
Acknowledgments	298
Options and Values	299
Chapter 7. InfoPrint Object Attributes	309
Attributes for Actual Destinations	310
Attributes Not Displayed in the InfoPrint Administrator's GUI	310
Initially Settable Attribute Listing	310
Resettable Attribute Listing	311
accept-jobs (All DSS)	313
accounting-exit (PSF, Email, Fax)	314
ack-interval (PSF)	314
add-carriage-returns (PSF)	314
add-line-feeds (PSF)	315
ascii-character-mapping (PSF)	315
ascii-font-map (PSF)	315
associated-queue (All DSS)	316
associated-server (All DSS)	317
attachment-type (PSF)	317
attribute-map (BSD)	318
audit-exit (PSF, Email, Fax)	318
automatic-postscript-mode-switch (AIX)	319
auxiliary-sheet-selections-supported (AIX, PSF)	319
cancel-individual-document-supported (All DSS)	320
carriage-control-types-supported (PSF, Email, Fax)	320
character-mappings-supported (AIX, PSF, Email, Fax)	320
checkpoint-at-stacker (PSF)	321
checkpoint-formats-supported (AIX, PSF, Email, Fax)	322
command (AIX, BSD, PSF)	322
connection-timeout (PSF)	322
content-orientations-supported (AIX, 3170)	322
convert-to-ebcdic-supported (PSF, Email, Fax)	323
data-fidelity-problem-reported-supported (PSF)	323
default-font-fidelity-action (PSF)	324
default-font-resolution (PSF)	324
default-input-tray (AIX, PSF)	325
descriptor (All DSS)	325
destination-command (AIX, BSD, PSF)	326
destination-data-stream (PSF)	327
destination-locations (All DSS)	327
destination-model (All DSS)	327
destination-name (All DSS)	328
destination-needs-attention-time (All DSS)	329
destination-needs-key-operator-attention-time (All DSS)	329

destination-pass-through (AIX, BSD, PSF, 3170)	329
destination-realization (All DSS)	330
destination-register-threshold (All DSS)	330
destination-release-timer (PSF, Email, Fax)	331
destination-state (All DSS)	331
destination-support-system (All DSS)	332
destination-tcpip-internet-address (AIX, BSD, PSF, 3170)	333
destination-tcpip-port-number (PSF)	333
device-name (AIX, PSF, Email, Fax)	334
device-support-system (All DSS)	334
document-attributes-supported (All DSS)	335
document-finishings-supported (PSF)	336
document-formats-supported (All DSS)	337
document-types-supported (All DSS)	338
dss-job-message-disposition (PSF)	339
dss-job-message-log-size (PSF)	339
dss-job-message-log-wrap (PSF)	339
ebcdic-character-mapping (PSF)	340
enabled (All DSS)	340
end-message-supported (All DSS)	340
end-sheets-supported (AIX, PSF)	341
font-resolutions-supported (PSF)	342
force-destination-setup (AIX, PSF, 3170)	342
force-printer-setup (AIX, PSF, 3170)	343
form-definition (PSF)	343
image-fit-supported (PSF, Email, Fax)	343
image-length (3170)	344
image-out-formats-supported (PSF)	345
image-width (3170)	345
input-data-user-exit (PSF, Email, Fax)	346
input-trays-medium (AIX)	347
input-trays-supported (AIX, BSD, PSF)	348
intervention-timer (PSF)	349
job-attributes-supported (All DSS)	349
job-batches-ready (All DSS)	350
job-finishings-supported (PSF)	350
job-retry-count-limit (AIX, BSD, PSF, 3170, Fax)	350
job-retry-interval (AIX, BSD, PSF)	351
job-rip-actions-supported (PSF, Email, Fax)	351
job-size-range-ready (All DSS)	352
job-size-range-supported (All DSS)	353
job-start-wait-supported (PSF, Email, Fax)	353
list-of-managers (All DSS)	354
locations (All DSS)	354
log-accounting-data (All DSS)	354
managers (All DSS)	355
maximum-concurrent-jobs (All DSS)	355
maximum-copies-supported (All DSS)	356
maximum-fonts-to-keep (PSF)	356
maximum-overlays-to-keep (PSF)	356
maximum-segments-to-keep (PSF)	357
media-ready (AIX, BSD, PSF, 3170)	357
media-supported (AIX, BSD, PSF, 3170)	358
message (All DSS)	359

message-font-type (PSF)	359
message-form-definition (PSF)	359
model (All DSS)	360
non-process-runout-timer (PSF)	360
notification-profile (All DSS)	360
notify-operator (All DSS)	361
number-up-supported (PSF, Email, Fax)	362
object-class (All DSS)	363
offset-stacking-available (PSF)	363
operators (All DSS)	363
optimize-for-multiple-copies (AIX, BSD, PSF, 3170)	363
orientations-supported (AIX, 3170)	364
other-options (AIX, BSD, PSF, 3170)	364
output-appearances-supported (PSF)	364
output-bin (PSF)	365
output-bin-numbers (PSF)	365
output-bins-supported (PSF, 3170)	366
output-data-user-exit (PSF, Email, Fax)	366
output-format-supported (PSF, Email, Fax)	367
overlay (PSF, Email, Fax)	367
page-select-supported (PSF, Email, Fax)	368
pcl-server-address (All DSS)	368
pcl-server-port (All DSS)	369
physical-printer (All DSS)	369
plex (PSF)	369
plexes-supported (AIX, BSD, PSF, 3170)	370
postscript-server-address (All DSS)	370
postscript-server-port (All DSS)	371
presentation-fidelity-problem-reported (PSF)	371
print-edge-marks (AIX, BSD, PSF, 3170)	372
print-qualities-supported (AIX, BSD)	372
print-queue (PSF)	372
print-queue-name (PSF)	372
printer (All DSS)	373
printer-command (AIX, BSD, PSF)	373
printer-data-stream (PSF)	373
printer-end-sheet (AIX, PSF)	373
printer-escape-codes (PSF)	374
printer-hot-folder (3170)	375
printer-locations (All DSS)	375
printer-memory (PSF)	375
printer-model (All DSS)	376
printer-name (All DSS)	376
printer-needs-attention-time (All DSS)	376
printer-needs-key-operator-attention-time (All DSS)	376
printer-pass-through (AIX, BSD, PSF, 3170)	376
printer-realization (All DSS)	376
printer-register-threshold (All DSS)	376
printer-release-timer (PSF, Email, Fax)	376
printer-resolutions-ready (PSF, 3170)	376
printer-resolutions-supported (PSF, 3170)	377
printer-separator-sheet (AIX, PSF)	377
printer-start-sheet (AIX, PSF, 3170)	378
printer-state (All DSS)	379

printer-s370-channel-device-address (PSF)	379
printer-s370-channel-slot-number (PSF)	379
printer-tcpip-internet-address (AIX, BSD, PSF, 3170)	379
printer-tcpip-port-number (PSF)	380
printer-timeout-period (AIX, PSF)	380
problem-message (All DSS)	380
protected-attributes (All DSS)	381
psf-tray-characteristics (PSF)	381
qualities-supported (AIX, BSD)	383
register-threshold (All DSS)	383
registered-with-spooler (All DSS)	383
remote-queue (AIX)	384
resource-context-font (PSF, Email, Fax)	384
resource-context-form-definition (PSF, Email, Fax)	385
resource-context-overlay (PSF, Email, Fax)	386
resource-context-page-definition (PSF, Email, Fax)	386
resource-context-page-segment (PSF, Email, Fax)	387
reverse-output (3170)	388
rip-ini-file (3170)	388
rip-server (3170)	388
scanner-corrections-supported (PSF)	389
scheduler-sort-primary-order (All DSS)	389
scheduler-sort-secondary-order (All DSS)	389
schedulers-supported (All DSS)	390
screen-frequencies-supported (PSF)	390
separator-sheets-supported (AIX, PSF)	390
sides (PSF)	391
sides-supported (AIX, BSD, PSF, 3170)	392
snmp-active (AIX, BSD, PSF, Fax, Email)	392
snmp-community-name (AIX, BSD, PSF)	392
snmp-retry-count (AIX, BSD, PSF)	393
snmp-timeout (AIX, BSD, PSF)	393
start-message-supported (All DSS)	394
start-sheets-supported (AIX, PSF, 3170)	394
table-reference-characters-supported (PSF, Email, Fax)	395
timeout-period (AIX, PSF)	395
transform-output-location (3170)	395
use-snmp (AIX, BSD, PSF, Fax, Email)	396
warning-message (AIX, BSD, PSF)	396
x-image-shift-range-supported (PSF, 3170, Email, Fax)	397
y-image-shift-range-supported (PSF, 3170, Email, Fax)	397
Attributes for Auxiliary-Sheet Objects	399
Initially Settable Attribute Listing	399
Resettable Attribute Listing	399
associated-server	399
auxiliary-sheet-identifier	399
descriptor	400
object-class	400
psf-exit-form-definition	400
psf-exit-page-mark	401
psf-exit-program-name	401
Attributes for Documents and Default Documents	403
Document	403
Default Document	403

Attributes Not Displayed in the InfoPrint Administrator's GUI	403
Initially Settable Attribute Listing	403
Resettable Attribute Listing	403
Per-Document Attribute Listing	406
account-text (PSF, Email, Fax)	408
address1-text (PSF, Email, Fax)	408
address2-text (PSF, Email, Fax)	408
address3-text (PSF, Email, Fax)	409
address4-text (PSF, Email, Fax)	409
associated-server (Default Document Only) (All DSS)	410
base-printer (PSF)	410
bits-per-spot (3170)	410
black-overprint (3170)	411
building-text (PSF)	411
callback-number (Fax)	411
carriage-control-type (PSF, Email, Fax)	412
chars (PSF, Email, Fax)	412
cms-proclink (3170)	413
cms-product (3170)	413
compressed-output (3170)	414
content-orientation (AIX, 3170)	414
control-strip (3170)	415
convert-to-ebcdic (PSF, Email, Fax)	415
copies (All DSS)	415
copy-count (All DSS)	415
data-fidelity-problem-reported (PSF)	416
default-character-mapping (AIX, PSF, Email, Fax)	416
default-input-tray (AIX, PSF)	417
default-medium (AIX, PSF, 3170)	418
default-printer-resolution (PSF, 3170)	418
department-text (PSF)	419
descriptor (Default Document Only) (All DSS)	419
destination-company-text (Fax)	420
destination-initial-value-document (Document Only) (All DSS)	420
destination-pass-through (AIX, BSD, PSF)	420
document-comment (AIX, BSD, PSF, Email, Fax)	420
document-content (Document Only) (All DSS)	421
document-content-list (Document Only) (AIX, BSD, PSF, 3170)	421
document-file-name (Document Only) (All DSS)	421
document-finishing (PSF)	422
document-format (All DSS)	422
document-number (Document Only) (All DSS)	423
document-sequence-number (Document Only) (All DSS)	423
document-type (Document Only) (All DSS)	423
dot-shape (3170)	425
email-from-address (Email)	425
email-to-address (Email)	426
enable-settrap (3170)	426
fax-number (Fax)	426
fax-to-name (Fax)	427
file-name (Document Only) (All DSS)	427
font-fidelity-action (PSF)	427
font-processing-messages (PSF)	427
font-resolution (PSF)	428

form-definition (PSF, Email, Fax)	428
format (All DSS)	429
image-center-x (3170)	429
image-center-y (3170)	429
image-fit (PSF, Email, Fax)	430
image-length (PSF, 3170, Email, Fax)	430
image-out-format (PSF)	431
image-scale (3170)	432
image-width (PSF, 3170, Email, Fax)	432
initial-value-document (Document Only) (All DSS)	433
initial-value-document-identifier (Default Document Only) (All DSS)	434
input-exit (PSF, Email, Fax)	434
input-tray-select (PSF)	435
list-of-managers (Default Document Only) (All DSS)	435
logical-destinations-ready (Default Document Only) (All DSS)	435
logical-printers-ready (Default Document Only) (All DSS)	436
managers (Default Document Only) (All DSS)	436
maximum-messages-printed (All DSS)	436
maximum-transform-pages-ahead (PSF)	436
message (Default Document Only) (All DSS)	436
mvs-class (PSF)	437
mvs-destination (PSF)	437
mvs-forms (PSF)	437
mvs-segment-id (PSF)	438
name-text (PSF)	438
new-line-option (PSF, Email, Fax)	439
node-id-text (PSF)	439
number-up (Document Only) (PSF, Email, Fax)	440
object-class (All DSS)	440
octet-count (Document Only) (All DSS)	440
orientation (AIX, 3170)	441
originating-company-text (Fax)	441
other-options (AIX, BSD, PSF)	441
other-transform-options (PSF, Email, Fax)	441
output-appearance (PSF)	441
output-bin (PSF, 3170)	442
output-face-up (3170)	442
output-format (PSF, Email, Fax)	443
overlay (PSF, Email, Fax)	444
overprint (3170)	445
page-clip (3170)	445
page-count (Document Only) (All DSS)	445
page-definition (PSF, Email, Fax)	446
page-media-select (PSF)	446
page-select (Document Only) (PSF, Email, Fax)	446
plex (AIX, BSD, PSF, 3170)	447
print-quality (AIX, BSD)	448
printer-initial-value-document (Document Only) (All DSS)	448
printer-pass-through (AIX, BSD, PSF)	448
programmer-text (PSF)	448
resource-context (PSF, Email, Fax)	449
resource-context-font (PSF, Email, Fax)	450
resource-context-form-definition (PSF, Email, Fax)	451
resource-context-overlay (PSF, Email, Fax)	451

resource-context-page-definition (PSF, Email, Fax)	452
resource-context-page-segment (PSF, Email, Fax)	453
resource-context-user (PSF, Email, Fax)	453
resource-exit (PSF)	454
room-text (PSF)	454
scanner-correction (PSF)	455
screen-frequency (PSF)	455
segment-file-size (PSF)	456
sequence-number (Document Only) (All DSS)	456
shared-formdef (PSF, Email, Fax)	456
shift-out-shift-in (PSF, Email, Fax)	457
sides (AIX, BSD, PSF, 3170)	457
start-on-new-sheet (PSF)	458
subject-text (Email, Fax)	459
table-reference-characters (PSF, Email, Fax)	459
title-text (PSF)	459
transfer-method (Document Only) (All DSS)	460
transform-message-file-name (PSF, Email, Fax)	460
transform-output-file-name (PSF, Email, Fax)	460
type (Document Only) (All DSS)	461
user-id-text (PSF)	461
x-image-shift (PSF, 3170, Email, Fax)	461
x-image-shift-back (PSF)	462
y-image-shift (PSF, 3170, Email, Fax)	462
y-image-shift-back (PSF)	463
Attributes for Jobs and Default Jobs	464
Default Job	464
Job	464
Attributes Not Displayed in the InfoPrint Administrator's GUI	464
Initially Settable Attribute Listing	464
Resettable Attribute Listing	465
actual-destinations-requested (All DSS)	465
associated-server (Default Job Only) (All DSS)	466
auxiliary-sheet-selection (AIX, PSF)	466
comment (All DSS)	467
completion-time (Job Only) (All DSS)	467
current-job-state (Job Only) (All DSS)	467
current-page-printing (Job Only) (PSF, Email, Fax)	468
d-s-s-requested (All DSS)	469
deadline-in-jeopardy (Job Only) (PSF, Email, Fax)	469
delete-segment-list (PSF, Email, Fax)	469
descriptor (Default Job Only) (All DSS)	469
destination-initial-value-job (Job Only) (All DSS)	470
destination-locations-requested (All DSS)	470
destination-models-requested (All DSS)	471
destination-name-requested (Job Only) (All DSS)	471
destinations-assigned (Job Only) (All DSS)	472
destinations-used (Job Only) (All DSS)	472
device-support-system-requested (All DSS)	473
discard-time (Job Only) (All DSS)	473
dss-requested (All DSS)	473
end-message (All DSS)	473
estimated-completion-time (Job Only) (PSF, Email, Fax)	473
estimated-processing-time (Job Only) (PSF, Email, Fax)	474

formatted-job-ticket-content (Job Only) (PSF, Email, Fax)	474
global-id (Job Only) (All DSS)	474
hold (All DSS)	475
initial-value-job (Job Only) (All DSS)	475
initial-value-job-identifier (Default Job Only) (All DSS)	475
intervening-jobs (Job Only) (All DSS)	475
job-batch (AIX, BSD, PSF, Email, Fax)	476
job-client-id (Job Only) (All DSS)	476
job-comment (All DSS)	476
job-complexity (PSF, Email, Fax)	477
job-copies-completed (Job Only) (All DSS)	477
job-deadline-time (Job Only) (PSF, Email, Fax)	477
job-discard-time (Job Only) (All DSS)	478
job-end-message (All DSS)	478
job-finishing (PSF)	478
job-hold (All DSS)	479
job-identifier (Job Only) (All DSS)	480
job-log (Job Only) (All DSS)	480
job-media-sheet-count (Job Only) (PSF, Email, Fax)	481
job-message-from-administrator (Job Only) (All DSS)	481
job-message-to-operator (All DSS)	481
job-name (All DSS)	482
job-originator (Job Only) (All DSS)	482
job-owner (Job Only) (All DSS)	483
job-page-count (Job Only) (All DSS)	483
job-priority (All DSS)	484
job-print-after (Job Only) (All DSS)	484
job-retain-until (Job Only) (PSF, Email, Fax)	484
job-retention-period (All DSS)	485
job-rip-action (PSF, Email, Fax)	485
job-size (Job Only) (All DSS)	486
job-start-message (All DSS)	486
job-start-wait (AIX, BSD, PSF, Email, Fax)	487
job-state (Job Only) (All DSS)	487
job-state-reasons (Job Only) (All DSS)	487
job-submission-complete (Job Only) (All DSS)	489
job-ticket-content (Job Only) (PSF, Email, Fax)	489
last-accessor (Job Only) (All DSS)	489
last-modifier (Job Only) (All DSS)	489
list-of-managers (Default Job Only) (All DSS)	489
locations-requested (All DSS)	490
logical-destinations-ready (Default Job Only) (All DSS)	490
logical-printer-requested (All DSS)	490
logical-printers-ready (Default Job Only) (All DSS)	490
managers (Default Job Only) (All DSS)	491
media-sheet-count (Job Only) (PSF, Email, Fax)	491
media-sheets-completed (Job Only) (PSF, Email, Fax)	491
message (Default Job Only) (All DSS)	491
message-from-administrator (Job Only) (All DSS)	491
message-to-operator (All DSS)	491
models-requested (All DSS)	492
modification-time (Job Only) (All DSS)	492
name (All DSS)	492
name-of-last-accessor (Job Only) (All DSS)	492

new-job-identifier (Job Only) (All DSS)	492
notification-profile (All DSS)	492
number-of-documents (Job Only) (All DSS)	494
object-class (All DSS)	495
octets-completed (Job Only) (All DSS)	495
optimize-for-multiple-copies (PSF)	495
originator (Job Only) (All DSS)	496
owner (Job Only) (All DSS)	496
pages-completed (Job Only) (AIX, PSF)	496
physical-printers-requested (All DSS)	496
position-in-queue (Job Only) (All DSS)	497
previous-job-state (Job Only) (All DSS)	497
previous-state (Job Only) (All DSS)	497
print-after (Job Only) (All DSS)	497
printer-initial-value-job (Job Only) (All DSS)	497
printer-locations-requested (All DSS)	497
printer-models-requested (All DSS)	497
printer-name-requested (All DSS)	498
printer-requested (All DSS)	498
printers-assigned (Job Only) (All DSS)	498
printers-used (Job Only) (All DSS)	498
processing-time (Job Only) (All DSS)	498
queue-assigned (Job Only) (All DSS)	498
queue-position (Job Only) (All DSS)	498
reasons (Job Only) (All DSS)	499
required-resources-not-ready (Job Only) (All DSS)	499
required-resources-not-supported (Job Only) (All DSS)	499
results-profile (AIX, BSD, PSF)	500
retention-period (All DSS)	501
start-message (All DSS)	501
started-printing-time (Job Only) (All DSS)	501
state-reasons (Job Only) (All DSS)	501
submission-time (Job Only) (All DSS)	501
tape-exit (Job Only) (PSF, Email, Fax)	501
tape-format (Job Only) (PSF, Email, Fax)	502
tape-label (Job Only) (PSF, Email, Fax)	502
tape-max-block-size (Job Only) (PSF, Email, Fax)	502
tape-rewind-before (Job Only) (PSF, Email, Fax)	503
tape-rewind-unload (Job Only) (PSF, Email, Fax)	503
ticket-content (Job Only) (PSF, Email, Fax)	504
total-job-octets (Job Only) (All DSS)	504
user-locale (Job Only) (All DSS)	504
user-name (Job Only) (All DSS)	504
Attributes for Logs	506
Initially Settable Attribute Listing	506
Resettable Attribute Listing	506
associated-server	506
descriptor	506
enabled	507
log-address	507
log-identifier	507
log-messages	508
log-severity	508
log-size	509

log-trace-groups	509
log-type	510
log-wrap	510
object-class	510
Attributes for Logical Destinations	511
Attributes Not Displayed in the InfoPrint Administrator's GUI	511
Initially Settable Attribute Listing	511
Resettable Attribute Listing	511
associated-queue	512
associated-server	512
authorize-jobs	513
auxiliary-sheet-selections-supported	513
carriage-control-types-supported	514
character-mappings-supported	514
content-orientations-supported	515
convert-to-ebcdic-supported	515
data-fidelity-problem-reported-supported	516
descriptor	516
destination-associated-destinations	517
destination-initial-value-document	517
destination-initial-value-job	517
destination-locations	518
destination-model	518
destination-name	519
destination-realization	519
destination-support-system	520
destinations-ready	520
device-support-system	520
document-formats-supported	520
document-types-supported	521
enabled	522
end-message-supported	522
image-out-formats-supported	523
input-trays-supported	523
job-size-range-supported	524
list-of-managers	525
locations	525
logical-printer	525
managers	525
maximum-copies-supported	526
media-supported	526
message	527
model	527
notification-profile	527
nt-drivers	528
object-class	528
orientations-supported	528
os2-driver-names	528
os2-drivers	530
page-select-supported	530
plexes-supported	530
print-qualities-supported	531
printer	531
printer-associated-printers	531

printer-initial-value-document	531
printer-initial-value-job	531
printer-locations	531
printer-model	531
printer-name	532
printer-realization	532
printers-ready	532
protected-attributes	532
qualities-supported	532
sides-supported	532
start-message-supported	533
table-reference-characters-supported	533
windows-driver-names	534
windows-drivers	534
windows-nt-driver-names	534
windows-nt-drivers	535
x-image-shift-range-supported	535
y-image-shift-range-supported	536
Attributes for Media	538
Attributes Not Displayed in the InfoPrint Administrator's GUI	538
Initially Settable Attribute Listing	538
Resettable Attribute Listing	538
associated-server	538
descriptor	539
medium-color	539
medium-dimensions	540
medium-form-parts	540
medium-holes-count	541
medium-identifier	541
medium-sides	542
medium-size	542
medium-type	542
message	543
object-class	543
Attributes for Queues	544
Initially Settable Attribute Listing	544
Resettable Attribute Listing	544
actual-destinations-assigned	544
actual-destinations-ready	544
assign-to-destination	545
assign-to-printer	545
associated-server	546
backlog	546
backlog-lower-bound	546
backlog-update-interval	546
backlog-upper-bound	547
backlogged	547
current-backlog	548
descriptor	548
list-of-managers	548
logical-destinations-assigned	549
logical-destinations-ready	549
logical-printers-assigned	549
logical-printers-ready	549

managers	549
message	550
notification-profile	550
notify-operator	551
object-class	552
operators	552
physical-printers-assigned	552
physical-printers-ready	552
protected-attributes	552
queue-backlog	552
queue-name	553
queue-state	553
requeue-failed-jobs	553
Attributes for Resource Contexts	555
Initially Settable Attribute Listing	555
Resettable Attribute Listing	555
associated-server	555
context-address	556
descriptor	556
object-class	556
resource-context-identifier	557
Attributes for Servers	558
Initially Settable Attribute Listing	558
Resettable Attribute Listing	558
accept-unsupported-jobs	558
actual-destinations-ready	559
actual-destinations-supported	559
cancel-individual-document-supported	559
descriptor	560
destination-states-supported	560
document-attributes-supported	561
events-supported	561
hostname	563
i-p-address	563
ip-address	563
job-attributes-supported	563
job-state-reasons-supported	563
job-states-supported	564
job-submission-timer	564
list-of-managers	564
locale	565
log-accounting-data	565
logical-destinations-ready	566
logical-destinations-supported	566
logical-printers-ready	566
logical-printers-supported	566
managers	566
maximum-barco-rips	566
maximum-non-raster-rips	567
maximum-raster-rips	567
message	568
modify-individual-document-supported	568
multiple-documents-supported	568
notification-delivery-methods-supported	568

notification-profile	569
npm-server-ip-address	570
npm-server-port-number	570
object-class	571
object-classes-supported	571
physical-printers-ready	571
physical-printers-supported	572
printer-states-supported	572
problem-child	572
protected-attributes	572
queues-supported	572
save-rip-files	573
security-level	573
server-hostname	574
server-ip-address	574
server-name	574
server-state	575
snmp-aix-printer-models	575
snmp-normal-poll-interval	575
snmp-problem-poll-interval	576
transfer-methods-supported	576
Chapter 8. InfoPrint and AIX Environment Variables	577
Querying Environment Variables	581
Setting Environment Variables	581
In a File	581
On the Command Line	582
Chapter 9. Notification Events and Event Classes	583
Appendix A. Attribute-to-Object Listing	601
Appendix B. Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents	619
Appendix C. Job Validation and Scheduling	623
Appendix D. Form Definitions and Page Definitions Supplied with InfoPrint	627
Default Form Definitions	627
General-Purpose Form Definitions	627
Form Definitions for Printing Envelopes	629
Form Definitions for 17 by 11 Inch Paper	629
Form Definitions Specifying a 0, 0 Offset	630
Form Definitions Specifying N_UP Page Positioning	631
Form Definitions for Printing on Prepunched Paper	632
Form Definitions for Specific Models of IBM Printers	632
Page Definitions Supplied with InfoPrint	633
Page Definitions for Letter-Sized Paper	633
Page Definitions for A4-Sized Paper	634
Page Definitions for Letter- and A4-Sized Paper with Multiple-Up of 2 and 4	635
Page Definitions for Legal-Sized Paper	636
Page Definitions for B4-Sized Paper	636

Glossary	637
Sources and References	637
Index	657

Figures

1.	A PCL Image	253
2.	A Cropped PCL Image	254
3.	A PCL Image Offset from the Top-Left Corner	254
4.	Sample pcl2afp Configuration File	257
5.	Sample ps2afp Configuration File	276
6.	Sample barcode.tab Configuration File	282
7.	Sample defcp.tab Configuration File	283
8.	Header and Courier Portions of a Sample fonts.tab Configuration File	286
9.	Heisei Gothic Portion of a Sample fonts.tab Configuration File	286
10.	Sample image.tab Configuration File	287
11.	Sample pagedef.tab Configuration File	288
12.	Sample printer.tab Configuration File	289
13.	Sample xxxxyyyy.tab Configuration File (Single-Byte Code Pages)	290
14.	Sample xxxxyyyy.tab Configuration File (Double-Byte Code Pages)	290

Tables

1.	InfoPrint Objects	1
2.	Attribute Operators for Filters	37
3.	Filter Syntax	38
4.	pdmod Operators	44
5.	Results of the pdq Command	68
6.	pdset Operators	86
7.	line2afp Resource Options and Corresponding Options and Attributes	220
8.	File Extensions for Resources	222
9.	PCL Printing and Processing Options	257
10.	PostScript and PDF Printing and Processing Options	277
11.	SAP Code Page Configuration Files	290
12.	Staple Position	479
13.	InfoPrint Environment Variables Defaulted or Set in the /etc/environment File	577
14.	InfoPrint Environment Variables Set in the InfoPrint SMIT Production Print Operations Interface Environment File	579
15.	AIX Environment Variables	580
16.	Notification Events	583
17.	Notification Event Classes	594
18.	PSF for AIX Keywords Used in Job Script Files and InfoPrint Equivalents	619
19.	PSF for AIX Keywords Used in parmdd Files	621
20.	Document and Destination Attributes Used for Validation and Scheduling	624
21.	Job and Destination Attributes Used for Validation and Scheduling	625
22.	Default Form Definition Characteristics	627
23.	General-Purpose Form Definitions	627
24.	Form Definitions Supplied with InfoPrint for Printing Envelopes	629
25.	Form Definitions Supplied for 17 by 11 Paper	629
26.	Form Definitions Supplied with InfoPrint Specifying a 0, 0 Offset	630
27.	Form Definitions for N_UP Page Positioning	631
28.	Form Definitions for Prepunched Paper	632

29.	Form Definitions Supplied for IBM 3831, 3835, and 3900 Printers	632
30.	Form Definition Supplied for IBM 3935 and 3160 Printers	633
31.	Page Definitions for Letter-Sized Paper	633
32.	Page Definitions for A4-Sized Paper	634
33.	Page Definitions for Letter- and A4-Sized Paper with Multiple-Up of 2 and 4	635
34.	Page Definitions for Legal-Sized Paper	636
35.	Page Definitions for B4-Sized Paper	636

Notices

Licenses

References in this publication to products or services of IBM do not suggest or imply that IBM will make them available in all countries where IBM does business or that only products or services of IBM may be used. Noninfringing equivalents may be substituted, but the user must verify that such substitutes, unless expressly designated by IBM, work correctly. No license, expressed or implied, to patents or copyrights of IBM is granted by furnishing this document. You can send license inquiries, in writing, to the IBM Director of Licensing, IBM Corporation, 500 Columbus Avenue, Thornwood, NY 10594, USA.

Licensees of this program who wish to have information about it for the purpose of enabling: (1) the exchange of information between independently created programs and other programs (including this one) and (2) the mutual use of the information, which has been exchanged, should contact: IBM Corporation, Printing Systems Company Legal Department, Mail Drop 002S, Boulder, Colorado 80301 USA. Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

Trademarks

The following are trademarks or registered trademarks of International Business Machines Corporation:

- ACF/NCP
- ACF/VTAM
- ADSM/6000
- Advanced Distributed Storage Manager/6000
- Advanced Function Common Control Unit
- Advanced Function Presentation
- Advanced Peer-to-Peer Networking
- AFCCU
- AFP
- APPN
- AIX®
- AIXwindows®
- AIX/6000
- Application System/400
- AS/400
- Bar Code Object Content Architecture
- BCOCA
- DB2*/6000
- GXT150M
- IBM®
- InfoColor®
- InfoPrint®
- Intelligent Printer Data Stream
- IPDS
- Magstar

Micro Channel
MO:DCA
NCP
NetView®
Operating System/400
OS/2
OS/400
POWERserver
POWERstation
Print Services Facility for AIX
Proprinter®
PS/2®
PSF
PSF for AIX
QuietWriter®
RS/6000®
System/370
SNA Gateway/6000
SNA Server/6000
SystemView
S/370
S/390
VTAM
WIN-OS/2

The following are trademarks of other companies:

- Acrobat, Adobe, Adobe PostScript Extreme, Adobe PageMaker, and PostScript are trademarks of Adobe Systems, Incorporated.
- Ethernet is a trademark of the Xerox Corporation.
- Helvetica is a trademark of Linotype-Hell Company.
- Hewlett-Packard, Hewlett-Packard Printer Control Language, HP, and LaserJet are trademarks of Hewlett-Packard Company.
- i-data is a trademark of i-data international a-s.
- Lotus Notes is a trademark of Lotus Development Corporation.
- Macintosh is a trademark of Apple Computer, Inc.
- Microsoft is a trademark of Microsoft Corporation.
- NFS and Sun are trademarks of Sun Microsystems, Inc..
- Novell is a trademark of Novell, Inc.
- OSF is a trademark of Open Software Foundation.
- QuarkXPress is a trademark of Quark Corporation.
- R/3, SAP, and SAPscript are registered trademarks of SAP AG.
- TIFF is a trademark of Aldus Corporation.
- Times New Roman is a trademark of Monotype Typography, Inc.
- UNIX is a trademark in the United States and other countries, licensed exclusively through X/Open Company Limited.
- Windows and Windows NT are registered trademarks of Microsoft Corporation.

About This Publication

This publication describes the IBM InfoPrint Manager for AIX (InfoPrint).

- Commands
- Flag used with AIX print commands
- Administrative utilities
- Daemon utilities
- Transform commands
- Object attributes
- Environment variables
- Notification events and event classes

Who Should Use This Publication

This publication is intended for the person responsible for installing, customizing, operating, or administrating InfoPrint.

About the Documentation for InfoPrint

InfoPrint provides the following types of documentation:

- InfoPrint library in portable document format (PDF) or hard copy
- InfoPrint documentation on the World Wide Web
- Online help for InfoPrint Submit, InfoPrint Scan, the InfoPrint job and printer management graphical user interface (GUI), the InfoPrint administrator's GUI, the InfoPrint SMIT production printing system interface, and the InfoPrint SMIT production print operations interface
- Manual (man) pages
- InfoPrint online message catalog
- **readme** files

The InfoPrint Publication Library

InfoPrint provides the following publications in PDF format on a CD-ROM supplied with the product. Unless otherwise specified, you can order printed copies of any of the publications from IBM by requesting the form number for the publication:

- *IBM InfoPrint Manager for AIX: Information Map*, G544-5661. This publication describes where to find information about InfoPrint tasks in the InfoPrint publication library and on the World Wide Web.
- *IBM InfoPrint Manager for AIX: Administrator's Guide*, S544-5595. This publication describes the primary administrator tasks necessary for setting up an InfoPrint environment.
- *IBM InfoPrint Manager for AIX: User's and Operator's Guide*, S544-5596. This publication describes submitting print jobs from InfoPrint Submit, InfoPrint Scan, InfoPrint Select, and the InfoPrint AIX client, scheduling jobs, and managing the print environment.
- *IBM InfoPrint Manager for AIX: Reference*, S544-5475. For print administrators, operators, and application programmers with the need to perform command-line functions, this publication describes the commands, utilities, transforms, attributes, and attribute values associated with InfoPrint.

Note: This publication is available only in PDF format.

- *PSF Direct Network Configuration Guide for System/370*, S544-5486. For system administrators or network specialists responsible for configuring a system for Print Services Facility (PSF) Direct. PSF Direct is a function of IBM InfoPrint Manager for AIX that allows another PSF program (PSF/VM, PSF/MVS, or PSF/VSE) to print remotely, using the SNA LU 6.2 protocol, on printers supported by InfoPrint. The PSF program sends the print data stream directly to the InfoPrint printer.
- *IBM InfoPrint Manager for AIX: Configuring and Using Adobe PostScript Extreme*, S544-5488. For administrators responsible for configuring the parallel raster image processing (RIP) system. The parallel RIP system uses the Adobe PostScript Extreme technology to create a combined hardware and software solution for transforming and printing PostScript input data quickly and efficiently.

Note: This is an optional feature of InfoPrint.

- *IBM PSF for AIX: AFP Upload Configuration Guide Using SNA Server/6000*, S544-5422. For system administrators, this publication describes how to configure AFP Upload on both AIX (client) and MVS (server) to send files to the JES spool on the MVS server, using a SNA Server/6000 protocol.
- *IBM PSF for AIX: AFP Upload Configuration Guide Using TCP/IP*, S544-5423. For system administrators, this publication describes how to configure AFP Upload on both AIX (client) and MVS (server) to send files to the JES spool on the MVS server, using a TCP/IP protocol.

Other Publications Related to InfoPrint

The following publications contain information you might find useful while installing, administrating, and using InfoPrint:

- *AIX Version 4 Release 1 Commands Reference*, SBOF-1851, or *AIX Version 4 Release 3 Commands Reference*, SBOF-1877. For administrators, operators, and end users, these publications provide complete information about AIX commands.

Note: InfoPrint requires AIX Version 4.2.1 or 4.3. Users of AIX Version 4.2.1 should refer to *AIX Version 4 Release 1 Commands Reference*.

- *PSF/MVS MVS Download Guide*, G544-5294. For administrators and job submitters, this publication provides instructions for setting up the MVS Download support on PSF/MVS so that data can be transmitted from the Job Entry Subsystem (JES) spool on MVS for printing on an InfoPrint system.
- *Printing for Fun and Profit under AIX*, GG24-3570. For administrators and system engineers, this publication provides instructions for installing printer devices and configuring AIX print queues.
- *IBM Page Printer Formatting Aid: User's Guide*, S544-5284. For administrators and job submitters, this publication provides instructions for creating form definitions and page definitions with Page Printer Formatting Aid for AIX (PPFA).

Note: This is an optional feature of InfoPrint.

- *Advanced Function Presentation: Font Summary*, G544-3810. For administrators and job submitters, this publication provides information on IBM fonts.

- *Advanced Function Presentation: Printer Information*, G544-3290. For administrators and job submitters, this publication provides information on IBM printer devices.
- *IBM Data Stream and Object Architectures: Bar Code Object Content Architecture Reference*, S544-3766. For administrators, this publication provides information on bar codes.
- *IBM Data Stream and Object Architectures: Font Object Content Architecture Reference*, S544-3285. For administrators, this publication provides information on coded fonts.
- *IBM Data Stream and Object Architectures: Graphics Object Content Architecture Reference*, S544-5498. For administrators, this publication provides information on printing graphics.
- *IBM Data Stream and Object Architectures: Image Object Content Architecture Reference*, SC31-6805. For administrators and job submitters, this publication provides information on the IOCA data stream.
- *IBM Data Stream and Object Architectures: Mixed Object Document Content Architecture Reference*, SC31-6802. For administrators and job submitters, this publication provides information on the MOD:CA data stream.
- *TCP/IP Tutorial and Technical Overview*, GG24-3376. For networking specialists, this publication provides an overview of the Transmission Control Protocol/Internet Protocol (TCP/IP) and its uses in heterogeneous networks.

Manual (man) Pages for InfoPrint Commands, Utilities, and Transforms

Online information, in manual (man) page format, is available for all InfoPrint commands and utilities. You can use the AIX **man** command to view man pages for the following InfoPrint commands:

lprafp	pdpromote
mkfntmap	pdq
pdclean	pdreorder
pdcreate	pdresubmit
pddelete	pdresume
pddisable	pdrm
pdenable	pdset
pdls	pdshutdown
pdmod	pdspace
pdpause	psfstat
pdpr	

For example, to view online information for the **pdpr** command, enter:

```
man pdpr
```

You can use the AIX **man** command to view the following man page for the **-o** flag used to pass information to InfoPrint on AIX print commands:

oflag

You can use the AIX **man** command to view man pages for the following InfoPrint utilities:

admingui	pdcr cds
afpsplit	pdcrdflt
ainupod1	pdcrmed
ainupod2	pdinitports
ainupod3	pdmigpp
ainurpt1	pdmincfg
ainurpt2	pdmsg
ainurpt3	pdnetifspri
ainurpt4	rc.pd
ainurpt5	sense
ainurpt6	setup
cfu	startppo
ipguiadv	start_server
ipguibasic	startsrv
ipguidist	stop_server
jsmigr	tdump
opergui	tlist
pdadmin	t2file

You can use the AIX **man** command to view man pages for the following InfoPrint daemon utilities:

mvsprsd	ps2afpd
pcl2afpd	

You can use the AIX **man** command to view man pages for the following InfoPrint transform commands:

db2afp	pcl2afp
d2afp	pdf2afp
gif2afp	ps2afp
jpeg2afp	sap2afp
line2afp	tiff2afp

For information about the flags that you can use with the **man** command, refer to the **man** man page or to the *AIX Commands Reference*.

Manual (man) Pages for InfoPrint Attributes

InfoPrint also provides you with online information about the attributes that each object supports. To view the various attributes, enter the following command:

```
man pd_att
```

A list displays containing file names of attribute man pages. You can then display the desired file and view the information about specific attributes.

Use the AIX **man** command to view the following InfoPrint man pages for attributes:

pd_att_act_dest	pd_att_log_dest
pd_att_aux_sheet	pd_att_medium
pd_att_document	pd_att_queue
pd_att_job	pd_att_res_context
pd_att_log	pd_att_server

InfoPrint Online Message Catalog

InfoPrint supplies a message catalog for the messages that are issued during its operation. For each message, the message catalog includes the text of the message, an explanation, a system action, and a response. You can view all information for a specific InfoPrint error message by issuing the InfoPrint **pdmsg** utility followed by the message number.

For example, from the command line enter:

```
pdmsg 5010-096
```

Messages issued by InfoPrint have the following prefixes:

0420	0424
0421	0425
0422	5010
0423	

See the InfoPrint **pdmsg** man page for a complete description of the **pdmsg** utility.

To view information about an AIX message, issue the AIX **info** command with the **-h** flag, followed by the message number. For example, from the command line enter:

```
info -h MessageNumber
```

where *MessageNumber* is the number of the AIX message.

readme Files

The **readme** files on the InfoPrint CD-ROM contain last-minute information about InfoPrint that the hardcopy publications or the online information do not contain. You can use the AIX **more** command or a text editor, such as **dtpad** or **vi** on AIX, EPM on OS/2, or Notepad on Windows, to view the contents of the **readme**. files.

PDF Versions of the InfoPrint Library

InfoPrint provides software and hardware publications in PDF files on the publications CD-ROM. To view or print these publications:

1. Log in to AIX as **root** or as a member of the **system** group.
2. Insert the InfoPrint publications CD-ROM into the drive.
3. To determine the identifier of your CD-ROM drive, enter on the AIX command line:

```
lsdev -C -c cdrom
```

4. Then enter:

```
mount -v cdrfs -r /dev/cdn /cdrom
```

where *cdn* is the identifier of your CD-ROM drive, and */cdrom* is the file system that was created to install InfoPrint.

5. Read the **readme.txt** file in the **/cdrom/books** directory.
6. The publications reside in the **/cdrom/books/language** directory. Use the Adobe Acrobat Viewer to view the publications, or use InfoPrint to print them.
7. To use the Adobe Acrobat Viewer, enter:

```
cd /usr/lpp/Acrobat3/bin
./acroexch
```

Click on the **Help** button to learn how to view or print a publication.

8. If you have installed InfoPrint Submit or the Adobe Acrobat Viewer on Windows, you can print or view the InfoPrint publications from your Windows system. On Windows, the publications directory is called *d:\books\language*, where *d:* is the identifier of your CD-ROM drive.

The Organization of This Publication

This publication contains the following chapters and appendixes:

Chapter 1, Introduction

This chapter describes the InfoPrint object classes and gives some general information about invoking InfoPrint commands, utilities, and transforms.

Chapter 2, InfoPrint Commands

This chapter describes the syntax, use, flags, attributes, and arguments of the InfoPrint commands and shows examples of each command.

Chapter 3, The -o Flag for AIX Print Commands

This chapter describes the **-o** flag, which is used with AIX print commands to pass information to InfoPrint.

Chapter 4, InfoPrint Administrative Utilities

This chapter describes the syntax, use, flags, and arguments of the InfoPrint administrative utilities and shows examples of each utility.

Chapter 5, InfoPrint Daemon Utilities

This chapter describes the utilities that start InfoPrint daemons.

Chapter 6, InfoPrint Transform Commands

This chapter describes the transforms used for converting data for printing with InfoPrint.

Chapter 7, InfoPrint Object Attributes

This chapter describes the use and values of the attributes associated with each InfoPrint object class.

Chapter 8, InfoPrint and AIX Environment Variables

This chapter describes the InfoPrint and AIX environment variables that affect the processing of InfoPrint commands.

Chapter 9, Notification Events and Event Classes

This chapter describes the InfoPrint events for which you can request notification.

Appendix A, Attribute-to-Object Listing

This appendix contains a table listing all the InfoPrint attributes in alphabetical order and naming the objects that support each attribute.

Appendix B, Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents

This appendix contains a table showing the attribute, or the flag or argument of the **pdpr** command, that replaces each PSF job script keyword when the job script is migrated to InfoPrint.

Appendix C, Job Validation and Scheduling

This appendix describes how InfoPrint validates and schedules jobs. It contains tables showing the attributes used for validation and scheduling.

Appendix D, Form Definitions and Page Definitions Supplied with InfoPrint

This appendix lists the form definitions and page definitions supplied with InfoPrint.

This publication also contains a glossary and an index.

Conventions Used in This Publication

This publication uses conventions for the following:

- Highlighting
- InfoPrint command notation

Highlighting

This publication uses four different types of highlighting:

- | | |
|--------------------|--|
| Bold | In this publication, bold highlighting identifies commands, attributes, files, directories, and other items whose names the system predefines, such as pdpr and notification-profile . |
| <i>Italic</i> | When used in running text, italic highlighting identifies a variable item whose actual name or value you supply, such as <i>AttributesFileName</i> or <i>Notification</i> . Italics also identify publication titles. |
| Bold Italic | When enclosed in double quotation marks, combined bold and italic highlighting identifies a specific attribute name that you enter exactly as shown and a variable value that you supply with the attribute. For example: " copy-count=number " |
| Monospace | When used in command examples, information in a monospaced font identifies the exact wording of the command. |

InfoPrint Command Notation

Command syntax notation uses symbols to show specific conditions. Do not enter the following symbols, unless specifically instructed to do so, when actually issuing a InfoPrint command:

Bar |

Braces { }

Note: There are some situations in which you will actually type the brace characters. See “Special Characters That Are Included in Commands” on page xxxviii.

Brackets []

Underlining –

Ellipsis ...

These symbols have the following meanings when used in the publications and in the online information:

- A vertical bar, |, between values means that you can only enter one of the values with the command. For example:

job-hold:= {true | false}

means that when you set the **job-hold** attribute, you can specify either **true** or **false**, but not both.

- Braces, { }, around values identify required items that you must supply with the command. For example:

job-hold:= {true | false}

means that you must enter either **true** or **false**.

- Brackets, [], around values indicate that they are optional. For example:

resource-context=directory[:directory...]

means that you do not have to enter more than one directory, but that you can have two or more directories, each separated by a colon, : .

- An ellipsis, ... , means that you can supply more than one occurrence of a keyword or value with the command. For example:

resource-context=directory[:directory...]

means that you can enter more than directory name.

- Underlined text identifies the default fixed value that InfoPrint uses if you do not specify a value. For example:

default-printer-resolution={240 | 300 | 480 | 600}

means that **240** is the default value.

Special Characters That Are Included in Commands

When colons, dashes, the equals sign, double quotation marks, single quotation marks, and braces are shown in command syntax notation, you will include them when you issue the command in most cases. These special characters have the following meanings:

- A colon, :, separates related values. For example:

`pdpr -f file1 -x "page-select=3:6" file2`

means that only pages 3 through 6 of `file2` are to print.

- A dash, -, always precedes a flag, for example, **-x**.

- The equals sign, =, separates attribute and value pairs. For example:

`pdmod -x "sides=2" DivSpool12:1011230045`

means that **2** is the value assigned to the **sides** attribute.

- Double quotation marks, " ", surround multiple attribute and value pairs, such as:

```
-x "sides=2 print-quality=draft"
```

For consistency, this publication also shows double quotation marks around single attribute and value pairs in all command examples, although they are not required. For example:

```
-x "document-format=ascii"
```

- Double quotation marks, " ", surround text strings that contain spaces, such as:

```
-m "Down for maintenance"
```

- Single quotation marks, ' ', surround a text string that contains spaces inside another string that is enclosed in double quotation marks. An example is:

```
-x "sides=2 job-print-after='08:00:00 10/09/98'"
```

- Braces, { }, surround a value in a notification profile. An example is:

```
-x "notification-profile={delivery-method=electronic-mail}"
```

Global Character Used in Examples and Shell Information

The examples using a global character and other examples shown within the InfoPrint publications relate to the Korn shell. Depending on the shell you are using, the examples shown may or may not work. The examples may also show control characters that other shells do not require. Adjust the examples as necessary for the shell you are using.

Examples of Commands and Attributes

- This publication shows examples of commands in a format designed for ease of reading. When entering the command, allow the command to wrap characters from one line to the next.
- Many examples in this publication use spacing of attributes and values for ease of reading and formatting considerations. When entering the attributes and their values on the command line or in attributes files, use the correct syntax.

Chapter 1. Introduction

IBM InfoPrint Control (InfoPrint) allows you to send a file, as an electronic document, for printing on a printer device or for transmission by fax or electronic mail.

Objects

InfoPrint performs the management and printing or transmission of jobs by using **InfoPrint objects**.

Object Classes

Table 1 lists the object classes that InfoPrint supports. The destination class is subdivided into logical and actual destinations.

Table 1 (Page 1 of 2). InfoPrint Objects

Object Name	Purpose
Auxiliary sheet	Represents a sheet of paper, blank or otherwise, that precedes a job, separates copies within a job, or follows a job; or a user exit program that produces output that can be printed on an auxiliary sheet or logged.
Default document	Represents default attribute values for a document within a job. Also called <i>initial value document</i> .
Default job	Represents default attribute values for a job. Also called <i>initial value job</i> .
Destination (actual)	<p>Represents the output device that InfoPrint uses to print or transmit the job. It is not the actual output device. It is a software representation of the features and capabilities of the printer or fax hardware device, or of an electronic mailing system.</p> <p>A <i>physical printer</i> is an actual destination that represents a printer device. A <i>fax destination</i> represents a fax device. An <i>email destination</i> represents an electronic mailing system.</p>
Destination (logical)	<p>Represents an abstract entity to which users submit jobs for printing or transmission. The logical destination provides restrictions and defaults for the job. It also verifies that associated actual destinations capable of handling the jobs exist. Once the logical destination verifies the job, InfoPrint sends it to an associated queue, from which it is routed to an actual destination.</p> <p>The term <i>logical printer</i> is used for logical destinations that route jobs to physical printers.</p>
Document	Represents a grouping of data within a job: either a printable file or a resource that is not printable by itself, for example, a font.
Job	Represents one or more documents submitted together in one request.
Log	Represents a collection of messages or message segments added to a file for accounting or data collection purposes. InfoPrint uses two types of logs; error and trace.
Medium	Represents the physical material on which a job prints.
Queue	Manages a collection of jobs that are waiting to be printed or transmitted and jobs that have been retained after processing. A queue receives jobs from one or more logical destinations and schedules and sends the jobs to actual destinations.

Introduction

Table 1 (Page 2 of 2). InfoPrint Objects

Object Name	Purpose
Resource context	Contains directory path information that is used to locate resources needed for processing a job. Resources include fonts, overlays, form definitions, page segments, and page definitions.
Server	Manages and controls the validation, routing, notification, logging, scheduling, and printing or transmission of jobs. The server applies specified defaults to jobs, validates that the destinations on the network can process the jobs, schedules jobs from queues to actual destinations, directs jobs to the actual destination, reports errors, and reports job status.

Object Name Restrictions

The following restrictions apply to naming InfoPrint objects:

- You can specify object names up to 255 characters in length, except for the names of PSF physical printers, fax destinations, and email destinations, which you must limit to eight characters or less.
- Characters allowed in object names include uppercase A through Z, lowercase a through z, digits 0 through 9, and the special characters hyphen or dash, - , period, . , and underscore, _ . Do not start an object name with a hyphen.

Object Attributes

All InfoPrint objects have associated attributes. Attributes provide information about the objects and determine what you can do with objects.

Attribute Disclaimer

There are attributes and attribute values identified in the ISO 10175-1 *Information Technology Text and Office Systems - Document Printing Application (DPA) - Part 1: Abstract-Service Definition and Procedures* standard that InfoPrint does not support. If you use any of these non-supported attributes or values, InfoPrint may accept them. However, the results may be different than you expect. At times you may receive a message stating that InfoPrint does not support the attribute or value.

Non-Settable, Initially Settable, and Resettable Attributes

InfoPrint attributes fall into three categories:

Initially settable

For some attributes, you can set a value when you create the object with the **pdcreate** or the **pdpr** command. You cannot change these attributes afterwards.

For example, the following command:

```
pdpr -x "job-originator='Anne Brown'" bigbook
```

creates a job containing a file called bigbook and identifies the person who submitted the job by name. The attribute **job-originator** is *initially settable* and you cannot change it.

Resettable

For some attributes, you can set or modify the value using the **pdmod** command (for jobs and documents) or the **pdset** command (for all objects, including jobs and documents), after you create the object.

For example, this command:

```
pdmod -x "job-end-message='Please call 5-9999 for pickup'" 37
```

sets a new value for the **job-end-message** attribute for the existing job whose local ID is 37.

Non-settable

You cannot set a value for some attributes at any time.

For example, in the following command:

```
pdcreate -c queue Serv1:Queue3
```

InfoPrint uses the command arguments to assign the queue attribute **queue-name** the value Queue3, and the **associated-server** attribute the value Serv1. You cannot set different values for these arguments using the **-x** flag of the **pdcreate** command and you cannot change them later.

Resetting Attributes to the Default Value

Chapter 7, “InfoPrint Object Attributes” on page 309 shows default values for all attributes. For some attributes, the default value is “no value.”

- When you create an object, InfoPrint assigns a default value (or values, for some multi-valued attributes) to each attribute. You can override these default values by specifying a different value using the **-x** and **-X** flags of the **pdmod** or **pdset** commands.
- You can change values back to their default values by using the **pdmod** or **pdset** commands and specifying the attribute name followed by two equals signs, **==**, without any attribute value.

For example, the following command:

```
pdset -x "printer-end-sheet==" Serv3-pp
```

sets the value assigned to **printer-end-sheet** for the actual destination Serv3-pp back to its default value.

- Deleting all the values from a multi-valued attribute or deleting the value of a single-valued attribute sets the attribute value to the default values.

Attribute Syntax

This section describes the syntax to use when you set values for three types of attributes on the command line or in an attributes file. Most attributes are either **single-valued** (they can have only one value at a time) or **multi-valued** (they can have multiple values). InfoPrint also has some **complex attributes**.

Examples of these types of attributes follow.

Single-Valued Attributes: For single-valued attributes, the syntax is:

```
"attribute=value"
```

```
"attribute='value with spaces'"
```

Enclose the value in single quotation marks if it includes spaces, for example:

```
-x "message='Down for maintenance until 7AM'"
```

Note: The InfoPrint administrator's GUI does not require quotation marks.

Multi-Valued Attributes: For multi-valued attributes, the syntax is:

```
"attribute=value1 value2 value3"
```

where *value1 value2 value3* are multiple values of the attribute. Separate the values with spaces and enclose the attribute name and values in double quotation marks. For example:

```
-x "content-orientations-supported=portrait landscape"
```

assigns two values, **portrait** and **landscape**, to the **content-orientations-supported** attribute.

Note: In the InfoPrint administrator's GUI, most multi-valued attributes require you to specify each value on a separate line of a list box. When you must enter multiple values in a single field, separate the values by commas. For example, enter multiple values for the **chars** attribute like this:

Fonts

Complex Attributes: Complex attributes can have multiple values, but each value itself has multiple components. Each component of a value has its own values. Two types of complex attributes are those that require braces, { } , enclosing each value, and those that have the components of each value separated by a colon, : .

Note: In the InfoPrint administrator's GUI, you enter each component in a separate field. No braces or colons are required.

Complex Attributes that Require Braces: The only complex attribute that requires braces is **notification-profile**

- Each value for this complex attribute begins and ends with braces, { } .
- Each value has several components
- Each component has a name and associated values
- The sequence in which you enter the components is not important
- The component **event-identifiers** is the only component that can have multiple values

An example of creating a **notification profile** with one value for a queue follows:

```
pdset -c queue
-x "notification-profile={event-identifiers=job-modified
queue-state-changed delivery-method=message
event-comment='This is a job modification or status event'
delivery-address=dave@cowboy locale=En_US.IBM-850}" Queue1
```

If you change one component within the notification profile, InfoPrint sets all the rest of the components of that value to their default values. For example, the following command sets the **delivery-address**, but InfoPrint sets the other components to their defaults:

```
pdset -c queue
-x "notification-profile={delivery-address=tom@hope}" Queue1
```

If you want to maintain the existing values, you must specify them. You cannot use the add, +=, or delete, -=, operators of the **pdset** or **pdmod** commands when changing the component values within a **notification-profile** value. However, you can add or delete all components of a value from the **notification-profile** by using the add, +=, or delete, -=, operators. For example, the following command:

```
pdset -c queue
-x "notification-profile+={delivery-address=mary@cowboy} Queue1
```

adds another value to the previous one. Now the **notification-profile** has two values.

```
notification-profile=
{event-identifiers=job-modified queue-state-changed delivery-method=message
event-comment='This is a job modification or status event'
delivery-address=dave@cowboy locale=En_US.IBM-850}
```

```
{event-identifiers=object-deleted object-cleaned queue-backlogged
delivery-method=message delivery-address=mary@cowboy
locale=En_US.IBM-850}
```

The second value contains default values for each component except the delivery address. If you want values other than defaults, you must specify them.

Complex Attributes that Require Colons: All other complex attributes require colons between components.

- Do not enter the component name.
- Separate the values for the components with a colon, :, and no spaces
- Enter a colon even if you do not enter a value for a given component. InfoPrint sets the default value or no value for that component.
- If you use the default value for the last value, InfoPrint does not require the colon for that component.
- Separate each attribute value within a multi-valued attribute with spaces (see the following example)

An example of setting the **notify-operator** attribute for a queue is:

```
pdset -c queue -x "notify-operator=
message:White@Caddy.xyz.com email:Jones@Chevy.xyz.com"
Queue2
```

Examples of setting the **results-profile** attribute for a job are:

```
pdset -c job -x "results-profile='dave@cowboy:pickup:2:Please staple'" 2
pdset -c job -x "results-profile='dave@cowboy::2:Please staple'" 2
```

The result of these two commands is the same because the default for the second component is **pickup**.

Commands

InfoPrint commands act on objects. They create, modify, and delete objects, and may also return status and other information about the InfoPrint objects.

Flags, Command Attributes, and Arguments

The basic InfoPrint command syntax is:

```
command [-flag ...] [argument ...]
```

The *argument* targets the specific object on which the InfoPrint command operates. Most commands must include an *argument*. All commands can include one or more of the following:

Flags Flags consist of a dash, - , followed by a single character. Flags either substitute for command or object attributes or modify the way InfoPrint processes a command. For example, you can use the **-c** flag instead of the **class** command attribute. Some flags have values associated with them.

Use the **-x** and the **-X** flags to enter command attributes or object attributes on the command line or to read in a file containing those attributes at a specific point in the command.

Command attributes

Use command attributes to modify the action of the command and to define the object class on which the command operates. Most of the command attributes have an associated command flag that causes the same action. You cannot use a command flag in an attributes file. You can use the command attribute in an attributes file or on the command line using the **-X** flag or the **-x** flag respectively.

When you enter an attribute and value pair, you must specify the attribute followed by the equals sign, = , followed by the value; do not include spaces between these three items unless you enclose the items in quotation marks. For example, InfoPrint accepts both the *class=destination* and "*class = destination*" formats.

You must begin and end a string of multiple attribute-value pairs with double quotation marks, for example:

```
pdls -x "class=job requested-attributes=current-job-state" 10
```

Object attributes

Use object attributes to apply attribute values to the specified argument. You can use the object attribute in an attributes file or on the command line using the **-X** flag or the **-x** flag respectively.

When you enter an attribute and value pair, you must specify the attribute followed by the equals sign, = , followed by the value.

You must begin and end a string of multiple attribute-value pairs with double quotation marks, for example:

```
pdpr -x "document-format=ascii sides=2 plex=simplex" File1
```

Arguments

The argument specified in a command is the name of the object the command acts on. For servers, the argument is the name of the server. Servers contain all other objects. For some objects, you must specify the name of its server in the form *ServerName:ObjectName*. For other objects, the server name is optional. You must look at each command to determine the exact format allowed.

If you specify multiple arguments in one command, they must belong to the same object class.

Command Output: Headings and Style

Some commands allow you to specify whether you want the output displayed in line style, column style, or document column style, and with or without headings.

Document column (**docol**) style is a variant of column style used only for jobs. It is like column style except that the attributes for the first document in the job are displayed on the same line as the job attributes, rather than on a separate line as in column style.

The following examples show the same information (the **job-name**, **current-job-state**, and **destination-name-requested** attributes for a job, plus the **document-format** and **copy-count** attributes for the first document in the job) in the six possible combinations of headings and style:

- Line style, with headings:

```
jw-srv:0524600000: job-name           = /etc/motd
jw-srv:0524600000: current-job-state  = held
jw-srv:0524600000: destination-name-requested = jw-lp1
jw-srv:0524600000.1: document-format  = ascii
jw-srv:0524600000.1: copy-count       = 1
```

- Line style, without headings:

```
job-name           = /etc/motd
current-job-state  = held
destination-name-requested = jw-lp1
document-format    = ascii
copy-count         = 1
```

- Column style, with headings:

```

      Current  Destination
Name   State   Requested
-----  -----  -----
/etc/motd held    jw-lp1

Format  Copies
-----  -----
ascii   1
```

- Column style, without headings:

```
/etc/motd held jw-lp1

ascii 1
```

- Document column style, with headings:

```

      Current  Destination
Name   State   Requested  Format  Copies
-----  -----  -----  -----  -----
/etc/motd held    jw-lp1    ascii  1
```

- Document column style, without headings:

```
/etc/motd held jw-lp1 ascii 1
```

Tips for Using Commands

Understanding the following topics can make your use of, and entry of, commands easier.

Wildcards

You can use the global character, an asterisk, `*`, to simplify broadcasting commands to all servers. For example, `STU*` sends the command to all servers whose names begin with the letters STU. When the global character is present in the *ServerName*, InfoPrint sends the command to each of the servers that match the specified criterion.

Depending on the shell you are using, you may need to enter control characters to keep the shell from interpreting the asterisk, `*`, before InfoPrint has a chance to operate on it.

Abbreviations

This publication shows attribute names and values in their complete form. Often, you can abbreviate attribute names and values by using the first letter of each word in the name or value. For example, you can use the abbreviation **s-m-s** for the **start-message-supported** attribute, **t** for the **true** value, and specify the attribute and value pair as **s-m-s=t**.

However, sometimes specifying only the first letter in each word is ambiguous, as for the attributes **job-owner** and **job-originator**. Here, specify enough of the name so that it is unique, as in **j-ow** and **j-or**. If the values are ambiguous, InfoPrint rejects the command and issues an error message. Use abbreviated attribute names and values as appropriate.

Attributes File

You may want to predefine specific attribute and value pairs in permanent files and access them when you need those specific values within a command. These files can contain command attributes, object attributes, or both.

Creating an Attributes File

- You can list command attributes and any initially settable or resettable object attributes in an attributes file, including the command attribute **attributes**. Thus, an attributes file can invoke other attributes files.
Note: If an attributes file calls itself, InfoPrint issues an error.
- You can only use a file that contains initially settable attributes with the **pdcreate** or **pdpr** commands. If you include an initially settable attribute in an attributes file and use the file with the **pdset** or **pdmod** commands, InfoPrint rejects the attribute and issues an error message.
- Attributes files must not contain any attributes without values.
- When creating an attributes file, consider spelling out the complete attribute names and attribute values rather than using abbreviations.
- You can use spaces between the attribute name and the equals sign to align the equals sign and values. This makes your files easier to read and maintain.
- You can use comment lines in attributes files. The comment starts with a number sign, `#`, and ends at the end of line.

For example, an attributes file used to set two-sided printing and to request a specific printer model contains these lines:

```
# These are my document attributes
sides = 2
destination-models-requested = 4019 # 4019 printer only
```

Note: You can include a number sign, # , as part of an attribute value if you precede it immediately with a backslash, \# .

Using an Attributes File: InfoPrint provides both a command attribute and a flag to read an attributes file into a command.

Command Attribute: **-x "attributes=AttributesFileName"**

You use the **-x** flag to specify the command attribute **attributes**. This attribute designates and causes InfoPrint to read and use an attributes file, which contains attribute and value pairs (one or more per line), at the current point in the command. Specifying this attribute is equivalent to using the **-X** flag.

Flag: **-X AttributesFileName**

This causes InfoPrint to read and use the designated attributes file containing attribute and value pairs at the current point in the command.

The following two examples are equivalent:

```
pdset -X AttrFileAD1.X Serv2-pp
pdset -x "attributes=AttrFileAD1.X" Serv2-pp
```

Using the command attribute **attributes** or the **-X** flag to designate and read an attributes file has the same effect as specifying multiple attribute and value pairs using the **-x** flag. These attributes require the same syntax as those used with the **-x** flag. For example, both of the previous examples reference the following attributes file:

```
# Actual Destination Attributes File
# AttrFileAD1.X
document-formats-supported =ascii ditroff modca-p
maximum-copies-supported   =3
document-types-supported   =printable overlay page-segment
printer-memory              =32
```

It is equivalent to the following command:

```
pdset -x "document-formats-supported=ascii ditroff modca-p
maximum-copies-supported=3 document-types-supported=printable
overlay page-segment printer-memory=32" Serv2-pp
```

The **-X** and **-x** flags are additive so that InfoPrint uses all attributes and values. If you specify the same object attribute more than once in a command with multiple uses of the **-x** and **-X** command flags or the **attributes** command attribute, or a combination of them, the value read last takes precedence.

Locating an Attributes File: If you do not specify a full path name for the attributes file, InfoPrint uses the path name from the environment variable **PDPATH** to locate the attributes file. If you do not define **PDPATH** or it contains a null string, InfoPrint looks in your current working directory for the attributes file.

For example, if **PDPATH** contained **/usr/user/smith/** the following command:

```
pdpr -X my_attributes.X File1
```

would read the file **/usr/smith/my_attributes.X** to obtain the attribute and values.

Administrative Utilities

InfoPrint administrative utilities perform such tasks as setting up a minimum InfoPrint configuration, starting servers, and displaying information about InfoPrint messages.

Daemon Utilities

InfoPrint has some special utilities for starting daemons. Daemons are often called by the same name as the utility that starts them. For example, the daemon that receives data from MVS Download is called the **mvsprsd** daemon, or simply **mvsprsd**.

Transform Commands

InfoPrint transform commands convert another data stream to the AFP data stream. You can allow InfoPrint to invoke these transforms automatically, or you can invoke them yourself.

Some transforms use options instead of flags. Like flags, options begin with a dash, - , and modify the way InfoPrint processes the transform. Unlike flags, options may have more than one character following the dash.

Environment Variables

InfoPrint and AIX environment variables affect the way that InfoPrint processes commands and utilities. These environment variables are summarized in Chapter 8, "InfoPrint and AIX Environment Variables" on page 577.

Chapter 2. InfoPrint Commands

This chapter describes the following InfoPrint commands:

- “lprafp Command: Submits Remote Jobs” on page 12
- “mkfntmap Command: Maps PostScript Fonts” on page 14
- “pdcreate Command: Creates InfoPrint Objects” on page 18
- “pdclean Command: Removes All Jobs from the Specified Object” on page 15
- “pddelete Command: Deletes InfoPrint Objects” on page 23
- “pddisable Command: Stops Destinations from Accepting Jobs and Logs from Logging” on page 27
- “pdenable Command: Enables Destinations to Accept Jobs and Logs to Log” on page 31
- “pdls Command: Lists Selected Attribute Values” on page 34
- “pdmod Command: Modifies Attributes of Submitted Print Jobs” on page 44
- “pdpause Command: Pauses Jobs, Actual Destinations, Servers, or Queues” on page 49
- “pdpr Command: Submits Jobs” on page 56
- “pdpromote Command: Advances a Job to the Top of a Queue” on page 66
- “pdq Command: Queries Job Status” on page 68
- “pdreorder Command: Reassigns Jobs” on page 73
- “pdresubmit Command: Resubmits Jobs” on page 75
- “pdresume Command: Enables Paused Objects to Resume Operation” on page 79
- “pdrm Command: Removes Jobs” on page 83
- “pdset Command: Defines Attribute Values” on page 86
- “pdshutdown Command: Stops Servers or Actual Destinations” on page 91
- “pdspace Command: Backspaces or Forward Spaces a Printer” on page 96

Note: The **psfstat** command for displaying information about InfoPrint destinations and PSF Direct receivers is documented in *PSF Direct Network Configuration Guide for System/370* and the **psfstat** man page.

lprafp Command: Submits Remote Jobs

Syntax

```
lprafp [-n] [-o option] [-r retries] [-q delay] [-p destination]
      [-s server] FileName ...
```

Description

The **lprafp** command, when compiled on a UNIX client system, allows UNIX users operating on AIX 3.2.5 or higher, non-AIX systems, or non-RS/6000 systems to pass **-o** flag keywords to InfoPrint for use in printing or transmitting remote jobs. The **-o** flags that are interpreted by InfoPrint can be sent with the remote job.

You can submit a job using a shell script called **LPR**. When you invoke **LPR** with the **-A** flag, **LPR** invokes the **lprafp** command. **lprafp** passes **-o** keywords to InfoPrint. If you invoke the **LPR** shell script without the **-A** flag, **LPR** invokes the operating system's standard print command.

Flags

- n** Indicates that only error messages display when the output is processed. If you do not specify this flag, you receive status information on the job sent to the destination system.
- o option** Indicates InfoPrint options, for example:
 -oformdef=F1SAMPLE
 See Chapter 3, "The -o Flag for AIX Print Commands" on page 101 for descriptions of the **-o** options.
- r {3 | retries}**
 Indicates how many times the **lprafp** program attempts to connect with the TCP/IP line printer daemon (**lpd**) on the destination system. This flag defaults to three retries.
- q {10 | delay}**
 Indicates the retry delay in seconds. This flag defaults to ten seconds.
- p destination**
 Indicates the destination name on the server. This flag defaults to the value of the **LPR_PRINTER** environment variable.
- s server** Specifies the destination server. This flag defaults to the value of the **LPR_SERVER** environment variable.

Arguments

Use the argument value to identify the specific files you want to submit for printing or transmission. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **lprafp** command:

FileName ...

Indicates the files that are to be printed or transmitted. You can specify global file characters in this argument.

Examples

Submitting a Remote Print Job

To submit two copies of `/etc/motd` to the logical printer named `laser` on server `alexandria`, for printing without an end sheet, enter:

```
LPR -A -ocopies=2 -otrailer=no -s alexandria -p laser /etc/motd
```

Submitting a Remote Email Job

To send the file `memo1` to the logical destination mailbox on server `alexandria`, enter:

```
LPR -A -s alexandria -p mailbox memo1
```

Note: The default document associated with mailbox must specify the **email-to-address** attribute.

Setting Environment Variables

To set up the environment so that subsequent print requests are sent to the logical destination named `alexe-lp` on server `alexandria`, enter:

```
export LPR_PRINTER=alexe-lp
export LPR_SERVER=alexandria
```

(Note that *server* can be in dotted address format; for example 9.99.9.99)

To test that your environment variables have been set correctly, enter:

```
LPR -A /etc/motd
```

Files

<code>/usr/lpp/psf/utis/lpr/Makefile</code>	Generates the executable program
<code>/usr/lpp/psf/utis/lpr/getopts.c</code>	Source code
<code>/usr/lpp/psf/utis/lpr/getopts.h</code>	Source code header file
<code>/usr/lpp/psf/utis/lpr/LPR</code>	Shell script for print command
<code>/usr/lpp/psf/utis/lpr/lprafp.c</code>	Source code
<code>/usr/lpp/psf/utis/lpr/lprafp.h</code>	Source code header file

mkfntmap Command: Maps PostScript Fonts

Syntax

```
mkfntmap inputfile ... [> outputfile]
```

Description

The **mkfntmap** command creates a font mapping file that contains a list of the PostScript Type 1 fonts specified in the *inputfiles* parameter of the command and their locations.

The **/usr/lpp/psf/ps/psfonts.map** file is shipped with InfoPrint. It maps the AFP outline fonts to the directory in which they were installed. If you have additional PostScript fonts, or you add new PostScript fonts, use the **mkfntmap** command to create a font mapping file for the new fonts after they are installed. If you will be using the additional fonts frequently, you should add the fonts to the **preload.ps** file in the **/usr/lpp/psf/ps** directory. The fonts you specify in the **preload.ps** file load before transform processing begins, improving the performance of the PostScript transform.

Note: The Courier font must exist in at least one of your font mapping files. It is included in the font mapping file, **/usr/lpp/psf/ps/psfonts.map**.

Arguments

The argument value identifies the specific object to which the command applies.

The valid argument values for the **mkfntmap** command are:

inputfile ...

Specifies the name of the file or files that contain PostScript Type 1 fonts. At least one input file is required, although you can list more than one.

outputfile

Specifies the name of the font mapping file that contains the font mapping for the PostScript Type 1 fonts that were specified in the *inputfiles*. When the output file is created, it can be specified in the **ps2afpd** daemon and **ps2afp** command configuration files. You also can specify the *outputfile* name from the command line with the **-F** flag of the **ps2afp** command. If you do not specify an *outputfile* name, InfoPrint writes the results to standard output.

Examples

- To create a font mapping file of all binary fonts named atm*, which have the extension .pfb, and call it atmfonts.map, enter:

```
mkfntmap atm*.pfb > atmfonts.map
```
- To create a font mapping file of all fonts named cou*, and call it courier.map, enter:

```
mkfntmap cou* > courier.map
```

pdclean Command: Removes All Jobs from the Specified Object

Syntax

```
pdclean [-c ObjectClass] [-m "MessageText"]
        [-x "attribute=value ..."] [-X AttributesFileName]
        {ServerName ... | [ServerName:]DestinationName ... |
        [ServerName:]QueueName ...}
```

```
pdclean -h
```

Description

Use the **pdclean** administrative command to remove all jobs from the specified servers, logical destinations, queues, or actual destinations. If you are removing jobs from a server, InfoPrint ignores any **job-retention-period** or **job-retain-until** attribute values. For all other conditions, InfoPrint honors the **job-retention-period** or **job-retain-until** value. If you are removing jobs from a logical destination, InfoPrint removes all jobs from the queue to which the logical destination submitted the jobs. If you are removing jobs from a queue, InfoPrint removes all jobs that the queue contains, regardless of which logical destination or destinations submitted the jobs to the queue.

InfoPrint removes processing jobs, if the actual destination supports this.

InfoPrint issues a confirmation message prior to cleaning the object, unless your **PD_CONFIRM_DELETE** environment variable has a value of **no**.

Flags

You can use the following flags with the **pdclean** command:

-c {**destination** | **queue** | **server**}

Specifies the object class you want for this command. Within the valid classes, **destination** is a logical or actual destination.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want associated with the specified destination, queue, or server. You can use this message to indicate the reason why you are cleaning the destination, queue, or server, or any other appropriate comments.

Using this flag is equivalent to specifying the command attribute **message**.

You can list this message by specifying **requested-attributes=message** with the **pdls** command.

-x "*attribute=value ...*"

A single attribute string, consisting of one or more attribute-value pairs.

-X AttributesFileName

Specifies the name of a file containing attribute and value pairs you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x "attribute=value ..."** string or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | queue | server}

Specifies the destination, queue, or server you want for this command. Within the valid classes, **destination** is a logical or actual destination.

message="MessageText"

Specifies the message you want associated with the destination, queue, or server. You can use this message to indicate the reason why you are cleaning the destination, queue, or server, or any other appropriate comments.

You can list this message by specifying **requested-attributes=message** with the **pdls** command.

Arguments

Use the argument value to specify the destination, queue, or server that you want InfoPrint to clean. If you specify multiple objects, all must be of the same object class and you must separate the object names with spaces.

You can use the following arguments with the **pdclean** command:

[ServerName:]DestinationName

Specifies which destinations you want cleaned of jobs.

Cleaning an actual destination removes only those jobs that InfoPrint has assigned to that actual destination.

Cleaning a logical destination removes all jobs submitted through that logical destination that InfoPrint has not yet completed. InfoPrint removes those jobs from the queue associated with that logical destination. InfoPrint removes any jobs currently processing if the actual destination supports this.

[ServerName:]QueueName

Specifies which queues you want cleaned of jobs.

Cleaning a queue deletes all jobs that reside in that queue. InfoPrint removes any jobs currently processing if the actual destination supports this.

ServerName

Specifies which servers you want cleaned of jobs.

Cleaning a server deletes all jobs submitted to any of the logical

destinations, or assigned to the actual destinations, residing in that server, including any retained jobs. InfoPrint removes any jobs currently processing if the actual destination supports this.

Examples

Clean a Logical Destination

To clean logical destination Mserv-1p of all jobs, enter the command:

```
pdclean Myserv-1p
```

Clean a Server

To clean server DServ1, enter the command:

```
pdclean -c server DServ1
```

Clean an Actual Destination

To clean destination Mserv-pp of all jobs and to leave a message, enter the command:

```
pdclean -m "Destination Mserv-pp is down for repairs" Super1:PhysPrt2
```

Suggested Reading

For more information about:

- Attributes file, see “Attributes File” on page 8

pdcreate Command: Creates InfoPrint Objects

Syntax

```
pdcreate [-c ObjectClass] [-g] [-m "MessageText"]
         [-r "attribute ..."] [-s StyleName]
         [-x "attribute=value ..."] [-X AttributesFileName]
         {ServerName:AuxiliarySheetName ... |
          ServerName:DefaultDocumentName ... |
          ServerName:DefaultJobName ... |
          ServerName:DestinationName ... |
          ServerName:MediumName ... |
          ServerName:QueueName ... |
          ServerName:ResourceContextName ...}
```

```
pdcreate -h
```

Description

Use the **pdcreate** administrative command to create InfoPrint objects (except servers, logs, documents and jobs) and to set their attributes to specific values.

You can specify any initially settable or resettable attribute for an object with the **pdcreate** command. You can specify an initially settable attribute only when you create an object. Appendix A, "Attribute-to-Object Listing" on page 601, provides a listing of all attributes by object class and Chapter 7, "InfoPrint Object Attributes" on page 309, contains descriptions for each attribute by object.

Note: InfoPrint creates servers and logs when the server starts. InfoPrint creates documents and jobs when users submit files for printing or transmission with the **pdpr** command.

You can use the **pdcreate** command to create objects for the following object classes:

- **destination** (logical and actual)
- **queue**
- **initial-value-job**
- **initial-value-document**
- **medium**
- **auxiliary-sheet**
- **resource-context**

When you create a destination, it remains in the disabled state and InfoPrint cannot accept any jobs for it until you enable the destination. You must issue the **pdenable** command to enable the destinations.

An object you create with the **pdcreate** command still exists even if the server that contains it terminates normally (shutdown) or abnormally. A logical destination or queue returns to its previous state when its server restarts; an actual destination attempts to return to its previous state when its server restarts.

Flags

You can use the following flags with the **pdcreate** command:

- c** {destination | **queue** | **medium** | **initial-value-job** | **initial-value-document** | **auxiliary-sheet** | **resource-context**}
 Specifies the object class you want for this command. You can only specify one class per command invocation.
 Using this flag is equivalent to specifying the command attribute **class**.
- g** Turns off headings. Using this flag is equivalent to specifying the command attribute **headings=false**.
- h** Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.
- m** "*MessageText*"
 Specifies the message that you want associated with the object you are creating. You may indicate the reason for creating the object or to provide any other comments.
 You can list this message by specifying **requested-attributes=message** with the **pdls** command. Using this flag is equivalent to specifying the command attribute **message**.
- r** {none | **brief** | **verbose**}
 Specifies the attribute values you want InfoPrint to display for the specified object.
 - none** Displays no attributes.
 - brief** Displays a small subset of important attributes for each object.
 - verbose** Displays a larger subset of important attributes for each object.
 Using this flag is equivalent to specifying the command attribute **requested-attributes**.
- s** {column | **docol** | **line**}
 When combined with the **-r** flag or the **requested-attributes** command attribute, specifies the format in which you want InfoPrint to display attribute information.
 - column** Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.
 - docol** For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
 - line** Each attribute is displayed on a separate line.
 Using this flag is equivalent to specifying the command attribute **style**.
- x** "*attribute=value ...*"
 A single attribute string, consisting of one or more attribute-value pairs.

-X AttributesFileName

Specifies the name of a file containing attribute and value pairs InfoPrint inserts at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x "attribute=value ..."** string or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | queue | medium | initial-value-job | initial-value-document | auxiliary-sheet | resource-context}

Specifies the object class you want for this command. You can only specify one class per command invocation.

force={true | false}

Forces the creation of an object. If the object already exists, the specified object replaces the existing object. InfoPrint does not issue any warning or error messages.

If the designated object already exists and you do not specify **force=true**, InfoPrint rejects the command and issues an error.

Note: If you use DCE, you must have **delete** permission for the existing object.

headings={true | false}

Specifies whether you want headings displayed in the output.

message="MessageText"

Specifies the message that you want associated with the object you are creating. You may indicate the reason for creating the object or provide other comments.

You can list this message by specifying **requested-attributes=message** with the **pdls** command.

requested-attributes={none | brief | verbose}

Specifies which output attributes you want InfoPrint to display.

none Displays no attributes.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

style={column | doccol | line}

Specifies the presentation format you want for the displayed output.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

docol	For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
line	Each attribute is displayed on a separate line.

Arguments

Use the argument values to identify the specific object you are creating. If you specify multiple objects, separate the object names with spaces.

Note: Regardless of which object you create, you must use *ServerName:* with the **pdcreate** command.

You can use the following arguments with the **pdcreate** command:

```

ServerName:DestinationName
ServerName:QueueName
ServerName:DefaultJobName
ServerName:DefaultDocumentName
ServerName:MediumName
ServerName:AuxiliarySheet
ServerName:ResourceContextName

```

Examples

Create a Queue

To create the queue *Serv1-p3-queue*, on the server *Serv1*, enter the command:

```
pdcreate -c queue Serv1:Serv1-p3-queue
```

Create a Logical Destination

To create the logical destination *Destination3-Serv1* in the server *Serv1* and specify the queue you want associated with that destination, enter the command:

```
pdcreate -x "associated-queue=Serv1-p3-queue" Serv1:Destination3-Serv1
```

Create an Actual Destination

To create the PSF TCP/IP-attached actual destination *Destination3* in the server *Serv1* and specify the queue you want associated with that destination, enter the command:

```

pdcreate -x "destination-realization=actual
associated-queue=Serv1-p3-queue attachment-type=tcip
destination-model=InfoPrint4000
destination-tcpip-internet-address=martha.boulder.ibm.com
destination-tcpip-port-number=5001" Serv1:Destination3

```

Create a Default Document

To create the default document *LP3ivd*, enter the command:

```

pdcreate -c initial-value-document -m "Created 04/01/97"
-x "copy-count=1 document-format=line-data page-definition=MyPageDef
resource-context-page-definition=/usr/lpp/psf/myplib sides=1
descriptor='IVD for LogPrt3'" Serv1:LP3ivd

```

Create a Default Job

To create the default job MyJobTemplate using the attributes specified in the attributes file named MyJobAttributes.X, enter the command:

```
pdcreate -c initial-value-job -X MyJobAttributes.X  
server3:MyJobTemplate
```

Create a Medium

To create a medium representing a transparency with the identifier my-clear-medium in the server Serv1, enter the command:

```
pdcreate -c medium -x "descriptor='letter size, common transparency'  
medium-type=transparency medium-color=transparent medium-size=letter  
medium-sides=1 medium-dimensions=215.9:355.6" Serv1:my-clear-medium
```

Create a Medium in All Active Servers

To create the medium A4-blue in all active servers, enter the command:

```
pdcreate -c medium \*:A4-blue
```

Create a Queue and its Notification Profile

To create a notification profile for Serv1-p3-queue in server Serv1, enter the command:

```
pdcreate -c queue -x "notification-profile={event-identifiers=job-modified  
queue-state-changed delivery-method=message  
event-comment='This is a modification of job or status event'  
delivery-address=dave@cowboy locale=En_US}" Serv1:Serv1-p3-queue
```

Suggested Reading in Hardcopy

For information about:

- Attributes file, see “Attributes File” on page 8
- Headings and style, see “Command Output: Headings and Style” on page 7
- Attributes for InfoPrint objects, see Chapter 7, “InfoPrint Object Attributes” on page 309.
- Non-settable, initially settable, and resettable attributes, see “Non-Settable, Initially Settable, and Resettable Attributes” on page 2

Suggested Reading Online

To view information about all supported attributes for InfoPrint, enter the command:

```
man pd_att
```

This displays a list of files by object from which you can select the attribute listing you want.

pddelete Command: Deletes InfoPrint Objects

Syntax

```
pddelete [-c ObjectClass] [-m "MessageText"]
        [-x "attribute=value ..." ] [-X AttributesFileName]
        {ServerName ... | ServerName:AuxiliarySheetName ... |
         ServerName:DefaultDocumentName ... |
         ServerName:DefaultJobName ... |
         [ServerName:]DestinationName ... |
         ServerName:MediumName ... |
         [ServerName:]QueueName ... |
         ServerName:ResourceContextName ... |
         LocalJobID ... | GlobalJobID ...}
```

```
pddelete -c job [-m "MessageText" ] -r JobRetentionPeriod
        [-x "attribute=value ..." ] [-X AttributesFileName]
        {LocalJobID ... | GlobalJobID ...}
```

```
pddelete -h
```

Description

Use the **pddelete** administrative command to delete InfoPrint objects.

InfoPrint issues a confirmation message before deleting objects, unless your **PD_CONFIRM_DELETE** environment variable is set to **no**.

InfoPrint does not delete jobs with a non-zero value for the **job-retain-until** or **job-retention-period** attribute (either previously set or set with this command) until the retention deadline arrives or the retention period expires.

Flags

You can use the following flags with the **pddelete** command:

-c {**destination** | **job** | **queue** | **medium** | **initial-value-job** | **initial-value-document** | **auxiliary-sheet** | **resource-context** | **server**}

Specifies the object class you want for this command.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want to associate with the object that you want to delete. You can use this message to indicate the reason for deleting the object or to provide any other comments.

If the command operates on a job with a non-zero value for the **job-retention-period** or **job-retain-until** attribute (either previously set or set with this command), you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command. Otherwise, InfoPrint deletes this message with the object and you cannot retrieve it. If you do not specify **-m**, the message

already stored with the object remains unchanged and InfoPrint deletes it as previously described.

Using this flag is equivalent to specifying the command attribute **message**.

-r *JobRetentionPeriod*

You can only use this flag if the object class is **job**. InfoPrint rejects the command if you use this flag with any other class.

If the job has a retention period or retention deadline, you must specify this flag with a zero (0) value to delete the job. If not specified, InfoPrint uses the present retention period or retention deadline for the job.

Using this flag is equivalent to specifying the object attribute **job-retention-period**.

-x *"attribute=value ..."*

A single attribute string, consisting of one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x** *"attribute=value ..."* string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | job | queue | medium | initial-value-job | initial-value-document | auxiliary-sheet | resource-context | server}

Specifies the object class you want for this command.

message="MessageText"

Specifies the message you want to associate with the object you want to delete. You can use this message to indicate the reason for deleting the object or to provide any other comments.

If the command operates on a job with a non-zero value for the **job-retention-period** or **job-retain-until** attribute (either previously set or set with this command), you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command. Otherwise, InfoPrint deletes this message with the object and you cannot retrieve it.

If you do not specify the **message** attribute, the message stored with the object remains unchanged and InfoPrint deletes it as previously described.

Arguments

Use the argument value to identify the specific object you want to delete. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pddelete** command:

ServerName

You must remove all jobs contained within this server before you can delete it.

ServerName:AuxiliarySheetName

You cannot delete this auxiliary sheet if any of the actual destinations that reference it are enabled.

ServerName:DefaultDocumentName

You cannot delete this default document if any of the logical destinations that reference it are enabled.

ServerName:DefaultJobName

You cannot delete this default job if any of the logical destinations that reference it are enabled.

LocalJobID or GlobalJobID

InfoPrint deletes a job based on the specified value in its **job-retention-period** or **job-retain-until** attribute.

Notes:

1. You can identify your own jobs by either the local job ID or the global job ID. You must identify other users' jobs by the global job ID.
2. In DCE installations, you do not need permission to delete your own jobs. You must have **write** permission for the server in order to delete other users' jobs. By default, only operators and administrators have this permission.
3. In installations without DCE, by default, end users do not have permission to use the **pddelete** command. They cannot delete even their own jobs.

ServerName:MediumName

You cannot delete this medium if any of the actual destinations that reference it are enabled.

[ServerName:]DestinationName

You must remove all the jobs from an actual destination before you can delete it.

[ServerName:]QueueName

You must disable all logical destinations associated with the queue before you can delete the queue. You must remove all jobs (including paused jobs) from the queue before you can delete the queue.

ServerName:ResourceContextName

You cannot delete this resource context if any of the actual destinations that reference it are enabled.

Examples

Delete a Job Using a Local ID

To delete job 5, enter the command:

```
pddelete -c job 5
```

Delete Logical Destinations

To delete logical destinations srA-lp11 and srA-lp15, enter the command:

```
pddelete srA-lp11 srA-lp15
```

Delete a Default Job

To delete the default IVJ_2 from the server DivServ2, enter the command:

```
pddelete -c initial-value-job DivServ2:IVJ_2
```

Delete a Server

To delete the server Serv1, enter the command:

```
pddelete -c server Serv1
```

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8

pddisable Command: Stops Destinations from Accepting Jobs and Logs from Logging

Syntax

```
pddisable [-c ObjectClass] [-m "MessageText"]
          [-x "attribute=value ..."] [-X AttributesFileName]
          {ServerName ... | ServerName:LogName ... |
          [ServerName:]DestinationName ... |
          [ServerName:]QueueName ...}
```

```
pddisable -h
```

Description

Use the **pddisable** administrative command to stop actual destinations or logical destinations from accepting jobs, or to stop logs from logging data.

When you disable a destination, it does not accept jobs submitted with **pdpr** or **pdresubmit** commands. The destination still accepts other commands. All previously submitted jobs and currently processing jobs continue unaffected.

Notes:

1. Use the **pdenable** command to enable a destination to accept jobs again and to enable the logging function of a log again.
2. Use the **pddisable** and **pdenable** commands to prevent or allow input to the object. Use the **pdpause** and **pdresume** commands to prevent or allow output from the object.

Flags

You can use the following flags with the **pddisable** command:

-c {**destination** | **log** | **queue** | **server**}

Specifies the object class you want for this command. Within the valid classes, **queue** disables all associated logical destinations, **destination** is for a logical or actual destination, and **server** disables all destinations in the server.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want associated with the destination, log, queue, or server. You can use this message to indicate the reason for disabling the object or to provide any other comments.

If you do not specify the **-m** flag, the message already stored with the object remains unchanged.

When you issue a command against a server, InfoPrint propagates the message to the **message** attribute of the destinations residing in the server. InfoPrint does not change the server **message** attribute.

When you issue a command against a queue, InfoPrint propagates the message to the **message** attribute of the logical destinations associated with the queue. InfoPrint does not change the queue **message** attribute.

You can list this message by specifying **requested-attributes=message** with the **pdlis** command.

Using this flag is equivalent to specifying the command attribute **message**.

-x "*attribute=value ...*"

A single attribute string, consisting of one or more attribute-value pairs.

-X *attributes file name*

Specifies the name of a file containing attribute and value pairs you want inserted at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | log | queue | server}

Specifies the object class you want for this command. Within the valid classes, **queue** disables all associated logical destinations, **destination** is for a logical or actual destination, and **server** disables all destinations in the server.

message="MessageText"

Specifies the message you want to associate with the destination, log, queue, or server. You can use this message to indicate the reason for disabling the object or to provide any other comments.

If you do not specify this attribute, the message already stored with the object remains unchanged.

When you issue a command against a server, InfoPrint propagates the message to the **message** attribute of the destinations residing in the server. InfoPrint does not change the server **message** attribute.

When you issue a command against a queue, InfoPrint propagates the message to the **message** attribute of the logical destinations associated with the queue. InfoPrint does not change the queue **message** attribute.

You can list this message by specifying **requested-attributes=message** with the **pdlis** command.

Arguments

Use the argument value to identify the specific object you want to disable. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pddisable** command:

ServerName:LogName

Specifies the log you want to disable. Disabling a log stops it from logging data.

[ServerName:]DestinationName

Specifies the destination you want to disable. Disabling a destination stops it from accepting print or transmission requests. Any jobs currently assigned to an actual destination continue processing.

[ServerName:]QueueName

Specifies the queue you want to disable. Disabling a queue disables all of the logical destinations associated with that queue.

ServerName

Specifies the server you want to disable. Disabling a server disables all destinations residing in the server.

Examples

Disable a Logical Destination

To disable logical destination Serv1-lp on server Serv1, enter:

```
pddisable Serv1-lp
```

InfoPrint does not require the server name.

Disable an Actual Destination

To disable actual destination Serv1-pp on server Serv1, enter:

```
pddisable Serv1-pp
```

InfoPrint does not require the server name.

Disable All Destinations in a Server

To disable the logical and actual destinations contained in the server ServG1 and assign a message to the destinations, enter:

```
pddisable -c server -m "Unavailable due to testing" ServG1
```

Disable All Logical Destinations Associated with a Queue

To disable the logical destinations associated with the queue production-q1 on server servera, enter:

```
pddisable -c queue production-q1
```

InfoPrint does not require the server name.

pddisable

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8

pdenable Command: Enables Destinations to Accept Jobs and Logs to Log

Syntax

```
pdenable [-c ObjectClass] [-m "MessageText"]
          [-x "attribute=value ..."] [-X AttributesFileName]
          {ServerName ... | ServerName:LogName ... |
          [ServerName:]DestinationName ... |
          [ServerName:]QueueName ...}
```

```
pdenable -h
```

Description

Use the **pdenable** administrative command to enable the logging function of logs or to enable logical destinations or actual destinations to accept jobs.

Notes:

1. Use the **pdenable** and **pddisable** commands to allow or prevent input to an object. Use the **pdresume** and **pdpause** commands to allow or prevent output from the object.
2. To stop destinations from accepting jobs, use the **pddisable** command.
3. To stop logs from logging data, use the **pddisable** command.

Flags

You can use the following flags with the **pdenable** command:

-c {destination | log | queue | server}

Specifies the object class you want for this command. Within the valid classes, **queue** enables all associated logical destinations, **destination** is for a logical or actual destination, and **server** enables all destinations in that server.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want to associate with the destination, log, queue, or server you want to enable. You can use this message to indicate the reason for enabling the object or to provide any other comments. If you do not specify the **-m** flag, the message already stored with the destination, log, queue, or server remains unchanged.

When you issue the command against a server, InfoPrint propagates the message to the **message** attribute of the destinations residing in that server. InfoPrint does not change the server **message** attribute.

When you issue the command against a queue, InfoPrint propagates the message to the **message** attribute of the logical destinations associated with the queue. InfoPrint does not change the queue **message** attribute.

You can list this message by specifying **requested-attributes=message** with the **pdls** command.

Using this flag is equivalent to specifying the command attribute **message**.

-x *"attribute=value ..."*

A single attribute string, consisting of one more attribute-value pairs.

-X *attributes file name*

Specifies the name of a file containing attribute and value pairs you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x** *"attribute=value ..."* string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | log | queue | server}

Specifies the object class you want for this command. Within the valid classes, **queue** enables all associated logical destinations; **destination** is for a logical or actual destination; and **server** enables all destinations in that server.

message="MessageText"

Specifies the message you want to associate with the destination, log, queue, or server that you want to enable. You can use this message to indicate the reason for enabling the object or to provide any other comments. If you do not specify the **message** attribute, the message already stored with the destination, log, queue, or server remains unchanged.

When you issue the command against a server, InfoPrint propagates the message to the **message** attribute of the destinations residing in that server. InfoPrint does not change the server **message** attribute.

When you issue the command against a queue, InfoPrint propagates the message to the **message** attribute of the logical destinations associated with the queue. InfoPrint does not change the queue **message** attribute.

You can list this message by specifying **requested-attributes=message** with the **pdls** command.

Arguments

Use the argument value to identify the specific object you want to enable. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pdenable** command:

ServerName:LogName

Specifies the log you want to enable. Enabling a log allows it to begin accepting input (logging).

[ServerName:]DestinationName

Specifies the destination you want to enable. When first created, destinations are in the disabled state. You cannot enable destinations unless you associate them with an existing queue. Any other objects referenced by the destination must also exist. These are:

- For logical destinations
 - Default jobs
 - Default documents
- For actual destinations
 - Media
 - Auxiliary-sheets
 - Resource-contexts

[ServerName:]QueueName

Specifies the queue you want to enable. When you issue the **pdenable** command against a queue, InfoPrint attempts to enable all of its associated logical destinations.

ServerName

Specifies the server you want to enable. When you issue the **pdenable** command against a server, InfoPrint attempts to enable all of its destinations.

When a server initializes again after being shut down, whether the destinations are either enabled or disabled depends on:

- The state of the destination when the system was shut down
- The ability of the server to communicate with its associated queue

Examples

Enable Logical Destinations

To enable logical destinations `Serv1-lp` and `draft-lp` on server `Serv1`, enter:

```
pdenable Serv1-lp draft-lp
```

Enable All Destinations in a Server

To enable all logical and actual destinations contained in the server `ServG1`, enter the command:

```
pdenable -c server ServG1
```

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8

pdls Command: Lists Selected Attribute Values

Syntax

```
pdls [-c ObjectClass] [-f "FilterCriteria:" ] [-F] [-g] [-j]
      [-r RequestedAttribute ...] [-s StyleName] [-U]
      [-x "attribute=value ...:" ] [-X AttributesFileName]
      [ServerName ... | ServerName:AuxiliarySheetName ... |
      ServerName:DefaultDocumentName ... |
      ServerName:DefaultJobName ... |
      ServerName:LogName ... | ServerName:MediumName ... |
      [ServerName:]DestinationName ... |
      [ServerName:]QueueName ... |
      ServerName:ResourceContextName ... |
      LocalJobID[.DocNumber] ... | GlobalJobID[.DocNumber] ...]
```

pdls -h

Description

Use the **pdls** command to request that InfoPrint display selected attribute values for one or more jobs or other InfoPrint objects.

- By default, InfoPrint creates a filter when listing jobs that only allows you to see your jobs. The jobs have a predefined value for the filter that is equal to the job attribute **user-name**; this value is your login identity when you submit a job. You can add to this filter to further restrict the jobs for which InfoPrint returns information.
- You must suppress the default filter by using the **-U** flag or turn off all filtering with the **-F** flag to see more than your own jobs.
- If you only specify the *ServerName* as the command argument, InfoPrint displays the attribute values for all objects belonging to the object class you specify.
- You can list the attribute values for specific jobs by using the local ID or the global ID. You must have submitted the job to use the local ID.

Notes:

1. There is a situation when you must use the global ID. If the InfoPrint communications daemon responsible for the mapping of local ID-to-global ID values is not available, this can prevent InfoPrint from tying the local ID to the global ID. If this situation exists, you must use the global ID, the name of the server, or an argument specification using global characters.
2. There is a possible situation that can occur if your administrator has set the **PDIDTABLE** environment variable to a low value, for example 10. You submit a series of jobs during a short time span such that the number of jobs you have in process is larger than the value set, say 14. You will have two jobs with the local IDs of 1, 2, 3, and 4. However, InfoPrint no longer associates the first four jobs with a local ID because those local IDs now belong to the 11th, 12th, 13th, and 14th jobs. Therefore, you must use the global ID to take action on any of the first four jobs.

Flags

You can use the following flags with the **pdlis** command:

- c** {job | **auxiliary-sheet** | **document** | **initial-value-document** | **initial-value-job** | **log** | **medium** | **destination** | **queue** | **resource-context** | **server**}
- Specifies the object class of the object whose attributes you want to list. All object classes are valid.
- Using this flag is equivalent to specifying the command attribute **class**.
- f** "*FilterCriteria*"
- Specifies the filter criteria you want to use in selecting from the candidate objects. Among the candidate objects, InfoPrint returns only those matching the filter expression. See the command attribute **filter**, for filter expression details.
- Using this flag is equivalent to specifying the command attribute **filter**.
- F** Turns off all filtering, both specified and default. See the **-U** flag for suppressing only the default.
- g** Turns off headings.
- Using this flag is equivalent to specifying the command attribute **headings=false**.
- h** Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.
- j** Use this flag to display only job attributes.
- r** {brief | **verbose** | **archive** "*attribute ...:*" | **all** | **none**}
- Specifies the group of attributes that you want to display for the specified job, auxiliary sheet, document, default document, default job, log, medium, destination, queue, resource-context, or server.
- brief** Displays a small subset of important attributes for each object.
- verbose** Displays a larger subset of important attributes for each object.
- archive** Writes only initially settable and resettable attributes to an archive file (see "Create an Archive File" on page 43).
- attributes ...*
- Displays the attributes you specify.
- all** Displays all attributes.
- none** Displays no attributes.
- If you specify more than one of these values, InfoPrint displays all the attributes requested.
- Using this flag is equivalent to specifying the command attribute **requested-attributes**.
- s** {column | **docol** | line}
- Specifies the format in which you want InfoPrint to display the attributes.

- column** Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns. This is the default for **-r brief** and **-r verbose**.
- docol** For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
- line** Each attribute is displayed on a separate line. This is the default for **-r all**, **-r "attribute ..."**, and **-r archive**.

Using this flag is equivalent to specifying the command attribute **style**.

-U Suppresses the default user-name filter.

-x "attribute=value ..."

Consists of a single attribute string, containing of one or more attribute-value pairs.

-X AttributesFileName

Specifies the name of the file containing attribute and value pairs you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x "attribute=value ..."** string or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={job | auxiliary-sheet | document | initial-value-document | initial-value-job | log | medium | destination | queue | resource-context | server}

Specifies the object class of the object whose attributes you want listed. All object classes are valid.

filter="FilterCriteria"

Specifies the selection criteria you want InfoPrint to use in order to select a subset from the candidate objects (if you request attribute values for multiple objects). A filter is a logical expression consisting of relations of attributes to attribute values. Among the objects you specify, InfoPrint returns only objects whose attribute values match the filter expression.

You can only use attributes for the object class (**job**, **auxiliary-sheet**, **document**, **initial-value-document**, **initial-value-job**, **log**, **medium**, **destination**, **queue**, **resource-context**, or **server**) that you specify in the command. The filter may contain an attribute other than one of those you are requesting.

Table 2. Attribute Operators for Filters

Operation	Operator	Strings	Integers	Time Format
Equal	==	Yes	Yes	Yes
Match first part of a value	=*	Yes	Yes	Yes
Match last part of a value	*=	Yes	Yes	Yes
Match any part of a value; such as a sub-string	*=*	Yes	Yes	Yes
Attribute present (any value)	==*	Yes	Yes	Yes
Note: When you test for attribute presence, InfoPrint evaluates the filter item as true when the attribute has a value , not just when the attribute exists. You may need a false value to satisfy the requirement, as long as the false value conforms to the general syntax.				
Match approximately; for case-insensitive sub-string	~=	Yes	No	No
Notes:				
1. An approximate match occurs when at least half of the target string, regardless of starting position, matches the filter value.				
2. A case-insensitive match occurs when the target string may have a mix of upper- and lower-case characters, but the characters do match.				
Match a value greater than that specified	>	No	Yes	Yes
Match a value less than that specified	<	No	Yes	Yes

This list shows the filter syntax:

1. A filter item consisting of an "attribute operator value." Table 2 shows the operators and the data formats you can use to separate the attribute and value.
2. In Table 2, the attribute-present operation consists of an attribute name followed by the equality operator followed by an * in place of an attribute value. For example:

```
-f "media-ready=="
```

If the attribute has no value, InfoPrint evaluates the filter item as false. InfoPrint evaluates the filter item as true if the attribute has any assigned value.

3. InfoPrint can compare each attribute in a filter item to only one attribute value. To compare an attribute to more than one value, or to filter more than one attribute, separate the filter items with one of the following operators:

The AND operator ("&&") *FilterItem && FilterItem*

The expression evaluates to true only if both filter items evaluate to true.

The OR operator ("||") *FilterItem || FilterItem*

The expression evaluates to true if either of the filter items evaluate to true.

4. To evaluate a filter item as false, use the NOT operator before the filter item and enclose the filter item in parentheses.

Note: Depending on the shell you are using, you may need to place quotation marks before and after the parentheses.

The NOT operator ! *!(FilterItem)*

If the filter item evaluates to true, the expression is false.

If the filter item evaluates to false, the expression is true.

- When you use multiple logical operators in a filter, InfoPrint evaluates them in an order of precedence. You can override the order of precedence by using parentheses, ().

Note: Depending on the shell you are using, you may need to place quotation marks before and after the parentheses. See Table 3 for the order of precedence.

Table 3 summarizes the filter syntax. The table lists the operators in the order of precedence from highest to lowest.

Table 3. Filter Syntax

Operators	Placement
Parentheses: ()	Around filter items
Relational operators: > <	Between attribute and value
Equality operators: ==	Between attribute and value
String matching: *= *= *=* ~=	Between attribute and value
NOT Operator: !	Before (filter-item) only
AND operator: &&	Between two filter items
OR operator:	Between two filter items

headings= {true | false}

Specifies whether you want the output displayed with or without headings.

message-count=number

When you request the **log-messages** log attribute, this specifies the number of previous messages you want to see starting from the last message logged. The value you can specify for *number* can be an integer from 1 through 2147483647.

Use this command attribute in conjunction with the **log-messages** log attribute to query for error log information. For example:

```
pdls -c log -r log-messages -x "message-count=4" Serv1:
```

displays the last four messages contained in the error log for server Serv1.

requested-attributes={brief | verbose | archive | "attribute ...:" all | none}

Specifies the group of attributes you want to display for the specified job, auxiliary-sheet, document, default document, default job, log, medium, destination, queue, resource-context, or server object.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

archive Writes only initially settable and resettable attributes to an archive file (see "Create an Archive File" on page 43).

attribute ... Displays the attributes you specify.

all Displays all attributes.

none Displays no attributes.

If you specify more than one of these values, InfoPrint displays all the attributes requested.

style={column | docol | line}

The format in which you want the attributes displayed.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns. This is the default for **requested-attributes=brief** and **requested-attributes=verbose**.

docol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line. This is the default for **requested-attributes=all**, **requested-attributes="attribute ..."**, and **requested-attributes=archive**.

Arguments

Use the argument value to identify the specific object whose attributes you want to display. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pdls** command:

LocalJobID[.DocNumber]
GlobalJobID[.DocNumber]
ServerName:AuxiliarySheetName
ServerName:DefaultDocumentName
ServerName:DefaultJobName
ServerName:LogName
ServerName:MediumName
[ServerName:]DestinationName
[ServerName:]QueueName
ServerName:ResourceContextName
ServerName:

Note: When you only specify *ServerName:* as the argument of the command (without an object name), InfoPrint returns the attribute values for all of the objects within the object class that you specify for that server and that meet the filter criteria.

Examples

List Full Attribute Information for a Document

To display attribute information for the first document in a job with a local ID of 13, enter the command:

```
pdls -c document -r all 13.1
```

List Minimum Information for a Document

To find the minimum information (document number, format, and file name) about the second document in a job with a local ID of 13, enter the command:

```
pdls -c document 13.2
```

List Selected Attributes for a Queue

To list the values of the brief attributes and the **backlogged** attribute for the queue Charlie-q, enter the command:

```
pdls -c queue -r "brief backlogged" Charlie-q
```

InfoPrint displays information similar to the following:

```
Charlie-q: queue-name      = Charlie-q
Charlie-q: queue-state    = ready
Charlie-q: associated-server = Charlie
Charlie-q: backlogged     = false
```

List Document Formats Supported by Destinations

To display the document formats supported by the logical and actual destinations in Serv1, enter the command:

```
pdls -c destination -r document-formats-supported -s line Serv1:
```

InfoPrint displays information similar to the following:

```
Serv1-lp: document-formats-supported =
Serv1-pp: document-formats-supported = ascii
                                           dbcs-ascii
                                           ditroff
                                           line-data
                                           modca-p
                                           pdf
                                           postscript
                                           tiff
Srv1-pp2: document-formats-supported = ascii
                                           dbcs-ascii
                                           ditroff
                                           line-data
```

Filter Destinations and Queues by Attribute

To determine the logical destinations, actual destinations, and queues that support selected attributes on any server, enter the command:

```
pdls -c destination -f "content-orientation-supported==landscape &&
plexes-supported==tumble && sides-supported==2"
-r "destination-realization associated-queue" \*:
```

Note: Including the backslash before the global character prevents the Korn shell from interpreting the * as a filename wildcard.

InfoPrint displays information similar to the following:

```
Serv3-lp: destination-realization = logical
Serv3-lp: associated-queue        = Serv3-q
Serv4-lp: destination-realization = logical
Serv4-lp: associated-queue        = Serv4-q
Serv3-pp: destination-realization = actual
Serv3-pp: associated-queue        = Serv3-q
Serv4-pp: destination-realization = actual
Serv4-pp: associated-queue        = Serv4-q
```

Filter Jobs by Attribute

To list all jobs that have requested more than one copy and that InfoPrint has assigned to actual destination `mysrv-pp`, enter the command:

```
pdls -U -f "copy-count>1 && destination-assigned==mysrv-pp" "*:"
```

Note: Placing the quotation marks before the global character and after the colon prevents the Korn shell from interpreting the `*` as a filename wildcard.

Filter Jobs by User Name (Include a User)

To list all jobs owned by the user named `Smith`, enter this command:

```
pdls -f "job-owner==Smith" -U Serv1:
```

Filter Jobs by User Name (Exclude a User)

To list all jobs not owned by the user named `Smith`, enter the command:

```
pdls -f "!(job-owner==Smith)" -U Serv1:
```

Filter Jobs by User Name (Substring)

To list jobs owned by users with a given substring in their names (substring matching) use one of the following filters with the **pdls** command:

- Initial string match:

```
pdls -U -f "job-owner=*Jones" Serv1:
```

- Any substring match:

```
pdls -U -f "job-owner**one" Serv1:
```

- Final string match:

```
pdls -U -f "job-owner*=nes" Serv1:
```

All of these commands return jobs owned by `Jones`.

Note: These examples use the Korn shell.

Filter Jobs by User Name (Approximate Match)

To list jobs owned by all users with a name close to `Jones` (an approximate match), enter the command:

```
pdls -U -f "job-owner~=jones" Serv1:
```

Note: This example uses the Korn shell.

Display the Server Associated with a Destination

To query for the name of the server containing logical destination `draft-lp`, enter the command:

```
pdls -c destination -r associated-server draft-lp
```

InfoPrint displays information similar to the following:

```
draft-lp: associated-server=Serv1
```

List the Attributes Specified in a Default Document

To query for the attributes specified in the default document `sp17ivd` contained in `Serv7`, enter the command:

```
pdls -c initial-value-document -r all Serv7:sp17ivd
```

InfoPrint displays information similar to the following:

```

spl7ivd: carriage-control-type           =
spl7ivd: chars                           =
spl7ivd: content-orientation             =
spl7ivd: initial-value-document-identifier = spl7ivd
spl7ivd: associated-server                = Serv7
spl7ivd: logical-destination-ready        = Serv7-lp
spl7ivd: copy-count                       = 2
spl7ivd: sides                            = 2
spl7ivd: document-format                  = line-data

```

Note: The list that InfoPrint returns contains all possible attributes for a default document (those without values and those with values).

List All Job Attributes

To list all attributes of jobs 10 and 12, enter the command:

```
pdls -r all 10 12
```

List Brief Job Attributes

To list just the brief job attributes of jobs 10 and 12, enter the command:

```
pdls -j 10 12
```

Display Status of All Jobs

To list the status of all jobs you have submitted to the default logical destination, Dserv-lp, enter the command:

```
pdls -f "destination-name-requested==Dserv-lp" Serv1:
```

InfoPrint displays information similar to the following:

Job ID	Name	Current State	Intervening Jobs	Destination Requested	Destinations Assigned
4	SplX:1099222204 Wkly-report	processing	0	Dserv-lp	Dserv-pp
5	SplX:1114222205 Test-report	processing	0	Dserv-lp	Laser-pp
6	SplX:1224222206 Trip-report	pending	2	Dserv-lp	
1	SplX:0988222201 Dept-memo12	retained		Dserv-lp	

Display Status of All Pending Jobs

To list the job status of all pending jobs submitted to the default logical destination, Dserv-lp, enter the command:

```
pdls -f "destination-name-requested==Dserv-lp &&
current-job-state==pending" Serv1:
```

InfoPrint displays information similar to the following:

Job ID	Name	Current State	Intervening Jobs	Destination Requested	Destinations Assigned
6	SplX:1224222206 Trip-report	pending	2	Dserv-lp	

List the Brief Attributes of a Logical Destination

To list the **brief** attributes of logical destination Dserv-1p, enter the command:

```
pdls -c destination Dserv-1p
```

InfoPrint displays information similar to the following:

Destination	Realization	Enabled	Queue
Dserv-1p	logical	true	Dserv-q

If you do not specify a destination name, InfoPrint displays the brief attributes of all the destinations that share the same server with your default logical destination (as defined by your **PDPRINTER** environment variable).

List Document Formats Supported by a Destination

To list the document formats supported by the actual destination srv37-pp in the line style with headings, which is the default style for an attribute list, enter the command:

```
pdls -c destination -r document-formats-supported srv37-pp
```

InfoPrint displays information similar to the following:

```
srv37-pp: document-formats-supported = modca-p
                                         pdf
                                         postscript
```

Create an Archive File

To create an archive file for a server and store it in an existing directory under the current directory, attr, enter the command:

```
pdls -c server -r archive Serv1 > attr/Serv1.archive
```

Suggested Reading in Hardcopy

For information about:

- Global character support for server names, see “Wildcards” on page 8
- Attributes file, see “Attributes File” on page 8
- Headings and style, see “Command Output: Headings and Style” on page 7
- Attributes for InfoPrint objects, see Chapter 7, “InfoPrint Object Attributes” on page 309
- Non-settable, initially settable, and resettable attributes, see “Non-Settable, Initially Settable, and Resettable Attributes” on page 2

Suggested Reading Online

To view information about all supported attributes for InfoPrint, enter the command:

```
man pd_att
```

This displays a list of files by object from which you can select the attribute listing you want.

pdmod Command: Modifies Attributes of Submitted Print Jobs

Syntax

```
pdmod [-g] [-m "MessageText"] [-n CopyCount]
      [-r attribute ...] [-s StyleName] [-t JobName]
      [-x "attribute=value ..."] [-X AttributesFileName]
      {LocalJobID ... | GlobalJobID ...}
```

```
pdmod -h
```

Description

Use the **pdmod** command to modify the values of job and document attributes of previously submitted jobs.

You may specify any resettable job and document attributes. See “Attributes for Documents and Default Documents” on page 403 and “Attributes for Jobs and Default Jobs” on page 464 for descriptions of all job and document attributes.

You can only modify preprocessing, pending, held, paused, or retained jobs. You cannot modify processing or printing jobs.

Modifying an existing job may affect the scheduling of the job.

Table 4 lists the four modification operators.

Table 4. *pdmod* Operators

Operator	Syntax	Description
Replace	<i>attribute=value</i>	Replaces the entire value of the attribute <i>attribute</i> with <i>value</i> or, if not already present, adds the attribute-value pair to the job.
Add values	<i>attribute+=value</i>	Adds the value <i>value</i> to the attribute <i>attribute</i> . You cannot add values to single-valued attributes. An add request that duplicates values on a multi-valued attribute has no effect on the job.
Remove values	<i>attribute-=value</i>	Removes the value <i>value</i> from the attribute <i>attribute</i> . A remove request for a nonexistent value has no effect on the object. A remove request for the last or only value of an attribute is equivalent to a reset-to-default request.
Reset to default	<i>attribute==</i>	Sets the attribute <i>attribute</i> to the default values according to the job-defaulting hierarchy. If you supply values with a reset request, InfoPrint ignores them.

If you do not specify a value with a replace, add, or remove request, InfoPrint issues an error and rejects the request to change the attribute value for the object.

Note: If InfoPrint does not accept a modification, InfoPrint rejects the whole request and the job continues as before.

Use the global job identifier to identify jobs belonging to another person. If you use DCE, you must have **write** permission for the server to modify other people's jobs.

Flags

You can use the following flags with the **pdmod** command:

- g** Turns off headings.
Using this flag is equivalent to specifying the command attribute **headings=false**.
- h** Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.
- m "MessageText"**
Specifies the message you want to store in the **job-message-from-administrator** attribute. You can use the message to give the reason why you are modifying the job or to provide any other comments. If you do not specify the **-m** flag, the message already stored with the job remains unchanged.
You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.
Using this flag is equivalent to specifying the command attribute **message**.
- n CopyCount**
Specifies the number of document copies.
Using this flag is equivalent to specifying the object attribute **copy-count**.
- r {none | brief | verbose}**
Specifies the attribute values you want to display for the specified object.
- none** Displays no attributes.
- brief** Displays a small subset of important attributes for each object.
- verbose** Displays a larger subset of important attributes for each object.
- Using this flag is equivalent to specifying the command attribute **requested-attributes**.
- s {column | doccol | line}**
When combined with the **-r** flag or the **requested-attributes** command attribute, specifies the format in which you want InfoPrint to display the attributes.
- column** Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.
- doccol** For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
- line** Each attribute is displayed on a separate line.
Using this flag is equivalent to specifying the command attribute **style**.

-t *JobName*

Specifies the new name you want for the job.

Using this flag is equivalent to specifying the object attribute **job-name**.

-x "*attribute=value ...*"

Consists of an attribute string, containing one or more attribute-value pairs. Prefix the attribute value with the replace operator, =, to replace a value, with the add-values operator, +=, to add a value, or the remove-values operator, -=, to remove a value. Use the reset-to-default operator, ==, with no attribute value to set the attribute to its default value.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x "*attribute=value ...*"** string or in an attributes file designated with the **-X *AttributesFileName*** flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

headings={true | false}

Specifies if you want InfoPrint to display headings on the output.

message="MessageText"

Specifies the message you want to store in the **job-message-from-administrator** attribute. You can use the message to give the reason why you are modifying the job or to provide any other comments. If you do not specify the **message** attribute, the message already stored with the job remains unchanged.

You can list this message by specifying

requested-attributes=job-message-from-administrator with the **pdls** command.

requested-attributes={none | brief | verbose}

Specifies which attributes you want displayed.

none Displays no attributes.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

style={column | doccol | line}

Specifies the presentation format that you want for the displayed output.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

docol	For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
line	Each attribute is displayed on a separate line.

Arguments

Use the argument value to identify the specific object that you want to modify. If you specify multiple objects, separate the object names with spaces.

LocalJobID or GlobalJobID

Specifies the local or global job identifier.

Examples

Modify Content Orientation

To modify the job with a local ID of 10 and change the orientation to landscape, enter the command:

```
pdmod -x "content-orientation=landscape" 10
```

Modify Job Hold Condition

To modify the job attribute **job-hold** to **false** for job 10 so that InfoPrint can schedule the job (previously submitted with **job-hold** set to **true**), enter the command:

```
pdmod -x "job-hold=false" 10
```

Modify Job Comment

To modify the job attribute **job-comment** to Test Results 100 for job 10, enter the command:

```
pdmod -x "job-comment='Test Results 100'" 10
```

Modify the Number of Sides that Print

To modify the document attribute **sides** to specify that all documents in the job with global identifier DivSpool2:1011222243 should print on both sides, enter the command:

```
pdmod -x "sides=2" DivSpool2:1011222243
```

Add a Destination Location Request

To add a destination location request to job 10, enter the command:

```
pdmod -x "destination-locations-requested+='bldg.10 room 1-15'" 10
```

Remove a Destination Location Request

To remove a destination location request from job 10, enter the command:

```
pdmod -x "destination-locations-requested-='bldg.25 room 3-22'" 10
```

Remove All Destination Location Requests

To remove all destination locations requested from job 10, enter the command:

```
pdmod -x "destination-locations-requested==" 10
```

Combining Modifications

To modify job 17, by changing the content-orientation and removing the hold on the job, enter the command:

```
pdmod -x "content-orientation=landscape job-hold=false" 17
```

Suggested Reading in Hardcopy

For information about:

- Attributes files, see “Attributes File” on page 8
- Headings and style, see “Command Output: Headings and Style” on page 7
- Job defaulting-hierarchy, see “pdpr Command: Submits Jobs” on page 56
- Job attributes, see “Attributes for Jobs and Default Jobs” on page 464
- Document attributes, see “Attributes for Documents and Default Documents” on page 403
- Non-settable, initially settable, and resettable attributes, see “Non-Settable, Initially Settable, and Resettable Attributes” on page 2

Suggested Reading Online

To view information about job attributes, enter the command:

```
man pd_att_job
```

To view information about document attributes, enter the command:

```
man pd_att_document
```

pdpause Command: Pauses Jobs, Actual Destinations, Servers, or Queues

Syntax

```
pdpause [-c destination] [-m "MessageText"] [-n]
        [-x "attribute=value ..."] [-X AttributesFileName]
        [-w {now | after-current-copy | after-current-job}]
        [ServerName:]DestinationName ...
```

```
pdpause -j [-m "MessageText"]
        [-x "attribute=value ..."] [-X AttributesFileName]
        [-w {now | after-current-copy}] [ServerName:]DestinationName ...
```

```
pdpause -c job [-m "MessageText"] [-x "attribute=value ..."]
        [-X AttributesFileName] [-w {now | after-current-copy}]
        {LocalJobID ... | GlobalJobID ...}
```

```
pdpause -c queue [-m "MessageText"] [-x "attribute=value ..."]
        [-X AttributesFileName] [ServerName:]QueueName ...
```

```
pdpause -c server [-m "MessageText"] [-n]
        [-x "attribute=value ..."] [-X AttributesFileName]
        [-w {now | after-current-copy | after-current-job}]
        ServerName ...
```

```
pdpause -h
```

Description

Use the **pdpause** administrative command to pause an object that holds jobs or to pause a job.

You can pause these objects:

- Jobs that are
 - **pending**
 - **held**
 - **ripping**
 - **imposing**
 - **processing**
 - **printing**
- Actual destinations

Note: You cannot pause PSF upload-TCP/IP-attached physical printers or PSF upload-SNA-attached physical printers.
- Queues
- Servers (pauses all of the queues and actual destinations contained in a server)

To resume a paused object, use the **pdresume** command.

Note: Use the **pdpause** and **pdresume** commands to prevent or allow output from the object. Use the **pddisable** and **pdenable** commands to prevent or allow input to the object.

Flags

You can use the following flags with the **pdpause** command:

-c {destination | queue | job | server}

Specifies the object class you want to pause. Within the valid classes, **destination** is an actual destination.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. This flag and any other flag are mutually exclusive (if you use it with any other flag or attribute, InfoPrint recognizes only the **-h** flag).

-j This flag is only valid when you use it with object-class **destination**. Use this flag to pause the currently printing job on the specified actual destination. The actual destination must be a physical printer, not a fax destination or an email destination.

-m "MessageText"

Specifies the message you want to associate with the specified destination, queue, job, or server that you are pausing. You can use this message to indicate the reason that you are pausing the object or to provide any other comments.

When pausing a server, InfoPrint propagates the message to the **message** attribute of the actual destinations and queues residing in the server.

If the command operates on a destination or a queue, you can list this message by specifying **requested-attributes=message** with the **pdls** command.

When the command operates on a job, the specified text becomes the value of the **job-message-from-administrator** attribute. You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.

If you do not specify the **-m** flag, the message already stored with the destination, queue, job, or server remains unchanged.

Using this flag is equivalent to specifying the command attribute **message**.

-n Causes the destination to perform an NPRO (move the last printed page to the stacker). Using this flag is equivalent to specifying the command attribute **non-process-runout=true**.

This flag is valid only with object class **destination** or **server**. It is not valid with the **-j** flag. It is valid only for PSF physical printers and for servers containing them.

-w {now | after-current-copy | after-current-job}

Specifies when to pause the destination, job, or server. If you specify:

now and the paused object is a:

destination The destination pauses as soon as possible. How long this takes depends on the output device.

- job** The job pauses as soon as possible. If the job is processing or printing, how long this takes depends on the output device.
- server** The server pauses as soon as possible. How long this takes depends on the output devices represented by the destinations in the server.

after-current-copy

and the paused object is a:

destination The destination pauses after the current copy of the current job finishes printing.

job The job pauses after the current copy finishes printing.

server The server pauses after the current copy of the current job on each actual destination in the server finishes printing.

This value is valid only for PSF physical printers, for jobs printing on PSF physical printers, and for servers containing PSF physical printers.

after-current-job

and the paused object is a:

destination The destination pauses after the current job finishes printing.

server The server pauses after the current job on each actual destination in the server finishes printing.

This value is not valid for jobs, including jobs paused with the **-j** flag. It is valid only for PSF physical printers and for servers containing PSF physical printers.

Specifying this flag is equivalent to specifying the command attribute **when**.

-x "*attribute=value ...*"

A single attribute string, consisting of one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs you want inserted at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | queue | job | server}

Specifies the object class that you want to pause. Within the valid classes, **destination** is an actual destination.

message="MessageText"

Specifies the message that you want to associate with the specified destination, queue, job, or server that you are pausing. You can use this message to indicate the reason you are pausing the object or to provide any other comments.

When pausing a server, InfoPrint propagates the message to the **message** attribute of the actual destinations and queues residing in the server. InfoPrint does not change the server **message** attribute.

If the command operates on a destination or a queue, you can list this message by specifying **requested-attributes=message** with the **pdls** command.

When the command operates on a job, the specified text becomes the value of the **job-message-from-administrator** attribute. You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.

If you do not specify the **message** attribute, the message already stored with the destination, queue, job, or server remains unchanged.

non-process-runout={true | false}

Specifies whether the destination should perform an NPRO (move the last printed page to the stacker). This attribute is valid only with object class **destination** or **server**. It is not valid with the **-j** flag. It is valid only for PSF physical printers and for servers containing them.

when={now | after-current-copy | after-current-job}

Specifies when to pause the destination, job, or server. If you specify:

now and the paused object is a:

destination The destination pauses as soon as possible. How long this takes depends on the output device.

job The job pauses as soon as possible. If the job is processing or printing, how long this takes depends on the output device.

server The server pauses as soon as possible. How long this takes depends on the output devices represented by the destinations in the server.

after-current-copy

and the paused object is a:

destination The destination pauses after the current copy of the current job finishes printing.

job The job pauses after the current copy finishes printing.

server The server pauses after the current copy of the current job on each actual destination in the server finishes printing.

This value is valid only for PSF physical printers, for jobs printing on PSF physical printers, and for servers containing PSF physical printers.

after-current-job

and the paused object is a:

destination The destination pauses after the current job finishes printing.

server The server pauses after the current job on each actual destination in the server finishes printing.

This value is not valid for jobs, including jobs paused with the **-j** flag. It is valid only for PSF physical printers and for servers containing PSF physical printers.

Arguments

Use the argument value to identify the specific object that you want to pause. If you specify multiple objects, all of the objects must belong to the same class and you must separate the object names with spaces.

You can use the following arguments with the **pdpause** command:

LocalJobID... or GlobalJobID...

Specifies the jobs that you want to pause as determined by a local job identifier or global job identifier. If you use DCE, by default, only administrators have the authority to pause jobs. If you do not use DCE, by default, administrators and operators have the authority to pause jobs but end users do not. Therefore, in most cases someone other than the job submitter will pause a job and must identify it by the global job ID. Job submitters who do have authority to pause jobs can identify their own jobs by the local job ID.

The following actions take place when you cause InfoPrint to pause:

A ripping or imposing job:

- The job stops. If the first pages of the job have started to print or transmit while the last pages are ripping or imposing, the job is treated like a printing job.
- The job state changes to paused.
- The destination remains available to accept work.
- InfoPrint can assign other jobs to the destination.

A processing or printing job:

- The job stops.
 - If you specify **-w=after-current-copy**, the job stops after the current copy finishes printing.
 - Otherwise, the job stops as soon as possible. How long this takes depends on the type of output device printing or transmitting the job.
- The job state changes to paused.
- The destination remains available to accept work.
- InfoPrint can assign other jobs to the destination.

A pending job:

InfoPrint prevents scheduling of the job but does not affect any destination.

A held job:

InfoPrint prevents the job from becoming pending, even if you or InfoPrint removes the reason for the job hold. For example, the specified **job-print-after** time expires.

Paused jobs remain in the queue until someone resumes or cancels them. InfoPrint allows modification of a paused job, but you cannot resubmit the job until you issue a **pdresume** command for the job.

Note: If you modify a paused job, it resumes at the beginning, not at the point where it paused.

[ServerName:]DestinationName

Specifies the destinations you want to pause. The action taken depends on whether you include the **-j** flag in the command.

Without the **-j** flag:

- The destination stops.
 - If you specify **-w=after-current-job**, the destination stops after the current job finishes printing.
 - If you specify **-w=after-current-copy**, the destination stops after the current copy finishes printing.
 - Otherwise, the destination stops as soon as possible. How long this takes depends on the type of output device.
- InfoPrint changes the destination state to paused.
- InfoPrint leaves the job state unchanged; the job is still assigned to the destination.

The actual destination still accepts jobs from its associated queue up to the maximum-concurrent-jobs limit, but does not print them.

With the **-j** flag:

- The job now printing on the destination stops.

Note: The actual destination must be a physical printer, not a fax destination or an email destination.

 - If you specify **-w=after-current-copy**, the job stops after the current copy finishes printing.
 - Otherwise, the job stops as soon as possible. How long this takes depends on the type of printer device.
- InfoPrint changes the job state to paused.
- The destination remains available to accept work.
- InfoPrint can assign other jobs to the destination.

The actual destination may still accept jobs from its associated queue and process them.

Note: You cannot pause logical destinations because they do not hold jobs.

[ServerName:]QueueName

Specifies the queues you want to pause.

Pausing a queue halts the distribution of jobs from the queue to the actual destinations associated with the queue. Pausing a queue does not prevent it from accepting jobs from its associated logical destinations.

ServerName

Specifies the server on which you want the command to operate. A server does not have a paused state. Issuing the command against a server pauses all queues and actual destinations contained within the server.

Examples

Pause an Actual Destination

To pause actual destination molly-pp and include a message as to why you are pausing the destination, enter the command:

```
pdpause -m "Toner is low, refilling" molly-pp
```

Pause a Currently Printing Job

To pause the currently printing job on destination molly-pp, enter the command:

```
pdpause -j molly-pp
```

Pause a Queue

To pause the queue Div1Q2, enter the command:

```
pdpause -c queue Div1Q2
```

Pause All Queues in a Server

To pause all of the queues in server DivServ1, enter the command:

```
pdpause -c server DivServ1
```

Pause an Actual Destination after the Current Copy with NPRO

To pause actual destination molly-pp after the current copy and move the last printed sheet to the stacker, enter the command:

```
pdpause -w after-current-copy -n molly-pp
```

Suggested Reading

For information about:

- Attributes file, see "Attributes File" on page 8

pdpr Command: Submits Jobs

Syntax

```
pdpr [{-d | -p} LogicalDestinationName] [-f FileName ...] [-g]
      [-l] [-n CopyCount] [-N NotificationMethod]
      [-r attribute ...] [-s StyleName] [-t JobName]
      [-x "attribute=value ..."] [-X AttributesFileName]
      [-Z InputFileName] {- | FileName ...}

pdpr -T TapeDevice [{-d | -p} LogicalDestinationName] [-g] [-l]
      [-n CopyCount] [-N NotificationMethod] [-r attribute ...]
      [-s StyleName] [-t JobName]
      [-x "attribute=value ..."] [-X AttributesFileName]
      [-Z InputFileName] {FileName ... | [N]#FileNumber...}

pdpr -h
```

Description

Use the **pdpr** command to submit jobs to logical destinations. Each job can contain multiple printable documents and, for jobs sent to PSF physical printers, fax destinations, or email destinations, any number of resources.

The target destination name defaults to the value of the **PDPRINTER** environment variable. You can override the default by specifying the name of another logical destination using the **-d** or **-p** flag or the job attribute **destination-name-requested**.

When the server accepts the job request, InfoPrint assigns a unique global ID (job identifier) and a local ID to it. Only the job submitter can use the local ID. The job submitter can use either the global ID or the local ID in subsequent commands, such as **pdmod**, **pdrm**, or **pdls**. Anyone else who accesses the job, such as an administrator, must use the global ID.

InfoPrint sets the values for job and document attributes from these possibilities:

1. Values specified in the **pdpr** command using the **-x "attribute=value ..."** flag or the **-X AttributesFile** flag.

Note: If multiple values for the same attribute are specified in the **pdpr** command, InfoPrint uses the last value read, except for those attributes that can have different values for different documents in the same job.
2. The values of a default job specified by the job attribute **initial-value-job** or the values for a default document specified by the document attribute **initial-value-document**.
3. The values of a default job specified by the **destination-initial-value-job** attribute or the values of a default document specified by the **destination-initial-value-document** attribute of the logical destination to which the user submitted the job.
4. Server defaults for required attribute values not specified through the previous methods.

You must be authorized to submit jobs to the specified destination if the logical destination is protected (the value of its **authorize-jobs** attribute is **true**).

If the server cannot locate an actual destination (associated with the requested logical destination) supporting the job and document attributes, InfoPrint rejects the job.

Flags

You can use the following flags with the **pdpr** command:

-d *LogicalDestinationName*

The logical destination to which you want to submit the job. If you do not specify this flag (or the equivalent **-p** flag), InfoPrint uses the **PDPRINTER** environment variable to determine the destination.

Using this flag is equivalent to specifying the job attribute **destination-name-requested**.

-f *FileName*

Specifies files you want included in the job. Use this flag only with file identifiers that are not placed at the end of the command. For example, to print all pages of `file1` and pages 3 through 6 of `file2`, enter:

```
pdpr -f file1 -x page-select=3:6 file2
```

This flag is not valid for tape input.

-g

Turns off headings.

Using this flag is equivalent to specifying the command attribute **headings=false**.

-h

Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag).

-l

Creates symbolic links to the job files rather than making temporary copies. When InfoPrint assigns the job to an actual destination, the server uses the links to the job files to locate the original files and copies them (if needed) at that time. This can be useful when printing large files or jobs.

Notes:

1. Use this flag only for jobs submitted from AIX; you cannot use it when submitting jobs from a workstation client.
2. You must use caution when using this flag because:
 - a. Depending on when you make changes to the files and when the server prints them, the printed output may or may not reflect the changes.
 - b. If you delete the file before the job prints or while the job is printing, the printed output may fail or be incomplete.

-n {1 | *CopyCount*}

Specifies the number of document copies that you want to print.

If you do not specify the **-n** flag, the copy count defaults to one (1).

Using this flag is equivalent to specifying the document attribute **copy-count=CopyCount**.

Note: You cannot use the **-n** flag or the document attribute **copy-count** if the job contains inline resources. Use the job attribute **results-profile** instead.

-N {message | email | none}

Specifies the delivery method that you want to use for notification of job events for this job.

Note: Using this flag and its value causes InfoPrint to generate a **notification-profile** attribute value for this job.

-p *LogicalDestinationName*

Same as **-d** *LogicalDestinationName*.

-r {none | brief | verbose}

Identifies the job attribute values that you want to display for the job just created.

none Displays no attributes.

brief Displays a small subset of important attributes for the job.

verbose Displays a larger subset of important attributes for the job.

Using this flag is equivalent to specifying the command attribute **requested-attributes**.

-s {column | doccol | line}

When combined with the **-r** flag or the **requested-attributes** command attribute, specifies the format in which you want the attributes displayed.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

doccol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line.

Using this flag is equivalent to specifying the command attribute **style**.

-T *TapeDevice*

Specifies the name of the tape device from which **pdpr** reads the input file. Specify the name without prefixing **/dev**, for example, **-T rmt0**.

-t *JobName*

Specifies the name you want to assign to the job.

Using this flag is equivalent to specifying the job attribute **job-name**.

-x "*attribute=value ...*"

Consists of a single attribute string containing one or more attribute-value pairs.

Any document attribute defined with the **-x** flag affects all files whose names follow that **-x** flag on the command line, unless you reset that attribute.

To reset an attribute to the default value, specify *AttributeName*==. For example, to reset the **document-type** attribute to its default value, **printable**, specify

document-type==

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Any document attribute in the file defined with the **-X** flag affects all files whose names follow that **-X** flag on the command line, unless you reset that attribute.

To reset an attribute to the default value, specify *AttributeName==*. For example, to reset the **document-type** attribute to its default value, **printable**, specify

```
document-type==
```

Using this flag is equivalent to specifying the command attribute **attributes**.

-Z *InputFileName*

Specifies the name of a file containing command flags, command attributes, or the names of files to be printed, that you want InfoPrint to insert at the current point in the command. Use this flag when the command is too long to fit on the command line.

- Entering a dash (hyphen) causes the command to read from standard input (STDIN). If you use this flag, it must occur at the end of the command after any other flags or command attributes.

Command Attributes

You can specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

Any document attribute in the attributes file affects all files whose names follow that **attributes** command attribute on the command line, unless you reset that attribute.

To reset an attribute to the default value, specify *AttributeName==*. For example, to reset the **document-type** attribute to its default value, **printable**, specify

```
document-type==
```

headings={true | false}

Specifies whether you want InfoPrint to display headings with the attributes.

requested-attributes={none | brief | verbose}

Specifies which job attributes you want InfoPrint to display.

none Displays no attributes.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

style={column | doccol | line}

Specifies the presentation format in which you want InfoPrint to display the output.

<u>column</u>	Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.
docol	For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
line	Each attribute is displayed on a separate line.

Job and Document Attributes Used with the Command

There are two types of object attributes used with the **pdpr** command, per-job and per-document. You can specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag. You can specify any initially settable or resettable job or document attribute with the **pdpr** command. See "Attributes for Documents and Default Documents" on page 403 and "Attributes for Jobs and Default Jobs" on page 464 for descriptions of job and document attributes.

Per-Job Attributes

Per-job attributes apply to the job as a whole and may occur anywhere in the **pdpr** command.

Per-Document Attributes

If you specify some document attributes before the first document (file) on the command line, those attributes apply to all documents (files) you specify for this job. If you specify a different document attribute between the first and second document (files), that attribute applies to the second document and any following document you specify for this job. This progression of attributes to files continues until the last document (file) specified.

The value for a given attribute must be the same for all the documents in the job except for those listed in "Per-Document Attribute Listing" on page 406. Even for those attributes, the value must be the same for all documents in the job if

- The job is submitted from tape
- The documents are in ASCII format

Arguments

Use the argument value to identify the name or tape position of a file that you want to print. If you specify multiple file identifiers, separate the file identifiers with spaces. Each file becomes a document within the job. Unless you end the command with the **-** flag, indicating that **pdpr** is to read from standard input, you must place at least one file identifier without the **-f** flag at the end of the command.

FileName ...

Specifies the document that you want to print. Precede the file name by any per-document attributes.

[N]*#FileName ...*

When you submit a file from tape, instead of the file name you can specify the position of the file on the tape. The number sign (**#**) indicates a file number and the backslash (****) escapes the number sign. If your shell does not have a special meaning for the number sign, you can omit the backslash.

If you specify a multi-document job, and if InfoPrint cannot support one or more of the documents within the job, InfoPrint rejects the job and issues an error message.

Examples

Print a Job on the Default Logical Destination

To submit the file `File1` to your default logical destination, enter the commands:

```
pdpr File1
```

Print a Job on a Specified Logical Destination

To submit the file `File1` to the logical destination `fred-lp`, enter the command:

```
pdpr -d fred-lp File1
```

Print a Job on a Specified Actual Destination

To submit the file `File5` for printing on actual destination `draft-pp`, enter the command:

```
pdpr -p fred-lp -x "actual-destinations-requested=draft-pp" File5
```

Print a Multi-Document Job

To submit the files `File1` and `File2` to the default logical destination, enter the command:

```
pdpr File1 File2
```

Fax a Job

To submit the cover sheet `faxcover` and the file `Memo1` to the logical destination `Serv1-faxout` for faxing to fax number `1-709-123-4567`, enter the command:

```
pdpr -d Serv1-faxout -x "fax-number=17091234567
document-type=cover-sheet" -f faxcover
-x "document-type=printable" Memo1
```

Email a Job

To submit the file `report.ps` to the logical destination `mailbox` for electronic mailing to `julia@kingston`, enter the command:

```
pdpr -d mailbox -x "email-to-address=julia@kingston
subject-text='Status Report'" report.ps
```

Print Multiple Copies of Each Document in a Job

To submit a job to the default logical destination and to specify two copies of each file in the job, enter one of these commands:

```
pdpr -n 2 Title Contents Body1 Body2 Append
```

```
pdpr -x "copy-count=2" Title Contents Body1 Body2 Append
```

InfoPrint prints two copies of `Title`, followed by two of `Contents`, and so forth for each file in the job.

Note: You cannot use the `-n` flag or the document attribute **copy-count** if the job contains inline resources. Use the job attribute **results-profile** instead.

Print Multiple Copies of a Job

To submit the job to the default logical destination and to specify two copies of the complete job, enter the command:

```
pdpr -x "results-profile=::2" Title Contents Body1 Body2 Append
```

InfoPrint prints a single copy of each file in the job, and then prints a second set in the same manner.

Print Multiple Copies of Documents and Jobs

To submit a job to the default logical destination and to specify two copies of the complete job with each copy of the job containing three copies of each file, enter the command:

```
pdpr -n 3 -x "results-profile=::2" Title Contents Body1 Body2 Append
```

InfoPrint prints three copies of Title, followed by three copies of Contents and so until the first copy of the job completes. Then InfoPrint prints a second set in the same manner.

Specify Job Name

To submit the file File1 to your default logical destination and to specify the job name, enter the command:

```
pdpr -t CmdRef File1
```

Print a Duplexed Job

To submit the file File1 to the default logical destination and to specify normal-duplexed printing, enter the command:

```
pdpr -x "sides=2 plex=simplex" File1
```

Specify Document Format

To submit the file PSFile2 to the default logical destination and to specify a document format of ASCII, enter the command:

```
pdpr -x "document-format=ascii" PSFile2
```

Request Status

To submit the file File1 to the default logical destination and to receive brief status information, enter the command:

```
pdpr -r brief File1
```

InfoPrint displays information similar to the following:

Job	ID	Name	Current State	Destination Requested	Destinations Assigned
8	sp15:0754100002	File1	pending	LogPrt1	

Delay Printing

To submit the file BigJob to the default logical destination and to delay printing until after 6:30 p.m. on May 2, 1997, enter the command:

```
pdpr -x "job-print-after='18:30:00 05/02/97'" BigJob
```


Specify a Symbolic Link

To submit the file `BigJob` to a logical destination `LogPrt4` without copying the file, enter the command:

```
pdpr -p LogPrt4 -l BigJob
```

Specify Job Discard Time

To submit the file `BigJob` to the default logical destination and to specify that InfoPrint is to discard the job if it has not printed by 5:00 p.m., enter the command:

```
pdpr -x "job-discard-time=17:00:00" BigJob
```

Specify Destination Location

To submit the file `File5` for printing on one of the printer devices located in Building 20, Room 17, enter the command:

```
pdpr -d LogPrt20 -x "destination-locations-requested=bld20.rm17" File5
```

Specify a Medium

To submit the file `MyAddress` to logical destination `MServ-1p` and to specify a default medium of `number-10-envelope` for the job, enter the command:

```
pdpr -p MServ-1p -x "default-medium=number-10-envelope" MyAddress
```

Retain a Job

To submit the file `File1` to the default logical destination requesting feedback of job attributes (brief group), and to specifying a retention period of 90 minutes so you can print more copies after you have looked at the first copy, enter the command:

```
pdpr -r brief -x "job-retention-period=90" File1
```

Note the job number (local ID) so you can use that number when you want to print more copies within the time allotted.

Specify Default Job and Document

To submit the file `File1` to the default logical destination and use the job attribute values specified in the default job `ivj23` and the document attribute values specified in the default document `ivd44`, enter the command:

```
pdpr -x "initial-value-document=ivd44 initial-value-job=ivj23" File1
```

Specify Attributes Files for a Job

To submit the file `File5` to the default logical destination and to specify the two attributes files `default.att` and `special.att`, enter the command:

```
pdpr -X default.att -X special.att File5
```

Specify Different Attribute Values for Different Documents

To submit the files `File5`, `File6`, and `File7` to the default logical destination and to specify that:

- Each document starts on a new sheet of paper
- You want to print pages 11 through 20 of `File5`, all pages of `File6`, and all pages of `File7`
- Each document has a different estimated page count

enter the command:

```
pdpr -x "start-on-new-sheet=true page-select=11:20 page-count=10"  
-f File5 -x "page-select== page-count=3" -f File6  
-x "page-count=19" File7
```

Override an Attribute Value in an Attributes File

To submit the file File1 to the default logical destination and override the value of 2 for the **sides** attribute specified in a given attributes file, enter the command:

```
pdpr -X default.att -x "sides=1" File1
```

Request Feedback Concerning the Job as Each Event Happens

To submit the file File1 to the default logical destination and to have all possible event notifications sent to you by electronic mail, enter the command:

```
pdpr -x "notification-profile={event-identifiers=job-modified  
class-job-problem class-job-attention delivery-method=electronic-mail}" File1
```

Specify a Command Input File

To submit a job and read the command flags, command attributes, and names of files to be printed from the file pdinput instead of from the command line, enter the command:

```
pdpr -Z pdinput
```

Specify a Code Page for ASCII Jobs

To print the files File1 and File2 and to specify the code page IBM-863, enter the commands:

```
pdpr -d LogPrtPSF -x "default-character-mapping=IBM-863" File1 File2
```

Print a Range of Pages

To print pages 1 through 10 of the file report.ps, enter the command:

```
pdpr -p LogPrtPSF -x "document-format=postscript  
destination-pass-through=-o-p 1-10" report.ps
```

Print Files from Tape

To print the second and third files on the tape mounted on tape device rmt0, enter:

```
pdpr -T rmt0 \#2 \#3
```

Suggested Reading in Hardcopy

For information about:

- Attributes file, see "Attributes File" on page 8
- Headings and style, see "Command Output: Headings and Style" on page 7
- Document attributes, see "Attributes for Documents and Default Documents" on page 403
- Document attributes that can have different values for each document in a job, see "Per-Document Attribute Listing" on page 406
- Job attributes, see "Attributes for Jobs and Default Jobs" on page 464

Suggested Reading Online

To view information about document attributes, enter the command:

```
man pd_att_document
```

To view information about job attributes, enter the command:

```
man pd_att_job
```

pdpromote Command: Advances a Job to the Top of a Queue

Syntax

```
pdpromote [-m "MessageText"] [-x "attribute=value ..."]
          [-X AttributesFileName] {LocalJobID | GlobalJobID}
```

```
pdpromote -h
```

Description

Use the **pdpromote** administrative command to move a pending job before any currently-queued jobs. The job becomes the first job in the queue. If you then promote another job, it becomes the first job in the queue ahead of the job previously promoted.

A move to the beginning of the queue does not necessarily guarantee that the job is the next job to be printed or transmitted. The jobs currently printing on each of the actual destinations associated with the queue continue printing. The server assigns the promoted job to the first actual destination that:

- Becomes available
- Uses the **job-priority** scheduler
- Is capable of handling the promoted job

If you use DCE, you must have at least **read** and **write** authority for the queue to promote your own jobs as well as the jobs belonging to other people.

You can change the priority level of a job by setting the **job-priority** attribute with the **pdmod** or the **pdset** command. However, InfoPrint promotes a job regardless of its priority to the top of the queue when you use the **pdpromote** command.

Flags

You can use the following flags with the **pdpromote** command:

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "MessageText"

Specifies the message you want to store in the **job-message-from-administrator** attribute. You can use this message to indicate why you want to promote the job or to provide any other comments. If you do not specify the **-m** flag, the message already stored with the job remains unchanged.

You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.

Using this flag is equivalent to specifying the command attribute **message**.

-x "attribute=value ..."

A single attribute string, consisting of one or more attribute and value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X *AttributesFileName*** flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

message="MessageText"

Specifies a message you want to store in the **job-message-from-administrator** attribute. You can use this message to indicate why you want to promote this job or to provide any other comments. If you do not specify the **message** attribute, the message already stored with the job remains unchanged.

You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.

Arguments

Use the argument value to identify the specific object that you want InfoPrint to promote. You can use the following arguments with the **pdpromote** command:

LocalJobID* or *GlobalJobID

Specifies the job you want to promote. By default, end users do not have permission to promote jobs. Therefore, in most cases someone other than the job submitter will promote a job and must identify it by the global job ID. Job submitters who do have permission to promote jobs can identify their own jobs by the local job ID.

When you specify a job with the **pdpromote** command, it becomes the first job in the queue. If a another job is then promoted, it becomes the first job in the queue (ahead of the job previously promoted).

Example

To promote job `Serv1:1099600001` and add a job message from the administrator, enter the command:

```
pdpromote -m "This job must be printed in 10 minutes" Serv1:1099600001
```

Suggested Reading

For information about:

- Attributes file, see "Attributes File" on page 8

pdq Command: Queries Job Status

Syntax

```
pdq [-f "FilterCriteria"] [{-d | -p} DestinationName] [-F] [-g] [-j]
    [-r attribute ...] [-s Style Name] [-U]
    [-x "attribute=value ..."] [-X AttributesFileName]
    [LocalJobID [.DocNumber] ... | GlobalJobID [.DocNumber] ...]
```

```
pdq -h
```

Description

Use the **pdq** command to list the status of some or all jobs submitted to a logical destination or assigned to an actual destination.

If you omit both the *LocalJobID* and the *GlobalJobID* and do not name a destination, InfoPrint lists all the jobs in the queue associated with the default logical destination, as defined by the **PDPINTER** environment variable.

If you do not specify a value for the **-r** flag or the command attribute **requested-attributes**, the **pdq** command defaults to the value **brief**. By default, you can list the attribute values only for the jobs you submit.

InfoPrint lists the jobs in the order in which the queue considers them for printing.

You can use the filtering option so that InfoPrint returns status only for some jobs. The jobs have a predefined value for the filter that is equal to the job attribute **user-name**; InfoPrint sets this value to your login identity when you submit a job.

Flags

You can use the following flags with the **pdq** command:

-d *DestinationName*

Queries all jobs in the queue associated with this destination, or all jobs assigned to this actual destination. The results depend on the destination realization and the value of the queue attribute **assign-to-destination**, as shown in Table 5.

Table 5. Results of the pdq Command

Destination Realization	assign-to-destination	pdq Returns
Logical	true or false	All jobs in the queue associated with the logical destination
Actual	true	All jobs assigned to the actual destination
Actual	false	All jobs in the queue associated with the actual destination

-f "*FilterCriteria*"

Specifies the filter selection criteria that you want to use for the jobs. Among the jobs, InfoPrint returns only those matching the filter expression.

Using this flag is equivalent to specifying the command attribute **filter**.

-F Turns off all filtering, both specified and default. See the **-U** flag for only turning the default filter off.

-g Turns off headings.

Using this flag is equivalent to specifying the command attribute **headings=false**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-j Returns only the job attributes.

-p *DestinationName*

Same as **-d** *DestinationName*.

-r {**brief** | **verbose** | **archive** | "*attribute ...*" | **all** | **none**}

Specifies the group of attributes you want to display.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

archive Writes only initially settable and resettable attributes to an archive file.

attribute ...

Displays the attributes you specify.

all Displays all attributes.

none Displays no attributes.

If you specify more than one of these values, InfoPrint displays all the attributes requested.

Using this flag is equivalent to specifying the command attribute **requested-attributes**.

-s {**column** | **docol** | **line**}

Specifies the format in which you want InfoPrint to display the attributes.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

docol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line.

Using this flag is equivalent to specifying the command attribute **style**.

-U Suppresses the default user-name filter.

-x "*attribute=value ...*"

Consists of a single attribute string, containing one or more attribute and value pairs.

-X AttributesFileName

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x "attribute=value ..."** string or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

filter="FilterCriteria"

Specifies the filter selection criteria you want used if you request attribute values for multiple objects. InfoPrint selects only some of the candidate jobs based on the filtering criteria. A filter is a logical expression consisting of relationships between attributes and attribute values. Among the specified jobs, InfoPrint only returns those whose attribute values match the filter expression.

The **filter** command attribute functions the same way for the **pdq** command as for the **pdls** command.

headings={true | false}

Specifies whether you want InfoPrint to display headings for the requested attributes.

requested-attributes={brief | verbose | archive | "attribute ..." | all | none}

Specifies the group of attributes you want to display.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

archive Writes only initially settable and resettable attributes to an archive file.

attribute ... Displays the attributes you specify.

all Displays all attributes.

none Displays no attributes.

If you specify more than one of these values, InfoPrint displays all the attributes requested.

style={column | doccol | line}

Specifies the presentation format in which you want InfoPrint to display the attributes.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

- docol** For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
- line** Each attribute is displayed on a separate line.

Arguments

Use the argument value to identify the specific object for which you want the status. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pdq** command:

LocalJobID[.DocNumber]

Specifies the job or documents you want InfoPrint to list as determined by a local ID or a local ID and document number. If you specify multiple arguments on the command line, separate the arguments with spaces.

GlobalJobID[.DocNumber]

Specifies the job or documents you want InfoPrint to list as determined by a global ID or a global ID and document number. If you specify multiple arguments on the command line, separate the arguments with spaces.

If you omit the **-d DestinationName** or **-p DestinationName** flag and the *LocalJobID* or *GlobalJobID* argument, InfoPrint lists all of the jobs in the queue associated with your default logical destination, defined by your **PDPRINTER** environment variable.

Examples

Query All Jobs on the Default Logical Destination

To list all your jobs sent to your default logical destination `Dsrv-lp`, enter the command:

```
pdq
```

InfoPrint displays information similar to the following:

Job	ID	Name	State	Intervening Jobs	Destination Requested	Destinations Assigned
13	sp14:1104221000	File1	processing	0	Dsrv-lp	Dsrv-pp
14	sp14:1105226030	JobA	pending	7	Dsrv-lp	
15	sp14:1133000058	MyJob	pending	8	Dsrv-lp	

Note: If you issue the command:

```
pdq -U
```

InfoPrint displays status information for all jobs in the queue associated with your default logical destination.

Query All Your Jobs on a Logical Destination

To list all jobs that you sent to logical destination `dizzy-lp`, enter the command:

```
pdq -d dizzy-lp
```

Query All Users' Jobs on a Logical Destination

To list all jobs that any user sent to logical destination dizzy-1p, enter the command:

```
pdq -U -d dizzy
```

Query All Your Jobs Assigned to an Actual Destination

To list all jobs that you submitted and that InfoPrint assigned to actual destination proof-pp, enter the command:

```
pdq -p proof-pp
```

Note: If the value of **assign-to-destination** is **false** for the queue associated with proof-pp, InfoPrint lists all your jobs in the queue.

Suggested Reading in Hardcopy

For information about:

- Filters, see the **pdls** command attribute **filter**.
- Attributes file, see “Attributes File” on page 8.
- Headings and style, see “Command Output: Headings and Style” on page 7
- Job attributes, see “Attributes for Jobs and Default Jobs” on page 464
- Document attributes, see “Attributes for Documents and Default Documents” on page 403

Suggested Reading Online

To view information about job attributes, enter the command:

```
man pd_att_job
```

To view information about document attributes, enter the command:

```
man pd_att_document
```

pdreorder Command: Reassigns Jobs

Syntax

```
pdreorder {-a [TargetServerName:]TargetJobID |
           -b [TargetServerName:]TargetJobID |
           -p [TargetServerName:]TargetDestinationName |
           -s TargetServerName | -u TargetServerName}
           [-m "MessageText"] [-x "attribute=value ..."]
           [-X AttributesFileName] [ServerName:]GlobalJobID ...
```

```
pdreorder -h
```

Description

Enter the **pdreorder** command to request InfoPrint to reassign a job to a actual destination or to the unassigned jobs area in the same server or another server. You can assign the job to the actual destination where another job is assigned and specify that it should be printed or transmitted before or after the other job. You can reassign the job to a specified actual destination, request the server to reschedule the job, or request the server to make the job an unassigned job.

If a job is reordered to an actual destination that does not support the job's attribute values, the job is held and the **required-resources-not-supported** attribute lists the unsupported values.

Flags

You can use the following flags with the **pdreorder** command:

-a [*TargetServerName*:]*TargetJobId*

Specifies that the reordered job should be assigned to print or transmit after the target job on the same actual destination.

-b [*TargetServerName*:]*TargetJobId*

Specifies that the reordered job should be assigned to print or transmit before the target job on the same actual destination.

-h

Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want associated with the reordered job. You can use this message to indicate the reason why the job is being reordered or other comments. Using this flag is equivalent to specifying the command attribute **message**.

You can list this message by specifying

requested-attributes=job-message-from-administrator with the **pdls** command.

-p [*TargetServerName*:]*TargetDestinationName*

Specifies that the job should be reassigned to the target actual destination.

- s** *TargetServerName*
Specifies that the job should be moved to the target server and that the target server should assign it to an actual destination.
- u** *TargetServerName*
Specifies that the job should be moved to the target server as an unassigned job.
- x** "*attribute=value ...*"
Consists of a single attribute string, containing one or more attribute-value pairs.
- X** *AttributesFileName*
Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command line. Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

message="*MessageText*"

Specifies the message you want associated with the reordered job. You can use this message to indicate the reason why the job is being reordered or other comments.

You can list this message by specifying

requested-attributes=job-message-from-administrator with the **pdls** command.

Arguments

Use the argument value to identify the specific object for which you want the status. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pdreorder** command:

[ServerName:]GlobalJobID

The global ID of the job to be reassigned.

Examples

- To reorder job 1099600001 so that it prints after job 1099500047, enter the command:

```
pdreorder -a 1099500047 1099600001
```
- To reassign job 2000004341 from server molly to server david and have david assign it to an actual destination, enter the command:

```
pdreorder -s david molly:2000004341
```

pdresubmit Command: Resubmits Jobs

Syntax

```
pdresubmit [-c ObjectClass] [-g] [-r "RequestedAttribute ..."]
           [-s StyleName]
           [-x "attribute=value ..."] [-X AttributesFileName]
           [ServerName:]TargetLogicalDestinationName
           {LocalJobID ... | GlobalJobID ... |
           [ServerName:]QueueName ... |
           [ServerName:]DestinationName ...}
```

pdresubmit -h

Description

Use the **pdresubmit** command to resubmit an existing job to a specific logical destination. The logical destination can be in the same server as the logical destination to which the job was first submitted or a different server. You can only resubmit jobs that have the current job state of **held**, **pending**, **retained**, or **unknown**.

If the logical destination specified is in a different server, the old server resubmits the job with all of its current attributes to the new server. InfoPrint includes any default attributes associated with the old server so that the new job remains as similar as possible to the old job. If the new server accepts the job, it assigns a new global job identifier and the old global job identifier becomes invalid.

Logical destinations and queues can also be arguments for this command. If a logical destination is the argument, InfoPrint resubmits all of the jobs submitted to the old logical destination to the specified new logical destination. If a queue is the argument, InfoPrint resubmits all of the jobs in the old queue to the specified logical destination. InfoPrint validates all of the resubmitted jobs again. If the newly specified logical destination does not support them, they remain in the queue that they were in originally.

If the new logical destination cannot accept the job for some reason, InfoPrint issues an error message and the job stays where it was.

Notes:

1. InfoPrint does not change the global job identifier for the job if you resubmit the job to a logical destination on the same server.
2. InfoPrint changes the global job identifier for the job if you resubmit the job to a logical destination on a different server. However, if you are the job-owner, you can still use the same local job identifier.

Flags

You can use the following flags with the **pdresubmit** command:

-c {job | queue | destination}

Specifies the object class that you want for this command. Within the valid classes, **destination** only applies to logical destinations.

Using this flag is equivalent to specifying the command attribute **class**.

- g** Turns off headings.
Using this flag is equivalent to specifying the command attribute **headings=false**.
- h** Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.
- r {none | **brief** | **verbose**}**
Specifies the group of attributes you want InfoPrint to display for the specified job, queue, or destination.
- none** Displays no attributes.
- brief** Displays a small subset of important attributes for each object.
- verbose** Displays a larger subset of important attributes for each object.
- Using this flag is equivalent to specifying the command attribute **requested-attributes**.
- s {column | **docol** | **line**}**
When combined with the **-r** flag or the **requested-attributes** command attribute, this flag specifies the format in which you want the attributes displayed.
- column** Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.
- docol** For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.
- line** Each attribute is displayed on a separate line.
- Using this flag is equivalent to specifying the command attribute **style**.
- x "attribute=value ..."**
Consists of a single attribute string, containing one or more attribute-value pairs.
- X AttributesFileName**
Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.
- Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x "attribute=value ..."** or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={job | queue | destination}

Specifies the object class you want for this command. Within the valid classes, **destination** only applies to logical destinations.

headings={true | false}

Specifies whether you want InfoPrint to display headings for the requested attributes.

requested-attributes={none | brief | verbose}

Specifies the group of attributes you want InfoPrint to display for the specified job, queue, or destination.

none Displays no attributes.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

style={column | doccol | line}

Specifies the format in which you want InfoPrint to display the attributes.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

doccol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line.

Arguments

Use the argument value to identify the specific object you want to resubmit. If you specify multiple objects, all must belong to the same class and you must separate the object names with spaces.

You must use the following argument:

[ServerName:]TargetLogicalDestinationName

Specifies the name of the new logical destination.

You must use one of the following arguments with the **pdresubmit** command:

LocalJobID or *GlobalJobID*

Specifies the job you want resubmitted as determined by a local or global job identifier. If you do not use DCE, by default, end users do not have permission to use the **pdresubmit** command. Therefore, in most cases someone other than the job submitter will resubmit a job and must identify it by the global job ID. Job submitters who do have permission to use **pdresubmit**, either because they belong to the **printq** group or because the file permissions have been changed, can identify their own jobs by the local job ID.

If you use DCE, you must have **write** permission for the server to resubmit a job belonging to another user.

pdresubmit

[ServerName:]DestinationName

Causes InfoPrint to resubmit to the target logical destination all jobs currently submitted to the specified logical destination.

[ServerName:]QueueName

Causes InfoPrint to resubmit to the target logical destination all jobs that are currently in the specified queue.

Examples

Resubmit Jobs

To resubmit jobs 3828:1098223002 and 3828PP:1099223003 to logical destination local-lp, enter the command:

```
pdresubmit local-lp 3828PP:1098223002 3828PP:1099223003
```

Resubmit All Jobs from One Logical Destination to Another

To resubmit all jobs submitted to logical destination dept1-lp to logical destination local-lp, enter the command:

```
pdresubmit local-lp -c destination dept1-lp
```

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8

pdresume Command: Enables Paused Objects to Resume Operation

Syntax

```
pdresume [-c ObjectClass] [-m "MessageText"]
          [-x "attribute=value ..." ] [-X AttributesFileName]
          {LocalJobID ... | GlobalJobID ... |
           ServerName ... | [ServerName:]DestinationName ... |
           [ServerName:]QueueName ...}
```

```
pdresume -h
```

Description

Use the **pdresume** administrative command to cause InfoPrint to restart paused jobs, actual destinations, queues, or servers.

Note: Use the **pdresume** and **pdpause** commands to allow or prevent output from the object, whereas you use the **pdenable** and **pddisable** commands to allow or prevent input to the object.

Flags

You can use the following flags with the **pdresume** command:

-c {**destination** | **queue** | **job** | **server**}

Specifies the object class you want for this command. Within the valid classes, **destination** is an actual destination.

Note: You cannot resume PSF upload-TCP/IP-attached physical printers or PSF upload-SNA-attached physical printers.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "*MessageText*"

Specifies the message you want associated with the specified destination, queue, job, or server. You can use this message to indicate the reason for resumption or to provide any other comments.

When resuming a server, InfoPrint propagates the message to the **message** attribute of the actual destinations and queues residing in the server. InfoPrint does not change the server **message** attribute.

If the command operates on a job, you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command. If the command operates on a destination, queue, or server you can list this message by specifying **requested-attributes=message** with the **pdls** command.

If you do not specify the **-m** flag, the message already stored with the object remains unchanged.

Using this flag is equivalent to specifying the command attribute **message**.

-x "*attribute=value ...*"

A single attribute string, consisting of one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | queue | job | server}

Specifies the object class you want for this command. Within the valid classes, **destination** is an actual destination.

Note: You cannot resume PSF upload-TCP/IP-attached physical printers or PSF upload-SNA-attached physical printers.

message="*MessageText*"

Specifies the message you want to associate with the specified destination, queue, job, or server. You can use this message to indicate the reason for resumption or to provide any other comments.

When resuming a server, InfoPrint propagates the message to the **message** attribute of the actual destinations and queues residing in the server. InfoPrint does not change the server **message** attribute.

If the command operates on a job, you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdlis** command. If the command operates on a destination, queue, or server, you can list this message by specifying **requested-attributes=message** with the **pdlis** command.

If you do not specify the **message** attribute, the message already stored with the object remains unchanged.

Arguments

Use the argument value to identify the specific destination, queue, job, or server you want to start processing again (resume operating). If you specify multiple objects, all of the objects must belong to the same class and you must separate the object names with spaces.

You can use the following arguments with the **pdresume** command:

LocalJobID... or GlobalJobID...

Specifies the job you want to resume as determined by a local job identifier or global job identifier. If you use DCE, by default, only an administrator has the authority to resume jobs. If you do not use DCE, by default, administrators and operators have the authority to resume jobs, but end users do not. Therefore, in most cases someone other

than the job submitter will resume a job and must identify it by the global job ID. Job submitters who do have authority to resume jobs can identify their own jobs by the local job ID.

A resumed job does not automatically return to its previous state. For example, if the **job-hold** or **print-after** attributes of a paused job were modified, returning to its previous state would cause InfoPrint to hold the job even after it was resumed.

Resuming a job that was not previously assigned to an actual destination allows InfoPrint to schedule it.

Resuming a job that was processing when it was paused causes InfoPrint to restore it to the **pending** state and attempt to schedule it on the original actual destination. If the original destination is not available, InfoPrint schedules the job on another actual destination that can support the job checkpoint format and begins processing the job where it stopped. If InfoPrint cannot find another actual destination that supports the checkpoint format, InfoPrint places the job in the **held** state. You can resubmit the job, which means that InfoPrint will start the job from the beginning.

Resuming a job that had any attributes modified while it was paused causes it to restart from the beginning.

[ServerName:]DestinationName

Specifies the destination you want to resume operation.

Resuming an actual destination allows it to start processing jobs that InfoPrint has assigned to it.

[ServerName:]Queue

Specifies the queue you want to resume operating.

Resuming a queue resumes the distribution of jobs to actual destinations associated with that queue.

ServerName

Specifies the server on which you want the command to operate. A server does not have a **paused** state. Issuing the command to a server resumes all of the paused queues and actual destinations that reside in that server. The queues can then continue to distribute jobs to actual destinations; and the actual destinations can start processing jobs.

Examples

Resume an Actual Destination

To resume actual destination Csrv-pp and issue a message, enter the command:

```
pdresume -m "Toner refilled" Csrv-pp
```

Resume a Queue

To resume the queue Div1-q, enter the command:

```
pdresume -c queue Div1-q
```

pdresume

Resume All Queues and Actual Destinations in a Server

To resume all of the queues and actual destination in the server Mrk-server3, enter the command:

```
pdresume -c server Mrk-server3
```

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8

pdrm Command: Removes Jobs

Syntax

```
pdrm [-m "MessageText"] [-r JobRetentionPeriod]
      [-x "attribute=value ..." ] [-X AttributesFileName]
      {LocalJobID ... | GlobalJobID ...}
```

```
pdrm -h
```

Description

Use the **pdrm** command to remove (delete) previously submitted jobs.

Notes:

1. If the job you specify is currently printing or transmitting, InfoPrint can only remove it at a pausable point in the job. The pausable point at which the InfoPrint can remove the job depends on the type of output device. A pausable point may be immediate or it may be the next page, sheet, document, or job boundary. If there is no such point before the end of job, InfoPrint does not remove the job.
2. When you request InfoPrint to remove a job with a non-zero value for the **job-retention-period** or **job-retain-until** attribute, InfoPrint retains the job until the **job-retain-until** deadline or until the **job-retention-period** runs out, then deletes the job.
3. You can remove your own jobs by specifying either the local ID or the global ID for the job. You can remove jobs belonging to another person by specifying the global ID for the job.

Note: If you use DCE, you must have **write** permission for the server to remove jobs belonging to another person.

InfoPrint issues a confirmation message prior to deleting jobs, unless the environment variable **PD_CONFIRM_DELETE** for the person requesting the job removal has a value of **no**.

Flags

You can use the following flags with the **pdrm** command:

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "MessageText"

Specifies the message you that want to associate with the specified job. The specified text becomes the value of the **job-message-from-administrator** attribute. You can use it to provide the reason you are removing the job or to provide any other comments. If you do not specify the **-m** flag, the message already stored with the job remains unchanged.

You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command.

Using this flag is equivalent to specifying the command attribute **message**.

-r *JobRetentionPeriod*

Specifies the period of time you want the server to retain the job before InfoPrint deletes the job. If specified, this retention period takes precedence over the previous job-retention period set for the job.

Using this flag is equivalent to specifying the job object attribute **job-retention-period**.

-x "*attribute=value ...*"

Consists of a single attribute string, containing one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can define these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated in the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

message="*MessageText*"

Specifies the message that you want InfoPrint to store in the **job-message-from-administrator** attribute. You can use it to provide the reason you are removing the job or to provide any other comments. If you do not specify the **message** attribute, the message already stored with the job remains unchanged.

You can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdlis** command.

Arguments

Use the argument value to identify the specific job you want to remove. You must use one of the following arguments for the **pdrm** command:

LocalJobID or *GlobalJobID*

Specifies the local ID or global ID of the job that you want InfoPrint to remove.

This argument must appear last in the command. If you want to remove more than one job, separate the job identifiers with spaces.

Examples

Remove Your Own Job

To remove your job with the local ID of 15, enter the command:

```
pdrm 15
```

Remove Another User's Job

To remove the job with global ID Server1:1011223002 on server Server1, enter the command:

```
pdrm Server1:1011223002
```

Remove Job Regardless of Retention Time

To remove your job with the local ID of 10 as soon as possible, regardless of any previously specified **job-retention-period** attribute value, enter the command:

```
pdrm -r 0 10
```

pdset Command: Defines Attribute Values

Syntax

```
pdset [-c ObjectClass] [-g] [-m "MessageText"]
      [-r "attribute ..."] [-s StyleName]
      [-x "attribute=value ..."] [-X AttributesFileName]
      {ServerName ... | ServerName:AuxiliarySheetName ... |
       ServerName:DefaultDocumentName ... |
       ServerName:DefaultJobName ... |
       [ServerName:]DestinationName ... | ServerName:LogName ... |
       ServerName:MediumName ... |[ServerName:]QueueName ... |
       ServerName:ResourceContextName ... | LocalJobID ... |
       GlobalJobID ...}
```

pdset -h

Description

Use the **pdset** administrative command to define or modify the values of object attributes. You must disable a destination before you can modify its attributes.

Table 6 lists the four modification operators.

Table 6. *pdset* Operators

Operator	Syntax	Description
Replace	<i>attribute=value</i>	Replaces the entire value of the attribute <i>attribute</i> with <i>value</i> or adds the attribute to the object, if not already present.
Add values	<i>attribute+=value</i>	Adds the value <i>value</i> to the attribute <i>attribute</i> . You cannot add values to single-valued attributes. InfoPrint honors an add request that duplicates values on a multi-valued attribute without warning.
Remove values	<i>attribute-=value</i>	Removes the value <i>value</i> from the attribute <i>attribute</i> . InfoPrint ignores a remove request for a nonexistent value, without warning or error. A remove request for the last or only value of an attribute is equivalent to a reset-to-default request.
Reset to default	<i>attribute==</i>	Sets the attribute value <i>attribute</i> to the default. If you supply values with a reset-to-default request, InfoPrint ignores them.

If you do not specify a value with a replace, add, or remove request, InfoPrint issues an error and rejects the request to change the object.

You can only change values for resettable attributes using the **pdset** command. See Chapter 7, "InfoPrint Object Attributes" on page 309 for lists of all resettable attributes by object and a description of each attribute. Using this command for non-settable or initially settable attributes results in an error.

Changes made to objects are permanent and remain changed even if you shut down and then restart the system (except for logs).

Flags

You can use the following flags with the **pdset** command:

- c** {destination | **job** | **server** | **queue** | **auxiliary-sheet** | **document** | **initial-value-job** | **initial-value-document** | **medium** | **resource-context** | **log**}
- Specifies the object class that you want for this command. Within the valid classes, **destination** is for a logical destination or actual destination.
- Using this flag is equivalent to specifying the command attribute **class**.
- g** Turns off headings.
- Using this flag is equivalent to specifying the command attribute **headings=false**.
- h** Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.
- m** "*MessageText*"
- Specifies the message that you want to associate with the object that you want to modify. You can use this message to indicate the reason why you are modifying or setting object attributes or to provide any other comments.
- If the command operates on a job, you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command. Otherwise, you can list this message by specifying **requested-attributes=message** with the **pdls** command.
- If you do not specify the **-m** flag, the message already stored with the object remains unchanged.
- Using this flag is equivalent to specifying the command attribute **message**.
- r** {none | **brief** | **verbose**}
- Specifies the attribute values you want to display for the specified object.
- none** Displays no attributes.
- brief** Displays a small subset of important attributes for each object.
- verbose** Displays a larger subset of important attributes for each object.
- Using this flag is equivalent to specifying the command attribute **requested-attributes**.
- s** {column | **docol** | **line**}
- Specifies the format in which you want InfoPrint to display the attributes.
- column** Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

docol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line.

Using this flag is equivalent to specifying the command attribute **style**.

-x "attribute=value ..."

A single attribute string, consisting of one or more attribute-value pairs. Prefix the attribute value with the replace operator, = , to replace a value, the add-value operator, += , to add a value or the remove-value operator, -= , to remove a value. Use the reset-to-default operator, == , with no attribute value to set the value to its default.

-X AttributesFileName

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can specify these attributes in a **-x "attribute=value ..."** string or in an attributes file designated with the **-X AttributesFileName** flag.

attributes=AttributesFileName

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={destination | job | server | queue | auxiliary-sheet | document | initial-value-job | initial-value-document | medium | resource-context | log}

Specifies the object class you want for this command. Within the valid classes, **destination** is for a logical destination or actual destination.

headings={true | false}

Specifies if you want InfoPrint to display headings on the output.

message="MessageText"

Specifies the message that you want to associate with the object you are modifying. You can use this message to indicate the reason that you are modifying the object attributes or to provide any other comments.

If the command operates on a job, you can list this message by specifying **requested-attributes=job-message-from-administrator** with the **pdls** command. Otherwise, you can list this message by specifying **requested-attributes=message** with the **pdls** command.

If you do not specify the **message** attribute, the message already stored with the object remains unchanged.

requested-attributes={none | verbose | brief}

Specifies the attribute values you want to display for the specified object.

none Displays no attributes.

brief Displays a small subset of important attributes for each object.

verbose Displays a larger subset of important attributes for each object.

style={column | docol | line}

Specifies the presentation format in which you want the output displayed.

column Attribute values are displayed in tabular format, so that values of the same attribute for multiple objects line up in columns.

docol For jobs only, job attribute values and the document attribute values for the first document in the job are displayed in column format on the same line.

line Each attribute is displayed on a separate line.

Arguments

Use the argument value to identify the specific object for which you want to set or modify attributes. If you specify multiple objects, separate the object names with spaces.

You can use the following arguments with the **pdset** command:

ServerName:AuxiliarySheetName
ServerName:DefaultJobName
ServerName:DefaultDocumentName
ServerName:MediumName
ServerName:LogName
[ServerName:]DestinationName
[ServerName:]QueueName
ServerName:ResourceContextName
ServerName
LocalJobID
GlobalJobID

By default, end users do not have permission to modify jobs. Therefore, in most cases someone other than the job submitter will modify a job and must identify the job by the global job ID. Job submitters who do have permission to modify jobs can identify their own jobs by the local job ID.

Examples

Specify a Descriptor for a Server

To set a description for the server Server1 and identify the AIX processor name containing it and the TCP/IP address for the processor, enter the command:

```
pdset -c server -x "descriptor='Server Server1 is installed on cowboy. The TCP/IP address for cowboy is 9.99.9.143.'" Server1
```

Change the Operator to Receive Messages

To identify a new person to receive start and stop messages for actual destination Serv4-pp, enter the command:

```
pdset -c destination -x "notify-operator=electronic-mail:ro@cowboy"  
Serv4-pp
```

Set the Job Size Range

To set the size of jobs that users can submit to actual destination small-pp, enter the command:

```
pdset -x "job-size-range-supported=0:10000  
job-size-range-ready=0:10000" small-pp
```

Specify Media Supported by an Actual Destination

To specify the media supported by a given actual destination and the media currently loaded in the printer device, enter the command:

```
pdset -x "media-supported=letter na-letter-colored  
legal na-legal-colored A4 A4-colored  
psf-tray-characteristics=top:letter  
bottom:A4" Serv4-pp
```

Set a Message

To set the message for server Serv2, enter the command:

```
pdset -c server -m "printing system now ok" Serv2
```

Suggested Reading in Hardcopy

For information about:

- Attributes for InfoPrint objects, see Chapter 7, “InfoPrint Object Attributes” on page 309
- Attributes file, see “Attributes File” on page 8
- Headings and style, see “Command Output: Headings and Style” on page 7
- Non-settable, initially settable, and resettable attributes, see “Non-Settable, Initially Settable, and Resettable Attributes” on page 2

Suggested Reading Online

To view information about all supported attributes for InfoPrint, enter the command:

```
man pd_att
```

This displays a list of files by object from which you can select the attribute listing you want.

pdshutdown Command: Stops Servers or Actual Destinations

Syntax

```
pdshutdown [-c server] [-m "MessageText"] [-w time]
           [-x "attribute=value ..."] [-X AttributesFileName]
           ServerName
```

```
pdshutdown [-c destination] [-m "MessageText"]
           [-x "attribute=value ..."] [-X AttributesFileName]
           [-s [-n]] [ServerName:]DestinationName
```

```
pdshutdown -h
```

Description

Use the **pdshutdown** administrative command to terminate a server process or shut down a PSF physical printer, fax destination, or email destination.

You can shut down a server either immediately or after it finishes processing some or all of its current jobs.

InfoPrint prevents the server from accepting new jobs while the server is shutting down and after it has shut down. Destinations in the server that were enabled at shutdown time are enabled when the server restarts. Destinations in the server that were disabled at shutdown time are disabled when the server restarts.

Note: To restart a server after shutdown, use the **startsrv** or **start_server** utility. See “startsrv Utility: Starts a Server” on page 166 or “start_server Utility: Starts a Server for a Basic InfoPrint Installation” on page 164.

Shutting down an actual destination:

- Terminates all communication with the output device
- Pauses the job printing or transmitting on the actual destination
- Terminates all jobs processing on the actual destination and puts these jobs in the **pending** state
- Releases jobs assigned to the actual destination so that you can reschedule them on another actual destination
- Disables the actual destination

You can shut down a PSF physical printer either immediately or after synchronizing the current job's checkpoint data with the pages that have actually printed.

Notes:

1. To restart an actual destination after shutdown, use the **pdenable** command. See “pdenable Command: Enables Destinations to Accept Jobs and Logs to Log” on page 31.
2. Synchronize the checkpoint data for a controlled shutdown, for example, when you want to perform maintenance that will take some time.
3. If InfoPrint cannot communicate with the output device, shut down the actual destination so that you can reschedule the jobs assigned to it. Do not

synchronize the checkpoint data. If you try, the command will hang, waiting for the output device to respond.

If you shut down without synchronization, the shutdown will take effect and allow any previously hung commands to complete.

4. A job paused by a destination shutdown without synchronization may reprint some pages when printing is resumed.
5. If you want to interrupt the actual destination for only a short time, consider pausing it rather than shutting it down. When you pause an actual destination, scheduled jobs remain scheduled. When you shut down an actual destination, scheduled jobs are requeued.

Flags

You can use the following flags with the **pdshutdown** command:

-c {server | destination}

Specifies the object class you want to shut down. Within the valid classes, **destination** is a PSF physical printer, fax destination, or email destination.

Using this flag is equivalent to specifying the command attribute **class**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-m "MessageText"

Specifies the message that you want to associate with the server or actual destination being shut down. You can use this message to indicate the reason for the shutdown or to provide any other comments.

You can list this message by specifying **requested-attributes=message** with the **pdls** command. If you do not specify the **-m** flag, the message already stored with the object remains unchanged.

Using this flag is equivalent to specifying the command attribute **message**.

-n Causes the PSF physical printer to perform an NPRO (move the last printed page to the stacker). Using this flag is equivalent to specifying the command attribute **non-process-runout=true**.

This flag is valid only with object class **destination**, and only if you also specify **-s**. It is not valid for fax destinations or email destinations.

-s Synchronizes the checkpoint data for the current job with the pages that have actually printed. This permits the job to resume at the point of synchronization. Using this flag is equivalent to specifying the command attribute **synchronize=true**. Do not use this flag if InfoPrint cannot communicate with the printer device.

This flag is valid only with object class **destination**. It is not valid for fax destinations or email destinations.

-w {after-current | now | after-all}

Specifies when you want a server to shut down. When the value is:

now InfoPrint cancels and requeues any currently printing jobs, then shuts down the server. You must resubmit the jobs using the **pdresubmit** command when the server restarts.

after-current

The server continues to accept requests other than print requests until the currently-printing jobs finish printing, then the server shuts down.

after-all The server continues to accept all requests except print requests until all scheduled jobs finish printing, then the server shuts down.

Using this flag is equivalent to specifying the command attribute **when**.

This flag is valid only with object class **server**.

-x "*attribute=value ...*"

A single attribute string, consisting of one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command.

Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You may specify these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated with the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

class={server | destination}

Specifies the object class you want to shut down. Within the valid classes, **destination** is a PSF physical printer, fax destination, or email destination.

message="*MessageText*"

Specifies the message you want associated with the server or actual destination being shut down. You can use this message to indicate the reason for the shutdown or to provide any other comments.

You can list this message by specifying **requested-attributes=message** with the **pdls** command. If you do not specify the **message** attribute, the message already stored with the object remains unchanged.

non-process-runout={true | false}

Specifies whether the PSF physical printer should perform an NPRO (move the last printed page to the stacker).

This attribute is valid only with object class **destination**, and only if you also specify **synchronize=true**. It is not valid for fax destinations or email destinations.

synchronize={true | false}

Specifies whether to synchronize the checkpoint data for the current job with the pages that have actually printed. A value of **true** permits the

pdshutdown

job to resume at the point of synchronization. Do not specify **synchronize=true** if InfoPrint cannot communicate with the printer device.

This attribute is valid only with object class **destination**. It is not valid for fax destinations or email destinations.

when={after-current | now | after-all}

Specifies when you want a server to shut down. When the value is:

now InfoPrint cancels and requeues any currently printing jobs, then shuts down the server. You must resubmit the jobs using the **pdresubmit** command when the server restarts.

after-current

The server continues to accept requests other than print requests until the currently-printing jobs finish printing, then the server shuts down.

after-all The server continues to accept all requests except print requests until all scheduled jobs finish printing, then the server shuts down.

This attribute is valid only with object class **server**.

Argument

Use the argument value to identify the specific server or actual destination that you want to shut down.

You can use the following argument values with the **pdshutdown** command:

ServerName Specifies the server that you want to shut down.

[ServerName:]DestinationName

Specifies the actual destination that you want to shut down.

Examples

Shut Down a Server

To shut down server Server1, to abort all jobs that are currently printing, and to set a message, Down for maintenance, enter the command:

```
pdshutdown -w now -m "Down for maintenance" Server1
```

Shut Down an Actual Destination

To shut down actual destination Serv9-fax, enter the command:

```
pdshutdown -c destination Serv9-fax
```

Shut Down a PSF Physical Printer and Update Job Checkpoint Data

To shut down PSF physical printer Serv9-pp after synchronizing the printer with the currently printing job's checkpoint data, enter the command:

```
pdshutdown -c printer -s Serv9-pp
```

Note: The PSF physical printer must be able to communicate with the printer device to perform the synchronize function.

Shut Down a PSF Physical Printer, Update Job Checkpoint Data, and Perform NPRO

To shut down PSF physical printer Serv9-pp after synchronizing the currently printing job's checkpoint data and perform an NPRO, enter the command:

```
pdshutdown -c destination -s -n Serv9-pp
```

Suggested Reading

For information about:

- Attributes file, see “Attributes File” on page 8.

pdspace Command: Backspaces or Forward Spaces a Printer

Syntax

```
pdspace [-c destination] {-b SideCount | -f SideCount} [-n]
        [-x "attribute=value ..."] [-X AttributesFileName]
        [ServerName:]DestinationName ...
```

```
pdspace -h
```

Description

Use the **pdspace** command to backspace or forward space the currently printing job on the specified PSF physical printer a given number of sides. If the job is printing on one side of the medium, one side is equivalent to one sheet. If the job is printing on two sides of the medium (duplex), two sides are equivalent to one sheet.

Notes:

1. The functions of this command only apply to PSF physical printers. They do not apply to PSF upload-TCP/IP-attached physical printers or PSF upload-SNA-attached physical printers.
2. To guarantee accurate backspacing or forward spacing to a specific side, you must install the level of microcode supporting **pdspace** on the printer device.
3. You cannot backspace or forward space ASCII print jobs.

You can issue the **pdspace** command while the printer is stopped, paused, or running.

- If the printer has been stopped by pressing the **STOP** button on the printer device, the printer operator must press the **START** or **READY** button before the printer can restart printing. You cannot force a stopped printer to perform an NPRO by specifying the **-n** flag; but the operator can force an NPRO by pressing the **NPRO** button.
- If the printer has been paused with the **pdpause** command, you must issue the **pdresume** command before the printer can restart printing.
- If the printer is running, the **pdspace** command takes effect as soon as possible.

The printer backspaces or forward spaces the number of sides you specify, except that:

- The printer will not backspace or forward space to the back side of a duplexed sheet. If a backspace or forward calculation points to the back side of a duplexed sheet, the printer backspaces or forward spaces to the front side of that sheet.
- When backspacing, if you specify a side count of -1, the job restarts printing on page 1 with a new header sheet.
- When backspacing, if you specify more sides than have already printed, the job restarts printing on page 1 without a header sheet.

- When forward spacing, if you specify more sides than there are sides left to print, the job terminates.

Note: InfoPrint backspaces or forward spaces from the last printed sheet: any count is one less than you would normally expect. For example, if you backspace ten sides starting at page 39, the job resumes on page 30 because page 39 is counted as one of the pages backspaced.

Flags

You can use the following flags with the **pdspace** command:

-b *SideCount*

Specifies the number of sides to backspace before continuing to print. Using this flag is equivalent to specifying the command attribute **back-space**.

-c destination

Specifies the object class of **destination**, which represents a PSF physical printer. This is the only allowed class. Using this flag is equivalent to specifying the command attribute **class**.

-f *SideCount*

Specifies the number of sides to forward space before continuing to print. Using this flag is equivalent to specifying the command attribute **forward-space**.

-h Displays a command-specific help message containing information about command syntax and flags. If you use this flag with any other flag or attribute, InfoPrint recognizes only the **-h** flag.

-n Causes the printer to perform an NPRO (move the last printed page to the stacker) before restarting printing. An NPRO makes it easier to see exactly where the spacing took place. Using this flag is equivalent to specifying the command attribute **non-process-runout=true**.

-x "*attribute=value ...*"

Consists of a single attribute string, containing one or more attribute-value pairs.

-X *AttributesFileName*

Specifies the name of a file containing attribute and value pairs that you want InfoPrint to insert at the current point in the command. Using this flag is equivalent to specifying the command attribute **attributes**.

Command Attributes

You can define these attributes in a **-x** "*attribute=value ...*" string or in an attributes file designated in the **-X** *AttributesFileName* flag.

attributes=*AttributesFileName*

Specifies the designated attributes file that InfoPrint reads and inserts at the current point in the command. This file contains attribute and value pairs that InfoPrint uses to expand the command.

back-space=*SideCount*

Specifies the number of sides to backspace before continuing to print.

class=destination

Specifies the object class of **destination**, which represents a PSF physical printer. This is the only allowed class.

forward-space=SideCount

Specifies the number of sides to forward space before continuing to print.

non-process-runout={true | false}

Specifies whether the printer should perform an NPRO (move the last printed sheet to the stacker) before restarting printing. An NPRO makes it easier to see exactly where the spacing took place.

Arguments

Use the argument value to identify the specific physical printer on which the job backspaces.

[ServerName:]DestinationName

Examples

Backspacing 22 Sides

To backspace the currently printing job on physical printer jrSrv-pp by 22 sides, enter the command:

```
pdspace -b22 jrSrv-pp
```

Forward Spacing 22 Sides

To forward space the currently printing job on physical printer mySrv-pp by 22 sides, enter the command:

```
pdspace -f22 mySrv-pp
```

Forward Spacing a Paused Printer 10 Sides with NPRO

To pause physical printer carlo-pp, forward space the job that was printing by 10 sides, move the last printed sheet to the stacker, and resume printing, enter the commands:

```
pdpause carlo-pp  
pdspace -f10 -n carlo-pp  
pdresume carlo-pp
```

Backspacing to a Specific Side

To backspace exactly to page 62 in the job printing on physical printer mySrv-pp:

1. Use *one* of these methods to interrupt printing:
 - Press the **STOP** button to stop the printer device.
 - Enter this command to pause the physical printer:

```
pdpause mySrv-pp
```
2. At the operator viewing point, check to see what page was printing when the job stopped.
3. Calculate the number of sides to backspace. For example, if the job stopped at page 97:
$$97 - 62 + 1 = 36$$

You must add one because page 97 is counted as the first side to backspace.
4. Enter the command:

```
pdspace -b36 mySrv-pp
```

5. Use *one* of these methods to resume printing:

- If you pressed **STOP**, press **START** to restart the printer device.
- If you paused the physical printer, enter this command to resume it:

```
pdresume mySrv-pp
```

pdspace

Chapter 3. The -o Flag for AIX Print Commands

As well as the InfoPrint **pdpr** and **lprafp** commands, you can use the AIX print commands, **enq**, **lp**, and **qprt**, to print jobs.

AIX uses the **-o** flag on the AIX print commands and on the InfoPrint **lprafp** command to pass information to the backend program. This program handles the details of printing or transmitting your job.

-o flag not valid on pdpr command

You cannot use the **-o** flag on the InfoPrint **pdpr** command, nor can you use it to specify InfoPrint object attributes. Use the **-o** keywords only on the AIX print commands **enq**, **lp**, and **qprt** and on the InfoPrint **lprafp** command.

Similar or equivalent InfoPrint object attributes are listed for each **-o** flag keyword. Use these attributes only on the **pdpr** command.

To pass flags or options to a transform command when you submit DBCS ASCII, EUC, GIF, JPEG, line-data, PCL, PDF, PostScript, or TIFF files with the **pdpr** command, use the InfoPrint **other-transform-options** document attribute instead of the **-o** flag.

Syntax

You can use any one of the following AIX commands to submit an InfoPrint job:

enq [-P *DestinationName*] [-okeyword=value ...] *FileName* ...

lp [-d *DestinationName*] [-okeyword=value ...] *FileName* ...

qprt [-P *DestinationName*] [-okeyword=value ...] *FileName* ...

Description

The AIX print commands (**enq**, **lp**, and **qprt**) enqueue requests to a shared system resource. For InfoPrint, this resource is a printer device, fax device, or electronic mailing system.

Limitations

If you specify a data type value that causes an InfoPrint transform program to be run before the file is printed on a PSF physical printer, the transform program writes the MO:DCA-P output to a temporary file in the directory specified by the **PDBASE** environment variable or in one of its subdirectories. No single user can create a MO:DCA-P file larger than the amount of free space in the file system containing this directory. If many users are submitting jobs that invoke transform programs, the directory may fill up and prevent all users from successfully running the transform programs.

Flag

The AIX print commands use the following flag to pass information to InfoPrint:

-okeyword=value

Is the information to be passed to InfoPrint. You can specify as many keyword-value pairs in the AIX print command as you like, provided that each of them starts with the **-o** flag.

Note: You can specify other flags associated with the AIX print commands or with the **lprafp** command, for example, the **-N** flag (number of copies) of the **enq** and **qprt** commands. Some of these flags are equivalent to the **-o** values you can specify with the AIX print commands.

For information about the other flags for the **enq**, **lp**, and **qprt** commands, refer to the appropriate man page or to *AIX for RS/6000 Commands Reference*.

For information about the other flags for the **lprafp** command, refer to "lprafp Command: Submits Remote Jobs" on page 12.

Specifying -o Attribute-Value Pairs

In InfoPrint, options appear as strings after the **-o** flag in the format *keyword=value*. For example,

```
enq -P DestinationName -obin=2 -oduplex=no FileName
```

Consider the following when using **-o** with an AIX print command or with the **lprafp** command:

- The **-o** flag is not valid on the **pdpr** command. Use the similar or equivalent InfoPrint attributes listed for each **-o** keyword.
- Do not specify InfoPrint attributes with the **-o** flag.
- All **-o** keywords override the equivalent flags specified with the print commands (such as the **-N** flag of the **enq** and **qprt** commands).
- If you specify the same keyword with the **-o** flag multiple times, InfoPrint uses only the value of the last occurrence.
- When using keywords with the **-o** flag, you can use blanks between the keyword and the **-o** flag (for example **-o bin=1**). You cannot, however, use blanks between the keyword and the value (for example, **-o bin=1** is valid; **-o bin = 1** is not). Values that have blanks must be enclosed with single quotes or double quotes (for example, **-odocname="Tim Memo"**).
- When using another flag with the **-o** flag, you cannot use blanks between the second flag and its value. For example, **-o-w6i** is valid; **-o-w 6i** is not.
- The keywords used with the **-o** flag *are not* case-sensitive. For example, **-o BIN=1** and **-o bin=1** are both valid.
- Values for some keywords (such as path names or form definition names), *are* case-sensitive; for example:

```
enq -P3900A -oformdef=F100S /usr/lpp/psf/README
```

and

```
enq -P3900A -oformdef=F100S /usr/lpp/psf/readme
```


specify two different files to submit, just as:

```
enq -P3900A -osfo=/usr/lpp/psf/VMfonts myfile
```

and

```
enq -P3900A -osfo=/usr/lpp/psf/vmfonts myfile
```

specify two different directories to search for fonts.

In addition, the first example below is valid and the second one is not because the **-F** keyword used with the **ps2afp** command must be uppercase.

```
enq -P3900A -odatatype=postscript -o-FFontMapFile
```

```
enq -P3900A -odatatype=postscript -o-fFontMapFile
```

- The following flags show the minimum version of the keyword, as well as the complete keyword. For example, you can abbreviate the **-obin** keyword to two letters: **-obi**.

-o Attribute-Value Pairs

You can use the following keyword-value pairs with the AIX print commands **enq**, **lp**, or **qprt**, or with the **lprafp** command, to pass information to InfoPrint.

{-oac | -oaccount}=account

Specifies the account information that InfoPrint prints on start, end, and separator sheets. The account information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **account-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

account Any 1 to 20 characters of account information.

-oaddress1=address1

Specifies the first line of address information that InfoPrint prints on start, end, and separator sheets. The address information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **address1-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

address1 Any 1 to 90 characters of address information.

-oaddress2=address2

Specifies the second line of address information that InfoPrint prints on start, end, and separator sheets. Other information is the same as for **-oaddress1**.

-o Flag

This command keyword is equivalent to the InfoPrint document attribute **address2-text**.

-oaddress3=address3

Specifies the third line of address information that InfoPrint prints on start, end, and separator sheets. Other information is the same as for **-oaddress1**.

This command keyword is equivalent to the InfoPrint document attribute **address3-text**.

-oaddress4=address4

Specifies the fourth line of address information that InfoPrint prints on start, end, and separator sheets. Other information is the same as for **-oaddress1**.

This command keyword is equivalent to the InfoPrint document attribute **address4-text**.

{-obi | -obin}={1 | 2 to 255 | 65 | 100}

Determines the input bin used for the job. This keyword overrides the value specified in the form definition. If you do not specify the **-obin** keyword, InfoPrint uses the bin value specified in the form definition you provide for printing the job. If you do not specify the **-obin** keyword and the default form definition is used to print your job, the input bin value in the printer profile or in that form definition is used.

This command keyword is similar to the InfoPrint document attribute **default-input-tray**.

Values are:

- 1** Selects the primary bin for the printer device. This is the default.
- 2 to 255** You can specify bin 2 to bin 255. Refer to your printer documentation for more information about the bins available on the printer device.
- 65** Selects the envelope bin on certain IBM printer devices.
- 100** Selects manual feed on certain IBM printer devices.

{-obu | -obuilding}=building

Specifies the building information that InfoPrint prints on start, end, and separator sheets. The building information can also be used for audit and accounting purposes.

This command attribute is equivalent to the InfoPrint document attribute **building-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

building Any 1 to 90 characters of building information.

{-ocd | -ocdp | -ocod | -ocodepage}={850 | 437 | 860 | 863 | 865}

Specifies the ASCII input code page used for the job; that is, the "keyboard" code that InfoPrint uses to translate the ASCII code points it finds in the job.

This command attribute is similar to the InfoPrint document attribute **default-character-mapping**.

Values are:

850 Defaults to the IBM code page 850.
nnn Other possible input code page values are 437 (a subset of the IBM code page 850), 860 (Portuguese), 863 (French Canadian), or 865 (Nordic); however, none of these IBM code pages are directly supported by AIX. If you are using a different ASCII code page as your keyboard code page, you can select 437, 860, 863, or 865, depending on which code page is the closest match to the one you are currently using.

Notes:

1. This parameter is used only for ASCII jobs. If you specify **-odatatype=dbcsascii**, InfoPrint ignores the value you specify for the **-ocodepage** keyword and value.
2. The InfoPrint ASCII data type does not support the non-U.S. code pages supported by AIX (for example, IBM 932 and the variations of ISO8859). InfoPrint supports code pages 437, 860, 863, and 865 so that you can select the code page that most closely matches the one you are currently using, if you are located outside the United States and using the ASCII data type.
3. If you are printing single-byte ASCII code points that are part of code page 932 (Japan), 938 (Traditional Chinese), or an Extended UNIX Code (EUC) code set for Japan, China, or Korea, you must use the **db2afp** command to print the file, even though the entire file is single-byte ASCII.

{-ocop | -ocopies}={1 to 255}

Specifies the number of copies of the job. If you also specify one of the copy flags for the AIX print command (the **-N** flag of the **enq** and **qprt** commands, or the **-n** flag of the **lp** command), the value you specify with the **-ocopies** keyword overrides the value specified with the **-N** or **-n** flag.

This command keyword is equivalent to the InfoPrint document attribute **copy-count**.

Values are:

1 The minimum number of copies. This is the default.
255 The maximum number of copies.

{-odatac | -odatack}={block | blkchar | blkpos | unblock}

Determines what type of errors in the job cause InfoPrint to issue error messages. The value you assign to this keyword can significantly affect IPDS printer performance as described in the following list.

This command keyword is similar to the InfoPrint document attribute **data-fidelity-problem-reported**.

Values are:

- block** Block print-positioning errors and invalid-character errors; that is, do not report these errors or issue error messages for these types of errors. This value produces the best printer performance.
- Print-positioning errors occur when the printer device tries to print outside the valid printable area of the form.
Invalid-character errors include attempts to use a code point that is not assigned to a character in an AFP font.
- block** is the default.
- blkchar** Block invalid-character errors; that is, do not report these errors. However, InfoPrint reports print-positioning errors and issues error messages for them.
- blkpos** Block print-positioning errors; that is, do not report these errors. However, InfoPrint reports invalid-character errors and issues error messages for them.
- unblock** Report all print-positioning errors and invalid-character errors. If the job has many errors, selecting **unblock** could decrease your IPDS printer device's performance because of the constant communication between the printer device and InfoPrint, and because of the repositioning that must occur to continue printing the next page after the page containing the error. You might use this value when diagnosing problems with InfoPrint.

{-odatat | -odatatype}={ascii | afpds | dbcsascii | ditroff | gif | jpeg | line | modcap | pcl | pdf | postscript | sap | tiff}

Specifies the type of the input data stream. If you do not specify the **-odatatype** keyword, InfoPrint reads the first few lines of the file to determine if the file is an AFP data stream. If InfoPrint does not find AFP data stream commands in the file, it assumes a data type of ASCII.

If you are printing PostScript, ditroff, S/370 line data, PCL, double-byte character set (DBCS) ASCII, Extended UNIX Code (EUC) on a PSF physical printer, or if you are printing ASCII data that you want to format with a page definition on a PSF physical printer, specifying the particular data type alerts InfoPrint to execute the appropriate transform command (**ps2afp**, **d2afp**, **line2afp**, **pcl2afp**, or **db2afp**) before printing the file. In this way, you can specify transform-specific options with the **-o** flag. See “-o Keywords and Values for Specific Data Types” on page 116 for more information.

This command keyword is equivalent to the InfoPrint document attribute **document-format**.

Values are:

{as | ascii}

The type of data is an ASCII data stream with embedded controls for an IBM 4201-2 Proprinter or 5202 printer. You can also specify **ascii** to print “flat” ASCII (no embedded formatting controls except for newline characters) without using a page definition.

ascii is the default.

{af | afpds}

The type of data is an Advanced Function Presentation data stream.

gif The type of data is Graphical Interchange Format.

jpeg The type of data is Joint Photographic Experts Group.

{db | dbcsascii}

The type of data is double-byte character set (DBCS) ASCII for Japanese or Traditional Chinese, or Extended UNIX Code (EUC) for Japanese, Traditional Chinese, or Korean. DBCS ASCII may contain controls for an IBM 5577 or 5587 printer. When you specify this value, InfoPrint automatically runs the **db2afp** command to transform the DBCS ASCII or EUC into printable AFP data. InfoPrint ignores any values specified with the **-ocodepage** flag and keyword.

If you are printing EUC data, you must also specify **-o-e** (the **db2afp -e** flag) along with **-odatatype=dbcsascii**.

{d | ditroff}

The type of data is ditroff, which is a device-independent data stream (troff files that have been formatted for InfoPrint using the **troff -Tafp** command). When you specify this value, InfoPrint automatically runs **d2afp** to transform the ditroff into printable AFP data.

{l | line} The type of data is S/370 line data or is ASCII data that you want to format with a page definition. When you specify this value, InfoPrint automatically runs **line2afp** to transform the ASCII or line data into printable AFP data.

Note: If the input file is ASCII, but you want to use fonts that have EBCDIC code points, you must also specify a **line2afp** input exit program to convert the ASCII file to EBCDIC. InfoPrint supplies two input exit programs that perform this function:

- **/usr/lpp/psf/bin/apka2e**, which is appropriate for ASCII files that only contain line feed controls (not carriage returns and form feeds)
- **/usr/lpp/psf/bin/asciinpe**, which is appropriate for ASCII files that contain line feed, carriage returns, and form feeds.

You specify an exit program using the **-oinpexit** keyword-value pair on the AIX print command.

{mo | modcap}

The type of data is a Mixed Object: Document Content Architecture for Presentation data stream.

{pc | pcl} The type of data is PCL. When you specify this value, InfoPrint automatically runs **pcl2afp** to transform the PCL into printable AFP data.

pdf The type of data is PDF. When you specify this value, InfoPrint automatically runs **pdf2afp** to transform the PDF into printable AFP data.

{ps | postscript}

The type of data is PostScript. When you specify this value, InfoPrint automatically runs **ps2afp** to transform the PostScript into printable AFP data.

sap

The type of data is an OTF data stream.

You cannot submit ABAP List Format files with the **-odatatype=sap** flag and keyword-value pair. If you submit an ABAP List Format file, InfoPrint will convert it to line data, try to print it, and fail. You must first use **sap2afp** to convert the ABAP List Format file to line data, then submit it with the **-odatatype=line** flag and keyword-value pair.

tiff

The type of data is Tag Image File Format.

{-ode | -odepartment}=department

Specifies the department information that InfoPrint prints on start, end, and separator sheets. The department information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **department-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

department

Any 1 to 90 characters of department information.

{-odi | -odistribution}=distribution

Specifies the distribution information that InfoPrint prints on start, end, and separator sheets.

If you do not specify the **-odistribution** keyword for local jobs, no distribution information prints. For remote jobs, the value defaults to the information provided by AIX (usually the user ID and the name of the host from which the job was submitted; for example, **bob@sys1**).

The value is:

distribution

Any 1 to 90 characters of distribution information. Whether all of these characters print depends on the user exit program.

{-odo | -odocname | -ojobn | -ojobname}=JobName

Identifies the document name or job name associated with this job. If you do not specify the **-odocname** or **-ojobname** keyword for ASCII or AFP data stream jobs, InfoPrint uses the file name of the first file in the job.

If you do not specify the **-odocname** keyword for other types of data, InfoPrint creates a temporary file for the transform output and uses that temporary file name for the job name. If you want to retain the original name of the input file for these types of data, you can specify a job name with this keyword.

The **-odocname** command keyword is equivalent to the InfoPrint document attribute **document-file-name**. The **-ojob** command keyword is equivalent to the InfoPrint job attribute **job-name**.

The value is:

JobName You can enter a job name of up to 255 characters in length. Note that the user-exit programs supplied with the start, end, and separator sheets assume a maximum of 50 characters for the job name. If you want to display more than 50 characters, change the user-exit programs to use the number of characters you need. Use single quotes (') or double quotes (") if the document name or job name contains spaces (blanks).

{-odu | -oduplex}={no | yes | tumble}

Specifies whether the job prints on one or both sides of the paper and how successive pages are oriented. This keyword overrides the value specified in the form definition. If you do not specify the **-oduplex** keyword, InfoPrint uses the duplex printing value specified in the form definition you provide for printing the job. If you do not specify the **-oduplex** keyword and the default form definition is used to print your job, the duplex printing value in the printer profile or in that form definition is used.

This command keyword is similar to the InfoPrint document attributes **plex** and **sides**.

Values are:

{n | no} The job prints on one side of the sheet. This is the default.

{y | yes} The job prints on both sides of the sheet, top edge to top edge.

{t | tumble}

The job prints on both sides of the sheet. The top edge of one side is the bottom edge of the other side.

{-of | -oforndef}=FormDefinitionName

Specifies the name of the form definition InfoPrint uses for the job. The form definition defines the placement of the page of data on the form, the input and output bins to use, duplex printing, and so on.

If you do not specify the **-oforndef** keyword, InfoPrint looks in the input file for an inline form definition. If the input file doesn't contain a form definition, InfoPrint uses the default form definition for that InfoPrint actual destination.

This command keyword is equivalent to the InfoPrint document attribute **form-definition**.

The value is:

FormDefinitionName

Any form definition located in one of the directories defined in the search path.

You can specify a form definition name between 1 and 8 characters in length.

{-oh | -oheader}={yes | no}

Specifies whether InfoPrint prints a start sheet before the job.

This command keyword is similar to the InfoPrint job attribute **auxiliary-sheet-selection**.

Values are:

{y | yes} Print the start sheet specified by the actual destination attribute **printer-start-sheet** before the job. If there are multiple files in a single job, a start sheet is printed before the first file only. This is the default.

{n | no} Do not print a start sheet.

{-omsgc | -omsgcount}={9999 | 1 to 9998 | 0}

Specifies the number of messages or groups of related messages that InfoPrint prints with the job. A message group consists of one error or warning message, followed by one or more secondary messages.

This command keyword is similar to the InfoPrint document attribute **maximum-messages-printed**.

Values are:

9999 All messages print. This is the default.

1 to 9998 A specified number of messages print.

0 No messages print.

Note: When InfoPrint reaches the message count value, InfoPrint processing continues; however, InfoPrint prints no additional messages.

{-ona | -oname}=name

Specifies the name information that InfoPrint prints on start, end, and separator sheets. The name information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **name-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

name Any 1 to 90 characters of name information.

{-ono | -onodeid}=NodeID

Specifies the node ID information that InfoPrint prints on start, end, and separator sheets. The node ID information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **node-id-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

NodeID Any 1 to 20 characters of nodeid information.

{-oou | -ooutbin}={ 1 | 2 to 65535}

Determines the output bin used for the job. If you do not specify the **-ooutbin** keyword, the output bin value in the printer profile is used.

This command keyword is similar to the InfoPrint document attribute **output-bin** and the InfoPrint actual destination attribute **output-bin-numbers**.

Values are:

1 Selects the primary output bin for the printer device. This is the default.

2 to 65535 You can specify bin 2 to bin 65535. Refer to your printer documentation for more information about the bins available on the printer device.

{-oov | -ooverlay}=OverlayName

Specifies the name of an overlay to be printed on every page of the job. An overlay contains predefined data, such as lines, shading, text, boxes, or logos that can be merged with variable data on a printed page. Overlays can also be specified in a form definition. Any overlay you name here is printed in addition to overlays named in the form definition.

This command keyword is equivalent to the InfoPrint document attribute **overlay**.

The value is:

OverlayName

Any overlay located in one of the directories defined in the search path.

You can specify an overlay name between 1 and 8 characters in length.

{-opa | -opassthru}=PassthruFlags

Identifies any other information provided when the job is submitted.

You specify this information in the following format:

-opassthru={*PassthruFlag=value*, [*PassthruFlag=value*,]...}

The following flags are supported by the user-exit program supplied with InfoPrint:

class Identifies the 1-character class keyword provided by TCP/IP for MVS for those jobs submitted to InfoPrint from MVS hosts through the Network Print Facility (NPF), PSF Direct, or MVS Download.

destination

Identifies the 1-to 8-character destination keyword provided for those jobs submitted to InfoPrint from MVS hosts through the Network Print Facility (NPF), PSF Direct, or MVS Download.

forms Identifies the 1-to 8-character forms keyword provided for those jobs submitted to InfoPrint from MVS hosts through the Network Print Facility (NPF), PSF Direct, or MVS Download.

segmentid

Identifies the 1-to 10-character segmentation identifier provided by TCP/IP for MVS for those jobs submitted to InfoPrint from MVS hosts through the Network Print Facility (NPF), PSF Direct, or MVS Download.

This command keyword is equivalent to the InfoPrint document attributes **mvs-class**, **mvs-destination**, **mvs-forms**, and **mvs-segment-id**.

{-opr | -oprogrammer}=programmer

Specifies the programmer information that InfoPrint prints on start, end, and separator sheets. The programmer information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **programmer-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

programmer

Any 1 to 40 characters of programmer information.

{-oresp | -orespath}=PathList

Specifies the search order that InfoPrint uses for all Advanced Function Printing (AFP) resources.

This command keyword is equivalent to the InfoPrint document attribute **resource-context-user**.

If you do not specify this keyword, InfoPrint uses these search orders:

- For fonts:
 1. The paths named in the **-osrchfontlib** keyword
 2. The paths named in the InfoPrint default document attribute **resource-context-user**
 3. The paths named in the InfoPrint default document attribute **resource-context-font**
 4. The paths named in the InfoPrint default document attribute **resource-context**
 5. The paths named in the **PSFPATH** environment variable
 6. The paths named in the InfoPrint actual destination attribute **resource-context-font**
 7. The directory **/usr/lpp/psf/reslib**
 8. The directory **/usr/lpp/afpfonts**
 9. The directory **/usr/lpp/psf/fontlib**
- For other resources:
 1. The paths named in the InfoPrint default document attribute **resource-context-user**

2. The paths named in the InfoPrint default document attributes **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment**,
3. The paths named in the InfoPrint default document attribute **resource-context**
4. The paths named in the **PSFPATH** environment variable
5. The paths named in the InfoPrint actual destination attributes **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment**,
6. The directory **/usr/lpp/psf/reslib**

The value is:

PathList Any valid search path on the system where the job prints.
You must use a colon (:) to separate multiple paths.

{-oro | -oroom}=room

Specifies the room information that InfoPrint prints on start, end, and separator sheets. The room information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **room-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

room Any 1 to 90 characters of room information.

{-osep | -oseparator}={ y | no}

Specifies whether InfoPrint prints separator sheets between copies of the job.

This command keyword is similar to the InfoPrint job attribute **auxiliary-sheet-selection**.

Values are:

{y | yes} Print the separator sheet specified by the actual destination attribute **printer-separator-sheet** between copies of the job.
This is the default.

{n | no} Do not print separator sheets.

{-osfo | -osrchfo | -osrchfontlib}=PathList

Specifies one or more paths InfoPrint searches for the fonts required by the job.

This command keyword is equivalent to the InfoPrint document attribute **resource-context-font**.

If you do not specify this keyword, InfoPrint uses this search order:

1. The paths named in the **-orespath** keyword

-o Flag

2. The paths named in the InfoPrint default document attribute **resource-context-user**
3. The paths named in the InfoPrint default document attribute **resource-context-font**
4. The paths named in the InfoPrint default document attribute **resource-context**
5. The paths named in the **PSFPATH** environment variable
6. The paths named in the InfoPrint actual destination attribute **resource-context-font**
7. The directory **/usr/lpp/psf/reslib**
8. The directory **/usr/lpp/afpfonts**
9. The directory **/usr/lpp/psf/fontlib**

The value is:

PathList Any valid search path on the system where the job prints.
You must use a colon (:) to separate multiple paths.

{-oti | -otitle}=title

Specifies the title information that InfoPrint prints on start, end, and separator sheets. The title information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **title-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**, **printer-start-sheet**, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

title Any 1 to 90 characters of title information.

{-otr | -otrailer}={yes | no}

Specifies whether an end sheet prints after the job.

This command keyword is similar to the InfoPrint job attribute **auxiliary-sheet-selection**.

Values are:

{y | yes} Print the end sheet specified by the actual destination attribute **printer-end-sheet** after the job. This is the default.

{n | no} Do not print an end sheet.

{-ous | -ouserid}=UserID

Specifies the user ID information that InfoPrint prints on start, end, and separator sheets. The user ID information can also be used for audit and accounting purposes.

This command keyword is equivalent to the InfoPrint document attribute **user-id-text**.

You must specify a value of **full** for one of the InfoPrint actual destination auxiliary sheet attributes (**accounting-exit**, **audit-exit**,

printer-start-sheet, **printer-end-sheet**, or **printer-separator-sheet**) for InfoPrint to use this information.

The value is:

UserID Any 1 to 20 characters of userid information.

{-oxo | -oxoffset}=nnnn.nnnu

Specifies the X offset of the logical page origin from the physical page origin. This keyword overrides any X offset value in the form definition. If you do not specify the **-oxoffset** keyword, InfoPrint uses the X offset value specified in the form definition you provide for printing the job.

This command keyword is equivalent to the InfoPrint document attribute **x-image-shift**.

The value is:

nnnn.nnnu

A numeric value that establishes the X (across) coordinate of the logical page origin, as shown in the figure below.

nnnn.nnn is a number that can optionally contain a decimal point, and *u* is the units in inches (*i*) or millimeters (*m*).

If you do not specify a unit (*i* or *m*), then InfoPrint uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If you specify a value that is outside of the printable area, you will get a print-positioning error. To determine the printable area of IBM printer devices, see *Advanced Function Presentation: Printer Information*.

{-oyo | -oyoffset}=nnnn.nnnu

Specifies the Y offset of the logical page origin from the physical page origin. This keyword overrides any Y offset value in the form definition. If you do not specify the **-oyoffset** keyword, InfoPrint uses the Y offset value specified in the form definition you provide for printing the job.

This command keyword is equivalent to the InfoPrint document attribute **y-image-shift**.

The value is:

nnnn.nnnu

Any numeric value that establishes the Y (down) coordinate of the logical page origin. *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (*i*) or millimeters (*m*).

If you do not specify a unit (*i* or *m*), then InfoPrint uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If you specify a value that is outside of the printable area, you will get a print-positioning error. To determine the printable area of IBM printer devices, see *Advanced Function Presentation: Printer Information*.

-o Flag

-o Keywords and Values for Specific Data Types

You can also use **-o** to specify keywords (transform command flags or options) that apply to the following specific data types:

- Double-byte character set (DBCS) ASCII data
- Extended UNIX code (EUC) data
- Graphical Interchange Format (GIF) data
- Joint Photographic Experts Group (JPEG) data
- Line data
- PCL data
- Portable Document Format (PDF) data
- PostScript data
- Tag Image Format File (TIFF) data

For example, to specify that the finished width of a PostScript image is 6 inches, enter:

```
enq -P3825C -odatatype=ps -o-w6i memo1.ps
```

DBCS ASCII Data and EUC Data

If you are printing DBCS (double-byte) ASCII or Extended UNIX Code (EUC) data:

- Specify **-odatatype=dbcsascii** for DBCS ASCII or **-odatatype=dbcsascii -o-e** for EUC with the **enq**, **lp**, **qpri**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **db2afp** transform command.
- You can use the following **db2afp** flags on the command line with **enq**, **lp**, **qpri** or **lprafp**:

```
-o-e  
-o-lja  
-o-lch  
-o-lko (EUC only)
```

For information about these flags, see “db2afp Command: Transforms DBCS Data to AFP” on page 184.

You cannot use the **db2afp -o** flag to specify an output file.

Note: The **db2afp** transform must be installed on the workstation where InfoPrint is installed.

GIF Data

If you are printing GIF data:

- Specify **-odatatype=gif** with the **enq**, **lp**, **qpri**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **gif2afp** transform command.
- You can use the following **gif2afp** options on the command line with **enq**, **lp**, **qpri**, or **lprafp**. For those options that accept a value, do not put a blank between the option and the value.

```
-o-almageType  
-o-algProcessingAlgorithms  
-o-calibcalibration  
-o-CConfigurationFile
```

-o-clean*cleanup*
-o-cmp*compression*
-o-crop*CropFactors*
-o-fit{*trim* | *scale*}
-o-gcorr*GrayscaleMappingTable*
-o-ink*color*
-o-inv
-o-j*ScanOffsetFileName*
-o-l*ImageLength*
-o-M*MemoryBound*
-o-ms*space*
-o-msf*SpaceFraction*
-o-nosniff
-o-noterm
-o-nov
-o-outbits*NumberOfOutputBits*
-o-outcolor*OutputColorModel*
-o-p*PageRange*
-o-pagetype*PageType*
-o-paper*PaperSize*
-o-r*resolution*
-o-respath*ResourceSearchPath*
-o-rot*rotation*
-o-scale*ImageSize*
-o-sgcorr*ScannerCorrection*
-o-sniff
-o-term
-o-thresh*HalftoneFile*
-o-v
-o-w*ImageWidth*
-o-x*LeftMargin*
-o-y*TopMargin*

For information about these options, see “gif2afp Command: Transforms GIF Data to AFP” on page 191.

You cannot use the print command **-o** flag to pass the **gif2afp -o** option to specify an output file, or the **@**, **-f**, and **-z** options to specify input files.

Note: The **gif2afp** transform must be installed on the workstation where InfoPrint is installed.

JPEG Data

If you are printing JPEG data:

- Specify **-odatatype=jpeg** with the **enq**, **lp**, **qprt**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **jpeg2afp** transform command.
- You can use the following **jpeg2afp** options on the command line with **enq**, **lp**, **qprt**, or **lprafp**. For those options that accept a value, do not put a blank between the option and the value.

-o-a*ImageType*
-o-alg*ProcessingAlgorithms*
-o-calib*calibration*

-o Flag

-o-C*ConfigurationFile*
-o-cmp*compression*
-o-crop*CropFactors*
-o-fit{*trim* | *scale*}
-o-force
-o-gcorr*GrayscaleMappingTable*
-o-j*ScanOffsetFileName*
-o-l*ImageLength*
-o-M*MemoryBound*
-o-ms*space*
-o-msf*SpaceFraction*
-o-noterm
-o-nov
-o-outbits*NumberOfOutputBits*
-o-outcolor*OutputColorModel*
-o-p*PageRange*
-o-pagetype*PageType*
-o-paper*PaperSize*
-o-r*resolution*
-o-respath*ResourceSearchPath*
-o-rot*rotation*
-o-scale*ImageSize*
-o-sgcorr*ScannerCorrection*
-o-term
-o-thresh*HalftoneFile*
-o-v
-o-w*ImageWidth*
-o-wrkdir*WorkDirectory*
-o-x*LeftMargin*
-o-y*TopMargin*

For information about these options, see “jpeg2afp Command: Transforms JPEG Data to AFP” on page 206.

You cannot use the print command **-o** flag to pass the **jpeg2afp -o** option to specify an output file, or the **@**, **-f**, and **-z** options to specify input files.

Note: The **jpeg2afp** transform must be installed on the workstation where InfoPrint is installed.

Line Data

If you are printing S/370 line data, or you are printing ASCII data that you want to format with a page definition:

- Specify **-odatatype=line** with the **enq**, **lp**, **qpvt**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **line2afp** transform command.
- You can use the following **line2afp** flags on the command line with **enq**, **lp**, **qpvt**, or **lprafp**:

-occ=*value*
-occtype=*value*
-ochars=*FontName*[, ...]
-ofileformat=*value*
-oformdef=*FormDefinitionName*

-oimageout=value
-oinpexit=ProgramName
-omsgdd=FileName
-ooutexit=ProgramName
-opagedef=PageDefinitionName
-oparmdd=FileName
-opdeflib=PathList
-oprmode=value
-oresexit=ProgramName
-otrc=value
-ouserlib=PathList

For information about these flags, see “line2afp Command: Transforms S/370 Line Data and ASCII Data to AFP” on page 220.

You cannot use **line2afp** flags for the input file (**inputdd**) or the output file (**outputdd**).

When you are using **line2afp** flags with an AIX print command, you should not use **line2afp** flags that do the same thing as InfoPrint-specific **-o** flags. Use the InfoPrint-specific **-o** flags instead:

- Use **enq -odatatype=line -orespath=** instead of **enq -odatatype=line -ofdeflib=**
- Use **enq -odatatype=line -osrchfontlib=** instead of **enq -odatatype=line -ofontlib=**
- Use **enq -odatatype=line -orespath=** instead of **enq -odatatype=line -oovlylib=**
- Use **enq -odatatype=line -orespath=** instead of **enq -odatatype=line -opseglib=**
- Use **enq -odatatype=line -orespath=** instead of **enq -odatatype=line -oreslib=**

Note: The **line2afp** transform and **acif** command must be installed on the workstation where InfoPrint is installed.

PCL Data

If you are printing PCL data:

- Specify **-odatatype=pcl** with the **enq**, **lp**, **qprt**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **pcl2afp** transform command.
- You can use the following **pcl2afp** flags on the command line with **enq**, **lp**, **qprt**, or **lprafp**. For those flags that accept a value, do not put a blank between the flag and the value.

-o-aOutputType
-o-c
-o-CConfigurationFile (the configuration file must be specified as a full path name)
-o-jnnnn
-o-lnnnn.nnnu
-o-Mnnnnn
-o-pPageRange
-o-Pnnnnn

-o Flag

-o-q
-o-rnnn
-o-S*ServerName*
-o-snnnn
-o-wnnnn.nnnu
-o-xnnnn.nnnu
-o-ynnnn.nnnu

For information about these flags, see “pcl2afp Command: Transforms PCL Data to AFP” on page 243.

You cannot use the **pcl2afp -o** flag to specify an output file.

Note: The **pcl2afp** transform must be installed on the workstation where InfoPrint is installed.

PostScript and PDF Data

If you are printing PostScript or PDF data:

- Specify **-odatatype=ps** or **-odatatype=pdf** with the **enq**, **lp**, **qprt**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **ps2afp** transform command. (The **pdf2afp** command is another name for **ps2afp**.)
- You can use the following **ps2afp** flags on the command line with **enq**, **lp**, **qprt**, or **lprafp**. For those flags that accept a value, do not put a blank between the flag and the value.

-o-a*OutputType*
-o-c
-o-C*ConfigurationFile* (the configuration file must be specified as a full path name)
-o-F*FontMapFile[...]* (the font map files must be specified as full path names)
-o-g*PageRange*
-o-jnnnn
-o-lnnnn.nnnu
-o-Mnnnnn
-o-p*PageRange*
-o-Pnnnnn
-o-q
-o-rnnn
-o-S*ServerName*
-o-snnnn
-o-wnnnn.nnnu
-o-xnnnn.nnnu
-o-ynnnn.nnnu

For information about these flags, see “pdf2afp and ps2afp Transforms: Transform PDF or PostScript Data to AFP” on page 266.

You cannot use the **ps2afp -o** flag to specify an output file.

Note: The **ps2afp** transform must be installed on the workstation where InfoPrint is installed.

TIFF Data

If you are printing TIFF data:

- Specify **-odatatype=tiff** with the **enq**, **lp**, **qprt**, or **lprafp** command; or allow InfoPrint to identify the data type.
- InfoPrint automatically runs the **tiff2afp** transform command.
- You can use the following **tiff2afp** options on the command line with **enq**, **lp**, **qprt**, or **lprafp**. For those options that accept a value, do not put a blank between the option and the value.

- o-aImageType
- o-algProcessingAlgorithms
- o-calibcalibration
- o-choiceImageChoice
- o-CConfigurationFile
- o-cleancleanup
- o-cmpcompression
- o-cropCropFactors
- o-fit{trim | scale}
- o-force
- o-gcorrGrayscaleMappingTable
- o-inkcolor
- o-inv
- o-jScanOffsetFileName
- o-lImageLength
- o-MMemoryBound
- o-mp
- o-msspace
- o-msfSpaceFraction
- o-nomp
- o-nosniff
- o-noterm
- o-nov
- o-outbitsNumberOfOutputBits
- o-outcolorOutputColorModel
- o-pPageRange
- o-pagetypePageType
- o-paperPaperSize
- o-rresolution
- o-respathResourceSearchPath
- o-rotrotation
- o-scaleImageSize
- o-sgcorrScannerCorrection
- o-sniff
- o-term
- o-threshHalftoneFile
- o-v
- o-wImageWidth
- o-wrkdirWorkDirectory
- o-xLeftMargin
- o-yTopMargin

For information about these options, see “tiff2afp Command: Transforms TIFF Data to AFP” on page 292.

-o Flag

You cannot use the print command **-o** flag to pass the **tiff2afp -o** option to specify an output file, or the **@**, **-f**, and **-z** options to specify input files.

Note: The **tiff2afp** transform must be installed on the workstation where InfoPrint is installed.

Examples

- To submit the ASCII file `myfile` to the InfoPrint logical destination called `Xserv-lp` with four copies printed on one side of hole-punched paper, which is stored in the secondary bin of the printer device, enter:

```
enq -P Xserv-lp -obin=2 -ocopies=4 -oduplex=n myfile
```

InfoPrint includes a form definition that specifies single-sided printouts of hole-punched paper from bin 2. If this form definition (**F1H10120**) is installed in the default directory, you could alternatively type:

```
enq -P Xserv-lp -ocopies=4 -oforndef=F1H10120 myfile
```
- To submit AFP data stream files `file1` and `file2` to the InfoPrint logical destination called `dtsrv-lp`, with a search path for fonts of `/home/afpfonts`, enter:

```
lp -d dtsrv-lp -osrchfontlib=/home/afpfonts file1 file2
```
- To submit the PostScript file `myfile` to the InfoPrint logical destination called `servB-lp` (which has a resolution of 300 pels), with a form definition of `F1PP0120`, with no reported invalid-character errors, and with a maximum of 100 printed messages, enter:

```
qpri -P servB-lp -o-r300 -odatac=blkchar -odatat=ps -of=F1PP0120  
-omsgc=100 myfile
```

Chapter 4. InfoPrint Administrative Utilities

This chapter describes the following InfoPrint administrative utilities:

- “admingui Utility: Opens the Print Administration Window of the Basic InfoPrint Administrator's GUI” on page 124
- “afpsplit Utility: Extracts Pages from a MO:DCA-P File” on page 125
- “ainupod1 Utility: Generates Accounting Information by User” on page 127
- “ainupod2 Utility: Generates Accounting Information by Job” on page 128
- “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130
- “ainurpt2 Utility: Generates Accounting Information by User” on page 131
- “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- “ainurpt4 Utility: Generates Audit Information by Destination” on page 133
- “ainurpt5 Utility: Generates Audit Information by User” on page 134
- “ainurpt6 Utility: Generates Audit Information for a User” on page 135
- “cfu Utility: Displays and Builds Coded Fonts” on page 136
- “ipguiadv, ipguibasic, and ipguidist Utilities: Start the InfoPrint Operator's GUI” on page 138
- “jsmigr Utility: Migrates PSF for AIX Job Scripts” on page 139
- “opergui Utility: Opens the Print Management Window of the Basic InfoPrint Administrator's GUI” on page 141
- “pdadmin Utility: Opens the Servers Window of the Advanced InfoPrint Administrator's GUI” on page 142
- “pdcr cds Utility: Creates Directories for DCE” on page 143
- “pdcr dflt Utility: Creates Default Auxiliary Sheets, Media, and Queue” on page 144
- “pdcr med Utility: Creates Commonly Used Media” on page 146
- “pdinitports Utility: Initializes Ports” on page 147
- “pdmigpp Utility: Migrates Existing AIX Printers to InfoPrint” on page 149
- “pdmincfg Utility: Sets up a Minimum InfoPrint Configuration” on page 151
- “pdmsg Utility: Displays Information about a Message” on page 153
- “pdnetifspri Utility: Sets Priorities for Network Adapters” on page 155
- “rc.pd Utility: Restarts Servers” on page 157
- “sense Utility: Senses Whether a Channel-Attached Printer is Attached to InfoPrint” on page 158
- “setup Utility: Starts the InfoPrint Installer” on page 160
- “startppo Utility: Starts the InfoPrint SMIT Production Print Operations Interface” on page 163
- “start_server Utility: Starts a Server for a Basic InfoPrint Installation” on page 164
- “startsvr Utility: Starts a Server” on page 166
- “stop_server Utility: Shuts Down a Server” on page 168
- “tdump Utility: Outputs Tape Contents in Human-Readable Format” on page 169
- “tlist Utility: Lists Files on a Tape” on page 171
- “t2file Utility: Reads MVS Partitioned Data Sets from Tape” on page 172

admingui Utility: Opens the Print Administration Window of the Basic InfoPrint Administrator's GUI

Syntax

```
admingui [-n] [ServerName ...]
```

Description

Use the **admingui** utility to open the Print Administration window of the basic InfoPrint administrator's GUI. The Print Administration window displays the logical destinations, actual destinations, default jobs, default documents, and media that reside in the specified servers.

Flags

The **admingui** utility uses the following flag:

- n** Prevents InfoPrint from starting the specified servers if necessary. If you do not specify this flag, InfoPrint checks to see if the specified servers are running. If they are not running, InfoPrint invokes the **start_server** utility to start existing servers or create new ones.

Arguments

The argument value identifies the server to which the utility applies.

Valid argument values for the **pdcrflt** utility are:

ServerName

Specifies the name of the server you want to monitor. *ServerName* defaults to the hostname.

Examples

- To monitor the default server, starting it if necessary, enter:
admingui
- To monitor the servers charlie and martha if they are already running: enter:
admingui -n charlie martha

afpsplit Utility: Extracts Pages from a MO:DCA-P File

Syntax

```
afpsplit [-f page] [-p page] [-o OutputFile] [InputFile]
```

Description

Issue the **afpsplit** command to extract a page or a range of pages from an AFP MO:DCA-P document and create MO:DCA-P output.

You might use the **afpsplit** command to create a separate file starting at the 25th page and ending at the 50th page of a 200-page document. After you use the **afpsplit** command to create a file, you can view, store, print, or transmit that file.

Notes:

1. **afpsplit** removes structured index fields from MO:DCA-P files. This does not affect the appearance of printed files, but index entries are no longer available for viewing.
2. **afpsplit** writes error messages to STDERR.

Flags

-f page Specifies the forward space function, where *page* indicates the number of pages (0-999999999) that you can forward space from the beginning of the input file to start extracting the page or range of pages. To start extracting on page *n*, forward space *n-1* pages.

If you do not specify the **-f** flag, the extraction starts at the beginning of the file. If you specify more than one **-f** flag, the last one you specify is used.

-p page Specifies the page end function, where *page* indicates the number of pages (0-999999999) to be extracted.

If you do not specify the **-p** flag, all pages from the forward space point to the end of the input file are included in the output file. If you specify more than one **-p** flag, the last one you specify is used.

-o OutputFile

Specifies the name of the file for the page or range of pages produced by **afpsplit**.

If you do not specify this flag, **afpsplit** uses standard output (STDOUT).

Arguments

The valid argument value for the **afpsplit** utility is:

InputFile Specifies the input file.

If you do not specify an input file, **afpsplit** uses standard input (STDIN).

afpsplit

Example

To extract pages 21-30 from a MO:DCA-P input file called `input.afp` and use the **pdpr** command to print those 10 pages on printer `serv1-lp`, enter:

```
afpsplit -f 20 -p 10 input.afp | pdpr -p serv1-lp
```

ainupod1 Utility: Generates Accounting Information by User

Syntax

```
ainupod1
```

Description

Use the **ainupod1** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, or email actual destinations, sorted by user ID. This information is derived from the **/var/psf/podaccount.log** file. By default, basic InfoPrint installations set the value of the the **accounting-exit** actual destination attribute to **job-ticket**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for all users, enter:

```
ainupod1
```

ainupod1 returns information similar to the following:

Accounting Report by Customer ID

Customer	Jobs	Pages	Bin1	Bin2
-----	----	-----	----	----
apple	6	8	8	0
donald	18	2297	1511	0

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod2 Utility: Generates Accounting Information by Job” on page 128 and “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- Utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainupod2 Utility: Generates Accounting Information by Job

Syntax

```
ainupod2
```

Description

Use the **ainupod2** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations, sorted by job ID. This information is derived from the **/var/psf/podaccount.log** file. By default, basic InfoPrint installations set the value of the the **accounting-exit** actual destination attribute to **job-ticket**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for all jobs, enter:

```
ainupod2
```

ainupod2 returns information similar to the following:

```

Accounting Report by Job ID

   Job ID      Jobs    Pages    Bin1  Bin2
-----
E1A0540F.3F8      7      48      48    0
E1B0440B.B0B     10     196     175    0
NONE              53      94      94    0

```

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127 and “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- Utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainupod3 Utility: Generates Accounting Information for a User

Syntax

```
ainupod3
```

Description

Use the **ainupod3** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations by a given user. This information is derived from the **/var/psf/podaccount.log** file. By default, basic InfoPrint installations set the value of the **accounting-exit** actual destination attribute to **job-ticket**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for user donald, enter:

```
ainupod3
```

When **ainupod3** prompts you for a user ID, enter:

```
donald
```

ainupod3 returns information similar to the following:

```

                Print Activity Report for donald

   Start   Start   Destination   Pages   Copies   Job
   Date    Time    ID           Printed  Requested Identification
-----
07/26/1997 15:36:32 e1             45         1 E1B0440B.B0B
07/31/1997 08:24:24 3900-p4        15         1 i1a11908.54d
08/01/1997 08:28:48 e1            131         1 e1a1050c.431

```

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127 and “ainupod2 Utility: Generates Accounting Information by Job” on page 128
- Utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainurpt1 Utility: Generates Accounting Information by Actual Destination

Syntax

```
ainurpt1
```

Description

Use the **ainurpt1** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations, sorted by actual destination. This information is derived from the **/var/psf/accounting.log** file. By default, advanced InfoPrint installations set the value of the the **accounting-exit** actual destination attribute to **accounting-log**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for all PSF, fax, and email actual destinations, enter:

```
ainurpt1
```

ainurpt1 returns information similar to the following:

Destination	Jobs	Pages	Bin1	Bin2	Fonts	Resident	Overlays	Hard	Soft
-----	----	-----	----	----	-----	-----	-----	----	----
ksrv-p1	120	1200	88	32	10	0	0	0	0
ksrv-p2	72	981	72	0	4	0	0	0	0

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt2 Utility: Generates Accounting Information by User” on page 131 and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainurpt2 Utility: Generates Accounting Information by User

Syntax

```
ainurpt2
```

Description

Use the **ainurpt2** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations, sorted by user. This information is derived from the **/var/psf/accounting.log** file. By default, advanced InfoPrint installations set the value of the the **accounting-exit** actual destination attribute to **accounting-log**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for all users, enter:

```
ainurpt2
```

ainurpt2 returns information similar to the following:

Userids	Jobs	Pages	Bin1	Bin2	Fonts	Resident	Overlays	Hard	Soft
-----	----	-----	----	----	-----	-----	-----	----	----
billing	120	1200	88	32	10	0	0	0	0
repgen	72	981	72	0	4	0	0	0	0

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130 and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainurpt3 Utility: Generates Accounting Information for a User

Syntax

```
ainurpt3
```

Description

Use the **ainurpt3** utility to generate a report of accounting information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations by a given user. This information is derived from the **/var/psf/accounting.log** file. By default, advanced InfoPrint installations set the value of the the **accounting-exit** actual destination attribute to **accounting-log**, which invokes a user exit program that writes accounting information to this file.

Example

To generate accounting information for user kathy, enter:

```
ainurpt3
```

When **ainurpt3** prompts you for a user ID, enter:

```
kathy
```

ainurpt3 returns information similar to the following:

Report for kathy

Start Date	Start Time	Destination ID	Pages Printed	Job Name
-----	-----	-----	-----	-----
06/02/1997	12:53:47	ksrv-p1	1190	/net/home/kathy/May.billing
06/03/1997	15:42:31	hsrv-p1	944	/net/home/kathy/May.reports

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130 and “ainurpt2 Utility: Generates Accounting Information by User” on page 131
- Utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129
- Utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133, “ainurpt5 Utility: Generates Audit Information by User” on page 134, and “ainurpt6 Utility: Generates Audit Information for a User” on page 135

ainurpt4 Utility: Generates Audit Information by Destination

Syntax

```
ainurpt4
```

Description

Use the **ainurpt4** utility to generate a report of audit information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations, sorted by actual destination. This information is derived from the `/var/psf/audit.log` file. To write information to this file, specify **accounting-log** as the value of the **audit-exit** actual destination attribute.

Example

To generate audit information for all PSF, fax, and email actual destinations, enter:

```
ainurpt4
```

ainurpt4 returns information similar to the following:

Destination	Jobs	Pages	Bin1	Bin2	Fonts	Resident	Overlays	Hard	Soft
ksrv-p1	120	1200	88	32	10	0	0	0	0
ksrv-p2	72	981	72	0	4	0	0	0	0

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate audit reports, see “ainurpt5 Utility: Generates Audit Information by User” on page 134 and “ainurpt6 Utility: Generates Audit Information for a User” on page 135
- Utilities that generate accounting reports from the `/var/psf/accounting.log` file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate accounting reports from the `/var/psf/podaccount.log` file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129

ainurpt5 Utility: Generates Audit Information by User

Syntax

```
ainurpt5
```

Description

Use the **ainurpt5** utility to generate a report of audit information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations, sorted by user. This information is derived from the **/var/psf/audit.log** file. To write information to this file, specify **accounting-log** as the value of the **audit-exit** actual destination attribute.

Example

To generate audit information for all users, enter:

```
ainurpt5
```

ainurpt5 returns information similar to the following:

Userids	Jobs	Pages	Bin1	Bin2	Fonts	Resident	Overlays	Hard	Soft
-----	----	-----	----	----	-----	-----	-----	----	----
billing	120	1200	88	32	10	0	0	0	0
repgen	72	981	72	0	4	0	0	0	0

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133 and “ainurpt6 Utility: Generates Audit Information for a User” on page 135
- Utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129

ainurpt6 Utility: Generates Audit Information for a User

Syntax

```
ainurpt6
```

Description

Use the **ainurpt6** utility to generate a report of audit information for all jobs printed or transmitted on all defined PSF, fax, and email actual destinations by a given user. This information is derived from the **/var/psf/audit.log** file. To write information to this file, specify **accounting-log** as the value of the **audit-exit** actual destination attribute.

Example

To generate audit information for user kathy, enter:

```
ainurpt6
```

When **ainurpt6** prompts you for a user ID, enter:

```
kathy
```

ainurpt6 returns information similar to the following:

Report for kathy

Start Date	Start Time	Destination ID	Pages Printed	Job Name
-----	-----	-----	-----	-----
06/02/1997	12:53:47	ksrv-p1	1190	/net/home/kathy/May.billing
06/03/1997	15:42:31	hsrv-p1	944	/net/home/kathy/May.reports

Suggested Reading

For information about:

- Auxiliary sheets, see “Attributes for Auxiliary-Sheet Objects” on page 399
- Other utilities that generate audit reports, see “ainurpt4 Utility: Generates Audit Information by Destination” on page 133 and “ainurpt5 Utility: Generates Audit Information by User” on page 134
- Utilities that generate accounting reports from the **/var/psf/accounting.log** file, see “ainurpt1 Utility: Generates Accounting Information by Actual Destination” on page 130, “ainurpt2 Utility: Generates Accounting Information by User” on page 131, and “ainurpt3 Utility: Generates Accounting Information for a User” on page 132
- Utilities that generate accounting reports from the **/var/psf/podaccount.log** file, see “ainupod1 Utility: Generates Accounting Information by User” on page 127, “ainupod2 Utility: Generates Accounting Information by Job” on page 128, and “ainupod3 Utility: Generates Accounting Information for a User” on page 129

cfu Utility: Displays and Builds Coded Fonts

Syntax

```
cfu [-d | -b] CodedFontName [BuildFileName]
```

Description

cfu, the Coded Font Utility, displays and builds coded fonts for use with IBM InfoPrint Control. The main purpose of the **cfu** utility is to allow users of double-byte raster fonts to indicate which font sections in the coded font should be downloaded to the printer and which font sections can be found resident in the printer. This is useful when:

- You have added user-defined characters to a font section
- The printer-resident version of a font differs from the system-resident version of a font, and you want to ensure that IBM InfoPrint Control downloads the system version.

You can also add and delete sections from the coded font and change which character sets and code pages are referenced in the coded font.

You can also use the **cfu** utility to build single-byte coded fonts by specifying a font character set name and a code page name.

You can use the **cfu** utility in two ways:

- In the display mode of the **cfu** utility, you provide a coded font name as input. The **cfu** utility generates a build file that can be used as input to the build mode of the **cfu** utility.
- In the build mode of the **cfu** utility, you provide a build file name as input. The **cfu** utility generates a coded font.

Flags

The **cfu** utility uses the following flags:

- d** Display mode displays the contents of a coded font. Output is written to standard output. This is the default mode if no flag is entered.
- b** Build mode builds a new coded font using the *build file name*, or standard input if the *build file name* is omitted.

Build File Format

Each non-commented line in the build file defines one repeating group within the Coded Font Index structured field. Repeating group definitions may not span more than one line and fields within each line must be delimited with blanks. A pound sign (#) at the beginning of a line indicates a comment.

A repeating group definition has the following format:

- Field 1 is the section identifier of the repeating group. The format is **X'*hh*'**, where *hh* is the hexadecimal section identifier. Both the **X** character and the single quotation marks are required.
- Field 2 is the character set name. Only the first 8 characters are used.

- Field 3 is the code page name. Only the first 8 characters are used.
- Field 4 is the section resident indicator:
 - 1 Use the printer-resident section if possible.
 - 0 Download the section.

Note: This field is only meaningful for double-byte raster fonts.

This is an example of a repeating group:

#	SectId	CharSet	CodePage	Resident
#	-----	-----	-----	-----
	X'41'	C0Z24F41	T1Z24F41	0

Arguments

The valid argument values for the **cfu** utility are:

CodedFontName

The name of the coded font for display mode or the new coded font name in build mode. **cfu** will not overwrite existing coded fonts in build mode.

Note: In build mode, the *coded font name* is also the internal coded font name in the Begin Coded Font structured field.

BuildFileName

The input file used to build a new coded font. If *build file name* is omitted, **cfu** reads from standard input.

Examples

- To display the contents of the coded font X0Z24F, enter either of the following commands:


```
cfu X0Z24F
cfu -d X0Z24F
```
- To build a new coded font with the name X0Z24F using build file X0Z24F.b1d, enter:


```
cfu -b X0Z24F X0Z24F.b1d
```

Suggested Reading

Refer to *Data Stream and Object Architectures: Font Object Content Architecture Reference* for more information on coded font structured fields.

ipguiadv, ipguibasic, and ipguidist Utilities: Start the InfoPrint Operator's GUI

Syntax

ipguiadv

ipguibasic

ipguidist

Description

Issue the **ipguiadv**, **ipguibasic**, or **ipguidist** utility to start the InfoPrint operator's GUI.

ipguiadv Starts the view for an advanced InfoPrint installation.

ipguibasic

Starts the view for a basic InfoPrint installation.

ipguidist Starts the view for a distributed InfoPrint installation.

Each view is designed to be most useful in a specific environment, but you can open any view in any environment.

Example

To start the InfoPrint operator's GUI, displaying the view for a basic InfoPrint installation, enter:

```
ipguibasic
```

jsmigr Utility: Migrates PSF for AIX Job Scripts

Syntax

jsmigr *JobScript* ...

Description

Issue the **jsmigr** utility to migrate PSF for AIX job scripts to InfoPrint command scripts and attributes files. The **jsmigr** utility creates the following files:

JobScript.ksh

InfoPrint command script containing

- The **pdpr** command
- One or more **-X** flags invoking attributes files
- If the job script includes the corresponding keywords, other flags and arguments of the **pdpr** command (for example, the **-T** flag for tape input or the names of files to be printed)

This file is created in the same directory as the migrated job script and has the same file name with **.ksh** appended.

JobScript.X

Attributes file used by *JobScript.ksh*, containing attributes migrated from the job script keywords. This file is created in the same directory as the migrated job script and has the same file name with **.X** appended.

FileName.X

Attributes files used by *JobScript.ksh*. These files are migrated from job scripts named as values for the **a_Parmdd**, **i_FileNames**, **p_Config**, and **e_Filemsg** keywords. Each file is created in the same directory as the original file and has the same file name with **.X** appended.

Notes:

1. This utility normally executes as part of the InfoPrint installation.
2. Appendix B, "Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents" on page 619 shows the attributes to which job script keywords are migrated.
3. If multiple job scripts refer to the same file, **jsmigr** migrates the file only once.
4. Job scripts named as values for the **a_Parmdd**, **p_Config**, and **e_Filemsg** keywords must be specified with absolute path names.
5. InfoPrint searches for job scripts named as values for the **i_FileNames** keyword in these directories:
 - a. Current directory
 - b. **\$HOME/js**
 - c. **/var/psf/js**
6. If a data type is specified with the **JsFileType** keyword, keywords that are not valid for that data type are commented out in the attributes file resulting from conversion. For example, if **JsFileType** has any value other than **line**, all **a_** keywords are commented out. If you edit the attributes file and change the

- value of the **document-format** attribute to **line-data**, you must remove the comment characters before using the attributes file to submit line-data jobs.
7. If the input device is not **rmtx**, tape-related job script keywords are commented out in the attributes file resulting from conversion. You must edit the attributes file and remove the comment characters before using it to submit jobs read from tape.
 8. Job scripts containing both **a_** and **p_** keywords may convert to an attributes file that causes transforms to fail, especially if any of the keywords convert to the **other-transform-options** attribute. This happens because PSF for AIX ignores job script keywords that do not apply to the job, but InfoPrint processes all attributes.
 9. If **jsmigr** encounters a job script keyword that it cannot map to an InfoPrint attribute, it issues an error message, erases the attributes file it is writing, ends migrating the job script, and continues with the next job script.
 10. If **jsmigr** encounters a job script keyword that it can map to an InfoPrint attribute, with a value that has no InfoPrint equivalent, it converts the keyword and continues writing the attributes file. When you use the attributes file to submit a job, InfoPrint issues an error message and does not print or transmit the job.

Arguments

The argument value identifies the job script to be migrated.

Valid argument values for the **jsmigr** utility are:

JobScript Specifies the job script to be migrated. The job script file must have a **.js** extension, which you do not have to specify.

You can specify multiple job script names. You can use an asterisk (*) to specify all job scripts in a directory.

Examples

- To migrate the job scripts `bigjob.js` and `smalljob.js`, enter:
`jsmigr bigjob smalljob`
- To migrate all the job scripts in the directory `/var/psf/js`, enter:
`jsmigr /var/psf/js/*`

opergui Utility: Opens the Print Management Window of the Basic InfoPrint Administrator's GUI

Syntax

```
opergui [-n] [ServerName ...]
```

Description

Use the **opergui** utility to open the Print Management window of the basic InfoPrint administrator's GUI. The Print Management window displays the actual destinations, unassigned jobs, and retained jobs that reside in the specified servers.

Flags

The **opergui** utility uses the following flag:

- n** Prevents InfoPrint from starting the specified servers if necessary. If you do not specify this flag, InfoPrint checks to see if the specified servers are running. If they are not running, InfoPrint invokes the **start_server** utility to start existing servers or create new ones.

Arguments

The argument value identifies the server to which the utility applies.

Valid argument values for the **pdcrflt** utility are:

ServerName

Specifies the name of the server you want to monitor. *ServerName* defaults to the hostname.

Examples

- To monitor the default server, starting it if necessary, enter:
opergui
- To monitor the servers `charlie` and `martha` if they are already running: enter:
opergui -n charlie martha

pdadmin Utility: Opens the Servers Window of the Advanced InfoPrint Administrator's GUI

Syntax

```
pdadmin
```

Description

Use the **pdadmin** utility to open the Servers window of the advanced InfoPrint administrator's GUI. The Servers window displays the queues and actual destinations default jobs, default documents, and media that reside in the servers you select in a dialog.

Examples

- To monitor all the servers in the namespace:
 1. Enter:

```
pdadmin
```
 2. In the Select Servers dialog, click **OK**.
- To monitor the servers `julia` and `henry`:
 1. Enter:

```
pdadmin
```
 2. In the Select Servers dialog, select `julia`.
 3. Hold down the **CTRL** key and select `henry`.
 4. Click **OK**.

pdcr cds Utility: Creates Directories for DCE

Syntax

```
pdcr cds
```

Description

Issue the **pdcr cds** utility to create the directories and soft links needed for InfoPrint within the DCE namespace. You should only run the **pdcr cds** utility once in each DCE cell in which InfoPrint servers will run regardless of the number of servers. This utility also establishes the initial ACL structure used by the InfoPrint security service.

Note: This utility normally executes as part of the InfoPrint installation.

Example

To create directories needed for InfoPrint in the DCE namespace, enter:

```
pdcr cds
```

InfoPrint displays the following:

```
Creating InfoPrint directories in the DCE namespace...
```

pdcrdflt Utility: Creates Default Auxiliary Sheets, Media, and Queue

Syntax

pdcrdflt [-c] *ServerName*

Description

Issue the **pdcrdflt** utility to perform the following server configuration tasks:

- Create the default auxiliary sheets and media in a server.
- For a basic installation only, create the default queue.
- For a basic installation only, set server and queue attributes.

The default auxiliary sheets that this utility creates are:

accounting-log
blank
brief
full
job-ticket
none

The default media that this utility creates are:

A4
legal
letter

You only need to run the **pdcrdflt** utility if the **startsrv** utility failed to create all the default objects.

If you specify the **-c** flag, **pdcrdflt**

- Sets the following server attributes to **true**:

accept-unsupported-jobs
save-rip-files

- Creates the default queue
- Sets the following queue attributes to **true**:

assign-to-printer
requeue-failed-jobs

If you have a server that has been configured for an advanced InfoPrint installation and want to reconfigure it for a basic installation, do not use **pdcrdflt**. You must create the default queue and reset the attributes manually.

Flags

The **pdcrdflt** utility uses the following flags:

- c Configures the server for a basic installation. If you do not specify this flag, InfoPrint configures the server for an advanced installation.

Arguments

The argument value identifies the server to which the utility applies.

Valid argument values for the **pdcrdflt** utility are:

ServerName

Specifies the name of the server to configure. You must specify the name.

Examples

- To create the default objects for a server with the name `srv1` in an advanced installation, enter:

```
pdcrdflt srv1
```

- To configure the server `charlie` for a basic installation and create the default objects, enter:

```
pdcrdflt -c charlie
```

pdcrmed Utility: Creates Commonly Used Media

Syntax

pdcrmed *ServerName*

Description

Issue the **pdcrmed** utility to create the large number of predefined medium objects. Use this utility after starting the server.

The utility creates these predefined medium objects:

A0	B6	jis-b6-white
A1	B7	jis-b7-white
A2	B8	jis-b10-white
A3	B9	ledger
A3-colored	B10	legal
A4	C4-envelope	letter
A4-colored	C5-envelope	medium-jis-b8-white
A4-transparent	a	medium-jis-b9-white
A5	b	monarch-envelope
A5-colored	c	na-legal-colored
A6	d	na-letter-colored
A7	designated-long-envelope	na-letter-transparent
A8	e	na-number-9-envelope
A9	executive	na-number-10-envelope
A10	folio	na-6x9-envelope
B0	invoice	na-7x9-envelope
B1	jis-b0-white	na-9x11-envelope
B2	jis-b1-white	na-9x12-envelope
B4	jis-b2-white	na-10x13-envelope
B4-colored	jis-b4-colored	na-10x14-envelope
B4-envelope	jis-b4-white	na-10x15-envelope
B5	jis-b5-colored	quarto
B5-colored	jis-b5-white	tabloid
B5-envelope		

Arguments

The argument value identifies the server to which the utility applies.

Valid argument values for the **pdcrmed** utility are:

ServerName

Specifies the name of the server on which to create the medium objects. You must specify the name.

Example

To create the commonly used medium objects on a server with the name `srv1`, enter:

```
pdcrmed srv1
```

pdinitports Utility: Initializes Ports

Syntax

```
pdinitports [-n NumberOfPorts] MinimumPortNumber MaximumPortNumber]
```

```
pdinitports {-h | -?}
```

Description

Use the **pdinitports** utility to set up InfoPrint to use a specific range or number of port numbers on this system for interprocess communication. By initializing a specific range of port numbers, you can avoid using port numbers that are used by or reserved for other programs.

Notes:

1. See the **/etc/services** file for reserved port numbers. Because InfoPrint does not use the port numbers in **/etc/services**, you do not have to run this utility if all reserved port numbers are listed there.
2. Because InfoPrint automatically initializes port numbers when it is started, you should not normally have to run this utility.
3. Before using this utility, you must shut down all the servers on this system.

Flags

The **pdinitports** utility uses the following flags:

-n *NumberOfPorts*

Specifies that InfoPrint is to find the first available block of *num-ports* port numbers and use them. If you do not specify either this flag or a range of port numbers, **pdinitports** finds and uses the first available block of 10 port numbers.

-h Displays help for the **pdinitports** utility.

-? Displays help for the **pdinitports** utility.

Arguments

Valid argument values for the **pdinitports** utility are:

MinimumPortNumber

The minimum port number that the InfoPrint will use on this system.

MaximumPortNumber

The maximum port number that the InfoPrint will use on this system.

If you do not specify either a range of port numbers or the **-n** flag, **pdinitports** finds and uses the first available block of 10 port numbers.

pdinitports

Examples

- To initialize InfoPrint to use the first available range of 12 ports, enter:
`pdinitports -n 12`
- To initialize InfoPrint to use ports 6001 through 6010, enter:
`pdinitports 6001 6010`

pdmigpp Utility: Migrates Existing AIX Printers to InfoPrint

Syntax

pdmigpp *AIXPrintQueue ServerName DestinationName QueueName*

Description

Issue the **pdmigpp** utility to migrate an existing AIX print queue to an actual destination within InfoPrint.

You can migrate printer devices currently configured for the AIX print system, for PSF for AIX, and for AIX remote queues that send jobs to another AIX processor or to any remote host connected to the network with TCP/IP.

This utility automatically selects the appropriate DSS, which the **device-support-system** actual destination attribute reflects. If the AIX print queue is a remote queue, InfoPrint selects the BSD DSS. For PSF physical printers, the utility selects the appropriate attachment type, reflected by the **attachment-type** actual destination attribute. The corresponding InfoPrint actual destination attributes, if they exist, reflect any values for the existing printer device.

After this utility has run successfully, an InfoPrint actual destination that is equivalent to the AIX print queue exists in the specified server.

To run this utility ensure that:

- If you use DCE, you are logged into DCE with administrator authority
- You are logged onto the AIX processor on which the AIX print queue resides
- The InfoPrint server whose name you specify is up and running

Arguments

The argument value identifies the existing AIX virtual printer that the utility migrates to InfoPrint as an actual destination within the specified server and its associated queue.

Valid argument values for the **pdmigpp** utility are:

AIXPrintQueue

The name of an existing AIX print queue that the utility migrates to InfoPrint.

ServerName

Specifies the name of the server that will contain the actual destination the utility creates.

DestinationName

The name of the InfoPrint actual destination that the utility creates.

QueueName

The name of the InfoPrint queue that will provide jobs to the created actual destination.

pdmigpp

Example

To migrate the PSF for AIX print queue 1pd8 to actual destination PhyPtr3 on server Server2 with an associated queue of queue1, enter:

```
pdmigpp 1pd8 Server2 PhyPtr3 queue1
```

pdmincfg Utility: Sets up a Minimum InfoPrint Configuration

Syntax

```
pdmincfg [-s] [ServerName]
```

Description

Issue the **pdmincfg** utility to create a minimum InfoPrint configuration.

This minimum configuration consists of one server, one logical destination, one queue, and one actual destination. You can use this minimum configuration to verify that InfoPrint is properly installed and is operational. The **pdmincfg** utility creates a minimal configuration appropriate for a small InfoPrint installation.

Flags

The **pdmincfg** utility uses the following flag:

-s Causes **pdmincfg** to start the specified server. If you do not specify this flag, but do specify the *ServerName*, InfoPrint does not start the server. If you do not request InfoPrint to start the server, InfoPrint assumes it is already up and running.

Arguments

The argument value identifies the specific object to which the utility applies.

Valid argument values for the **pdmincfg** utility are:

ServerName

Specifies the name of the server that runs in the minimum configuration. *ServerName* defaults to the hostname.

Example

To set up a minimum configuration on a system with the server name of serv1, follow these steps:

1. Enter:

```
pdmincfg -s serv1
```

InfoPrint displays the following:

```
Your server print database will be stored in /var/pd/serv1.  
Press enter to continue or press CTRL-C to cancel the request.
```

Note: Your **PDBASE** environment variable setting determines the directories where InfoPrint stores your server print database.

2. Press Enter and the following displays:

Note: If the server does not exist, InfoPrint prompts you after message 5010-467. Type **y** and press Enter to create the server.

```

5010-467 Starting server serv1.
5010-406 Creating default objects. Please wait.
5010-405 Successfully started server serv1.
5010-470 Creating logical destination serv1-lp.
5010-471 Creating queue serv1-q.
5010-472 Enabling logical destination serv1-lp.

```

Enter 1 or 2 for the type of actual destination to be created:

1 = Test actual destination that does not actually print to a printer device

2 = Actual destination that uses your attributes file

3. You now have a choice of responses:

- To create a test actual destination to verify that InfoPrint is properly installed, enter **1**.
- To create an actual destination that represents a real printer device, follow these steps:
 - a. Enter **2**.

InfoPrint displays the following:

Enter the name of your destination attributes file:

- b. Enter the name of a file containing attributes that describe the destination you want to create. For example:

```
/usr/fred/attfiles/pp_tcpip.X
```

This example shows the full pathname of the file. If

`/usr/fred/attfiles` is defined in your **PDPATH** environment variable, you can specify just the file name.

The file `pp_tcpip.X` contains information like this:

```

# TCP/IP-attached actual destination
destination-realization      =actual
attachment-type              =tcpip
destination-model            =InfoPrint4000
destination-tcpip-internet-address=martha.boulder.ibm.com
destination-tcpip-port-number =5001

```

4. InfoPrint displays the following:

```

5010-476 Creating actual destination serv1-pp.
5010-477 Enabling actual destination serv1-pp.
5010-462 Your minimum configuration is now active:
  Logical Destination: serv1-lp
      |
      v
  Queue: serv1-q
      |
      v
  Actual Destination: serv1-pp

```

5. To print a file named `test` on the actual destination you just created, enter:

```
pdpr -p serv1-lp test
```

pdmsg Utility: Displays Information about a Message

Syntax

```
pdmsg [-d] [-t] MessageNumber
```

Description

The **pdmsg** utility displays the text and description of an InfoPrint, &psmwos., or &psmw. message at the command line. The **pdmsg** utility extracts the text and description from the appropriate message catalogs. If you do not specify the **-d** or **-t** flag with the utility, InfoPrint displays both the text and the message description.

Flags

The **pdmsg** utility uses the following flags:

- d** Displays only the description of a message, which consists of a 7-digit message number, an explanation of the message, the system action, and the response.
- t** Displays only the text of a message, which consists of a 7-digit message number along with the actual words of the message itself. Underlined blanks in the text identify variable fields in the message text (also called message inserts). When InfoPrint actually issues messages, InfoPrint replaces the blanks with the appropriate variable information.

MessageNumber

The number of the InfoPrint message you want displayed. Valid message numbers range from 0420-001 through 0423-999 and 5010-001 through 5010-999; however, not every number in these ranges has an associated message.

Examples

- To view the text and description for InfoPrint message 5010-096, enter:


```
pdmsg 5010-096
```

 InfoPrint displays the following:


```
5010-096 The value ____ is not supported for attribute ____.  
5010-096  
EXPLANATION: The server or destination does not support this value.  
SYSTEM ACTION: InfoPrint could not process the request.  
RESPONSE: Enter the command again and specify a value that is supported  
by the server and destination, or specify a destination that supports (by  
association) the value.
```
- To view only the text for InfoPrint message 5010-096, enter:


```
pdmsg -t 5010-096
```

 InfoPrint displays the following:


```
5010-096 The value ____ is not valid not supported for attribute ____.
```
- To view only the description for InfoPrint message 5010-096, enter:


```
pdmsg -d 5010-096
```

 InfoPrint displays the following:

5010-096

EXPLANATION: The server or destination does not support this value.

SYSTEM ACTION: InfoPrint could not process the request.

RESPONSE: Enter the command again and specify a value that is supported by the server and destination, or specify a destination that supports (by association) the value.

pdnetifspri Utility: Sets Priorities for Network Adapters

Syntax

```
pdnetifspri {IPAddress Priority | -l}
```

```
pdnetifspri {-h | -?}
```

Description

When a single AIX system has multiple network adapters, administrators issue the **pdnetifspri** utility to indicate which adapter InfoPrint should use.

Flags

The **pdnetifspri** utility uses the following flags:

- l** Lists the current priorities of the network adapters.
Note: This flag is a lowercase L.
- h** Displays help for the **pdnetifspri** utility.
- ?** Displays help for the **pdnetifspri** utility.

Arguments

Valid argument values for the **pdnetifspri** utility are:

IPAddress

Specifies the IP address of the network adapter whose priority you are setting.

Priority

Indicates a priority from 0 to 7. 0 is the highest priority, 6 is the lowest, and 7 indicates that InfoPrint should never use the network adapter.

Example

A single AIX system has three network adapters:

- A token-ring adapter (*tr0*) at 9.99.12.123
- A high-speed switch adapter (*css0*) at 9.99.12.124
- An Ethernet adapter (*en0*) at 9.99.12.125. This adapter is not connected to the network.

You would rather have InfoPrint use *tr0* than *css0*. Because **en0** has no cable attached, you do not want InfoPrint to use it at all.

To make InfoPrint use *tr0* first, *css0* only if *tr0* fails, and *en0* never, follow these steps:

1. Log into DCE as **cell_admin** or as a member of the **pd_admin** or **pd_operator** group.
2. Shut down all servers on all hosts in the DCE cell.
3. Enter the following commands:

```
pdnetifspri 9.99.12.123 0
pdnetifspri 9.99.12.124 1
pdnetifspri 9.99.12.125 7
```

4. Restart the servers.

Notes:

1. To find out what network adapters you have, enter
smit tcpip
Select **Minimum Configuration & Startup**. Select any adapter to display its IP address.
2. The priorities you set with the **pdnetspri** utility do not take effect until the InfoPrint servers restart. They remain in effect until you change them.
3. If you do not set the priority for a network adapter, its priority defaults to 0, the highest priority. If you have only one network adapter, this is perfectly acceptable.
4. If you do not set priorities for multiple network adapters, InfoPrint tries to use network adapters in random order. This can cause the following problems:
 - There may be long delays while InfoPrint tries to use adapters that do not work. You may see this DCE error message:
Remote host is unreachable.
 - If there is more than one working adapter, InfoPrint may not use the adapter you prefer.

rc.pd Utility: Restarts Servers

Syntax

rc.pd

Description

/etc/inittab (or a program called from **/etc/inittab**) invokes the **rc.pd** utility to automatically restart the InfoPrint servers listed in **/etc/rc.pd.servers** during a reboot. As the administrator, you can edit the **rc.pd.servers** file using a text editor, such as **vi**. Edit this file to include a **startsrv** line for each server you want to start automatically.

sense Utility: Senses Whether a Channel-Attached Printer is Attached to InfoPrint

Syntax

sense *SlotControlUnitAddress*

Description

The **sense** command senses whether a channel-attached printer device is attached to the RS/6000. If it is, the command returns a code of 81 in the sense bytes information, indicating that a connection exists.

Note: You must disable the actual destination representing the printer device before issuing the **sense** command. If the actual destination is enabled, the results of the **sense** command will not be accurate.

Arguments

SlotControlUnitAddress

The slot number (first one or two digits) and control unit address (last two digits, in hexadecimal) of the printer device you want to check. Enter any alphabetic hexadecimal characters in lowercase only.

Messages and Return Codes

The **sense** utility returns the following messages and return codes:

- If you receive this message and return code:


```
printer connected at address 3af
00 00 00 81 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

the printer device is ready and correctly attached. You can print jobs on it.
- If you receive this message and return code:


```
printer connected at address 3AF
40 00 03 01 00 04 00 00 00 00 00 00 00 00 00 00 00 00 00 00 00
```

the printer device is correctly attached, but it is not ready to receive print jobs. Follow the instructions in the printer documentation to make the printer device ready at the printer's operator panel or console.
- If you receive this message:


```
printer not connected at address 3AF
```

the printer device is not attached correctly; or the printer device is not powered on. Check the printer and ensure that it is powered on and ready to accept print jobs. Verify that you entered the correct slot number and control unit address with the **sense** command. If the printer is powered on and you entered the correct information with the command, contact your IBM Printing Systems Company service representative.
- If you receive this message:


```
printer not defined at address 3AF
```

any of these things may be wrong:

 - The printer is either not configured or not configured correctly.

- You did not disable the actual destination before entering the **sense** command.
- The device driver for the printer at this address is missing or has not been loaded onto the S/370 Channel Emulator/A adapter. To load the driver, use the SMIT Miscellaneous Configuration panel.

Example

To check the connection on a channel-attached printer attached to an S/370 Channel Emulator/A adapter in slot 3, with a hexadecimal control unit address of af, enter:

```
sense 3af
```

setup Utility: Starts the InfoPrint Installer

Syntax

```
setup [-c | -C [-I locale] -n ServerName -p PortNumber
      [-P DestinationName]] [-R] [-s FileSystem]
```

```
setup -h
```

Description

Issue the **setup** utility to start the InfoPrint Installer. The InfoPrint Installer installs either the entire InfoPrint Control component of IBM InfoPrint Manager for AIX, including an InfoPrint server and an InfoPrint AIX client, or the InfoPrint AIX client alone.

The AIX client allows users to enter InfoPrint commands on the command line for transmission to the InfoPrint server, which may be on another AIX system. The AIX client has no graphical user interface.

Notes:

1. You can install the InfoPrint AIX client in any of the following languages:

Danish	Japanese
English	Norwegian
Finnish	Simplified Chinese
French	Spanish
German	Swedish
Italian	Traditional Chinese

You can install the InfoPrint server in any of the following languages:

English	Italian
French	Japanese
German	Spanish

If the InfoPrint AIX client and server do not use the same language, the InfoPrint server must run in English.

2. If you use DCE, and if the InfoPrint AIX client and server are not in the same DCE namespace, the client can issue only the **pdpr**, **pdls**, and **pdq** commands.

Flags

The **setup** utility uses the following flags:

-c Invokes the InfoPrint Installer graphical user interface (GUI) to install only the InfoPrint AIX client.

Note: The **-I**, **-n**, **-p**, and **-P** flags are not valid with this flag. The InfoPrint Installer GUI will prompt you to specify the locale, server name, port number, and optional default logical destination.

- C** Invokes the InfoPrint Installer to install only the InfoPrint AIX client, without invoking the Installer GUI.
Note: If you use this flag, you must specify the the **-n** and **-p** flags.
- l *locale*** Specifies the locale of the AIX client. The default is **en_US** (U.S. English).
Note: This flag is not valid with the **-c** flag.
- n *ServerName***
Specifies the name of the InfoPrint server.
Note: This flag is not valid with the **-c** flag. It is required with the **-C** flag.
- p *PortNumber***
Specifies the port number where the InfoPrint server is running.
Note: This flag is not valid with the **-c** flag. It is required with the **-C** flag.
- P *DestinationName***
Specifies the default logical destination to which the InfoPrint AIX client submits jobs.
Note: This flag is not valid with the **-c** flag.
- R** Replaces any previous version of the InfoPrint Installer on your AIX system.
- s *FileSystem***
Specifies the file system that you defined for installing InfoPrint, and where you mounted the InfoPrint server CD-ROM. If you do not specify this flag, the default is **/cdrom**.
Note: The **/cdrom** file system may be predefined.
- h** Displays help for the **setup** utility.

Examples

- To install InfoPrint in the file system **/cdrom**, follow these steps:
 1. Log onto AIX as **root**.
 2. Insert the gold IBM InfoPrint Manager for AIX Server 1 CD-ROM into the drive.
 3. If this is the first time you are running the InfoPrint Installer on this system, create the **/cdrom** file system. Enter:

```
smit cdrfs
```
 4. Select **Add a CDROM File System**.
 5. Complete the **Add a CDROM File System** panel.
 - a. In the **DEVICE Name** field, enter the identifier of your CD-ROM drive. If you do not know the identifier, select **List** in the AIXwindows version of SMIT, or press **PF4** in the ASCII version of SMIT, to see a list of CD-ROM drives. Select one.
 - b. In the **MOUNT POINT** field, enter **/cdrom**.
 - c. Select **OK** (AIXwindows version) or press **Enter** (ASCII version).

setup

- d. Select **Cancel** (AIXwindows version) or press **F10** (ASCII version) to exit from SMIT.
6. To mount the CD-ROM, enter the following command on the AIX command line:

```
mount /cdrom
```
7. To read the **/readme.txt** file, enter:

```
dtpad /cdrom/readme.txt
```
8. Enter:

```
/cdrom/setup
```
- You want to install only a Finnish-language InfoPrint client in the previously defined file system `/cdrom`, and to replace the previous version of the InfoPrint Installer. The client will communicate with the English-language server `martha`, running on port number 6874. Because your AIX console does not support graphics, you cannot invoke the InfoPrint Installer GUI. Follow these steps:
 1. Log onto AIX as **root**.
 2. Insert the gold IBM InfoPrint Manager for AIX Server 1 CD-ROM into the drive.
 3. To mount the CD-ROM, enter:

```
mount /cdrom
```
 4. Enter:

```
/cdrom/setup -C -l fi_FI -n martha -p 6874 -R
```

startppo Utility: Starts the InfoPrint SMIT Production Print Operations Interface

Syntax

```
startppo [-t | -g width×depth+XOffset+YOffset]
```

```
startppo {-h | -?}
```

Description

Issue the **startppo** utility to start the InfoPrint SMIT production print operations interface.

Flags

The **startppo** utility uses the following flags:

-t Starts the ASCII (**tty**) version of the InfoPrint SMIT production print operations interface. The ASCII version of the InfoPrint SMIT production print operations interface has no graphics and is controlled with the keyboard.

If you do not specify the **-t** flag, **startppo** starts the AIXWindows version of the InfoPrint SMIT production print operations interface. The AIXWindows version displays a graphic of a running man to indicate task progress and can be controlled either with the mouse or with the keyboard.

-g width×depth+XOffset+YOffset

Overrides the default size and position of the window for the AIXWindows version of the InfoPrint SMIT production print operations interface.

-h Displays help for the **startppo** utility.

-? Displays help for the **startppo** utility.

Examples

- To start the ASCII version of the InfoPrint SMIT production print operations interface, enter:

```
startppo -t
```

- To start the AIXWindows version of the InfoPrint SMIT production print operations interface in an 800 by 500 window, enter:

```
startppo -g 800×500+100+100
```

start_server Utility: Starts a Server for a Basic InfoPrint Installation

Syntax

```
start_server [-l] locale [-p] port [ServerName]
```

```
start_server -?
```

Description

Issue the **start_server** utility to create or restart a server configured for a basic InfoPrint installation. A server:

- Manages the validation, routing, and scheduling of jobs
- Manages the printing or transmission process
- Contains logical destinations, queues, and actual destinations

Three possible conditions can exist when you issue this utility:

- If the server name you specify with the utility (or the default server name) does not exist, InfoPrint creates the server on the AIX processor from which you issue the utility and then starts the new server.
- If the server name does exist but is not currently running, InfoPrint displays status information and issues a message when it has successfully restarted the server.
- If the server name does exist and it is currently running, InfoPrint displays a message that shows the server is already operational.

Note: Use **start_server** instead of **startsrv** when both these conditions are true:

- You want to configure the server for a basic InfoPrint installation. **start_server** always configures a new server for a basic installation, while **startsrv** defaults to an advanced installation.
- You do not want to be prompted for confirmation if the server does not already exist. **start_server** never prompts, while **startsrv** prompts by default.

Flags

The **start_server** utility uses the following flags:

- l *locale* Allows you to specify the locale for InfoPrint messages in a specific language. If you do not specify this flag, the default is your current locale.
- p *port* Allows you to specify the port number when starting a server in a locale other than the default locale. The port number you assign must not conflict with port numbers in use by other processes. The file **/etc/services** lists the port numbers reserved by other processes.

If you do not specify this flag, the port defaults to the value of the **PD_SOCKET** environment variable, if any, then to 6874.
- ? Displays help for the **start_server** utility.

Arguments

The argument value identifies the specific object to which the utility applies.

The valid argument value for the **start_server** utility is:

ServerName

Assigns a name to a new server or specifies the name of the server to restart. *ServerName* defaults to the hostname.

Examples

- To create a server with the same name as the host and configure it for a basic installation, enter:

```
start_server
```

- To restart serv1, enter:

```
start_server serv1
```

startsrv Utility: Starts a Server

Syntax

```
startsrv [-c] [-F] [-I] locale [-p] port [ServerName]
```

```
startsrv -?
```

Description

Issue the **startsrv** utility to create or restart a server. A server:

- Manages the validation, routing, and scheduling of jobs
- Manages the printing or transmission process
- Contains logical destinations, queues, and actual destinations

The following conditions can exist when you issue this utility:

- If the server name you specify with the utility (or the default server name), does not exist, and if you do not specify the **-F** flag, InfoPrint displays a confirmation message asking if you want to create a new server. If your response is yes, InfoPrint creates the server on the AIX processor from which you issue the utility and then starts the new server.
- If the server name does not exist, and if you specify the **-F** flag, InfoPrint creates the server on the AIX processor from which you issue the utility without asking for confirmation and then starts the new server.
- If the server name does exist but is not currently running, InfoPrint displays status information and issues a message when it has successfully restarted the server.
- If the server name does exist and it is currently running, InfoPrint displays a message that shows the server is already operational.

Note: Use **startsrv** instead of **start_server** when either of these conditions is true:

- You want to configure the server for an advanced InfoPrint installation. **startsrv** configures a new server for an advanced installation by default, while **start_server** always configures a new server for a basic installation.
- You want to be prompted for confirmation if the server does not already exist. **startsrv** prompts by default, while **start_server** never prompts.

Flags

The **startsrv** utility uses the following flags:

- c** Configures a new server for a basic InfoPrint installation. If you do not specify this flag, InfoPrint configures the server for an advanced installation. This flag has no effect on an existing server.
- F** Forces creation of the server if it does not already exist. InfoPrint does not display confirmation prompts (if any).

If you do not specify this flag and if the server does not already exist, InfoPrint prompts you to confirm whether to create the server.
- I *locale*** Allows you to specify the locale for InfoPrint messages in a specific language. If you do not specify this flag, the default is your current locale.

- p** *port* Allows you to specify the port number when starting a server in a locale other than the default locale. The port number you assign must not conflict with port numbers in use by other processes. The file **/etc/services** lists the port numbers reserved by other processes.
If you do not specify this flag, the port defaults to the value of the **PD_SOCKET** environment variable, if any, then to 6874.
- ?** Displays help for the **startsrv** utility.

Arguments

The argument value identifies the specific object to which the utility applies.

The valid argument value for the **startsrv** utility is:

ServerName

Assigns a name to a new server or specifies the name of the server to restart. *ServerName* defaults to the hostname.

Examples

- To create a server with the name `serv1` and configure it for an advanced installation, enter:
`startsrv -F serv1`
- To create a server with the same name as the host and configure it for a basic installation, enter:
`startsrv -c -F`
- To restart `serv1`, enter:
`startsrv serv1`

stop_server Utility: Shuts Down a Server

Syntax

```
stop_server [-F] [ServerName]
```

```
stop_server -?
```

Description

Issue the **stop_server** utility to shut down a server.

Flags

The **stop_server** utility uses the following flags:

- F** Forces the server to shut down as soon as possible. If you do not specify this flag, the server shuts down when all currently printing jobs have finished printing.
- ?** Displays help for the **stop_server** utility.

Arguments

The argument value identifies the specific object to which the utility applies.

The valid argument value for the **stop_server** utility is:

ServerName

Specifies the name of the server to shut down. *ServerName* defaults to the hostname.

Examples

- To shut down a server with the same name as the host as soon as possible, enter:

```
stop_server -F
```
- To shut down serv1 after all currently printing jobs have finished printing, enter:

```
stop_server serv1
```
- To shut down the server DeServ, which is running in the locale De_DE, enter:

```
export LC_ALL=De_DE
stop_server DeServ
export LC_ALL=
```

tdump Utility: Outputs Tape Contents in Human-Readable Format

Syntax

```
tdump [-a] [-b] [-c] [-n number] [-o OutputFile] [-s {b | f}]
      -t {rmtm | rmtm.n}
```

Description

Use the **tdump** utility to output the contents of a tape in a human-readable format. You can format the output to display in hexadecimal or octal (with a readable character above each byte), dump by file or block, determine the size of a file on tape, or determine the largest block in a file.

You can examine the output from this utility to determine such information as:

- The format of the tape
- What type of data is on the tape
- The maximum block size
- Label information for IBM standard labeled and nonstandard labeled tapes
- Error diagnosis for damaged or incorrectly created tapes

tdump works from the place where the tape is positioned. If you need to dump the third file on a tape, you must position the tape with the AIX **tctl** command or the InfoPrint SMIT production printing system interface Position A Tape panel to the beginning of the third file and then invoke **tdump**.

Flags

The **tdump** utility uses the following flags:

- a** Input is in ASCII. If this flag is not specified, EBCDIC is used.
- b** Dump by block. If this flag is not specified, file is used.
- c** Dump bytes in octal format. If this flag is not specified, hexadecimal is used.
 -n number
 Number of files or blocks to dump. If this flag is not specified, 1 is used.
- o *OutputFile*** Output file. If this flag is not specified, **stdout** is used.
- s {**b** | **f**}** Reports largest block size in the file (**b**) or the number of bytes in the file (**f**). Suppresses dump.
- t *tdrive*** Name of the tape drive containing the tape, of the form **rmtm** or **rmtm.n**, where *m* is a non-negative integer and *n* is from 1 to 7, inclusive

Examples

- To dump two files in hexadecimal to **stdout** from the current position of the tape in drive rmt0, enter:

```
tdump -t rmt0 -n 2
```
- To display the largest block in the file from the current position of the tape in drive rmt2, enter:

```
tdump -s b -t rmt2
```

tdump

- To instruct **tdump** to interpret the tape as ASCII and write the bytes in octal for the next three blocks on the tape in drive `rmt0` into `outfile`, enter:

```
tdump -t rmt0 -n 3 -b -a -c -o outfile
```

tlist Utility: Lists Files on a Tape

Syntax

```
tlist -t {rmtm | rmtm.n}
```

Description

For IBM standard labeled tapes, use the **tlist** utility to display the name and file characteristics (record format, record length, and block size) of each file on a tape. For nonstandard or unlabeled tapes, the **tlist** utility displays the number of files on a tape.

You can use the **tlist** utility to create a list of file names to use as arguments for the **pdpr** command.

Flags

The **tlist** utility uses the following flags:

-t *tdrive* Name of the tape drive containing the tape, of the form **rmt*m*** or **rmt*m.n***, where *m* is a non-negative integer and *n* is from 1 to 7, inclusive

Examples

- To display the names of all files on an IBM standard labeled tape for the tape in tape drive rmt2, enter:

```
tlist -t rmt2
```
- To count the number of files on a non-standard or unlabeled tape for the tape in tape drive rmt0, enter:

```
tlist -t rmt0
```

t2file Utility: Reads MVS Partitioned Data Sets from Tape

Syntax

```
t2file [-d directory] [-m member ...] -t {rmtm | rmtm.n} [-s]
```

Description

Use the **t2file** utility to read MVS partitioned data sets from IBM standard labeled tapes created with the MVS **IEBCOPY** program and to break them apart into individual files on AIX.

The typical application for this program is to break apart host resource libraries that have been dumped to tape into individual files, as IBM InfoPrint Control requires.

Flags

The **t2file** utility uses the following flags:

-d *directory*

Directory where files should be written. If this flag is not specified, the files are written to the current directory.

-m *member ...*

Specific members to read from the MVS partitioned data set. If this flag is not specified, all members are read.

Note: You must specify all the file names with one use of the **-m** option. To specify one name, use **t2file -m memname**. To specify multiple names, use **t2file -m 'mem1 mem2 mem3'**. If you have multiple **-m** options, **t2file** does not concatenate them together. It uses the last occurrence of **-m** on the command line.

-t *tdrive* Name of the tape drive containing the tape, of the form **rmtm** or **rmtm.n**, where *m* is a non-negative integer and *n* is from 1 to 7, inclusive.

-s Unload only one MVS partitioned data set. If this flag is not specified, all partitioned data sets are read.

Examples

- To designate specific members to read from the MVS partitioned data set, enter:

```
t2file -m 'mem1 mem2 mem3' -t rmt3
```
- To unload only one MVS partitioned data set from tape drive rmt2 into the current directory and then end the program, position the tape at the beginning of the header label before the partitioned data set with the AIX **tctl** command on the InfoPrint SMIT production printing system interface Position A Tape panel and enter:

```
t2file -t rmt2 -s
```
- To unload all the members from all the partitioned data sets on the tape in the drive rmt0 into /home/custom/resources, enter:

```
t2file -t rmt0 -d /home/custom/resources
```

Chapter 5. InfoPrint Daemon Utilities

This chapter describes the following InfoPrint daemon utilities:

- “mvsprsd Utility: Starts the mvsprsd Daemon” on page 174
- “pcl2afpd Utility: Starts the pcl2afpd Daemon” on page 177
- “ps2afpd Utility: Starts the ps2afpd Daemon” on page 180

mvsprsd Utility: Starts the mvsprsd Daemon

Syntax

```
mvsprsd -pPortNumber -dFileSystem [-d FileSystem ...] [-x ShellScript]
      [-q destination] [-k]
```

Description

Use the **mvsprsd** daemon to start the **mvsprsd** daemon. This daemon receives the data that MVS Download transmits from the Job Entry Subsystem (JES) spool on an MVS system for printing.

You can specify that the **mvsprsd** daemon starts whenever the system starts by including the **mvsprsd** command in one of the files that are executed when the AIX operating system is initialized. The two types of files that are read during AIX initialization are **/etc/rc** files and the **/etc/inittab** file.

If the **mvsprsd** daemon stops running for some reason, you can restart it by issuing the following command:

```
/usr/lpp/psf/bin/mvsprsd -p PortNumber -d FileSystem -x ShellScript
      -q destination -k
```

If your job does not print on IBM InfoPrint Control, you might be able to restart the shell script process with the downloaded file and downloaded print-options string. If you specified the **-k** flag on the print command, you can use the following command to restart the shell script with its required parameter list:

```
/usr/lpp/pd/bin/mvsprpsm.sh FileName.PRD "$(cat string.JCL)" destination
```

where **FileName.PRD** represents the file successfully downloaded to IBM InfoPrint Control as

MVS_system_name.jobname.dataset_name.forms_name.yyddd.hhmmsstABCD.PRD;
and where **string.JCL** represents the MVS print options string that is saved to a file named in the following format:

MVS_system_name.jobname.dataset_name.forms_name.yyddd.hhmmsstABCD.JCL.

Note that the string **/usr/lpp/pd/bin/mvsprpsm.sh...** refers to the shell script that is provided with this command. Check to see that your installation has not modified this shell script or added another shell script before specifying this value.

Flags

The **mvsprsd** daemon utility uses the following flags:

-p *PortNumber*

Specifies the socket port number for the daemon in the valid range (5001-64000). Do not use 8251 and 8253, which are used by InfoPrint for the PCL and PostScript data transforms. The port number must be the same as the port number specified in the routing-control data set used by MVS Download.

-d *FileSystem*

Specifies a file system where InfoPrint stores the received file until the shell script you specify in the **-x** flag processes and deletes the file. The **mvsprsd** daemon must have write permission for the file system.

You must specify at least one file system. You can specify up to ten file systems. If you specify more than one file system, the file system having the most available space is used. To specify more than one file system, specify the entire flag again:

```
-d FileSystem1 -d FileSystem2 ...
```

-x ShellScript

Specifies the complete path name and file name for the shell script that the daemon executes to process the files sent by MVS Download. You can specify the file name of the shell script without the path name and it will default to the **/usr/lpp/pd/bin** path.

The daemon forks a child process to execute the shell script after each successfully received file. If you do not specify the path name of a shell script, the received files are not printed and remain on the file system.

InfoPrint provides a shell script, **mvsprpsm.sh**, which submits a file to the **pdpr** command for printing and deletes the file if the file prints successfully. This shell script is installed in the **/usr/lpp/pd/bin** directory.

-q destinationname

Specifies the name of the logical destination to which the shell script can submit the file. If you specify a logical destination, you should also specify the name of a shell script on the **-x** flag that the program uses to submit files to the logical destination.

If you specify this shell script on the **-x** flag, you must specify the **-q** flag or **mvsprsd** displays its command syntax and exits.

If you do not specify a logical destination name, the received files are not printed and remain on the file system.

- k** Specifies that the MVS print-options string is kept on the file system and can be used later for error recovery. If a file is transferred from MVS to AIX successfully, but does not print because of a problem, IBM recommends that you specify this option so that the job can be resubmitted for printing from the AIX operating system.

Examples

1. To start an MVS Download daemon that stores files received from the JES spool on the **/files1** or **/files2** file system and executes the **mvsprpsm.sh** shell script, which submits the files to the **serv2-1p** logical destination, enter:

```
mvsprsd -p 5400 -d /files1 -d /files2 -x mvsprpsm.sh -q serv2-1p
```

2. To have the same MVS Download daemon keep the MVS print-options string file(s), enter:

```
mvsprsd -p5400 -d/files1 -d/files2 -qserv2-1p -k
```

Note: Anyone can start the **mvsprsd** daemon, but only someone with **root** authority can stop it.

mvsprsd

Suggested Reading

- *PSF/MVS: MVS Download Guide*
- The man pages for the **rc** command and the **inittab** file

pcl2afpd Utility: Starts the pcl2afpd Daemon

Syntax

```
pcl2afpd [-C ConfigurationFile]
```

Description

Use the **pcl2afpd** utility to start the **pcl2afpd** daemon. The **pcl2afpd** daemon manages the PCL interpreter portion of the InfoPrint PCL transform program. You must start the **pcl2afpd** daemon somewhere on the network before you can use the **pcl2afp** transform command to transform PCL data streams for printing or transmission with InfoPrint.

The **startsrv** or **start_server** utility automatically starts the **pcl2afpd** daemon if it is installed and not running.

If the **pcl2afpd** daemon stops running, you can restart it by issuing the following command:

```
/usr/lpp/psf/bin/pcl2afpd
```

InfoPrint uses the **pcl2afpd** daemon configuration file to determine the default parameters of the **pcl2afpd** daemon. The **/usr/lpp/psf/pcl2afp/pcl2afpd.cfg** file is installed with InfoPrint, and InfoPrint uses it as the default configuration file. You can, however, copy the configuration file, use an AIX editor to edit the copy of the file, and rename it so that you can customize the **pcl2afpd** daemon for your applications. After you make the modifications, you specify the new configuration file with the **-C** flag of the **pcl2afpd** daemon utility.

Note: If you create your own configuration file, you must specify it with the **-C** flag of the **pcl2afp** transform command when you transform PCL files.

Flags

The **pcl2afpd** daemon utility uses the following flag:

-C *ConfigurationFile*

Specifies the configuration file InfoPrint uses with the transform. The value is:

ConfigurationFile

A valid PCL configuration file name. If you do not specify a file, InfoPrint uses the file **/usr/lpp/psf/pcl2afp/pcl2afpd.cfg**.

Configuration File Keywords and Values

The **pcl2afpd.cfg** file contains the same keywords as the **pcl2afp.cfg** file except that the transform daemon configuration file does not have the **server** keyword. The **pcl2afpd.cfg** contains several additional keywords.

For the keywords common to both configuration files, see “The pcl2afp and pcl2afpd Configuration Files” on page 256.

The PCL transform daemon configuration file can also contain the following keywords:

log_file={*WorkDirectory/pcl2afpd.log* | *PathName*}

Specifies the file in which the transform daemon logs errors and messages when it converts a data stream from PCL to an AFP data stream.

Valid keyword values are:

WorkDirectory/pcl2afpd.log

This is the default log file, where *WorkDirectory* is the value of the **work_directory** keyword. The default work directory is **/var/psf/pcl2afp**.

PathName

The full path name of a log file

mail_command={*/usr/bin/mail* | *PathName*}

Specifies the executable file that the **pcl2afp** command uses to send transform status notifications.

Valid keyword values are:

/usr/bin/mail The AIX **mail** command

PathName The full path name of a communication program

notify={**root** | *UserID*}

Identifies the user to receive notification about problems encountered during transformation of the PCL file into an AFP data stream file. If a particular user runs most of the PCL transform jobs, you might want to send notifications to that person using this keyword.

Valid keyword values are:

root The user at the server console

UserID An AIX user ID

pcl_program={*/usr/lpp/psf/bin/ppxpcli* | *PathName*}

Specifies which PCL-to-AFP transform program (the PCL interpreter) to run. Generally, you will not change this value.

Valid keyword values are:

/usr/lpp/psf/bin/ppxpcli

The default PCL interpreter

PathName

The full path name of a PCL interpreter file

pcl_support_prog={*/usr/lpp/psf/bin/ppxpclis* | *PathName*}

Specifies which PCL-to-AFP transform support program to run. Generally, you will not change this value. Values are:

/usr/lpp/psf/bin/ppxpclis

The default PCL support program

PathName

The full path name of a PCL support program

work_directory={*/var/psf/pcl2afp* | *PathName*}

Specifies the path to the directory where the transform daemon puts its work files. The transform daemon must have read, write, and execute permissions to this directory. The transform daemon is owned by the **root** user, but runs as **daemon**, and is in the **printq** group.

Values are:

/var/psf/pcl2afp

The default work directory

PathName

A directory path

Examples

- To restart the **pcl2afpd** daemon with the default configuration file, enter:

```
pcl2afpd
```

Notes:

1. If you have not set the **PATH** environment variable to include **/usr/lpp/psf/bin**, you must enter the path name with the **pcl2afpd** daemon.
 2. Anyone can start the **pcl2afpd** daemon, but only a person with **root** user authority can stop it.
- To restart the **pcl2afpd** daemon with the configuration file `myfile.cfg`, which resides in the directory `/usr/lpp/psf/pcl2afp`, enter:


```
pcl2afpd -C /usr/lpp/psf/pcl2afp/myfile.cfg
```

Files

/usr/lpp/psf/bin/pcl2afpd	Transform daemon
/usr/lpp/psf/pcl2afp/pcl2afpd.cfg	pcl2afpd daemon configuration file
/usr/lpp/psf/bin/ppxpcli	PCL interpreter program
/usr/lpp/psf/bin/ppxpclis	PCL interpreter support program

ps2afpd Utility: Starts the ps2afpd Daemon

Syntax

```
ps2afpd [-C ConfigurationFile]
```

Description

Use the **ps2afpd** utility to start the **ps2afpd** daemon. The **ps2afpd** daemon manages the interpreter portion of the InfoPrint PostScript and PDF transform programs. You must start the **ps2afpd** daemon somewhere on the network before you can use the **ps2afp** or **pdf2afp** transform command to transform PostScript or PDF data streams for printing with InfoPrint on IPDS printers.

The **startsrv** or **start_server** utility automatically starts the **ps2afpd** daemon if it is installed and not running.

If the **ps2afpd** daemon stops running, you can restart it by issuing the following command:

```
/usr/lpp/psf/bin/ps2afpd
```

InfoPrint uses the **ps2afpd** daemon configuration file to determine the default parameters of the **ps2afpd** daemon. The **/usr/lpp/psf/ps2afp/ps2afpd.cfg** file is installed with InfoPrint, and InfoPrint uses it as the default configuration file. You can, however, copy the configuration file, use an AIX editor to edit the copy of the file, and rename it so that you can customize the **ps2afpd** daemon for your applications. After you make the modifications, you specify the new configuration file with the **-C**: flag of the **ps2afpd** daemon utility.

Note: If you create your own configuration file, you must specify it with the **-C** flag of the **ps2afp** transform command when you transform PostScript or PDF files.

Flags

The **ps2afpd** daemon utility uses the following flag:

-C *ConfigurationFile*

Specifies the configuration file InfoPrint uses with the transform. The value is:

ConfigurationFile A valid PostScript configuration file name. If you do not specify a file, InfoPrint uses the file **/usr/lpp/psf/ps2afp/ps2afpd.cfg**.

Configuration File Keywords and Values

The **ps2afpd.cfg** file contains the same keywords as the **ps2afp.cfg** file except that the transform daemon configuration file does not have the **server** keyword. The **ps2afpd.cfg** contains several additional keywords.

For the keywords common to both configuration files, see “The ps2afp and ps2afpd Configuration Files” on page 276.

The PostScript transform daemon configuration file can also contain the following keywords:

log_file={*WorkDirectory*/**ps2afpd.log** | *PathName*}

Specifies the file in which the transform daemon logs errors and messages when it converts a data stream from PostScript or PDF to an AFP data stream.

Valid keyword values are:

WorkDirectory/**ps2afpd.log**

This is the default log file, where *WorkDirectory* is the value of the **work_directory** keyword. The default work directory is */var/psf/ps2afpd*.

PathName

The full path name of a log file

mail_command={*/usr/bin/mail* | *PathName*}

Specifies the executable file that the **ps2afpd** command uses to send transform status notifications.

Valid keyword values are:

/usr/bin/mail The AIX **mail** command

PathName The full path name of a communication program

notify={**root** | *UserID*}

Identifies the user to receive notification about problems encountered during transformation of the PostScript or PDF file into an AFP data stream file. If a particular user runs most of the PostScript and PDF transform jobs, you might want to send notifications to that person using this keyword.

Valid keyword values are:

root The user at the server console

UserID An AIX user ID

ps_program={*/usr/lpp/psf/bin/ppxps2i* | *PathName*}

Specifies which Postscript-or-PDF-to-AFP transform program (the PostScript interpreter) to run. Generally, you will not change this value. If you do change it, you must change the value of the **ps_init_file** keyword to specify an initialization file at the same level.

Valid keyword values are:

/usr/lpp/psf/bin/ppxps2i

The PostScript Level 2 transform

PathName

The full path name of a PostScript interpreter file

ps_init_file={*/usr/lpp/psf/ps2afpd/ppxps2.ps* | *PathName*}

Specifies the PostScript initialization program to use with the PostScript interpreter. This file specifies the types of messages that the PostScript interpreter reports. Generally, you will not change this value. If you do change it, you must change the value of the **ps_program** keyword to specify a PostScript interpreter at the same level.

Valid keyword values are:

/usr/lpp/psf/ps2afpd/ppxps2.ps

The PostScript Level 2 initialization file

PathName

The full path name of an initialization file

work_directory={/var/psf/ps2afp | *PathName*}

Specifies the path to the directory where the transform daemon puts its work files. The transform daemon must have read, write, and execute permissions to this directory. The transform daemon is owned by the **root** user, but runs as **daemon**, and is in the **printq** group.

Values are:

/var/psf/ps2afp

The default work directory

PathName

A directory path

Examples

- To restart the **ps2afpd** daemon with the default configuration file, enter:

```
ps2afpd
```

Notes:

- If you have not set the **PATH** environment variable to include **/usr/lpp/psf/bin**, you must enter the path name with the **ps2afpd** daemon.
 - Anyone can start the **ps2afpd** daemon, but only a person with **root** user authority can stop it.
- To restart the **ps2afpd** daemon with the configuration file `myfile.cfg`, which resides in the directory `/usr/lpp/psf/ps2afp`, enter:

```
ps2afpd -C /usr/lpp/psf/ps2afp/myfile.cfg
```

Files

/usr/lpp/psf/bin/ps2afpd	PostScript daemon
/usr/lpp/psf/bin/ps2afp	PostScript transform executable
/usr/lpp/psf/bin/pdf2afp	PDF transform executable (linked to /usr/lpp/psf/bin/ps2afp)
/usr/lpp/psf/ps2afp/ps2afpd.cfg	ps2afpd daemon configuration file
/usr/lpp/psf/ps2afp/ps2afp.cfg	ps2afp command configuration file
/usr/lpp/psf/bin/ppxps2i	PostScript level 2 interpreter program
/usr/lpp/psf/bin/ps2afpi	PostScript Level 1 interpreter program
/usr/lpp/psf/bin/ps2afpi.vm	PostScript interpreter program initial virtual memory
/usr/lpp/psf/ps2afp/ppxps2.ps	PostScript level 2 initialization file
/usr/lpp/psf/ps2afp/ps2afp.ps	PostScript Level 1 initialization file
/usr/lpp/psf/ps2afp/ps2afpe.ps	PostScript Level 1 initialization file for extended error reporting
/usr/lpp/psf/bin/fontsave	PostScript executable for saving fonts
/usr/lpp/psf/ps2afp/psfonts.map	Default PostScript font mapping file
/var/psf/psfonts	User-defined PostScript fonts file

Chapter 6. InfoPrint Transform Commands

This chapter describes the following InfoPrint transform commands:

- “db2afp Command: Transforms DBCS Data to AFP” on page 184
- “d2afp Command: Transforms ditroff Data to AFP” on page 188
- “gif2afp Command: Transforms GIF Data to AFP” on page 191
- “jpeg2afp Command: Transforms JPEG Data to AFP” on page 206
- “line2afp Command: Transforms S/370 Line Data and ASCII Data to AFP” on page 220
- “pcl2afp Command: Transforms PCL Data to AFP” on page 243
- “pdf2afp and ps2afp Transforms: Transform PDF or PostScript Data to AFP” on page 266
- “sap2afp Command: Transforms SAP OTF or ABAP Data to AFP” on page 280
- “tiff2afp Command: Transforms TIFF Data to AFP” on page 292

Note: InfoPrint invokes the appropriate transform automatically whenever you print a DBCS ASCII, DBCS EUC, ditroff, GIF, JPEG, line data, PCL, PDF, PostScript, SAP, or TIFF job on a PSF physical printer. You can pass options to these transforms using the **other-transform-options** document attribute on the InfoPrint **pdpr** command or the **-o** flag of the AIX print commands (**enq**, **lp**, and **qprt**) and the InfoPrint **lprafp** command.

For more information, see “Attributes for Documents and Default Documents” on page 403, “pdpr Command: Submits Jobs” on page 56, “lprafp Command: Submits Remote Jobs” on page 12, or Chapter 3, “The -o Flag for AIX Print Commands” on page 101.

db2afp Command: Transforms DBCS Data to AFP

Syntax

```
db2afp [-o -OutputFile] [-l {ja | ch | ko}] [-e] [InputFile]
```

Description

Use the **db2afp** command to transform either a DBCS ASCII or an EUC file into an AFP data stream file so that you can print the file on an InfoPrint printer.

The **db2afp** command can transform input files that use the following code pages:

- Japanese PC (code page number 932)
- Japanese EUC
- Traditional Chinese PC (code page number 938)
- Traditional Chinese EUC
- Korean EUC

You can run **db2afp** manually if you want to transform a DBCS ASCII or EUC file into an AFP data stream file without printing it immediately.

The PSF DSS automatically runs the **db2afp** command whenever:

- InfoPrint identifies the format of a document in a print job as DBCS ASCII or EUC.
- You specify **document-format=dbcs-ascii** with the **-x** flag or in an attributes file on the **pdpr** command.

Note: For EUC format, specify **document-format=dbcs-ascii** and an EUC code page as the value of the **default-character-mapping** attribute.
- You submit a DBCS ASCII or EUC print job and request **-odatatype=dbcsascii** with one of the AIX print commands (**enq**, **lp**, and **qprt**) or with the **lprafp** command
- You select an attributes file that shows **dbcs-ascii** in the Type of Data in the Print File field, using the InfoPrint SMIT panels.

If you do not specify an input file, the **db2afp** command defaults to standard input. If no output file is specified, the **db2afp** command defaults to standard output.

Limitations

The **db2afp** command generates an AFP data stream file with double-byte character set (DBCS) font references. These DBCS fonts (for Japanese, Traditional Chinese, and Korean) are not part of InfoPrint and are sold separately.

Flags and Values

You can specify these flags and values

- With the **db2afp** command
- With the **enq -o**, **lp -o**, **qprt -o**, or **lprafp** commands
- With the **pdpr** command, using the **other-transform-options** attribute or equivalent attributes on the command line or in an attributes file

Note: If you are migrating from PSF for AIX, see Appendix B, “Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents” on page 619 for a table of attributes equivalent to the job script keywords that you used to use to specify flags and values for transforms.

-o *OutputFile*

Specifies the name of the AFP data stream output file generated by the transform. If you do not specify the **-o** flag, InfoPrint writes the result to standard output.

You cannot use **-o***OutputFile* on the command line with the **enq**, **lp**, **qprt**, or **lprafp** commands. You can only use **-o***OutputFile* with the **db2afp** command, or with the **other-transform-options** attribute on the **pdpr** command.

This flag is equivalent to the **transform-output-file-name** document attribute on the **pdpr** command.

-l {**japanese** | **chinese** | **korean**}

Specifies the language to be used for the transform. The values are:

ja japanese	The input file is in Japanese.
ch chinese	The input file is in Traditional Chinese.
ko korean	The input file is in Korean.

Note: If you specify **-l ko**, you must also specify the **-e** flag. The **db2afp** command supports only Korean EUC, not Korean DBCS ASCII.

If you do not specify **-l** or **-e** on the command line, the **db2afp** command uses the value that has previously been set and exported with the **PSFDBLANG** environment variable. The **PSFDBLANG** environment variable can be set to one of the following:

j	Japanese (code page 932)
je	Japanese EUC
c	Traditional Chinese (code page 938)
ce	Traditional Chinese EUC
ke	Korean EUC

If you are unsure about the value to use with the **PSFDBLANG** environment variable, enter the following command:

```
echo $LANG
```

The command displays one of the following output values:

Ja_JP	Japanese DBCS ASCII
ja_JP	Japanese EUC
zh_TW	Traditional Chinese EUC
ko_KR	Korean EUC

Notes:

1. A Traditional Chinese DBCS ASCII locale does not exist.
If you specify either **-l** or **-e** on the command line, the **db2afp** command ignores the value set in the **PSFDBLANG** environment variable. If the **PSFDBLANG** value has not been set and you do not specify **-l** (and **-e** for EUC files), the transform will not work.
2. The value set in the **PSFDBLANG** environment variable is used when you submit a DBCS ASCII or EUC print job with the AIX print

commands (**enq**, **lp**, or **qprt**), with the **pdpr** or **lprafp** command, or in the SMIT Submit an InfoPrint Job panel.

3. This flag and the **-e** flag, used together, are equivalent to the **default-character-mapping** document attribute on the **pdpr** command.

-e Tells the **db2afp** command to use the EUC code page when converting the input file into an AFP data stream. If the input file is in the Korean language, you should always use **-e**. If the input file is in Traditional Chinese or Japanese, you should use **-e** if your input data is in EUC format.

This flag and the **-l** flag, used together, are equivalent to the **default-character-mapping** document attribute on the **pdpr** command.

InputFile Specifies the DBCS ASCII or EUC file that will be transformed into AFP. If you do not specify an input file, the **db2afp** command uses standard input.

Examples

- To transform the Japanese DBCS ASCII file `dbfile` into an AFP data stream file called `dbfile.afp`, enter:

```
db2afp -o dbfile.afp -l ja dbfile
```

The file is transformed, but not printed.

Note: You could also use the following command to perform a similar task, except that the output is sent to the printer:

```
pdpr -p servC-lp -x "default-character-mapping=ibm-932" dbfile
```

- To transform the Korean EUC file `korefile` into an AFP data stream file called `korefile.afp`, enter:

```
db2afp -o korefile.afp -l ko -e korefile
```

The file is transformed, but not printed.

Note: You could also use the following command to transform the file, then print it:

```
pdpr -p servC-lp -x "other-transform-options='-e -l ko'" korefile
```

or

```
pdpr -p servC-lp -x "default-character-mapping=ibm-euckr" korefile
```

- To transform a Traditional Chinese DBCS ASCII file named `memo.tc` into an AFP file and print it on an InfoPrint printer named `servC-lp`, enter:

```
pdpr -X chinese.X -p servC-lp memo.tc
```

In this example, the attributes file named `chinese.X` contains the following settings:

```
document-format=dbcs-ascii
default-character-mapping=ibm-938
```

To set the `db2afp` command to default to Korean EUC, enter the following lines in the **.profile** file (Bourne shell or Korn shell) or the **.cshrc** file (C shell) in your home directory:

```
export PSFDBLANG=ke
```

The **db2afp** command now uses Korean EUC as long as the **PSFDBLANG** environment variable is set and exported, and **-l** or **-e** are not specified on the command line. So, to transform the Korean EUC file `korefile` into an AFP data stream file called `korefile.afp`, you now can enter:

```
db2afp -o korefile.afp korefile
```

Similarly, you could now use the following command to transform the Korean EUC file, then print it:

```
enq -PservC-1p -o datatype=dbcsascii korefile
```

Files

/usr/lpp/psf/bin/db2afp	Transform program
/usr/lpp/psf/db2afp/afpdfont.rc	AFP font mapping file used by the db2afp command
/usr/lib/nls/loc/iconv/ConverterName	Code page translation file (which contains mappings from the input code page to the output code page)

d2afp Command: Transforms ditroff Data to AFP

Syntax

```
d2afp [-o OutputFile] [InputFile]
```

Description

The **d2afp** command transforms a ditroff data stream file preformatted for an AFP device into an AFP data stream file so that you can print the file on an InfoPrint printer.

The process to transform troff files into AFP data stream files has two steps:

1. The troff file is first formatted by specifying the **troff -Tafp** command. This formatting step produces a device-independent troff (ditroff) file.

Notes:

- a. Use the **-Tafp** flag and value; otherwise, you cannot transform the ditroff file with the **d2afp** command. If you do not want to specify the **-Tafp** flag and value each time you use the **troff** command, you can set the **TYPESETTER** environment variable to **afp**. To do this, enter the following at the AIX command-line prompt or add this line to your **.profile** file (Bourne shell or Korn shell) or the **.cshrc** file (C shell) in your home directory:


```
export TYPESETTER=afp
```
 - b. Although you cannot use the **d2afp** command to transform ditroff files formatted with **troff -Tpsc** or **troff -Thplj**, you can print them. Use the **psc** or **hplj** command to convert the file to PostScript or PCL format. Then use **ps2afp** or **pcl2afp** to transform it.
2. The ditroff file is then transformed into an AFP data stream file with the **d2afp** command.

The PSF DSS automatically runs the **d2afp** command whenever:

- InfoPrint identifies the format of a document in a print job as ditroff.
- You specify **document-format=ditroff** with the **-x** flag or in an attributes file submitted with the **pdpr** command.
- You submit a ditroff print job and include the **-odatatype=ditroff** flag and keyword-value pair with one of the AIX print commands (**enq**, **lp**, and **qprt**) or with the **lprafp** command.
- You select an attributes file that has **ditroff** in the Type of Data in Print File field when using the InfoPrint SMIT panels to submit a print job.

Limitations

The **d2afp** command limits the number of fonts that a ditroff file can load, change, or map. The following shows the maximum number of fonts for specific conditions:

ditroff Fonts	Condition
40	Loaded at one time
127	Point size or font changes on one page
200	ditroff fonts mapped to AFP fonts

If your troff file has graphics, you might use a different method to print ditroff files. If one of the following conditions applies:

- Your PPDS or PCL printer does not support the PCL5 or PCL5C data streams.
- Your channel-attached printer does not have the Advanced Function Image and Graphics feature installed.

Note: TCP/IP-attached IPDS printers print troff files with graphics; therefore, you do not need to use other procedures.

use this procedure to print troff files containing graphics:

1. Convert the troff file to ditroff format using the **troff -Thplj** command.
2. Convert the ditroff file to PCL format using the **hplj** command.
3. Submit the PCL file to print. InfoPrint automatically invokes the **pcl2afp** command to convert the PCL file to AFP format.

Flags and Values

You can specify the *InputFile* and the **-o** *OutputFile* values in any order.

InputFile Specifies the name of the input file to transform. This input file must be a ditroff file; that is, a troff file formatted for an AFP printer device using the **troff -Tafp** command.

If you do not specify an input file, the command uses standard input. The value for the input file is any valid AIX file name.

-o *OutputFile*

Specifies the name of the AFP data stream output file generated by the transform. If you do not specify the **-o** flag, the output generated goes to standard output. The value for the output file is any valid AIX file name.

Examples

- To transform the ditroff file `myfile` into an AFP data stream file called `myfile.afp`, enter:

```
d2afp myfile -o myfile.afp
```
- To create an AFP data stream output file from the troff file `doc.trf` and print the output file using the InfoPrint logical printer `servC-1p`, enter:

```
troff -Tafp doc.trf | d2afp | pdpr -p servC-1p
```

In this example, the `troff` command searches the `/usr/lib/font/devafp` directory for the troff font and printer description files. The **d2afp** command also uses files in this directory.

In the preceding example, the **d2afp** transform runs on the local AIX system whether the printer, `servC-1p` is a local or remote printer.

Note: You could also use the following command to perform the same function:

```
troff -Tafp doc.trf | pdpr -p servC-1p -odatatype=ditroff
```

In this case, if the printer, `servC-1p`, is local, the **d2afp** transform runs on the local AIX system; however, if the printer is remote, the **d2afp** transform runs on the remote AIX system.

d2afp

- To print the ditroff file report on an InfoPrint printer named servD-1p, enter:

```
pdpr -X ditroff.X report
```

In this example, the attributes file named ditroff.X contains the following settings:

```
document-format=ditroff  
printer-name-requested=servD-1p
```

Files

/usr/lpp/psf/bin/d2afp	Transform program
/usr/lib/font/devafp/devafp.fontmap	AFP font mapping file used by the d2afp command to map troff fonts to AFP code pages and AFP character sets
/usr/lib/font/devafp/*.d2afp	Binary versions of the troff font and description files used by the d2afp command
/usr/lpp/psf/fontlib	AFP font resource directory, which includes AFP character sets and AFP code pages for ditroff
/usr/lib/font/devafp/README.d2afp	File that has useful information about AFP characters for troff and ditroff files

Other files associated with the **troff** command are described in *AIX for RS/6000 Commands Reference*.

gif2afp Command: Transforms GIF Data to AFP

Syntax

```

gif2afp [-a ImageType] [-alg ProcessingAlgorithms]
          [-calib calibration] [-C ConfigurationFile]
          [-clean cleanup] [-cmp compression]
          [-crop CropFactors] [-fit {trim | scale}]
          [-gcorr GrayscaleMappingTable] [-ink color] [-inv]
          [-j ScanOffsetFileName] [-l ImageLength]
          [-M MemoryBound] [-ms space] [-msf SpaceFraction]
          [-o OutputFile] [-outbits NumberOfOutputBits]
          [-outcolor OutputColorModel] [-p PageRange]
          [-pagetype PageType] [-paper PaperSize]
          [-r resolution] [-respath ResourceSearchPath]
          [-rot rotation] [-scale ImageSize]
          [-sgcorr ScannerCorrection]
          [-sniff | -nosniff] [-term | -noterm]
          [-thresh HalftoneFile] [-v | -nov] [-w ImageWidth]
          [-x LeftMargin] [-y TopMargin] [-z]
          [[file | directory | -f FileList | @FileList]...]

```

Description

The **gif2afp** command transforms a GIF (Graphical Interchange Format) data stream into an AFP (MO:DCA-P) or PostScript Level 2 data stream file.

The transform can process GIF images, including bilevel, grayscale and color images. The output can be bilevel (IM1 or IOCA FS10), 4-bit or 8-bit grayscale, or 24-bit YCbCr color (IOCA FS11). The transform automatically uses halftoning to convert the grayscale and color images to bilevel.

Automatic Invocation

The PSF DSS automatically invokes the **gif2afp** transform command whenever you submit a GIF file for printing. You can pass options to **gif2afp** using the **other-transform-options** attribute on the **pdpr** command or the **-o** flag of the AIX print commands and the **lprafp** command.

Input and Output

gif2afp can process either standard input, or multiple files specified on the command line. If no input file is specified, **stdin** is assumed. Only a single GIF file should be submitted via **stdin**. If multiple GIF files are concatenated via standard input, all except the first one are ignored.

If an input file is specified on the command line, it can be either a GIF file, a directory, or a file list (**-f** and **@** prefixes). Multiple input file specifications are allowed. The transform processes each file in the order in which it was specified on the command line. If the **-z** option is specified, a list of file names to be processed is also submitted via standard input. The files on the list are processed as if the list were given via the **-f** option on the same place on the command line as **-z**.

If the file name points to a directory, **gif2afp** processes every file in that directory. The files are processed in the order they would be shown using the **ls -a** command. Directory search is not recursive, that is, the subdirectories are not searched.

If the file name is preceded by the **-f** option or the at sign (**@**), **gif2afp** assumes that the file contains the list of GIF files to be processed. Each of the files in the list is processed in the order it was listed.

If a GIF file has the extension **.gif** or **.GIF**, this extension need not be given explicitly. **gif2afp** first tries to open the file as specified and, if unsuccessful, tries to append the extensions **.gif** and **.GIF** in turn.

For example, suppose that:

- The directory `tFiles` contains the files `file1.gif`, `file2.gif`, `file3.gif`, and `file4.gif` and nothing else.
- The file `flist` in the current directory contains the two file names `tFiles/file2.gif` and `tFiles/file3.gif`. The names listed in the file list may have their extensions omitted.
- The file `flist2` contains the file name `tFiles/file4`. Again, the names listed in the file list may have their extensions omitted.

In order to process files `file1.gif`, `file2.gif`, `file3.gif`, and `file4.gif`, any of the following invocations of **gif2afp** would work:

```
gif2afp tFiles/file1.gif tFiles/file2.gif tFiles/file3.gif tFiles/file4.gif
gif2afp tFiles/file1 tFiles/file2 tFiles/file3 tFiles/file4
gif2afp tFiles/file*.gif
gif2afp tFiles
gif2afp tFiles/file1 -fflist tFiles/file4
gif2afp tFiles/file1 -f flist tFiles/file4
gif2afp tFiles/file1 -f flist -f flist2
gif2afp tFiles/file1 @flist @flist2
```

The file list files allow the display text to be added for each file. A display text is any text starting with the pound character (**#**) and extending to the end of the line. The display text should follow the file name, and can extend over several lines, up to 2048 characters long. The initial **#** character on each line is discarded. If a display text is present for a file name, that text is displayed in the status and error messages instead of the file name. This is useful if the **gif2afp** is invoked using temporary files whose names are meaningless to the user. Any display text before the first file name is treated as comment and discarded. Display text is allowed also if the **-z** option is used to submit the file list via standard input.

GIF files may contain multiple images. The **gif2afp** transform can process and output all the images in the file, subject to the values given in the **-p** option.

The output file name can be either specified explicitly via the **-o** option, or derived from the input file name. If multiple input files have been specified, the default output file is standard output. If a single input file is given and the output file is not specified explicitly, the transform strips the **.gif** or **.gif** extension from the input file name (if one is present), and appends the **.afp** extension for AFP output, or the **.ps** extension for PostScript output, to get the output file name.

To disable automatic output file name generation and force the default output stream to be the standard output in all cases, set the environment variable **GIF2AFP_o** to **-** or **stdout**, or, alternatively, put the line **o=-** or **o=stdout** into the configuration file and invoke that configuration file using the **-C** option or the **GIF2AFP_C** environment variable.

For example, all the following commands:

```
gif2afp myfile
gif2afp myfile.gif
gif2afp myfile -o myfile.afp
```

have `myfile.afp` as the output file. Note that there is no requirement for the explicitly specified input and output files to have **.gif** and **.afp** extensions. To process GIF file `foo.bar` into an AFP file `foo.bar2`, invoke the transform using `gif2afp foo.bar -o foo.bar2`

The output data stream is MODCA-P IS/1, MODCAP-P IS/2, or PostScript Level 2. IS/1 images are bilevel and are encoded as IOCA Function Set 10 or IM1. IM1 images are uncompressed. IOCA FS10 output images can be either uncompressed, or compressed via one of the four available compression algorithms (see the **-cmp** option). The default is ITU-T T.6 Group 4 compression. IM1 images are always uncompressed. IS/2 images can be either bilevel, 4-bit or 8-bit grayscale, or 24 bit YCbCr color. Multibit images are encoded as IOCA Function Set 11. Be aware that the only product that supports IOCA FS11 images is the AFP Workbench, that is, grayscale and color AFP images are not currently supported by any printer.

PostScript Level 2 images can be uncompressed or ITU-T T.6 Group 4 bilevel, uncompressed 8-bit grayscale or uncompressed 24-bit RGB color. By default, the transform leaves scaling and halftoning to the printer (that is, color GIF images are output as 24-bit RGB color images).

Errors and Error Recovery

gif2afp divides errors into fatal and non-fatal. The fatal error categories are the following:

- Errors in the user-specified parameters, either in the environment variables, the configuration file, or the command line arguments. These errors include unrecognized options, invalid values for parameters, or inability to open the configuration file or the output file.
- Out of memory errors. The requested memory is larger than the memory specified using the **-M** option or the dynamic memory allocation has failed.
- Disk space errors. The transform guards against trying to write to a full file system. See the **-ms** and **-msf** options for setting the minimum free disk space requirements. If the file system is full, the transform deletes the partial output file before terminating.
- Internal errors.

In the case of a fatal error, the last output page might not be complete.

Errors encountered in the GIF files are non-fatal and **gif2afp** attempts to recover from them. These errors include not being able to open an input file, an input file not being a GIF file, or an input file containing features that cannot be processed.

If the transform fails to open 15 or more input files, it assumes an error in the parameter list (for example, **-f** was used with a file that does not contain a file list) and terminates.

If an error is encountered in a file, the transform attempts to recover with the next image in the file. If such recovery is not possible, **gif2afp** attempts to recover with the next input file. In both cases, a warning message is issued. Errors and warnings are output to standard error.

For example, let a directory `tFiles` contain files `file1.gif`, `file1.txt`, `file2.gif` and `file3.gif`, where `file1.txt` is an ASCII file. Invoking the transform via `gif2afp tFiles`

processes the bilevel images in all three GIF files correctly. A warning is issued that `file1.txt` is not a GIF file.

Non-fatal errors can be made fatal by using the option **-term**, or the corresponding environment variable or configuration file entry. If **-term** is set, the transform terminates in error if it encounters an error in the GIF data stream.

Data Transformations

If the input image is grayscale or color, and the output image type is bilevel (IOCA FS10 or IM1), the transform internally scales the image to the desired size, then uses a halftoning algorithm (ordered dither, the default, or Floyd-Steinberg) to convert it to bilevel. In converting the image to bilevel, the characteristics of the output device such as dot shape and dot gain must be taken into consideration. The internal grayscale mapping table has been optimized for the 600-peI IBM InfoPrint 4000 laser printer. The **-gcorr** option can be used to specify a different mapping of gray levels.

For very light or very dark images, the halftoning algorithms can be automatically recalibrated to preserve details that would be lost using the default calibration. See the **-alg** option for more information.

To maintain the image quality, scaling must be done prior to halftoning. Halftoning algorithm is very computation-intensive. Unless the images are small, **gif2afp** cannot process the color images fast enough to feed even a slow printer.

The size and position of the output image depend on several factors:

- The size specified to the transform
- The form map specified at print time
- The forms and options loaded in the printer

If the image is too large to fit on the page, it is trimmed to size by default. Use the **-fit scale** option to instruct the printer to scale the image to the paper size. If the paper size is not specified explicitly via the **-paper** option, the paper size defaults to US letter size (8.5 by 11 inches). If the image is larger than this, the paper dimensions are increased as necessary. If the paper size is specified explicitly, it is not increased if the image does not fit on paper. The options **-l** and **-w** have the same effect as **-paper**.

The size of the actual image (as opposed to the paper size) is controlled by the **-scale** option. You can either specify a value of **orig** for the **-scale** option or give

an actual size. If you specify **orig**, the output image is the same size as the input image. If you specify **-scale** with an actual size, the output image is scaled to the desired size. You can also specify a percentage for enlargement or reduction.

Even if you specify **-scale orig**, the image may still have to be scaled if the input file specifies non-square pixels. By default, the transform leaves scaling to the printer. The exceptions are:

- Images that are being halftoned, which are always scaled in the transform,
- Images that have different resolutions in X and Y directions (non-square pixels)

Note: Because GIF files do not specify resolutions, the image is assumed to have the resolution of the output device.

You can use the **-alg** option to instruct the transform to perform internal image scaling. Options **-alg**, **-clean**, and **-ink** choose and configure various scaling algorithms.

GIF images are compressed using the LZW algorithm. Because LZW compression is not part of any current IOCA function set, **gif2afp** always reads and decompresses the image.

Parameters

gif2afp behavior is governed by many parameters. The parameters are set by the following hierarchy (least significant first):

- Internal defaults
- Environment variables
- Configuration file
- Command-line arguments

Command Line Arguments

Note the following points regarding the command line arguments for the **gif2afp** transform:

- Options and input file names can appear on the command line in any order.
- When you run **gif2afp** as a standalone transform, the blank between option and value is optional (for example, both **-inkblack** and **-ink black** are valid).
- When you use the **-o** flag of the **enq**, **lp**, **qprt**, or **lprafp** commands to pass options to **gif2afp**, no blank is permitted between option and value is optional (for example, **-o-inkblack** is valid, but **-o -ink black** is not).
- When you use the **other-transform-options** attribute on the **pdpr** command to pass options to **gif2afp**, any string containing a blank must be surrounded by single quotes (for example, both **other-transform-options=-inkblack** and **other-transform-options='-ink black'** are valid).
- All values except file names are case-insensitive.
- If an option is specified multiple times, the last specification remains in force.
- If multiple configuration file names are given, they are processed in order.

Configuration File

The configuration file has entries of the form *option=value*, where each pair must reside on a separate line. Options and other syntax are the same as for the command line arguments and the option names are the same. Input files and configuration files cannot be specified in the configuration file (that is, nested configuration files are not supported). In the case of options without values (for example, **-inv**), the equals sign must be present.

Some command line options, for example, **-calib**, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

If you do not specify a configuration file on the command line with the **-C** option, the transform checks for the existence of the default configuration file, **/usr/lpp/psf/gif2afp/gif2afp.cfg**. If this file exists, the transform uses it as the configuration file.

The following is an example of a valid configuration file:

```
scale = letter
r= 300
o = -
inv=
alg=afp
```

Note that the spaces around the equals sign (=) are optional. In this example, the option-value pair **o = -** means that the default output file is the standard output. Output file name computation has been disabled.

Environment Variables

Environment variables have the form **GIF2AFP_option**, where *option* is the same as on the command line and the configuration file.

Some command line options, for example, **-calib**, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

For example, to achieve the same effect as the configuration file in the last example, the following statements have to be executed in the calling shell:

```
export GIF2AFP_scale=letter
export GIF2AFP_r=300
export GIF2AFP_o=-
export GIF2AFP_inv=" "
export GIF2AFP_alg=afp
```

There must be some value set for each desired option. For options that do not take a value, specify a blank surrounded by double quotes, for example:

```
export GIF2AFP_inv=" "    correct
export GIF2AFP_inv=      has no effect
```

Resource Search Path

For resource files, such as scan offset files and grayscale correction files, the transform searches the current directory by default. You can use the **-respath** option to specify a list of directories to be searched for such files. This resource path does not apply to the configuration file.

Limitations

- Timing data from GIF animation sequences is ignored.
- Animation sequences are processed as unrelated images.

Acknowledgments

This software is partially based on the Independent JPEG Group's JPEG compression and decompression code.

Options and Values

@FileList Specifies a name of a file that contains a list of files to be processed by the transform. If the **@** option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple **@** options are allowed. Also see the **-f** and **-z** options. The **@** is not preceded by the dash, and is implemented to maintain compatibility with the **ps2afp** transform.

-a {ioca | ioca10 | ioca11 | im1 | PS.2}

-a {IO1_G4 | IM1 | IO1 | IO1_MMR | PSEG_IO1_G4 | PSEG_IM1 | PSEG_IO1 | PSEG_IO1_MMR | OVLY_IO1_G4 | OVLY_IM1 | OVLY_IO1 | OVLY_IO1_MMR}

Choice of the output image type. The first syntax chooses between the IOCA FS 10 (**ioca**, **ioca10**), IOCA FS11 (**ioca11**), IM1, and PostScript Level 2 (**PS.2**) output. IOCA FS10 and IM1 yield bilevel images, while IOCA FS11 results in 4-bit or 8-bit gray or 24-bit color output (see option **-outbits**). Note that presently the only product that supports IOCA FS11 is the AFP Workbench. The output compression algorithm is set via the option **-cmp**. To set the page type (page, overlay, page segment or object), use the **-pagetype** option.

The second syntax is to maintain compatibility with the **ps2afp** transform, and sets the image type (**IO1** for IOCA FS10 or **IM1** for IM1 output), compression (**G4** for Group 4 or **MMR** for Group 3), and page type (**PSEG** for page segment or **OVLY** for overlay). If **PSEG** or **OVLY** is not specified, the output is a printable page. If no compression algorithm is specified, the output is not compressed. The second syntax cannot be used for IOCA FS11 output.

Some older printers do not support IOCA images. In such cases, the IM1 output type should be chosen. IM1 images are uncompressed and thus use more space. The processing might also take longer since the IM1 image cannot be scaled by the printer and so internal scaling algorithms must be used. See option **-alg**.

The default is **ioca** for IOCA FS10 output compressed via Group 4 algorithm.

This option is similar to the **image-out-format** document attribute on the **pdpr** command.

-alg {afp | alg1 | alg2 | alg3}

-alg {htod1 | htfs}

-alg htcal1

Choice of the scaling and halftoning algorithms. You can specify multiple choices, separated by commas, for one **-alg** option. The effect is the same as specifying multiple **-alg** options. For example, **-alg htfs,htcal1** is equivalent to **-alg htfs -alg htcal1**.

The scaling algorithms are:

- If **afp** is chosen, the scaling is done using the default algorithm in the printer. This makes the transform much faster. If the image must be reduced, however, this algorithm may drop some information from the image, such as thin lines.
- **alg1** activates the internal scaling algorithm to scale the image explicitly to the specified size. This algorithm is guaranteed not to discard any ink. “White space” in the image, however, may be lost (that is, features close to one another might merge). This algorithm makes the transform run longer, and might occasionally make for a “dirty” image, since the occasional “noise pixels” in the scanned images tend to be amplified.
- **alg2** activates the more flexible version of **alg1**. If this algorithm is selected, option **-clean** can be used to specify the amount of ink “cleanup” to be performed. Option **-clean 0.0** makes the algorithm **alg2** perform like **alg1** (albeit more slowly). Increasing the value specified in **-clean** discards more and more ink, until **-clean 1.0** results in a blank page.
- **alg3** activates a scaling algorithm that works by deleting or duplicating rows and columns in the image. This is a fast general-purpose algorithm.

For bilevel images, the default is **afp** if the output image type is IOCA and **alg3** if the output image type is IM1. For color images with bilevel output, the scaling is always done prior to the halftoning algorithm. If a grayscale or color output is chosen (**-a ioca11**), this option is ignored and the algorithm is set to **afp**.

The halftoning algorithms are:

- **htod1** uses an ordered dither with a screen derived from the value of the **-thresh** option. The default is an 85 line per inch screen.
- **htfs** uses the Floyd-Steinberg algorithm.
- **htcal1** recalibrates the halftoning algorithm for each image. **htcal1** forces the transform to read the whole image into memory and requires an additional pass through the image. It should be used only for very light or very dark images.

The default is **htod1**. Each halftoning algorithm uses a different internal default calibration curve. If the automatic calibration is turned on, a still different set of calibration curves are used.

See options **-clean**, **-gcorr**, **-ink**, **-paper**, **-scale**, **-thresh**, **-l**, **-w**, **-x**, and **-y**.

-calib scanner

-calib {scanner | printer | patch | patchr},name1...

Transform calibration for the scanner or printer. If **scanner** is specified, **-sgcorr** must be present. If **printer** is specified, **-sgcorr** may or may not be present. If **patch** or **patchr** is specified, **-sgcorr** (if present) is ignored. Detailed explanation of the calibration process is beyond the scope of this entry.

You cannot specify **-calib** in the configuration file or as an environment variable.

-C ConfigurationFileName

The name of a configuration file containing option-value pairs. If multiple **-C** options are given on the command line, they are processed in order. Specifying the configuration file on the command line overrides any specification done via the **GIF2AFP_C** environment variable.

The default configuration file is **/usr/lpp/psf/gif2afp/gif2afp.cfg**.

-clean {0.5 | x.xxx}

The internal scaling algorithm **alg2** allows for variable thresholding. The scaled pixel is declared painted if the fraction of its area greater than the threshold is painted in the original image. The value **x.xxx** is a real number between zero and 1 inclusive and gives this threshold.

If the option **-clean 0.0** is issued, **alg2** behaves like **alg1** and turns on a pixel as long as any part of the pixel has been painted in the original image. **-clean 1.0** results in a blank image because the output pixels are never painted.

Note that setting **-clean 0.95** and **0.9999999** turns on the pixels that had essentially all the area painted in the original picture. Depending on the data, most of the image will probably be preserved. Increasing **-clean** by a small amount to **1.0** erases the image. If the scaling algorithm is not **alg2**, this option is ignored. The default is **-clean 0.5**.

-cmp {none | mh | mmr | g3 | g4 | jpeg}

Choice of the output image compression algorithm:

none	Uncompressed output
mh	ITU-T T.4 G3 Modified Huffman
mmr	IBM Modified Modified Read
g3	ITU-T T.4 G3 Modified Read
g4	ITU-T T.6 G4
jpeg	JPEG non-differential Huffman coding with baseline DCT. The output image data should be compressed to reduce the file sizes and increase the printing speed.

The default compression is ITU-T T.6 Group 4 for bilevel images and no compression for grayscale or color images. Note that some printers may not support Group 4 compression algorithm and require using the **-cmp** option to choose a different one. The JPEG algorithm can compress only 8-bit grayscale and 24-bit color images. 4-bit grayscale images cannot be compressed.

-crop *t,b,l,r*[*i* | *m* | *p* | *d*]

Image cropping. *t,b,l,r* specify how much should be cropped from the image top, bottom, left edge, and right edge. The numbers are floating point and can be either positive or negative. Negative numbers indicate that a blank space should be inserted. The units are inches, millimeters, points, and dots (pels), with the default being dots. The cropping is specified in the context of the output page, so that “top” means the top of the output page and so on, regardless of the **-rot** option. To crop, the transform will enlarge the image by the amount to be cropped, then crop the specified amount by manipulating the actual bitmap. The resulting image has the size as specified by the explicit (or implicit) **-scale** option. See also option **-j**.

If **-fit trim** is specified, the right and the bottom edge of the image are not cropped. Instead, the image grows as necessary. Because **-fit trim** causes the output data stream to contain the “position and trim” specification, the printer discards any extra image.

-f *FileList* Specifies the name of a file that contains a list of files to be processed by the transform. If the **-f** option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple **-f** options are allowed. See also options **@** and **-z**.

-fit {trim | scale}

Determines whether the printer behavior will be position-and-trim or scale-to-fit if the image is too large to fit on the paper. The default is **trim**.

This option is equivalent to the **image-fit** document attribute on the **pdpr** command.

-gcorr *FileName*

Specifies a file with grayscale mapping table for halftoning of the grayscale and color images to bilevel for output. The mapping table must be provided to compensate for the printing characteristics of the particular output device and paper type, such as dot gain. This file must contain either:

- 256 real numbers, one for each level of gray in the 8-bit grayscale image
- The PostScript **settransfer** operator

The algorithm converts every image to 8-bit grayscale before applying the halftoning algorithm. The default internal mapping table has been optimized for the 600-pel IBM InfoPrint 4000 laser printer. You shouldn't change this unless you know what you are doing. See also options **-alg** and **-thresh**. PostScript code submitted via the **-thresh** option can have the same effect as **-gcorr**.

-ink {black | white}

This option is used only with scaling algorithm **alg1** or **alg2**. The GIF images can be either black on white or white on black. The internal scaling algorithm must know which, because “ink” is preserved at the expense of “non-ink” The default value, “black,” indicates that the image is black on white.

If the option **-inv** is used to print the reversed image, the inversion is done as the data is read by the transform, before any processing is done. The black or white must thus be specified in the terms of the printed image, not in the terms of the input GIF image.

-inv Reverses the image. Areas that are black in the original image become white and vice versa. Note that the reversed image may be either black on white or white on black, depending on the original image.

-j ScanOffsetFileName

Sometimes input images must be shifted to get the desired positioning on the page. The scan offset file contains the directions for shifting. The file has the format of

```
[attribute]
values
:
values
[attribute]
values
:
values
```

Currently, the recognized attributes are **[Units]** (values **millimeters**, **mm**, **inches**, **in**, **points**, **dots**, **pels**) **[Page_Offset_Type]** (values **crop** or **grow**) and **[Page_Offsets]**. The values for page offsets are in the format *FileName,Hhoriz,Vvert* Each entry refers to a file. The file names must be specified (or at least the leading comma must), but are currently ignored and the offset factors are applied to each file in turn. Note that the same factors are applied to each image in the file. The *horiz* and *vert* values are the amount that the image is to be shifted, in the horizontal and vertical direction. The positive directions are down and right (that is, the origin is in the left upper corner of the page). The default units are millimeters. Like the values for the **-crop** option, the shifts are specified in the output space context.

Extra spaces and blank lines are allowed. Unrecognized attributes and their values are ignored. See the sample file **shift.sample**.

If the image is moved left or up, part of the bitmap is removed. If the image is moved down or right, removal is governed by the value of the **[Page_Offset_Type]** attribute. If **crop** is chosen, the transform removes the requisite amount from the right and bottom edges of the bitmap. If **grow** is chosen, the transform does not remove any space. The bitmap grows and the trimming, if any, is left to the printer. If the **-fit trim** option (the default) is specified, **[Page_Offset_Type]** defaults to **grow**. For **-fit scale**, **[Page_Offset_Type]** defaults to **crop**.

-l {11i | yyy.yy[d | m | i | p]}

Specifies the paper length. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. If the unit is

dots, decimals (if any) are ignored. The default paper length is 11 inches. See options **-w** to set the paper width or **-paper** to set both dimensions at the same time.

-M {0 | nnn}

Limits the amount of memory available to **gif2afp**. *nnn* is the maximum amount of memory in kilobytes. A value of **0** means there is no memory limit. *nnn* can be set from **0** to the maximum value that AIX allows. The default is **0**.

-ms {10 | nnn}

Requires that at least *nnn* kilobytes of disk space be available on the file system that contains the output file. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **10**. See option **-msf**.

-msf {0.1 | x.xxx}

The number *x.xxx* is a real number between 0 and 1. It denotes the minimum space that must be left unused on the file system containing the output file. The space is given as a fraction of the total space in the file system. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **0.1**. See option **-ms**.

-nosniff See [-**sniff** | **-nosniff**].

-noterm See [-**term** | **-noterm**].

-nov See [-**v** | **-nov**].

-o FileName

Optional output file name. Specify **-** for standard output.

-outbits NumberOfOutputBits

Sets the number of bits per pel in output. This value must be **1**, **4**, **8**, or **24**. If the output image type is IOCA FS10 or IM1, the number of output bits is set to **1** and this option is ignored. For IOCA FS11 output, the default is **24**. Note that this number represents the maximum number of bits used per pel. Thus, even if the number of bits is set to **24**, a 4-bit grayscale image is still displayed in 4-bit format.

-outcolor {rgb | ycbcr | ycrcb}

Sets the output color model to RGB, YCbCr, or YCrCb if the image type is IOCA FS11 and the number of output bits is 24. Otherwise, this option is ignored. The default is **ycbcr**.

-p {even | odd | nn | nn-mm | nn-}

Specifies that the output should only contain the specified pages. If no **-p** option is given, all the pages are output. Multiple **-p** options may be specified. Their effect is cumulative. Regardless of the order in which the pages are specified, they are always printed in ascending order. The recognized values are:

even	Print all even pages
odd	Print all odd pages
<i>nn</i>	Print page <i>nn</i>
<i>nn-mm</i>	Print pages <i>nn</i> to <i>mm</i> , inclusive.
<i>nn-</i>	Print all pages starting with page <i>nn</i>

Pages are numbered starting with 1.

-pagetype {page | overlay | ovly | pseg | object}

Sets the output page type to be page, overlay, page segment or object. The same page type is set for every page in the output. Thus, unless option **-p** is used to select a single page, multiple overlays, page segments or overlays are stored in the output file. The default is **page**. See option **-a**.

-paper {a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p]}

Specifies the output paper size. The supported values are:

a3 A3 format (297 by 420 mm or 11.69 by 16.54 inches)

a4 A4 format (210 by 297 mm or 8.27 by 11.69 inches)

a5 A5 format (148 by 210 mm or 5.83 by 8.27 inches)

letter 8.5 by 11 inches (216 by 279 mm)

folio 8.5 by 13.0 inches (216 by 330 mm)

legal 8.5 by 14.0 inches (216 by 356 mm)

ledger 11.0 by 17.0 inches (279 by 432 mm)

xx.xx,yy.yy[d | m | i | p]

Horizontal and vertical page dimensions. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**.

The default paper size is letter. If **-paper** is not used, the paper size is increased, if necessary, to contain the output image.

See options **-l**, **-w**, and **-scale**.

-r {300 | nnn}

The output device resolution, specified in dots per inch. The default is **300**.

This option is equivalent to the **default-printer-resolution** document attribute on the **pdpr** command.

-respath directory[:directory...]

Sets the search path for resource files, such as the scan offset files and grayscale calibration curve files. If a resource file name is specified as a relative name (does not start with a */*), the transform searches every directory in the path, in the order specified in the path, until it finds the file (or fails). See options **-j** and **-gcorr** for scan offsets and grayscale calibration curve. The default is the current directory.

-rot {0 | 90 | 180 | 270[p | i]}

The image is rotated in the clockwise direction by the amount specified. The default is zero, that is, no rotation.

If **p** is specified, the transform sets the output datastream in such a way that the printer performs the actual image rotation. If **i** is specified, the transform rotates the output bitmap. When **i** is chosen, the transform takes much longer to run and uses much more memory. If no letter is specified, the default or any previous value (such as the value specified in the configuration file) remains in force. The default is **p**.

-scale {orig | a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p] | xxx%}

Specifies the output image size. The image is scaled to this size and

centered in the area defined by the paper size and margin options. The supported values are:

orig Preserve the input image size, regardless of the printable paper area.

a3 A3 format (297 by 420 mm or 11.69 by 16.54 inches)

a4 A4 format (210 by 297 mm or 8.27 by 11.69 inches)

a5 A5 format (148 by 210 mm or 5.83 by 8.27 inches)

letter 8.5 by 11 inches (216 by 279 mm)

folio 8.5 by 13.0 inches (216 by 330 mm)

legal 8.5 by 14.0 inches (216 by 356 mm)

ledger 11.0 by 17.0 inches (279 by 432 mm)

*xx.xx,yy.yy***[d | m | i | p]**

Horizontal and vertical image dimensions. The optional units are **dots** (pels), **millimeters**, inches, or **points**.

xxx% Magnification relative to the original image size. Numbers below 100% mean reduction, while Numbers above 100% mean enlargement. For example, **-scale 200%** causes the output image to be twice as long and twice as wide as the input image.

The default image size is **orig**.

-sgcorr *FileName*

Specifies the name of the scanner-related calibration file. If **-calib** is absent, this option is ignored.

A detailed discussion of **-sgcorr** is beyond the scope of this document.

[-sniff | -nosniff]

Turns automatic conversion to black on white for bilevel images on (**-sniff**) or off (**-nosniff**). The automatic conversion algorithm counts the number of 0 and 1 bits in the image. If there are fewer zeros, it assumes the printed features are represented by zeros (white on black), and inverts the image to be black on white. The detection and conversion are done after the conversion specified by the Photometric Interpretation tag is applied (if any).

This option is ignored if the image is not bilevel. The default is **-nosniff**.

[-term | -noterm]

Disables (**-term**) or enables (**-noterm**) error recovery.

- When error recovery is disabled, on encountering an error in a GIF file, the transform terminates with an error message and a nonzero return code.
- When error recovery is enabled, the errors in GIF files are treated as non-fatal. The transform attempts to recover with the next image in the file, or with the next file. The return code is zero.

The default is **-noterm**.

-thresh *FileName*

Specifies a file that contains a PostScript Type 1 or Type 3 halftone dictionary. Alternatively, the PostScript code can specify the **setscreen**

operator instead of a Type 1 dictionary. The halftone cell in the dictionary is used to overwrite the default ordered dither clustered dot halftone cell. If the PostScript code contains a transfer function, either in the halftone dictionary or specified by the **settransfer** operator, the current grayscale correction curve is overwritten as if **-gcorr** were used.

[-v | -nov]

Turns verbose mode on (**-v**) or off (**-nov**).

- When verbose mode is on, the transform prints a message as it opens each resource file, then echoes the command line, then prints a message for each file name as it is processed.
- When verbose mode is off, the transform prints only error messages.

The default is **-nov**.

-w {8.5i | *yyy.yy*[d** | **m** | **i** | **p**]}**

Specifies the paper width. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default page width is 8.5 inches. See options **-l** to set the paper length or **-paper** to set both dimensions at the same time.

-x {0 | *nnn.nn*[d** | **m** | **i** | **p**]}**

Specifies the left margin. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default is zero (no margin).

-y {0 | *nnn.nn*[d** | **m** | **i** | **p**]}**

Specifies the top margin. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default is zero (no margin).

-z

Signifies that a list of files to be processed is submitted from standard input. See also options **-f** and **@**.

jpeg2afp Command: Transforms JPEG Data to AFP

Syntax

```

jpeg2afp [-a ImageType] [-alg ProcessingAlgorithms]
  [-calib calibration] [-C ConfigurationFile]
  [-cmp compression] [-crop CropFactors]
  [-fit {trim | scale}] [-force]
  [-gcorr GrayscaleMappingTable]
  [-j ScanOffsetFileName] [-l ImageLength ]
  [-M MemoryBound] [-ms space] [-msf SpaceFraction]
  [-o OutputFile] [-outbits NumberOfOutputBits]
  [-outcolor OutputColorModel] [-p PageRange]
  [-pagetype PageType] [-paper PaperSize]
  [-r resolution] [-respath ResourceSearchPath]
  [-rot rotation] [-scale ImageSize]
  [-sgcorr ScannerCorrection] [-term | -noterm]
  [-thresh HalftoneFile] [-v | -nov]
  [-w ImageWidth] [-wrkdir WorkDirectory]
  [-x LeftMargin] [-y TopMargin] [-z]
  [[file | directory | -f FileList | @FileList]...]

```

Description

The **jpeg2afp** command transforms a JPEG (Joint Photographic Experts Group) data stream into an AFP (MO:DCA-P) or PostScript Level 2 data stream file.

The transform can process images compressed using baseline lossy JPEG compression. Only 8 bits per channel and Huffman coding are supported. The output can be bilevel (IM1 or IOCA FS10), 4-bit or 8-bit grayscale, or 24-bit YCbCr color (IOCA FS11). The transform automatically uses halftoning to convert the grayscale and color images to bilevel.

Automatic Invocation

The PSF DSS automatically invokes the **jpeg2afp** transform command whenever you submit a JPEG file for printing. You can pass options to **jpeg2afp** using the **other-transform-options** attribute on the **pdpr** command or the **-o** flag of the AIX print commands and the **lprafp** command.

Input and Output

jpeg2afp can process either standard input, or multiple files specified on the command line. If no input file is specified, **stdin** is assumed. Standard input is cached to a file (see the **-wrkdir** option) and then processed. Only a single JPEG file should be submitted via **stdin**. If multiple JPEG files are concatenated via standard input, all except the first one are ignored.

If an input file is specified on the command line, it can be either a JPEG file, a directory, or a file list (**-f** and **@** prefixes). Multiple input file specifications are allowed. The transform processes each file in the order in which it was specified on the command line. If the **-z** option is specified, a list of file names to be processed is also submitted via standard input. The files on the list are processed as if the list were given via the **-f** option on the same place on the command line as **-z**.

If the file name points to a directory, **jpeg2afp** processes every file in that directory. The files are processed in the order they would be shown using the **ls -a** command. Directory search is not recursive, that is, the subdirectories are not searched.

If the file name is preceded by the **-f** option or the at sign (**@**), **jpeg2afp** assumes that the file contains the list of JPEG files to be processed. Each of the files in the list is processed in the order it was listed.

If a JPEG file has the extension **.jpg**, **.jpeg**, **.JPG**, or **.JPEG**, this extension need not be given explicitly. **jpeg2afp** first tries to open the file as specified and, if unsuccessful, tries to append the extensions **.jpg**, **.jpeg**, **.JPG**, and **.JPEG** in turn.

For example, suppose that:

- The directory `tFiles` contains the files `file1.jpg`, `file2.jpg`, `file3.jpg`, and `file4.jpg` and nothing else.
- The file `flist` in the current directory contains the two file names `tFiles/file2.jpg` and `tFiles/file3.jpg`. The names listed in the file list may have their extensions omitted.
- The file `flist2` contains the file name `tFiles/file4`. Again, the names listed in the file list may have their extensions omitted.

In order to process files `file1.jpg`, `file2.jpg`, `file3.jpg`, and `file4.jpg`, any of the following invocations of **jpeg2afp** would work:

```
jpeg2afp tFiles/file1.jpg tFiles/file2.jpg tFiles/file3.jpg tFiles/file4.jpg
jpeg2afp tFiles/file1 tFiles/file2 tFiles/file3 tFiles/file4
jpeg2afp tFiles/file*.jpg
jpeg2afp tFiles
jpeg2afp tFiles/file1 -fflist tFiles/file4
jpeg2afp tFiles/file1 -f flist tFiles/file4
jpeg2afp tFiles/file1 -f flist -f flist2
jpeg2afp tFiles/file1 @flist @flist2
```

The file list files allow the display text to be added for each file. A display text is any text starting with the pound character (**#**) and extending to the end of the line. The display text should follow the file name, and can extend over several lines, up to 2048 characters long. The initial **#** character on each line is discarded. If a display text is present for a file name, that text is displayed in the status and error messages instead of the file name. This is useful if the **jpeg2afp** is invoked using temporary files whose names are meaningless to the user. Any display text before the first file name is treated as comment and discarded. Display text is allowed also if the **-z** option is used to submit the file list via standard input.

The output file name can be either specified explicitly via the **-o** option, or derived from the input file name. If multiple input files have been specified, the default output file is standard output. If a single input file is given and the output file is not specified explicitly, the transform strips the **.jpg** or **.jpeg** extension from the input file name (if one is present), and appends the **.afp** extension for AFP output, or the **.ps** extension for PostScript output, to get the output file name.

To disable automatic output file name generation and force the default output stream to be the standard output in all cases, set the environment variable **JPEG2AFP_o** to **-** or **stdout**, or, alternatively, put the line **o=-** or **o=stdout** into the

configuration file and invoke that configuration file using the **-C** option or the **JPEG2AFP_C** environment variable.

For example, all the following commands:

```
jpeg2afp myfile
jpeg2afp myfile.jpg
jpeg2afp myfile -o myfile.afp
```

have `myfile.afp` as the output file. Note that there is no requirement for the explicitly specified input and output files to have **.jpg** and **.afp** extensions. To process JPEG file `foo.bar` into an AFP file `foo.bar2`, invoke the transform using `jpeg2afp foo.bar -o foo.bar2`

The output data stream is MODCA-P IS/1, MODCAP-P IS/2, or PostScript Level 2. IS/1 images are bilevel and are encoded as IOCA Function Set 10 or IM1. IM1 images are uncompressed. IOCA FS10 output images can be either uncompressed, or compressed via one of the four available compression algorithms (see the **-cmp** option). The default is ITU-T T.6 Group 4 compression. IM1 images are always uncompressed. IS/2 images can be either bilevel, 4-bit or 8-bit grayscale, or 24 bit YCbCr color. Multibit images are encoded as IOCA Function Set 11. Be aware that the only product that supports IOCA FS11 images is the AFP Workbench, that is, grayscale and color AFP images are not currently supported by any printer.

PostScript Level 2 images can be uncompressed or ITU-T T.6 Group 4 bilevel, uncompressed 8-bit grayscale or uncompressed 24-bit RGB color. By default, the transform leaves scaling and halftoning to the printer (that is, color JPEG images are output as 24-bit RGB color images).

Errors and Error Recovery

jpeg2afp divides errors into fatal and non-fatal. The fatal error categories are the following:

- Errors in the user-specified parameters, either in the environment variables, the configuration file, or the command line arguments. These errors include unrecognized options, invalid values for parameters, or inability to open the configuration file or the output file.
- Out of memory errors. The requested memory is larger than the memory specified using the **-M** option or the dynamic memory allocation has failed.
- Disk space errors. The transform guards against trying to write to a full file system. See the **-ms** and **-msf** options for setting the minimum free disk space requirements. If the file system is full, the transform deletes the partial output file before terminating.
- Internal errors.

In the case of a fatal error, the last output page might not be complete.

Errors encountered in the JPEG files are non-fatal and **jpeg2afp** attempts to recover from them. These errors include not being able to open an input file, an input file not being a JPEG file, or an input file containing features that cannot be processed. If the transform fails to open 15 or more input files, it assumes an error in the parameter list (for example, **-f** was used with a file that does not contain a file list) and terminates.

If an error is encountered in a file, the transform attempts to recover with the next input file. A warning message is issued. Errors and warnings are output to standard error.

For example, let a directory `tFiles` contain files `file1.jpg`, `file1.txt`, `file2.jpg` and `file3.jpg`, where `file1.txt` is an ASCII file. Invoking the transform via

```
jpeg2afp tFiles
```

processes the bilevel images in all three JPEG files correctly. A warning is issued that `file1.txt` is not a JPEG file.

Non-fatal errors can be made fatal by using the option **-term**, or the corresponding environment variable or configuration file entry. If **-term** is set, the transform terminates in error if it encounters an error in the JPEG data stream.

Data Transformations

If the input image is grayscale or color, and the output image type is bilevel (IOCA FS10 or IM1), the transform internally scales the image to the desired size, then uses a halftoning algorithm (ordered dither, the default, or Floyd-Steinberg) to convert it to bilevel. In converting the image to bilevel, the characteristics of the output device such as dot shape and dot gain must be taken into consideration. The internal grayscale mapping table has been optimized for the 600-peI IBM InfoPrint 4000 laser printer. The **-gcorr** option can be used to specify a different mapping of gray levels.

For very light or very dark images, the halftoning algorithms can be automatically recalibrated to preserve details that would be lost using the default calibration. See the **-alg** option for more information.

To maintain the image quality, scaling must be done prior to halftoning. Halftoning algorithm is very computation-intensive. Unless the images are small, **jpeg2afp** cannot process the color images fast enough to feed even a slow printer.

The size and position of the output image depend on several factors:

- The size specified to the transform
- The form map specified at print time
- The forms and options loaded in the printer

If the image is too large to fit on the page, it is trimmed to size by default. Use the **-fit scale** option to instruct the printer to scale the image to the paper size. If the paper size is not specified explicitly via the **-paper** option, the paper size defaults to US letter size (8.5 by 11 inches). If the image is larger than this, the paper dimensions are increased as necessary. If the paper size is been specified explicitly, it is not increased if the image does not fit on paper. The options **-l** and **-w** have the same effect as **-paper**.

The size of the actual image (as opposed to the paper size) is controlled by the **-scale** option. You can either specify a value of **orig** for the **-scale** option or give an actual size. If you specify **orig**, the output image is the same size as the input image. If you specify **-scale** with an actual size, the output image is scaled to the desired size. You can also specify a percentage for enlargement or reduction.

By default, the transform leaves scaling to the printer. The exceptions are images that are being halftoned, which are always scaled in the transform.

Note: Because JPEG files do not specify resolutions, the image is assumed to have the resolution of the output device.

If possible, **jpeg2afp** rewraps the JPEG raster data in MODCA-P headers.

For 8-bit grayscale and 24-bit color images, both JPEG and IOCA FS11 support JPEG compression algorithms. However, the JPEG standard has different subsampling defaults than IOCA FS11. Thus, most 24-bit color images are not suitable for rewrapping, even if they use a JPEG compression algorithm and a color model supported by IOCA FS11.

Note also that JPEG is a lossy compression algorithm. Decompressing a JPEG image and then recompressing it for output might result in reduced image quality. For that reason, the default is to use no compression for the gray or color output.

Be aware that not all the printers support all the recognized IOCA compression standards. If the output image is IM1, the image is always decompressed and scaled in the transform.

Parameters

jpeg2afp behavior is governed by many parameters. The parameters are set by the following hierarchy (least significant first):

- Internal defaults
- Environment variables
- Configuration file
- Command-line arguments

Command Line Arguments

Note the following points regarding the command line arguments for the **jpeg2afp** transform:

- Options and input file names can appear on the command line in any order.
- When you run **jpeg2afp** as a standalone transform, the blank between option and value is optional (for example, both `-fittrim` and `-fit trim` are valid).
- When you use the **-o** flag of the **enq**, **lp**, **qprt**, or **lprafp** commands to pass options to **jpeg2afp**, no blank is permitted between option and value is optional (for example, `-o-fittrim` is valid, but `-o -fit trim` is not).
- When you use the **other-transform-options** attribute on the **pdpr** command to pass options to **jpeg2afp**, any string containing a blank must be surrounded by single quotes (for example, both `other-transform-options=-fittrim` and `other-transform-options='-fit trim'` are valid).
- All values except file names are case-insensitive.
- If an option is specified multiple times, the last specification remains in force.
- If multiple configuration file names are given, they are processed in order.

Configuration File

The configuration file has entries of the form *option=value*, where each pair must reside on a separate line. Options and other syntax are the same as for the command line arguments and the option names are the same. Input files and configuration files cannot be specified in the configuration file (that is, nested configuration files are not supported). In the case of options without values (for example, **-v**), the equals sign must be present.

Some command line options, for example, **-calib**, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

If you do not specify a configuration file on the command line with the **-C** option, the transform checks for the existence of the default configuration file, **/usr/lpp/psf/jpeg2afp/jpeg2afp.cfg**. If this file exists, the transform uses it as the configuration file.

The following is an example of a valid configuration file:

```
scale = letter
r= 300
o = -
v=
```

Note that the spaces around the equals sign (=) are optional. In this example, the option-value pair **o = -** means that the default output file is the standard output. Output file name computation has been disabled.

Environment Variables

Environment variables have the form **JPEG2AFP_option**, where *option* is the same as on the command line and the configuration file.

Some command line options, for example, **-calib**, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

For example, to achieve the same effect as the configuration file in the last example, the following statements have to be executed in the calling shell:

```
export JPEG2AFP_scale=letter
export JPEG2AFP_r=300
export JPEG2AFP_o=-
export JPEG2AFP_v=" "
```

There must be some value set for each desired option. For options that do not take a value, specify a blank surrounded by double quotes, for example:

```
export JPEG2AFP_v=" "    correct
export JPEG2AFP_v=      has no effect
```

Resource Search Path

For resource files, such as scan offset files and grayscale correction files, the transform searches the current directory by default. You can use the **-respath** option to specify a list of directories to be searched for such files. This resource path does not apply to the configuration file.

Limitations

- Only Huffman coding with baseline DCT JPEG algorithm is supported.
- At most 8-bit grayscale and 24-bit color are supported.

Acknowledgments

This software is partially based on the Independent JPEG Group's JPEG compression and decompression code.

Options and Values

@FileList Specifies a name of a file that contains a list of files to be processed by the transform. If the @ option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple @ options are allowed. Also see the **-f** and **-z** options. The @ is not preceded by the dash, and is implemented to maintain compatibility with the **ps2afp** transform.

-a {ioca | ioca10 | ioca11 | im1 | PS.2}

-a {IO1_G4 | IM1 | IO1 | IO1_MMR | PSEG_IO1_G4 | PSEG_IM1 | PSEG_IO1 | PSEG_IO1_MMR | OVLY_IO1_G4 | OVLY_IM1 | OVLY_IO1 | OVLY_IO1_MMR}

Choice of the output image type. The first syntax chooses between the IOCA FS 10 (**ioca**, **ioca10**), IOCA FS11 (**ioca11**), IM1, and PostScript Level 2 (**PS.2**) output. IOCA FS10 and IM1 yield bilevel images, while IOCA FS11 results in 4-bit or 8-bit gray or 24-bit color output (see option **-outbits**). Note that presently the only product that supports IOCA FS11 is the AFP Workbench. The output compression algorithm is set via the option **-cmp**. To set the page type (page, overlay, page segment or object), use the **-pagetype** option.

The second syntax is to maintain compatibility with the **ps2afp** transform, and sets the image type (**IO1** for IOCA FS10 or **IM1** for IM1 output), compression (**G4** for Group 4 or **MMR** for Group 3), and page type (**PSEG** for page segment or **OVLY** for overlay). If **PSEG** or **OVLY** is not specified, the output is a printable page. If no compression algorithm is specified, the output is not compressed. The second syntax cannot be used for IOCA FS11 output.

Some older printers do not support IOCA images. In such cases, the IM1 output type should be chosen. IM1 images are uncompressed and thus use more space. The processing might also take longer since the IM1 image cannot be scaled by the printer and so internal scaling algorithms must be used. See option **-alg**.

The default is **ioca** for IOCA FS10 output compressed via Group 4 algorithm.

This option is similar to the **image-out-format** document attribute on the **pdpr** command.

-alg afp

-alg {htod1 | htfs}

-alg htca1

Choice of the scaling and halftoning algorithms. You can specify multiple choices, separated by commas, for one **-alg** option. The effect is the same as specifying multiple **-alg** options. For example, **-alg htfs,htca1** is equivalent to **-alg htfs -alg htca1**.

The scaling algorithms are:

- If **afp** is chosen, the scaling is done using the default algorithm in the printer. This makes the transform much faster. If the image must be reduced, however, this algorithm may drop some information from the image, such as thin lines.

For color images with bilevel output, the scaling is always done prior to the halftoning algorithm. If a grayscale or color output is chosen (**-a ioca11**), this option is ignored and the algorithm is set to **afp**.

The halftoning algorithms are:

- **htod1** uses an ordered dither with a screen derived from the value of the **-thresh** option. The default is an 85 line per inch screen.
- **htfs** uses the Floyd-Steinberg algorithm.
- **htca1** recalibrates the halftoning algorithm for each image. **htca1** forces the transform to read the whole image into memory and requires an additional pass through the image. It should be used only for very light or very dark images.

The default is **htod1**. Each halftoning algorithm uses a different internal default calibration curve. If the automatic calibration is turned on, a still different set of calibration curves are used.

See options **-gcorr**, **-paper**, **-scale**, **-thresh**, **-l**, **-w**, **-x**, and **-y**.

-calib scanner**-calib {scanner | printer | patch | patchr},name1...**

Transform calibration for the scanner or printer. If **scanner** is specified, **-sgcorr** must be present. If **printer** is specified, **-sgcorr** may or may not be present. If **patch** or **patchr** is specified, **-sgcorr** (if present) is ignored. Detailed explanation of the calibration process is beyond the scope of this entry.

You cannot specify **-calib** in the configuration file or as an environment variable.

-C ConfigurationFileName

The name of a configuration file containing option-value pairs. If multiple **-C** options are given on the command line, they are processed in order. Specifying the configuration file on the command line overrides any specification done via the **JPEG2AFP_C** environment variable.

The default configuration file is **/usr/lpp/psf/jpeg2afp/jpeg2afp.cfg**.

-cmp {none | mh | mmr | g3 | g4 | jpeg}

Choice of the output image compression algorithm:

none	Uncompressed output
mh	ITU-T T.4 G3 Modified Huffman

mmr	IBM Modified Modified Read
g3	ITU-T T.4 G3 Modified Read
g4	ITU-T T.6 G4
jpeg	JPEG non-differential Huffman coding with baseline DCT. The output image data should be compressed to reduce the file sizes and increase the printing speed.

The default compression is ITU-T T.6 Group 4 for bilevel images and no compression for grayscale or color images. Note that some printers may not support Group 4 compression algorithm and require using the **-cmp** option to choose a different one. The JPEG algorithm can compress only 8-bit grayscale and 24-bit color images. 4-bit grayscale images cannot be compressed.

-crop *t,b,l,r*[*i | m | p | d*]

Image cropping. *t,b,l,r* specify how much should be cropped from the image top, bottom, left edge, and right edge. The numbers are floating point and can be either positive or negative. Negative numbers indicate that a blank space should be inserted. The units are inches, millimeters, points, and dots (pels), with the default being dots. The cropping is specified in the context of the output page, so that “top” means the top of the output page and so on, regardless of the **-rot** option. To crop, the transform will enlarge the image by the amount to be cropped, then crop the specified amount by manipulating the actual bitmap. The resulting image has the size as specified by the explicit (or implicit) **-scale** option. See also option **-j**.

If **-fit trim** is specified, the right and the bottom edge of the image are not cropped. Instead, the image grows as necessary. Because **-fit trim** causes the output data stream to contain the “position and trim” specification, the printer discards any extra image.

-f *FileList* Specifies the name of a file that contains a list of files to be processed by the transform. If the **-f** option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple **-f** options are allowed. See also options **@** and **-z**.

-fit {trim | scale}

Determines whether the printer behavior will be position-and-trim or scale-to-fit if the image is too large to fit on the paper. The default is **trim**.

This option is equivalent to the **image-fit** document attribute on the **pdpr** command.

-force If present, this option forces **jpeg2afp** to decompress and recompress the image, regardless of other factors.

-gcorr *FileName*

Specifies a file with grayscale mapping table for halftoning of the grayscale and color images to bilevel for output. The mapping table must be provided to compensate for the printing characteristics of the particular output device and paper type, such as dot gain. This file must contain either:

- 256 real numbers, one for each level of gray in the 8-bit grayscale image

- The PostScript **settransfer** operator

The algorithm converts every image to 8-bit grayscale before applying the halftoning algorithm. The default internal mapping table has been optimized for the 600-pel IBM InfoPrint 4000 laser printer. You shouldn't change this unless you know what you are doing. See also options **-alg** and **-thresh**. PostScript code submitted via the **-thresh** option can have the same effect as **-gcorr**.

-j *ScanOffsetFileName*

Sometimes input images must be shifted to get the desired positioning on the page. The scan offset file contains the directions for shifting. The file has the format of

```
[attribute]
values
:
values
[attribute]
values
:
values
```

Currently, the recognized attributes are **[Units]** (values **millimeters**, **mm**, **inches**, **in**, **points**, **dots**, **pels**) **[Page_Offset_Type]** (values **crop** or **grow**) and **[Page_Offsets]**. The values for page offsets are in the format *FileName,Hhoriz,Vvert* Each entry refers to a file. The file names must be specified (or at least the leading comma must), but are currently ignored and the offset factors are applied to each file in turn. The *horiz* and *vert* values are the amount that the image is to be shifted, in the horizontal and vertical direction. The positive directions are down and right (that is, the origin is in the left upper corner of the page). The default units are millimeters. Like the values for the **-crop** option, the shifts are specified in the output space context.

Extra spaces and blank lines are allowed. Unrecognized attributes and their values are ignored. See the sample file **shift.sample**.

If the image is moved left or up, part of the bitmap is removed. If the image is moved down or right, removal is governed by the value of the **[Page_Offset_Type]** attribute. If **crop** is chosen, the transform removes the requisite amount from the right and bottom edges of the bitmap. If **grow** is chosen, the transform does not remove any space. The bitmap grows and the trimming, if any, is left to the printer. If the **-fit trim** option (the default) is specified, **[Page_Offset_Type]** defaults to **grow**. For **-fit scale**, **[Page_Offset_Type]** defaults to **crop**.

-l **{11i | yyy.yy[d | m | i | p]}**

Specifies the paper length. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. If the unit is dots, decimals (if any) are ignored. The default paper length is 11 inches. See options **-w** to set the paper width or **-paper** to set both dimensions at the same time.

-M **{0 | nnn}**

Limits the amount of memory available to **jpeg2afp**. *nnn* is the maximum amount of memory in kilobytes. A value of **0** means there is

no memory limit. *nnn* can be set from **0** to the maximum value that AIX allows. The default is **0**.

-ms {10 | *nnn*}

Requires that at least *nnn* kilobytes of disk space be available on the file system that contains the output file. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **10**. See option **-msf**.

-msf {0.1 | *x.xxx*}

The number *x.xxx* is a real number between 0 and 1. It denotes the minimum space that must be left unused on the file system containing the output file. The space is given as a fraction of the total space in the file system. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **0.1**. See option **-ms**.

-noterm See **[-term | -noterm]**.

-nov See **[-v | -nov]**.

-o *FileName*

Optional output file name. Specify **-** for standard output.

-outbits *NumberOfOutputBits*

Sets the number of bits per pel in output. This value must be **1**, **4**, **8**, or **24**. If the output image type is IOCA FS10 or IM1, the number of output bits is set to **1** and this option is ignored. For IOCA FS11 output, the default is **24**. Note that this number represents the maximum number of bits used per pel. Thus, even if the number of bits is set to **24**, a 4-bit grayscale image is still displayed in 4-bit format.

-outcolor {*rgb* | *ycbcr* | *ycrcb*}

Sets the output color model to RGB, YCbCr, or YCrCb if the image type is IOCA FS11 and the number of output bits is 24. Otherwise, this option is ignored. The default is **ycbcr**.

-p {*even* | *odd* | *nn* | *nn-mm* | *nn-*}

Specifies that the output should only contain the specified pages. If no **-p** option is given, all the pages are output. Multiple **-p** options may be specified. Their effect is cumulative. Regardless of the order in which the pages are specified, they are always printed in ascending order. The recognized values are:

even	Print all even pages
odd	Print all odd pages
<i>nn</i>	Print page <i>nn</i>
<i>nn-mm</i>	Print pages <i>nn</i> to <i>mm</i> , inclusive.
<i>nn-</i>	Print all pages starting with page <i>nn</i>

Pages are numbered starting with 1.

-pagetype {*page* | *overlay* | *ovly* | *pseg* | *object*}

Sets the output page type to be page, overlay, page segment or object. The same page type is set for every page in the output. Thus, unless option **-p** is used to select a single page, multiple overlays, page segments or overlays are stored in the output file. The default is **page**. See option **-a**.

-paper {a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p]}
 Specifies the output paper size. The supported values are:

a3 A3 format (297 by 420 mm or 11.69 by 16.54 inches)

a4 A4 format (210 by 297 mm or 8.27 by 11.69 inches)

a5 A5 format (148 by 210 mm or 5.83 by 8.27 inches)

letter 8.5 by 11 inches (216 by 279 mm)

folio 8.5 by 13.0 inches (216 by 330 mm)

legal 8.5 by 14.0 inches (216 by 356 mm)

ledger 11.0 by 17.0 inches (279 by 432 mm)

xx.xx,yy.yy[d | m | i | p]

Horizontal and vertical page dimensions. The optional units are dots (pels), millimeters, inches, or points.

The default paper size is letter. If **-paper** is not used, the paper size is increased, if necessary, to contain the output image.

See options **-l**, **-w**, and **-scale**.

-r {300 | nnn}

The output device resolution, specified in dots per inch. The default is **300**.

This option is equivalent to the **default-printer-resolution** document attribute on the **pdpr** command.

-respath *directory[:directory...]*

Sets the search path for resource files, such as the scan offset files and grayscale calibration curve files. If a resource file name is specified as a relative name (does not start with a */*), the transform searches every directory in the path, in the order specified in the path, until it finds the file (or fails). See options **-j** and **-gcorr** for scan offsets and grayscale calibration curve. The default is the current directory.

-rot {0 | 90 | 180 | 270[p | i]}

The image is rotated in the clockwise direction by the amount specified. The default is zero, that is, no rotation.

If **p** is specified, the transform sets the output datastream in such a way that the printer performs the actual image rotation. If **i** is specified, the transform rotates the output bitmap. When **i** is chosen, the transform takes much longer to run and uses much more memory. If no letter is specified, the default or any previous value (such as the value specified in the configuration file) remains in force. The default is **p**.

-scale {orig | a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p] | xxx%}

Specifies the output image size. The image is scaled to this size and centered in the area defined by the paper size and margin options. The supported values are:

orig Preserve the input image size, regardless of the printable paper area.

a3 A3 format (297 by 420 mm or 11.69 by 16.54 inches)

a4 A4 format (210 by 297 mm or 8.27 by 11.69 inches)

a5	A5 format (148 by 210 mm or 5.83 by 8.27 inches)
letter	8.5 by 11 inches (216 by 279 mm)
folio	8.5 by 13.0 inches (216 by 330 mm)
legal	8.5 by 14.0 inches (216 by 356 mm)
ledger	11.0 by 17.0 inches (279 by 432 mm)

xx.xx,yy.yy[d | m | i | p]

Horizontal and vertical image dimensions. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**.

xxx% Magnification relative to the original image size. Numbers below 100% mean reduction, while Numbers above 100% mean enlargement. For example, **-scale 200%** causes the output image to be twice as long and twice as wide as the input image.

The default image size is **orig**.

-sgcorr *FileName*

Specifies the name of the scanner-related calibration file. To use this option in the calibration process (with the option **-calib**) you must specify a single file name. If **-calib** is absent, this option is ignored.

A detailed discussion of **-sgcorr** is beyond the scope of this document.

[-term | -noterm]

Disables (**-term**) or enables (**-noterm**) error recovery.

- When error recovery is disabled, on encountering an error in a JPEG file, the transform terminates with an error message and a nonzero return code.
- When error recovery is enabled, the errors in JPEG files are treated as non-fatal. The transform attempts to recover with the next file. The return code is zero.

The default is **-noterm**.

-thresh *FileName*

Specifies a file that contains a PostScript Type 1 or Type 3 halftone dictionary. Alternatively, the PostScript code can specify the **setscreen** operator instead of a Type 1 dictionary. The halftone cell in the dictionary is used to overwrite the default ordered dither clustered dot halftone cell. If the PostScript code contains a transfer function, either in the halftone dictionary or specified by the **settransfer** operator, the current grayscale correction curve is overwritten as if **-gcorr** were used.

[-v | -nov]

Turns verbose mode on (**-v**) or off (**-nov**).

- When verbose mode is on, the transform prints a message as it opens each resource file, then echoes the command line, then prints a message for each file name as it is processed.
- When verbose mode is off, the transform prints only error messages.

The default is **-nov**.

-w {**8.5i** | *yyy.yy*[**d** | **m** | **i** | **p**]}

Specifies the paper width. The optional units are **d**ots (pels), **m**illimeters, **i**nches, or **p**oints. The default unit is dots. The default page width is 8.5 inches. See options **-l** to set the paper length or **-paper** to set both dimensions at the same time.

-wrkdir *WorkDirectoryName*

Input to **jpeg2afp** from **stdin** must be cached on disk before it can be processed. This option specifies which directory to use for the caching of the standard input. If this option is absent or the directory cannot be opened, the transform first tries to use **/var/psf/jpeg2afp** as the working directory and, if **/var/psf/jpeg2afp** is absent, uses **/tmp**.

The **stdin** cache file is never visible to the user because it is immediately unlinked after creation. Thus, the cache file is always deleted when **jpeg2afp** finishes execution, even if **jpeg2afp** is killed or otherwise terminates in error.

-x {**0** | *nnn.nn*[**d** | **m** | **i** | **p**]}

Specifies the left margin. The optional units are **d**ots (pels), **m**illimeters, **i**nches, or **p**oints. The default unit is dots. The default is zero (no margin).

-y {**0** | *nnn.nn*[**d** | **m** | **i** | **p**]}

Specifies the top margin. The optional units are **d**ots (pels), **m**illimeters, **i**nches, or **p**oints. The default unit is dots. The default is zero (no margin).

-z

Signifies that a list of files to be processed is submitted from standard input. See also options **-f** and **@**.

line2afp Command: Transforms S/370 Line Data and ASCII Data to AFP

Syntax

```
line2afp [cc=value] [cctype=value]
         [chars=FontName[, ...]] [fdeflib=PathList] [fileformat=value]
         [fontlib=PathList] formdef=FormDefinitionName [imageout=value]
         [inpexit=ProgramName] [inputdd=FileName] [msgdd=FileName]
         [outexit=ProgramName] [outputdd=FileName]
         [ovlylib=PathList] pagedef=PageDefinitionName
         [parmdd=FileName] [pdeflib=PathList]
         [prmode=value] [pseglib=PathList] [resexit=ProgramName]
         [reslib=PathList] [trc=value] [userlib=PathList]
```

If you need guidance in passing the **line2afp** command option syntax through the shell, refer to the documentation for the shell you are using in the *AIX for RS/6000 Commands Reference*.

Table 7 shows the **line2afp** command options that specify resource names or resource directories, and the corresponding AIX print command options and InfoPrint attributes:

Table 7. *line2afp* Resource Options and Corresponding Options and Attributes

line2afp option	-o flag option	Document attribute	Physical printer attribute
chars	-ochars	chars	
fdeflib	-orespath	resource-context-form-definition	resource-context-form-definition
fontlib	-osrchfontlib	resource-context-font	resource-context-font
formdef	-oformdef	form-definition	form-definition
ovlylib	-orespath	resource-context-overlay	resource-context-overlay
pagedef	-opagedef	page-definition	
pdeflib	-opdeflib	resource-context-page-definition	resource-context-page-definition
pseglib	-orespath	resource-context-page-segment	resource-context-page-segment
reslib	-orespath	resource-context	
userlib	-ouserlib	resource-context-user	

For these options, you should specify the same value with the **line2afp** command as you specify to InfoPrint when you submit the print job or predefine for the physical printer where the job prints. In this way, the search paths and resources used at transform time are identical to the search paths and resources used at print time.

In addition to the usual command notational conventions, the **line2afp** command follows these additional rules. These rules apply to options you type at the command line. See also the **parmdd** option for the syntax of options contained in the **line2afp** option file.

- When the **line2afp** command processes any unrecognized or unsupported option, **line2afp** issues a message, ignores the option, and continues

processing any remaining options. The **line2afp** command then stops processing.

- Though the options themselves are not case-sensitive, associated values, such as file names, attribute names, and directory names *are* case-sensitive. For example,

```
formdef=F1MINE
```

is *not* the same as

```
formdef=f1mine
```

Be sure to specify these values in the case in which they exist in the file system (for external resources) or in the print file (for inline resources).

- If the same option is specified more than one time, the **line2afp** command uses the last value specified. For example, if you specify the following:

```
pagedef=P1MINE
```

```
pagedef=P1YOURS
```

the **line2afp** command uses page definition **P1YOURS** only.

Description

The **line2afp** command transforms S/370 line data, mixed-mode data, and ASCII files into the AFP (MO:DCA-P) data stream, so that you can print the file on an InfoPrint printer.

When you use the **line2afp** command to convert S/370 line data or ASCII data, you must specify a page definition (**pagedef** option). If the page definition names fonts, InfoPrint uses those fonts. If the page definition does not name any fonts, and if you want the file to print with more than one font, then the input file must contain table reference characters (TRCs), and you must:

- Specify **trc=yes**.
- Use **chars** to indicate the fonts to be associated with each TRC.

If the page definition does not specify fonts, and you have not specified any TRCs, your job will print, although the output may not be formatted correctly.

If the page definition does not name any fonts, and you want the whole file to print with one font, then you must:

- Specify **trc=no**.
- Use **chars** to indicate the single fonts in which the file should be printed.

If the page definition does not specify fonts, and you have not specified any TRCs, your job will print, although the output may not be formatted correctly.

If the page definition does not name any fonts, and you want the whole file to print with one font, then you must:

The **line2afp** command searches for resources in the following order:

1. Paths specified by the **userlib** option for miscellaneous user resources. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.

2. Paths specified by the **fdeflib**, **fontlib**, **ovlylib**, **pdeflib**, and **pseglib** options for specific types of resources.
3. Paths specified by the **reslib** option. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **-orespath** flag on an AIX print command, or with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. Paths specified by the **PSFPATH** environment variable.
5. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, and **resource-context-page-segment** physical printer attributes for specific types of resources.
6. The directory **/usr/lpp/psf/reslib**.
7. The directory **/usr/lpp/afpfonts**.
8. The directory **/usr/lpp/psf/fontlib**.

When the **line2afp** command finds more than one resource with the same name in the same directory, it selects the resource to be used depending on the file extension. Table 8 shows the order in which resources with the same name but different file extensions are used by **line2afp**.

Note: If a file name includes a period (.), the file extension is that part of the file name that follows the period. For example, the file extension of the file name **ARTWORK.PSEG3820** is **PSEG3820**.

Table 8 (Page 1 of 2). File Extensions for Resources

Type of Resource	File Extensions Searched (see note)
BCOCA (bar code) objects	1. No file extension
Code pages	1. No file extension 2. FONT3820 3. FONT38PP 4. CDP
Coded fonts	1. No file extension 2. FONT3820 3. FONT38PP 4. CFT
Font character sets, 240-pel resolution	1. No file extension 2. 240 3. FONT3820 4. FONT38PP
Font character sets, 300-pel resolution	1. 300 2. FONT300 3. No file extension
Fonts, outline	1. OLN 2. FONTOLN
Form definitions	1. No file extension 2. FDEF3820 3. FDEF38PP 4. FDE
GOCA (graphics) objects	1. No file extension

Table 8 (Page 2 of 2). File Extensions for Resources

Type of Resource	File Extensions Searched (see note)
IOCA (IO image) objects	1. No file extension
Overlays	1. No file extension 2. OVLY3820 3. OVLY38PP 4. OVL
Page definitions	1. No file extension 2. PDEF3820 3. PDEF38PP 4. PDE
Page segments	1. No file extension 2. PSEG3820 3. PSEG38PP 4. PSG 5. PSE

Note: All file extensions must be in upper case.

The PSF DSS automatically invokes **line2afp** whenever you submit a line-data or unformatted ASCII job. You can specify **document-format=line-data** or **document-format=ascii** on the **pdpr** command, or **-odatatype=line** or **-odatatype=ascii** on an AIX print command or the **lprafp** command, or you can allow InfoPrint to identify the data type.

Flags and Values

You can specify many of these flags and values with the **other-transform-options** attribute on the **pdpr** command or with the **enq -o**, **lp -o**, **qprt -o**, or **lprafp -o** command. See “pdpr Command: Submits Jobs” on page 56 and “Attributes for Documents and Default Documents” on page 403 or Chapter 3, “The -o Flag for AIX Print Commands” on page 101 for more information.

cc={yes | no}

Specifies whether the input file has carriage-control characters.

Values are:

yes The file contains carriage-control characters. **yes** is the default.

no The file does not contain carriage-control characters.

Carriage-control characters, if present, are located in the first byte (column) of each line in a document. They are used to control how the line will be formatted (single space, double space, triple space, and so forth). In addition, other carriage-controls can be used to position the line anywhere on the page. If there are no carriage-controls, single spacing is assumed.

This option and the **cctype** option, used together, are equivalent to the document attribute **carriage-control-type** on the **pdpr** command.

cctype={z | a | m}

Specifies the type of carriage-control characters in the input file. The **line2afp** command supports ANSI carriage-control characters in either ASCII or EBCDIC encoding, as well as machine carriage-control characters. The **line2afp** command does not allow a mixture of ANSI and machine carriage-control characters within a file. Values are:

- z** The file contains ANSI carriage-control characters that are encoded in ASCII. **z** is the default.

The carriage-control characters are the ASCII hexadecimal values that directly relate to ANSI carriage-controls, which cause the action of the carriage-control character to occur *before* the line is printed. For example, if the carriage-control character is zero (X'30'), which represents double spacing, double spacing will occur *before* the line is printed.

- a** The file contains ANSI carriage-control characters that are encoded in EBCDIC.

The use of ANSI carriage-control characters cause the action of the carriage-control character to occur *before* the line of data is printed. For example, if the carriage-control character is a zero (X'F0'), which represents double spacing, the double spacing will occur *before* the line is printed.

- m** The file contains machine code carriage-control characters that are encoded in hexadecimal format.

The use of machine code carriage-control characters cause the action of the carriage-control character to occur *after* the line of data is printed. For example, if the carriage-control character is a X'11', which represents double spacing, the line will be printed and the double spacing will occur *after* the line is printed. In addition, machine code carriage-control has a set of carriage-control characters that perform the action, but do not print the associated line.

If you specify **cc=yes** but you do not specify **cctype**, the **line2afp** command assumes that the file contains ANSI carriage-control characters encoded in ASCII.

If you are not sure which type of carriage-control characters are in your input file, consult your system support group.

This option and the **cc** option, used together, are equivalent to the document attribute **carriage-control-type** on the **pdpr** command.

chars=FontName1, FontName2, FontName3, FontName4

Specifies the file name of from one to four coded fonts to be used in processing the print file. A coded font specifies a character set and code page pair.

The value is:

FontName The name of the desired coded font. The font name is limited to 4 alphanumeric or national characters, and should not include the 2-character prefix of the coded-font name (**X0** through **XG**). The font name is case-sensitive.

If you use the ASCII fonts that are supplied with InfoPrint, use the 4-character names. If you use your own coded font that has a file name with more than 6 characters (including the Xn prefix), then do one of the following:

- Rename the font file to a shorter name. For example,
mv X0423002 X04202

- Copy the font file to a file that has a shorter name. For example,
cp X0423002 X04202
- Link the original font file to a shorter name. For example,
ln -s X0423002 X04202

When you use the **line2afp** command to convert S/370 line-mode data or unformatted ASCII data, you must specify a page definition (**pagedef** option). If the page definition names some fonts, the **line2afp** command uses those fonts, and ignores the **chars** option. If the page definition does not name any fonts (like the sample page definitions supplied with InfoPrint), and if you want the file to print with more than one font, then the input file must contain table reference characters, and you must:

- Specify **trc=yes**.
- Use **chars** to indicate the fonts to be associated with each table reference character (TRC). *Fontname1* is associated with TRC 0, *FontName2* is associated with TRC 1, and so on.

If the page definition does not name any fonts, and you want the whole file to print with only one font, then the input file must not contain table reference characters and you must:

- Specify **trc=no**.
- Use **chars** to indicate the single font in which the file should be printed.

Consider the following when specifying fonts with the **chars** option:

- If your input file is unformatted ASCII, you can do one of the following:
 - Specify a font that has the appropriate ASCII code points. To specify a font search path, either use the **fontlib** option to specify it explicitly, or set the **PSFPATH** environment variable to search the appropriate directories. See “IBM AFP Fonts for ASCII Data” in *AFP Conversion and Indexing Facility: User's Guide* for a list of suggested ASCII fonts.
 - Use the **apka2e** or **asciinpe** input record exit programs to convert the ASCII code points in the input file into EBCDIC, and use EBCDIC fonts. To do this, use the **inpexit** option, specifying:

```
inpexit=/usr/lpp/psf/bin/apka2e
```

If the ASCII input file contains form feeds or carriage returns, specify:

```
inpexit=/usr/lpp/psf/bin/asciinpe
```

- You can specify fonts with the **chars** option only if you want the entire file printed in a single printing direction. The **line2afp** command uses the fonts that have 0° character rotation for the specified direction. When a file requires fonts with more than one print direction or character rotation, you must specify the fonts in the page definition.
- You can specify from one to four fonts with the **chars** option. If you specify more than one font with the **chars** option, then the input file

must contain table reference characters, and you must specify **trc=yes**.

- If you use **chars** to specify fonts, but you also use the **pagedef** option to specify a page definition that names fonts, the **chars** option is ignored. Therefore, if your page definition names fonts, you should not use **chars**.
- If you do not specify a **chars** option, and if no fonts are contained in the page definition you specified, the **line2afp** command uses the default font that is set in the printer's hardware.

This option is equivalent to the document attribute **chars** on the **pdpr** command.

fdeflib=PathList

Specifies the directories in which form definitions are stored. The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths. The **line2afp** command searches the paths in the order in which they are specified.

The **line2afp** command searches for the form definition in the following order:

1. The paths you specified with **userlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
2. The paths you specified with **fdeflib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-form-definition** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
3. The paths you specified with **reslib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **-orespath** flag on an AIX print command, or with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. The paths specified by the **PSFPATH** environment variable.
5. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-form-definition** physical printer attribute.
6. The directory **/usr/lpp/psf/reslib**.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same form definition search path on both sides of the pipe, unless you are sure that the same form definition will be found by **line2afp** and InfoPrint using each program's default search path.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by specifying **-odatatype=line** with an AIX print command, you must specify the form definition search path with **-orespath** instead of **fdeflib**. For example:

```
enq -odatatype=line -oformdef=myfd -opagedef=mypdef
    -orespath=/home/greg/resources -Pprinter myfile
```

This option is equivalent to the document attribute **resource-context-form-definition** on the **pdpr** command.

fileformat={record | record,*n* | stream | stream,(newline=X'*nn*')}

Specifies the format of the input file. If you do not specify **fileformat**, the **line2afp** command uses **stream** as the default.

The **fileformat** option does not apply to input files that are resources. Resource files are in MO:DCA-P or AFP data stream format, and the **line2afp** command automatically determines that the file is a resource.

Values are:

record The input file is formatted in S/370 record format, where the first two bytes of each line specify the length of the line. Files with **record** format typically are MVS or VM files that have a variable record format and are downloaded to AIX.

record,*n* The input file is formatted in such a way that each record (including AFP data stream and MO:DCA-P records) is a fixed length, *n* bytes long. The value of *n* is a number from 1 to 32767. The encapsulated size of the AFP structured field must be less than the size of *n*. Files with **record,*n*** format typically are MVS or VM files that have a fixed record format and are downloaded to AIX.

stream The input file has no length information; it is a stream of data separated by a newline character. The AFP portion (if any) of the input file has its length information encapsulated in the structured field. Files with **stream** format typically come from a workstation operating system like AIX, OS/2, or DOS.

The **line2afp** command examines the first six bytes of the first line data record of the input file, to determine whether the input file is ASCII or EBCDIC. If **line2afp** determines that the input file is ASCII, **line2afp** looks for ASCII newline characters (X'0A') to delimit the end of a record. If **line2afp** determines that the input file is EBCDIC, **line2afp** looks for EBCDIC newline characters (X'25') to delimit the end of a record. The **line2afp** command does not include newline characters in the MO:DCA-P data stream that **line2afp** produces.

stream is the default.

stream,(newline=X'*nn*')

Use **newline** to specify a hexadecimal value for the newline character in the input data file.

You can use **newline** when **line2afp**'s algorithm cannot determine the correct newline character (if blanks are at the beginning of the file, for instance). Or you can use **newline** if you want to specify a newline character that is not the standard default. For example, you could use **newline** as follows:

```
fileformat=stream,(newline=X'0D')
```

If **newline** is not specified, **line2afp** uses the algorithm specified under **fileformat=stream**.

This option is equivalent to the document attribute **new-line-options** on the **pdpr** command.

fontlib=PathList

Specifies the directories in which fonts are stored.

The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths. The **line2afp** command searches the paths in the order in which they are specified.

The **line2afp** command searches for the fonts in the following order:

1. The paths you specified with **userlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
2. The paths you specified with **fontlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **-osrchfontlib** flag on an AIX print command, or with the **resource-context-font** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
3. The paths you specified with **reslib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-font** physical printer attribute.
5. The paths specified by the **PSFPATH** environment variable.
6. The directory **/usr/lpp/psf/reslib**.
7. The directory **/usr/lpp/afpfonts**.
8. The directory **/usr/lpp/psf/fontlib**.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same font search path on both sides of the pipe, unless you are sure that the same fonts will be found by **line2afp** and InfoPrint using each program's default search path.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by specifying **-odatatype=line** with an AIX print command, you must specify the font search path (if any) with **-osrchfontlib** instead of **fontlib**, as shown in the following example:

```
enq -odatatype=line -osrchfontlib=/home/greg/resources
    -oformdef=myfdef -opagedef=mypdef -Pprinter myfile
```

Note: If the input file is ASCII data that you want to format with a page definition, you can do one of the following:

- Specify a font that has the appropriate ASCII code points. To specify a font search path, either use the **fontlib** option to specify it explicitly, or set the **PSFPATH** environment variable to search the appropriate directories.
- Use the **apka2e** or **asciipe** input record exit to convert the ASCII code points in the input file into EBCDIC, and use EBCDIC fonts. To do this, use the **inpexit** option, specifying:

```
inpexit=/usr/lpp/psf/bin/apka2e
```

or

```
inpexit=/usr/lpp/psf/bin/asciipe
```

This option is equivalent to the document attribute **resource-context-font** on the **pdpr** command.

formdef=*FormDefinitionName*

Specifies the file name of the form definition. A form definition defines how a page of data is placed on a form, the number of copies of a page, any modifications to that group of copies, the paper source, and duplexing. The form definition is actually used at print time, not at transform time.

The value is:

FormDefinitionName Any valid form definition file name. The *FormDefinitionName* can be 1 to 8 alphanumeric or national characters, including the two-character prefix, if there is one. The *FormDefinitionName* is case-sensitive.

Note: If the file name of the form definition includes a file extension, do not use the file extension when specifying the form definition. For example, to use a form definition named **memo.FDEF38PP**, specify **formdef=memo**.

The **line2afp** command requires a form definition in order to process the input file (even though the form definition actually gets used at print time). If you do not specify **formdef=**, or if you specify **formdef=** without a form definition file name, the **line2afp** command will not work.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same form definition on both sides of the pipe. If you are using the default form definition for the target printer, you do not need to specify a form definition with the AIX print command or **pdpr** command.

The form definition you use may be located:

- In an AIX directory
- Inline in the file (that is, within the file itself)

If the form definition file is in an AIX directory, use the **userlib** option or **dfelib** option to specify the path to the file. For example:

```
formdef=memo userlib=/usr/afp/resources
```

or

```
formdef=memo dfelib=/usr/lib/formdefns
```

If the form definition is an inline resource, you must do the following:

- Specify **cc=yes** to indicate that the file contains carriage-control characters.
- Specify **formdef=FormDefinitionName**, where *FormDefinitionName* is the name of the inline form definition; or specify **formdef=dummy**.

If you specify **formdef=dummy** but the file does not include an inline form definition, the **line2afp** command looks for the form definition named **dummy**.

If you use **formdef** to specify an inline form definition that is different than the actual form definition used inline, the **line2afp** command looks for the **formdef** value instead of the inline form definition.

An input file can contain multiple form definitions, but only one form definition can be used for printing. If a file contains more than one inline form definition, and you specify **formdef=FormDefinitionName**, **line2afp** uses the first inline form definition named *FormDefinitionName*. If a file contains more than one inline form definition, and you specify **formdef=dummy**, **line2afp** uses the first inline form definition in the input file.

This option is equivalent to the document attribute **form-definition** on the **pdpr** command.

imageout={asis | ioca}

Specifies the format of the image data produced by the **line2afp** command in the output document.

Values are:

asis The **line2afp** command produces all image data in the same format that it was in the input file.

ioca The **line2afp** command produces all image data in the Image Object Content Architecture uncompressed format. **ioca** is the default.

This option is similar to the document attribute **image-out-format** on the **pdpr** command.

inpexit=ProgramName

Specifies the name or the full path name of the input record exit program. The **line2afp** command calls this program for every record (every line) it reads from the input file (**inputdd**). If you specify the file name without a path, the **line2afp** command searches for the exit program in the paths specified by the **PATH** environment variable. If you do not specify this option, the **line2afp** command will not use an input record exit program.

The value is:

ProgramName Any valid input record exit program name. The exit program name is case-sensitive.

If the input file is unformatted ASCII, but the fonts you are using contain EBCDIC, not ASCII, code points (for example, you specify **chars=GT15**), you can specify:

/usr/lpp/psf/bin/apka2e

Converts ASCII stream data to EBCDIC stream data.

/usr/lpp/psf/bin/asciinpe

Converts unformatted ASCII data into a record format that contains an American National Standards Institute (ANSI) carriage control character in byte 0 of every record, and then converts the ASCII stream data to EBCDIC stream data.

If your input file uses fonts that have ASCII code points (for example, you specify **chars=H292**, or any of the fonts listed in “IBM AFP Fonts for ASCII Data” in *AFP Conversion and Indexing Facility: User's Guide*) you should *not* use the **apka2e** or **asciinpe** exit programs. However, if your unformatted ASCII file contains carriage returns and form feeds, you may want to specify the following exit program supplied with InfoPrint:

/usr/lpp/psf/bin/asciinp

Converts unformatted ASCII data that contains carriage returns and form feeds into a record format that contains an American National Standards Institute (ANSI) carriage control character. This exit encodes the ANSI carriage control character in byte 0 of every record.

This option is equivalent to the document attribute **input-exit** on the **pdpr** command.

inputdd=FileName

Specifies the full path name of the input file that the **line2afp** command will process. If you do not specify **inputdd**, the **line2afp** command uses standard input.

You cannot use **inputdd=FileName** on the command line with the **enq**, **lp**, **qprt**, or **lprafp** commands, or with the **other-transform-options** attribute on the **pdpr** command. You can only use **inputdd=FileName** with the **line2afp** command.

msgdd=FileName

Specifies the name or the full path name of the file where the **line2afp** command writes error messages. If you specify the file name without a path, the **line2afp** command puts the error file into your current directory. If you do not specify **msgdd**, the **line2afp** command uses standard error for its message output.

This option is equivalent to the document attribute **transform-message-file-name** on the **pdpr** command.

outexit=ProgramName

Specifies the name or the full path name of the output record exit program. The **line2afp** command calls this program for every output record (every line) it writes to the output document file (**outputdd**). If you specify the file name without a path, the **line2afp** command searches for the file name in the paths specified by the PATH environment variable. If you do not specify this option, the **line2afp** command will not use an output record exit program.

The value is:

ProgramName Any valid output record exit program name. The exit program name is case-sensitive.

This option is equivalent to the document attribute **output-exit** on the **pdpr** command.

outputdd=FileName

Specifies the name or the full path name of the output document file. If you specify the file name without a path, the **line2afp** command puts the output file into your current directory. If you do not specify **outputdd**, the **line2afp** command writes the output to standard output.

You cannot use **outputdd=FileName** on the command line with the **enq**, **lp**, or **qprt** commands, or with the **other-transform-options** attribute on the **pdpr** command. You can only use **outputdd=FileName** with the **line2afp** command.

This option is equivalent to the document attribute **transform-output-file-name** on the **pdpr** command.

ovlylib=PathList

Specifies the directories in which overlays are stored. The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths. The **line2afp** command searches the paths in the order in which they are specified.

The **line2afp** command searches for an overlay in the following order:

1. The paths you specified with **userlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
2. The paths you specified with **ovlylib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-overlay** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
3. The paths specified in **reslib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **-orespath** flag on an AIX print command, or with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-overlay** physical printer attribute.
5. The paths specified by the **PSFPATH** environment variable.
6. The directory **/usr/lpp/psf/reslib**.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same overlay search path on both sides of the pipe, unless you are sure that the same overlays will be found by **line2afp** and InfoPrint using each program's default search path.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by specifying **-odatatype=line** with an AIX print command, you must specify the overlay search path with **-orespath** instead of **ovlylib**. For example:

```
enq -odatatype=line -oformdef=myfd -opagedef=myspd
    -orespath=/home/greg/resources -Pprinter myfile
```

This option is equivalent to the document attribute **resource-context-overlay** on the **pdpr** command.

pagedef=*PageDefinitionName*

Specifies the file name of the page definition. A page definition defines the page format that the **line2afp** command uses to compose the input file into pages. The page definition is actually used at transform time, not at print time.

The value is:

PageDefinitionName Any valid page definition file name. The *PageDefinitionName* can be 1 to 8 alphanumeric or national characters, including the two-character prefix, if there is one. The **pdefname** is case-sensitive.

Note: If the file name of the page definition includes a file extension, do not use the file extension when specifying the page definition. For example, to use a page definition named **memo.PDEF38PP**, specify **pagedef=memo**.

The **line2afp** command requires a page definition in order to process the input file. If you do not specify **pagedef=**, or if you specify **pagedef=** without a page definition file name, the **line2afp** command will not work.

The page definition you use may be located:

- In an AIX directory
- Inline in the file (that is, within the file itself)

If the page definition file is in an AIX directory, use the **userlib** option or **pdeflib** option to specify the path to the file. For example:

```
pagedef=memo userlib=/usr/afp/resources
```

or

```
pagedef=memo pdeflib=/usr/lib/pagedefns
```

If the page definition is an inline resource, you must do the following:

- Specify **cc=yes** to indicate that the file contains carriage-control characters.
- Specify **pagedef=PageDefinitionName**, where *PageDefinitionName* is the name of the inline page definition; or specify **pagedef=dummy**.

If you specify **pagedef=dummy** but the file does not include an inline page definition, the **line2afp** command looks for the page definition named **dummy**.

If you use **pagedef** to specify an inline page definition that is different than the actual page definition used inline, the **line2afp** command looks for the **pagedef** value instead of the inline page definition.

An input file can contain multiple page definitions, but only one page definition can be used by the **line2afp** command. If a file contains more than one inline page definition, and you specify

pagedef=PageDefinitionName, **line2afp** uses the first inline page definition named *PageDefinitionName*. If a file contains more than one inline page definition, and you specify **pagedef=dummy**, the **line2afp** command uses the first inline page definition in the input file.

This option is equivalent to the document attribute **page-definition** on the **pdpr** command.

parmdd=FileName

Specifies the name or the full path name of a file that contains the **line2afp** options and their values. If you specify the file name without a path, the **line2afp** command searches for the file name in your current directory.

You may find it convenient to put the **line2afp** options and values into a file, so that you do not have to type all of them on the command line whenever you use **line2afp**.

Values are:

FileName The name of the file containing **line2afp** command options and values.

Notes:

1. The beginning delimiter for comments is `/*`. For example:

```
formdef=F1TEMP /* Temporary formdef
formdef=F1PROD /* Production-level formdef
```

Comments can appear anywhere, but the **line2afp** command ignores all information in the line following the `/*` character string.

2. Each option must be on a separate line. For example:

```
chars=GT10 cctype=a /* This is NOT allowed.
```

3. If the option file contains the name of the input file (**inputdd=FileName**), you cannot specify the option file with an AIX print command's **-o** flag or with the **other-transform-options** attribute on the **pdpr** command. For example, these commands are not valid:

```
enq -odatatype=line -oparmdd=myparms
pdpr -x "document-format=line-data
      other-transform-options='parmdd=myparms'"
```

However, these are valid:

```
line2afp parmdd=myparms | enq
line2afp parmdd=myparms | pdpr
```

pdeflib=PathList

Specifies the directories in which page definitions are stored.

The value is:

PathList Any valid search path. You must use a colon (`:`) to separate multiple paths. The **line2afp** command searches the paths in the order in which they are specified.

The **line2afp** command searches for a page definition in the following order:

1. The paths you specified with **userlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
2. The paths you specified with **pdeflib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-page-definition** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
3. The paths specified in **reslib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **-orespath** flag on an AIX print command, or with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-page-definition** physical printer attribute.
5. The paths specified by the **PSFPATH** environment variable.
6. The directory **/usr/lpp/psf/reslib**.

This option is equivalent to the document attribute **resource-context-page-definition** on the **pdpr** command.

prmode={SOSI1 | SOSI2 | aaaaaaa}

Specifies the type of data in the input file and whether the **line2afp** command must perform optional processing of that data.

Values are:

SOSI1 Specifies that each shift-out, shift-in code be converted to a blank and a Set Coded Font Local text control.

SOSI2 Specifies that each shift-out, shift-in code be converted to a Set Coded Font Local text control.

aaaaaaa Any 8-byte alphanumeric string. This value is supplied to all of the ACIF user exits. (Refer to *AFP Conversion and Indexing Facility: User's Guide* for information about ACIF user exits.)

For the **SOSI** process modes to work correctly, the first font specified in the **chars** option (or in a font list in a page definition) must be a single-byte font, and the second font must be a double-byte font.

This option is equivalent to the document attribute **shift-out-shift-in** on the **pdpr** command.

pseglib=PathList

Specifies the directories in which page segments and BCOCA, GOCA, and IOCA objects are stored.

The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths. The **line2afp** command searches the paths in the order in which they are specified.

The **line2afp** command searches for page segments in the following order:

1. The paths you specified with **userlib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-user** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
2. The paths you specified with **pseglib**, if any. If **line2afp** is invoked as part of submitting a print job, the paths you specified with the **resource-context-page-segment** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
3. The paths specified in **reslib**, if any. If the **line2afp** command is invoked as part of submitting a print job, the paths you specified with the **-orespath** flag on an AIX print command, or with the **resource-context** attribute on the **pdpr** command, in an attributes file, or in a default document, are also searched.
4. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-page-segment** physical printer attribute.
5. The paths specified by the **PSFPATH** environment variable.
6. The directory **/usr/lpp/psf/reslib**.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same page segment search path on both sides of the pipe, unless you are sure that the same page segments will be found by **line2afp** and InfoPrint using each program's default search path.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by specifying **-odatatype=line** with an AIX print command, you must specify the page segment search path with **-orespath** instead of **pseglib**. For example:

```
enq -odatatype=line -oformdef=myfd -opagedef=mypd
    -orespath=/home/greg/resources -Pprinter myfile
```

This option is equivalent to the document attribute **resource-context-page-segment** on the **pdpr** command.

resexit=ProgramName

Specifies the name or the full path name of the resource exit program. This is the program the **line2afp** command calls each time it attempts to retrieve a requested resource from a directory. If you specify the file name without a path, the **line2afp** command searches for the file name in the paths specified by the **PATH** environment variable. If you do not specify this option, the **line2afp** command does not use a resource exit program. The exit program name is case-sensitive.

The value is:

ProgramName Any valid resource exit program name.

This option is equivalent to the document attribute **resource-exit** on the **pdpr** command.

reslib=PathList

Specifies the paths for the system resource directories. System resource directories typically contain resources that are shared by many

users. The directories can contain any AFP resources (fonts, page segments, overlays, page definitions, or form definitions).

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by piping **line2afp**'s output to an AIX print command or the **pdpr** command, you should specify the same resource search path on both sides of the pipe, unless you are sure that the same resources will be found by **line2afp** and InfoPrint using each program's default search path.

For S/370 line data and for ASCII data that you want to format with a page definition, if you are transforming and printing a file by specifying **-odatatype=line** with an AIX print command, you must specify the search path for AFP resources with **-orespath** instead of **reslib**. For example:

```
enq -odatatype=line -ofordef=myfd -opagedef=mypd
    -orespath=/home/greg/resources -Pprinter myfile
```

The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths.

The **line2afp** command searches for resources in the following order:

1. Paths specified by the **userlib** option for miscellaneous user resources, or the **resource-context-user** attribute on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.
2. Paths specified by the **fdeflib**, **fontlib**, **ovlylib**, **pdeflib**, and **pseglib** options for specific types of resources or the equivalent options of an AIX print command or equivalent document attributes on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.
3. Paths specified by the **reslib** option, or the **-orespath** flag of an AIX print command or the **resource-context** attribute on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.
4. Paths specified by the **PSFPATH** environment variable.
5. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, and **resource-context-page-segment** physical printer attributes for specific types of resources.
6. The directory **/usr/lpp/psf/reslib**.
7. For fonts, the directory **/usr/lpp/afpfonts**.
8. For fonts, the directory **/usr/lpp/psf/fontlib**.

This option is equivalent to the document attribute **resource-context** on the **pdpr** command.

trc={yes | no}

Specifies whether the input file contains table reference characters (TRCs). Some applications may produce output that uses different fonts on different lines of a file by specifying TRCs at the beginning of each line after the carriage-control character, if one is present.

Values are:

- yes** The input file contains table reference characters.
- no** The input file does not contain table reference characters. **no** is the default.

Consider the following when you use TRCs:

- The order in which the fonts are specified in the **chars** option establishes which number is assigned to each associated TRC. For example, the first font specified is assigned 0, the second font 1, and so on.
- If you specify **trc=yes** but TRCs are not contained in the file, the **line2afp** command interprets the first character (or second, if carriage-control characters are used) of each line as the font identifier. Consequently, the font used to process each line of the file may not be the one you expect, and one byte of data will be lost from each line.
- If you specify **trc=no** or you do not specify **trc** at all, but your data contains a TRC as the first character (or second if carriage-control characters are used) of each line, the **line2afp** command interprets the TRC as a text character in the processed output, rather than using it as a font identifier.

This option is equivalent to the document attribute **table-reference-characters** on the **pdpr** command.

userlib=PathList

Specifies the names of user directories containing AFP resources for processing the input file. The directories can contain any AFP resources (fonts, page segments, overlays, page definitions, or form definitions).

By convention, these resources are typically used by one user, as opposed to the system resources (specified with the **reslib** option) that are shared by many users. Therefore, you should use the **userlib** option to specify resources that are not retrieved with the **fdeflib**, **fontlib**, **ovlylib**, **pdeflib**, or **pseglib** options.

The value is:

PathList Any valid search path. You must use a colon (:) to separate multiple paths.

The **line2afp** command searches for resources in the following order:

1. Paths specified by the **userlib** option, or the **resource-context-user** attribute on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.
2. Paths specified by the **fdeflib**, **fontlib**, **pdeflib**, **pseglib**, **ovlylib**, options for specific types of resources or the equivalent options of an AIX print command or equivalent document attributes on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.
3. Paths specified by the **reslib** option, or the **-orespath** flag of an AIX print command or the **resource-context** attribute on the **pdpr** command if **line2afp** was invoked as part of submitting a print job.

4. Paths specified by the **PSFPATH** environment variable.
5. If **line2afp** is invoked as part of submitting a print job, the paths specified with the **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, and **resource-context-page-segment** physical printer attributes for specific types of resources.
6. The directory **/usr/lpp/psf/reslib**.
7. For fonts, the directory **/usr/lpp/afpfonts**.
8. For fonts, the directory **/usr/lpp/psf/fontlib**.

Examples

- To print a “flat” ASCII file called `timesheet` that does not contain carriage controls, on the InfoPrint printer named `servC-lp`, enter:

```
pdpr -p servC-lp -x "document-format=line-data
  form-definition=FDEF1 page-definition=PDEF3
  carriage-control-type=none" timesheet
```

Because you specified `document-format=line data`, InfoPrint invokes the **line2afp** command. Because you specified `form-definition=FDEF1`, the **line2afp** command uses the FDEF1 form definition. Because you specified `page-definition=PDEF3`, the **line2afp** command uses the PDEF3 page definition.

If the PDEF3 page definition specifies 2-up printing, then the `timesheet` file prints 2-up — that is, with two “pages” printed side by side on the same physical page.

- Assume that you want to print a S/370 line data file called `statements`. Assume that the file contains ANSI carriage-control characters.

To print this file on the InfoPrint printer named `servA-lp`; use form definition FDEF6 in your current directory (`/usr/liz/fdefs`) and use page definition P1USER10 which might be in the directory `/usr/res/pdefs1` or in the directory `/usr/res/pdefs2`, enter:

```
pdpr -p servA-lp -x "document-format=line-data form-definition=FDEF6
  resource-context=/usr/liz/fdefs page-definition=P1USER10
  resource-context-page-definition=/usr/res/pdefs1:/usr/res/pdefs2
  carriage-control-type=ansi-ebcdic new-line-options=record"
  /usr/370/statements
```

- Because you specified `document-format=line data`, InfoPrint invokes the **line2afp** command.
- Because you specified `page-definition=P1USER10`, the **pdpr** command tells the **line2afp** command to use the page definition named P1USER10.
- Because you specified `resource-context-page-definition`, the **pdpr** command tells the **line2afp** command to search the two directories you specified for the page definition.
- Because you specified `form-definition=FDEF6`, the **pdpr** command tells the **line2afp** command to use the form definition named FDEF6.
- Because you specified `carriage-control-type=ansi-ebcdic`, and `new-line-options=record`, the **pdpr** command gives **line2afp** information about the data stream format of `statements`.

- Suppose you downloaded a file called `myfile` from a S/370 host to the RS/6000. The file transfer process converted the file's EBCDIC encoding to ASCII; the file still retains table reference characters and carriage controls. The file also retains the line length it had on the host (100 characters long). Also suppose that your current directory is `/home/wagner`.

To print this file on the InfoPrint printer `BServ-lp`; use the coded fonts Courier 12-pitch (**X042B2**) and Times New Roman 14-pitch (**X0N2D2**) for the output; use the form definition called `F1USER10` in your current directory; and use the page definition called `MYP1` (which does not name any fonts) in your current directory, enter:

```
pdpr -X 370files.X myfile
```

where the attributes file named `370files.X` contains the following settings:

```
document-format=line-data
chars=42B2,N2D2
form-definition=F1USER10
resource-context=/home/wagner
page-definition=MYP1
resource-context-page-definition=/home/wagner
new-line-options=record,100
table-reference-characters=yes
carriage-control-type=ansi-ascii
printer-name-requested=BServ-lp
```

- Because you specified `document-format=line-data`, InfoPrint invokes the **line2afp** command.
 - The page definition you specified with `page-definition` does not name any fonts, but the input file contained table reference characters that indicate when fonts should be changed. You specified `table-reference-characters=yes` and `chars=42B2,N2D2`, and **pdpr** passes these values to **line2afp**.

You had to use `resource-context-page-definition` to specify the path to the page definition; **line2afp** does not automatically look in your current directory.
 - Because you specified `chars=42B2,N2D2`, **pdpr** tells **line2afp** to associate font 42B2 with the first table reference character, and font N2D2 with the second table reference character. Any lines in the input file that begin with table reference character 0 will now print using font 42B2; lines beginning with table reference character 1 will print using font N2D2.
 - Because you specified `form-definition=F1USER10`, **pdpr** tells **line2afp** to use form definition `F1USER10`. You had to use **resource-context** to specify the path to the form definition; **pdpr** and **line2afp** do not automatically look in your current directory.
- Suppose you downloaded a file called `myfile` from a S/370 host to the RS/6000. The file transfer process converted the file's EBCDIC encoding to ASCII; the file still retains table reference characters, plus ANSI carriage controls. You want to print this file on the InfoPrint printer `servC-lp`, but you do not have any ASCII fonts; you only have the EBCDIC coded fonts Gothic 10-pitch (**X0GT10**) and Gothic 12-pitch (**X0GT12**).

To print this file using the form definition called `F1USER10` and the page definition called `MYPDEF2`, which does not name any fonts, enter:

```
pdpr -p servC-lp -x "document-format=line-data
chars=GT10,GT12 input-exit=apka2e
form-definition=F1USER10 page-definition=MYPDEF2
table-reference-characters=yes
carriage-control-type=ansi-ebcdic
resource-context=/usr/mydir" myfile
```

- Because you specified `document-format=line-data`, InfoPrint invokes the **line2afp** command.
- The page definition you specified with **page-definition** does not name any fonts, but the input file contains table reference characters that specify when fonts are to be changed. You specified `table-reference-characters=yes` and `chars=GT10,GT12`, and **pdpr** passes these values to **line2afp**.
- Because you specified `chars=GT10,GT12`, **pdpr** tells **line2afp** to associate font GT10 with the first table reference character, and font GT12 with the second table reference character. Any lines in the input file that begin with table reference character 0 will now print using font GT10; lines beginning with table reference character 1 will print using font GT12.
- Because you specified `input-exit=apka2e`, **pdpr** tells **line2afp** to convert the ASCII input file into EBCDIC so you can use your EBCDIC coded fonts (GT10 and GT12). Your carriage controls are also in EBCDIC now, so you have to specify `carriage-control-type=ansi-ebcdic`. This example assumes you have `/usr/lpp/psf/bin` in your **PATH** environment variable.
- Because you specified `form-definition=F1USER10`, **pdpr** tells **line2afp** to use form definition F1USER10. You had to use **resource-context** to specify the path to the form definition; **pdpr** and **line2afp** do not automatically look in your current directory.

Files

<code>/usr/lpp/psf/bin/line2afp</code>	Symbolic link to the acif command
<code>/usr/lpp/psf/bin/acif</code>	The acif command
<code>/usr/lpp/psf/acif/apkinp.c, apkind.c, apkres.c, apkout.c, apka2e.c, asciinp.c, asciinpe.c</code>	acif user exits (see <i>AFP Conversion and Indexing Facility: User's Guide</i> for more information)
<code>/usr/lpp/psf/bin/apka2e, apkinp, apkind, apkres, apkout, apka2e, asciinp, asciinpe</code>	User exit executables (see <i>AFP Conversion and Indexing Facility: User's Guide</i> for more information)
<code>/usr/lpp/psf/bin/Makefile</code>	The build rules for the ACIF user exits
<code>/usr/lpp/psf/acif/apkexits.h</code>	C language header file for the ACIF user exits

line2afp

Messages

Message files for the **line2afp** transform can be found in **/usr/lib/nls/msg/LANG/acif.cat**, where *LANG* is the name of a locale, for example, `en_US`.

pcl2afp Command: Transforms PCL Data to AFP

Syntax

```
pcl2afp [-aOutputType] [-CConfigurationFile] [-c] [-jnnnn]
        [-Innnn.nnnu] [-Mnnnnn] [-oOutputFile] [-Pnnnnn]
        [-pPageRange] [-q] [-rnnn] [-SServerName] [-snnnn]
        [-wnnnn.nnnu] [-xnnnn.nnnu] [-ynnnn.nnnu] [InputFile ...]
```

Description

The **pcl2afp** command transforms a PCL data stream file into an AFP data stream file.

The PSF DSS runs the **pcl2afp** command automatically whenever:

- InfoPrint identifies the format of a document in a print job as PCL.
- You use the **pdpr** command to specify **document-format=pcl** with the **-x** flag or in an attributes file.
- You specify a data type of **-odatatype=pcl** with an AIX print command (**enq**, **lp**, or **qprt**) or with the **lprafp** command.

If you specify multiple values of the same flag, **pcl2afp** uses the last value specified, with the exception of the **-p** flag. Multiple values of the **-p** flag are accumulated and the pages identified for printing are printed in normal numerical sequence, regardless of the order you specify.

When using the **pcl2afp** command, you can specify an optional input file name. If you do not specify an input file name, **pcl2afp** uses standard input. The output file name is also optional; if you do not specify one, the **pcl2afp** command writes the results to standard output.

Note the following about the flags you can specify with the **pcl2afp** command:

1. You can pass flags to **pcl2afp** using the **other-transform-options** document attribute on the InfoPrint **pdpr** command or the **-o** flag of the AIX print commands (**enq**, **lp**, and **qprt**) and the InfoPrint **lprafp** command.
2. When you run **pcl2afp** as a standalone transform, flags can appear anywhere on the command line with or without a blank in the flag and value pair.

When you specify **pcl2afp** transform flags with the **other-transform-options** attribute, any string containing a blank must be surrounded by single quotes.

Do not use a blank between the flag and the value when you specify **pcl2afp** transform flags with an AIX print command or with the **lprafp** command.

3. When you specify flags with the **pcl2afp** command, **pcl2afp** echoes them back to your display along with the settings for the flags. To suppress the command echoing, enter the **-q** (quiet) flag along with the **pcl2afp** command.
4. The order in which InfoPrint uses PCL options is as follows:
 - a. Any options you specify on the command line with the **pcl2afp** command (for example, **-r300**), including values contained in the customized configuration file you specify with the **pcl2afp -C** command. If you specify the same option more than once, InfoPrint uses the last value.

- b. Values contained in the configuration file, **pcl2afp.cfg**, in the current directory, if you invoked **pcl2afp** directly. If you invoked **pcl2afp** indirectly by submitting a print job with a data type of PCL, **pcl2afp** ignores any configuration files in the current directory, and proceeds to step 4c on page 244.
 - c. Values contained in the **pcl2afp.cfg** file in the user's home directory.
 - d. Values contained in the default **pcl2afp** command configuration file, **/usr/lpp/psf/pcl2afp/pcl2afp.cfg**.
 - e. Values contained in the customized configuration file you specify with the **pcl2afpd -C** command.
 - f. Values contained in the default **pcl2afpd** daemon configuration file, **/usr/lpp/psf/pcl2afp/pcl2afpd.cfg**.
 - g. Values contained in the **pcl2afpd.cfg** file when **pcl2afpd** was started.
 - h. The defaults that are built into **pcl2afpd**. These defaults are the same as the defaults for the **pcl2afp** flags.
5. The position of PCL data on the page depends on the interaction of the **-l** and **-w** flags, the **-x** and **-y** flags, and the form definition you use. In general, to position data on the page:
- Use **-l** and **-w** to set the physical page dimensions.
 - Use a form definition that specifies zero vertical offset and zero horizontal offset (for example, F100S, F100D, or F100T) or specify X and Y offsets of 0 when you submit the print job. For more information, see page 255.
 - Use **-x** and **-y** to avoid any areas that your printer cannot print.
6. You can specify the **pcl2afp** flags and values with the **pcl2afp** command, with the **pdpr -x "other-transform-options"** command, or with **enq -o**, **lp -o**, **qprt -o**, or **lprafp -o** command. You can also specify equivalent attributes with the **-x** flag or in an attributes file with the **pdpr** command.

Note: If you are migrating from PSF for AIX, see Appendix B, "Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents" on page 619 for a table of attributes equivalent to the job script keywords that you used to use to specify flags and values for transforms.

Limitations

- The **pcl2afp** transform must be installed, and the **pcl2afpd** daemon must be running.
- PCL data can contain device commands (for example, to begin or end duplexing or to change the input bin). Because the AFP architecture defines those device functions in a form definition resource instead of the print data, the **pcl2afp** transform ignores the device commands in the print data. To access those device functions (such as duplexing and bin selection), you must specify them in the form definition or attributes file, or on a print command, when you print the job.
- Resolution conversion algorithms may yield degraded appearance when used to reduce the resolution of a data stream. For this reason, **pcl2afp** may degrade the appearance of higher-resolution data streams when used with 240-pel printers. You should verify that print fidelity is satisfactory.

- There are subtle differences between PCL4 and PCL5e when it comes to handling fonts. While many PCL4 files will work with **pcl2afp**, some may not produce the expected output.

Flags and Values

-a {**IO1_G4** | **IM1** | **IO1** | **IO1_MMR** | **PSEG_IO1_G4** | **PSEG_IM1** | **PSEG_IO1** | **PSEG_IO1_MMR** | **OVLY_IO1_G4** | **OVLY_IM1** | **OVLY_IO1** | **OVLY_IO1_MMR**}

Determines the type of AFP data stream image to generate for each page in the PCL file.

Values are:

IO1_G4 Compressed Image Object Content Architecture (IOCA) image in Modified TSS (formerly CCITT) T.6 G4 Facsimile Coding Scheme (G4 MMR) format. This is the recommended output type because it takes up less space on the fixed disk, and it prints faster. It is the default specified in the **pcl2afpd** daemon and **pcl2afp** command configuration files.

Note: The IBM 3812 and 3816 printers do not support printing with an image type of **IO1_G4**. For these printers, specify an image type of **IO1_MMR** because it is the compressed image type supported by these printers, and it will result in faster printing than uncompressed image types.

PPDS, PCL, and TCP/IP-attached IPDS printers can print IOCA images; however, only channel-attached printers that have the Advanced Function Image and Graphics (AFIG) feature installed can print IOCA images. Therefore, if you are printing images on channel-attached printers without the AFIG feature, select the **IM1** value.

IM1 IM1 image. This type of image is not compressed.

IO1 IOCA image. This type of image is not compressed.

IO1_MMR

Compressed IOCA image in Modified Modified Read (MMR) format.

PSEG_IO1_G4 | **PSEG_IM1** | **PSEG_IO1** | **PSEG_IO1_MMR**
Page segment of the specified image type.

Note: When generating page segments from multiple-page documents, you may want to use the **-p** flag to select which page is to be made into a page segment; otherwise, multiple page segments will be created, one for each page of PCL.

OVLY_IO1_G4 | **OVLY_IM1** | **OVLY_IO1** | **OVLY_IO1_MMR**
Overlay of the specified image type.

Note: When generating overlays from multiple-page documents, you may want to use the **-p** flag to select which page is to be made into an

overlay; otherwise, multiple overlays will be created, one for each page of PCL.

This flag is similar to the **image-out-format** document attribute on the **pdpr** command.

-C *ConfigurationFile*

Specifies the path and file name of the customized configuration file **pcl2afp** uses with the transform. If you specify the **-C** flag with an AIX print command (**enq**, **lp**, or **qprt**), or with the **lprafp** command, specify the fully qualified name of the file, including its path; for example **/usr/lpp/psf/pcl2afp/myfile.cfg**.

-c

Concatenates multiple input files without putting a Esc-E (end of job) characters between the files. The **pcl2afp** command interprets the input files as a continuous data stream, and processes them as if they were one PCL job. This flag can be useful when processing PCL files with inline resources.

Note: Do not use this flag when you perform the PCL-to-AFP data stream transform by submitting a print job with the **pdpr** command.

InputFile ...

Specifies one or more input files to be transformed. If you specify more than one input file name, the **pcl2afp** command concatenates the files and separates them with the Esc-E (end of job) characters. The results of the transform are written to a single output file (if one is specified) or to standard output.

In addition, you can specify PCL inline resource files as input files to the **pcl2afp** command. The file name of the inline resource file must precede the file name of the PCL print file so that **pcl2afp** concatenates the files in the correct order. The **pcl2afp** command concatenates the resources in front of the print file when the **-c** flag is specified.

If you do not specify an input file, **pcl2afp** uses standard input. If the **pcl2afp** command cannot read from standard input, the command issues a message.

-j {**20** | **1** to **9998** | **9999**}

Specifies the maximum amount of time, in minutes, to spend processing the job.

Values are:

20 20 minutes, the default

1 to **9998** The timer ranges from 1 to 9998 minutes, in one-minute increments

9999 No time limit

-l *nnnn.nnnu*

Specifies the length of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **pcl2afp** uses pels as the unit type. You

cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If a text margin is already built into the file, try **-l11i** to set the length to 11 inches.

For 240-pel resolution printers, values are:

l11i 11 inches, the default

l16 to l5280 The length can be from 16 pels to 5280 pels, 0.065i to 22.002i, or 1.641m to 558.852m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 4000

For 300-pel resolution printers, values are:

l11i 11 inches, the default

l16 to l6600 The length can be from 16 pels to 6600 pels, 0.052i to 22.001i, or 1.313m to 558.842m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 5000

For 480-pel resolution printers, values are:

l11i 11 inches, the default

l16 to l10560 The length can be from 16 pels to 10560 pels, 0.065i to 22.002i, or 1.641m to 558.852m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 8000

For 600-pel resolution printers, values are:

l11i 11 inches, the default

l16 to l13200 The length can be from 16 pels to 13200 pels, 0.052i to 22.001i, or 1.313m to 558.842m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 10000

This flag is equivalent to the **image-length** document attribute on the **pdpr** command.

-M {6000 | 2000 to *nnnnn*}

Determines the maximum amount of memory, in KB, that the transform can use. This flag may be useful if you are processing large PCL jobs that require a lot of memory.

Values are:

6000 6000KB (6MB), the default

2000 to *nnnnn*

The maximum memory ranges from 2000 to *nnnnn* (where *nnnnn* is the maximum upper limit allowed by AIX) up to 64MB.

-o *OutputFile*

Specifies the output path and file into which the transformed PCL files are to be written. If more than one output file is specified, the last specified file name and path is the one used. If no output file is specified, the result is written to standard output.

You cannot use **-o *OutputFile*** on the command line with the **enq**, **lp**, **qprt**, or **lprafp** commands. You can only use **-o *OutputFile*** with the **pcl2afp** command, or with the **other-transform-options** attribute on the **pdpr** command.

This option is equivalent to the **transform-output-file-name** document attribute on the **pdpr** command.

-P {8253 | 924 to *nnnnn*}

Specifies the TCP/IP port number **pcl2afp** uses to make a connection with the workstation on which the **pcl2afpd** daemon is running (set by the **-S** flag). If your InfoPrint installation uses more than one PCL daemon, use this flag to select the daemon.

This port should not be the same port used by the TCP/IP-attached IPDS printer or by the PostScript transform. To find out which ports are already being used on your system (although they may or may not be active), look in the **/etc/services** file.

Values are:

8253 The default port number.

924 to *nnnnn* Any valid port number greater than or equal to 924. The maximum value, *nnnnn*, depends on AIX, but it must be equal to or less than 65535.

Note: You can only access secure ports, 924 to 1023, with **root** user authority.

-p *PageRange*

Specifies that the output should only contain selected pages. When you specify multiple **-p** flags, the **pcl2afp** command accumulates them and prints the identified pages in normal numerical order, regardless of the order you specify. Examples of values include:

- p even** Output even pages.
- p odd** Output odd pages.
- p 1-10** Output pages 1 through 10.
- p 10-** Output pages from page 10 until the end of the job.
- p 1 -p 3 -p 6** Output pages 1, 3, and 6, in that order.
- p1 -p6 -p3** Output pages 1, 3, and 6, in that order.

This flag is equivalent to the **page-select** document attribute on the **pdpr** command.

-q

Quiets (suppresses) the echoing of the **pcl2afp** command to the display.

-r {240 | 300 | 480 | 600}

Specifies the resolution of the output image. Select the resolution based on the printer on which you will be printing the image.

Values are:

- 240** 240 pels-per-inch (for example, IBM 3812, 3825, 3827, 3835, and 3900 printers), the default
- 300** 300 pels-per-inch (for example, IBM 3112, 3116, 4019, 4028, 4029, and 4039 printers and Hewlett-Packard printers)
- 480** 480 pels-per-inch
- 600** 600 pels-per-inch (for example, IBM 3900 printers)

Note: If you specify a resolution that the printer does not support, InfoPrint will print the image under most conditions, but with degraded results. Specify the correct resolution for the printer on which you will print the PCL job.

This flag is equivalent to the **default-printer-resolution** document attribute on the **pdpr** command.

-S *ServerName*

Specifies the name of the AIX system on which the **pcl2afpd** daemon is running. If you do not specify this flag, the *ServerName* defaults to the effective name of the workstation on which you issued the **pcl2afp** command. The value is:

ServerName Any valid AIX workstation name on which the **pcl2afpd** daemon is installed and running. The name is defined in the **/etc/hosts** file or by a name server, and may be a nickname like **molly**, or a dotted decimal address like **9.99.9.23**.

-s {20 | 1 to 9998 | 9999}

Specifies the maximum amount of time, in minutes, that the PCL interpreter remains idle between jobs before it goes down. When the PCL interpreter is running, it uses some of the workstation memory. If the PCL interpreter goes down, you do not need to bring it back up; the interpreter automatically starts

when you submit another PCL job as long as the **pcl2afpd** daemon is running.

Values are:

- 20** The default time is 20 minutes.
- 1 to 9998** The time is the number of minutes specified in one-minute increments.
- 9999** There is no time limit.

-w nnnn.nnnu

Specifies the width of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **pcl2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If a text margin is already built into the file, try **-w8.5i** to set the width to 8.5 inches.

For 240-pel resolution printers, values are:

- 8.5i** 8.5 inches, the default
- 16 to 4080** The width can be from 16 pels to 4080 pels, 0.065i to 17.002i, or 1.641m to 431.852m. For example, the following are all valid:
 - w 40m
 - w 200.5m
 - w 13i
 - w 3300

For 300-pel resolution printers, values are:

- 8.5i** 8.5 inches, the default
- 16 to 5100** The width can be from 16 pels to 5100 pels, 0.052i to 17.001i, or 1.313m to 431.842m. For example, the following are all valid:
 - w 40m
 - w 200.5m
 - w 13i
 - w 5000

For 480-pel resolution printers, values are:

- 8.5i** 8.5 inches, the default
- 16 to 8160** The width can be from 16 pels to 8160 pels, 0.065i to 17.002i, or 1.641m to 431.852m. For example, the following are all valid:
 - w 40m
 - w 200.5m
 - w 13i
 - w 6600

For 600-pel resolution printers, values are:

8.5i	8.5 inches, the default
16 to 10200	The width can be from 16 pels to 10200 pels, 0.052i to 17.001i, or 1.313m to 431.842m. For example, the following are all valid:
	-w 40m
	-w 200.5m
	-w 13i
	-w 10000

This flag is equivalent to the **image-width** document attribute on the **pdpr** command.

-x nnnn.nnnu

Specifies an X offset (horizontal offset) of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **pcl2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

An offset value specifies a border or margin around the generated image to avoid the non-printable areas of some printers. An X-offset value specifies the left and right margins of the generated image.

For all printers, values are:

0.167i	0.167 inches, the default
0 to 8.5i	The X offset can be no more than half of the width (-w) of the generated image. For example, if you specify a width of 13i, then the X offset can be no larger than 6.5i.

This flag is equivalent to the **x-image-shift** document attribute on the **pdpr** command.

Notes:

1. The X offset specified with **-x** must be less than the width specified with **-w**. If the **-x** value is greater than or equal to the **-w** value, a blank page is printed.
2. The X-offset value specifies margins on *both* the left and right sides of the page. If you have a width of 8.5 inches and specify an X offset of 5 inches, a blank page will also result because the margins on the left and right sides of the paper exceed the width of the paper.
3. PCL processing is slower when you use the **-x** flag, because the **pcl2afpd** daemon must stop and re-start the PCL interpreter. You may improve performance by changing the **pcl_x_offset** value in the **pcl2afpd** daemon configuration file rather than using **-x** on a regular basis.

-y *nnnn.nnnu*

Specifies a Y offset (vertical offset) of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **pcl2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

An offset value specifies a border or margin around the generated image to avoid the non-printable areas of some printers. A Y-offset value specifies the top and bottom margins of the generated image.

For all printers, values are:

0.167i	0.167 inches, the default
0 to 8.5i	The Y offset can be no more than half of the width (-w) of the generated image. For example, if you specify a width of 14i, then the X offset can be no larger than 7.0i.

This flag is equivalent to the **y-image-shift** document attribute on the **pdpr** command.

Notes:

1. The Y offset specified with **-y** must be less than the length specified with **-l**. If the **-y** value is greater than or equal to the **-l** value, a blank page is printed.
2. The Y-offset value specifies margins on *both* the top and bottom edges of the page. If you have a length of 11 inches and specify an Y offset of 6 inches, a blank page will also result because the margins on the top and bottom of the paper exceed the length of the paper.
3. PCL processing is slower when you use the **-y** flag, because the **pcl2afpd** daemon must stop and re-start the PCL interpreter. You may improve performance by changing the **pcl_y_offset** value in the **pcl2afpd** daemon configuration file rather than using **-y** on a regular basis.

Transforming PCL Image Data

The output of the PCL transform (the **pcl2afp** command) is AFP image data for any type of PCL input, whether it be text or images. The image that the **pcl2afp** command creates minimizes white space within an image block by defining the image block size to be exactly the right size to contain all of the black pels of the image. A PCL image may not print if any part of the image lies outside of the valid printable area. In addition, be aware that using form definitions that specify a non-zero logical page origin may move a valid PCL image out of the printable area; thus, the image won't print.

The **pcl2afp** command, the **pcl2afp.cfg** configuration file, and the **pcl2afpd.cfg** configuration file all let you specify the length and the width of PCL images. Before you use the **-l** and **-w** flags of the **pcl2afp** command or modify the **pcl_length** and **pcl_width** options in the configuration file, it's helpful to understand how InfoPrint places PCL images on the page.

Figure 1 on page 253 shows an example of a PCL image. This image is 8.5 inches high and 11 inches wide, measured from the lower-left corner of the image. If you want to print the entire image, specify a length of 11i and a width of 8.5i. When InfoPrint prints the image, the upper-left corner of the image is placed at the point on the page called the logical page origin, which is specified in the form definition. The logical page origin is the point on the form where the page of data is positioned, and it is specified as an offset from the top-left corner of the sheet. Therefore, if the form definition has a logical page origin of 0.165 inches from both the left and top sides of the sheet, then the top-left corner of the image is placed 0.165 inches down and to the left of the upper left corner of the sheet.

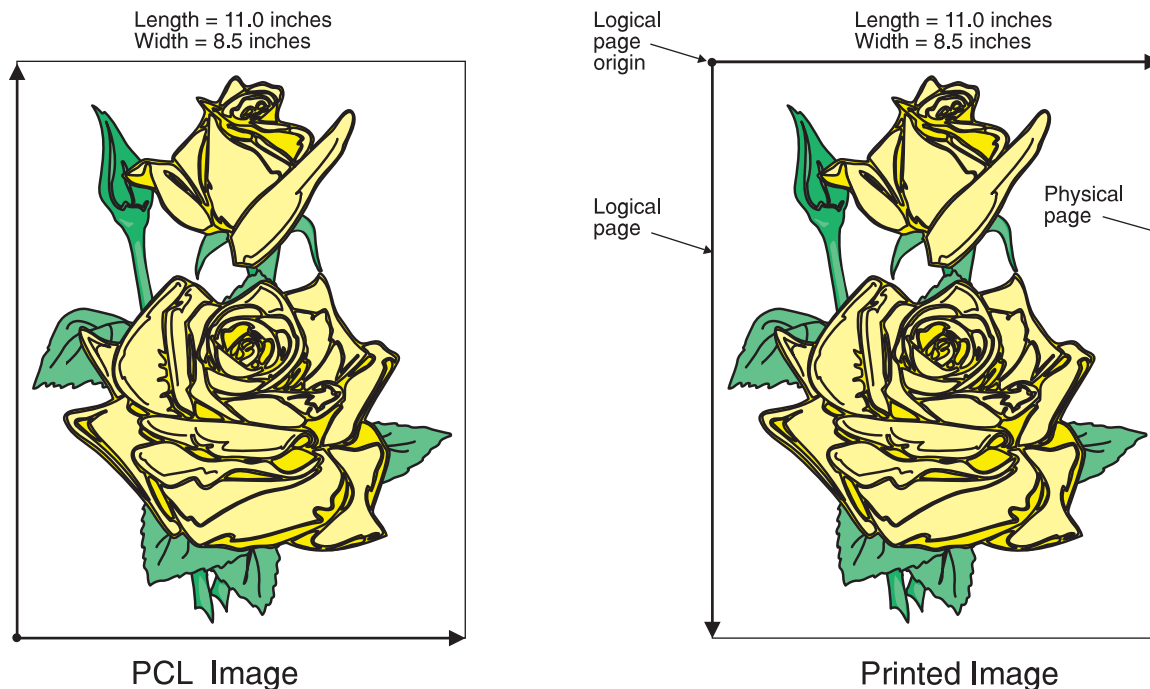


Figure 1. A PCL Image

All this gets more complicated if you don't specify the entire image. For example, if you want to crop the image so that you only use the lower left corner, you would specify a width of 7i and a length of 7i with the **pcl2afp** command. The upper left corner of the resulting image is then placed at the logical page origin (Figure 2 on page 254).

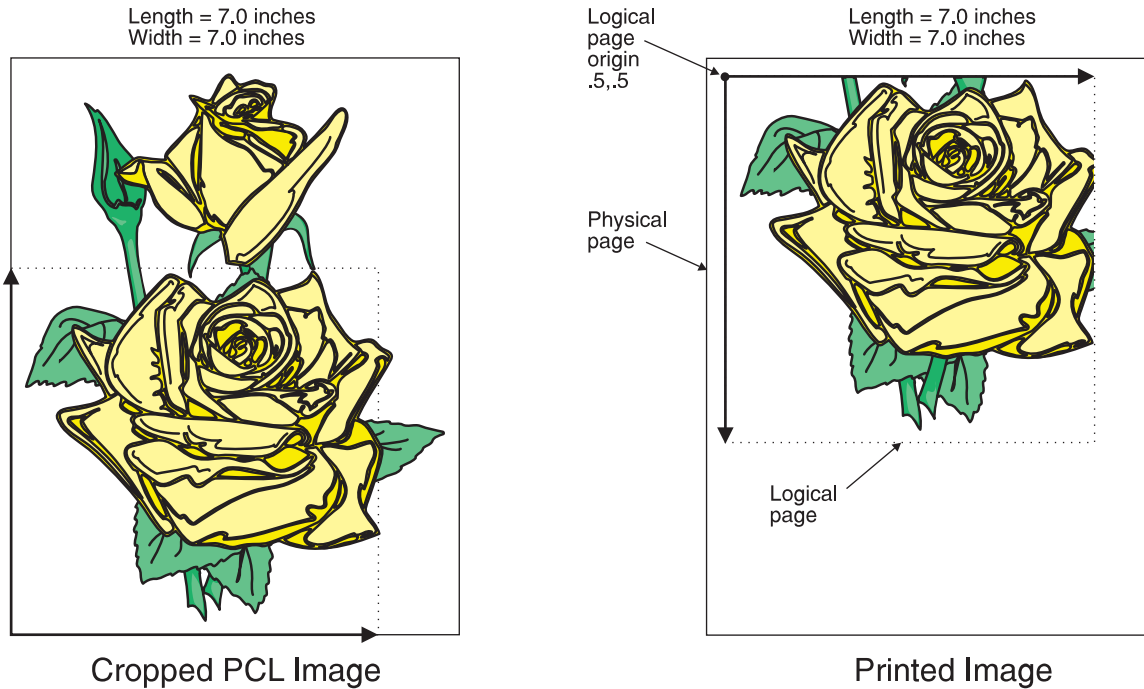


Figure 2. A Cropped PCL Image

In this final example, specify a PCL image that is 8.5 inches wide and 11 inches high. Again, the upper-left corner of the transformed image is placed at the logical page origin. Unless you specify a form definition with the print job that has a zero logical page origin (for example, **F100S**, **F100D**, or **F100T**), the page will not print because part of the image is outside the valid printable area (Figure 3).

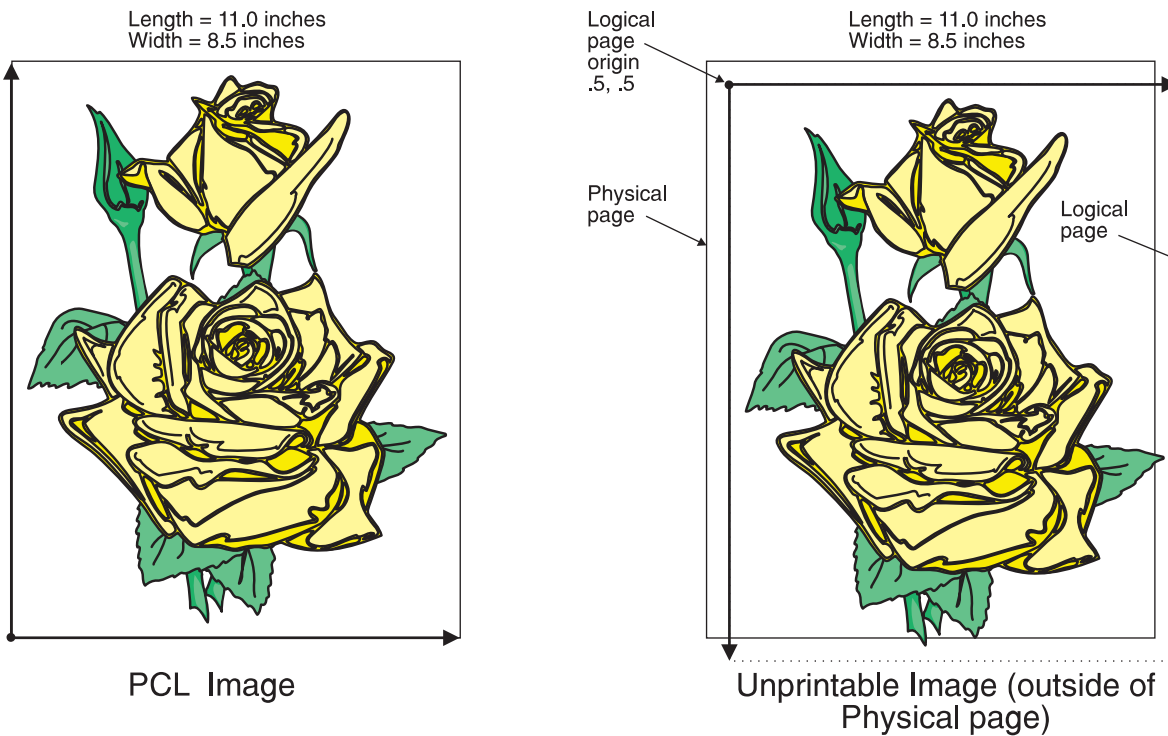


Figure 3. A PCL Image Offset from the Top-Left Corner

As you can see from Figure 3, specifying the correct form definition is extremely important, particularly when you are printing a full-page image.

The default length and width values specified in the PCL configuration files, **pcl2afp.cfg** and **pcl2afpd.cfg** work with the default form definitions that InfoPrint provides for each type of InfoPrint printers.

However, if you want to specify exact placement of your PostScript output on the page using a zero vertical and horizontal offset from the top-left corner of the page, do one of the following:

- Specify one of the following form definitions:

F100S

F100D

F100T

- Specify an X- and Y-offset value of **0** to override the values set in the form definition, using one of the following:
 - The **-oxoffset** and **-oyoffset** flags on the AIX print commands
 - The X offset and Y offset fields on the SMIT Submit an InfoPrint Job panel
 - The **x-image-shift** and **y-image-shift** attributes with the **-x** flag or in an attributes submitted with the **pdpr** command

If you specify a 0 horizontal and vertical offset in the form definition, with an AIX print command, or in an attributes file, the image produced by the **pcl2afp** transform might be printed in the unprintable area of the printer. To avoid printing in the unprintable area, you can specify the **-x** (X offset) and **-y** (Y offset) flags on the **pcl2afp** command. These flags add white space to the top and left side of the image produced by the transform, ensuring that no data will print in the unprintable area. For more information about the unprintable area of your printer, refer to *Advanced Function Presentation: Printer Information*.

The **pcl2afp** and **pcl2afpd** Configuration Files

Instead of typing flags on the command line with the **pcl2afp** command, you can use the **-C** flag to specify a configuration file that contains the flags. In this way, you can simply specify a configuration file name, rather than typing many flags. You may find it convenient to use a configuration file if you repeatedly use the same flags with the **pcl2afp** command, or if you are using different PCL processing values than the defaults defined by your system support group.

When your system support group installed the **pcl2afp** transform, a default **pcl2afp** command configuration file, **pcl2afp.cfg**, was installed in the directory **/usr/lpp/psf/pcl2afp**. If you want to create your own files, copy the **pcl2afp.cfg** file and then use a system editor to modify the options in this ASCII file to suit your needs.

A default **pcl2afpd** daemon configuration file, **pcl2afpd.cfg**, was also installed in **/usr/lpp/psf/pcl2afp**. The **pcl2afpd** daemon configuration file can contain most of the same keywords as the **pcl2afp** command configuration file, plus some keywords that control the operation of the **pcl2afpd** daemon. Values in the command configuration file override values in the daemon configuration file.

Figure 4 on page 257 shows an example of a configuration file.

```

# pcl2afp configuration file

# KEYWORD                EQUIVALENT                PURPOSE
#                        pcl2afp FLAG
#####

port = 8253                # -P                which TCP/IP port to use
server = 127.0.0.1        # -S                which server to connect with

pcl_max_memory = 6000K    # -M                maximum amount of memory that
#                        #                        PCL uses; the 'K' is ignored

pcl_job_timeout = 20      # -j                maximum number of minutes
#                        #                        to process PCL job
pcl_server_timeout = 20  # -s                maximum number of minutes
#                        #                        server waits between jobs

pcl_width = 8.5i          # -w                width of generated image
pcl_length = 11i         # -l                length of generated image
pcl_x_offset = 0.167i    # -x                left and right margins
pcl_y_offset = 0.167i    # -y                top and bottom margins
pcl_resolution = 240     # -r                resolution of printer
pcl_output_type = I01_G4 # -a                type of AFP image to generate

```

Figure 4. Sample *pcl2afp* Configuration File

Table 9 shows the **pcl2afp** flags and their equivalent configuration file keywords. To override the values in the default configuration file, **/usr/lpp/psf/pcl2afp/pcl2afp.cfg**, you can do one of the following:

- Specify flags with the **pcl2afp** command at transform time.
- Specify a configuration file with **pcl2afp -C** at transform time.
- Specify **pcl2afp** flags with **-o** flags on an AIX print command, or with equivalent attributes with the **-x** flag or in an attributes file on the **pdpr** command, to transform a file and print it at the same time.

Note: If you are migrating from PSF for AIX, see Appendix B, “Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents” on page 619 for a table of attributes equivalent to the job script keywords that you used to use to specify flags and values for transforms.

Table 9 (Page 1 of 2). PCL Printing and Processing Options

pcl2afp Flag	Keyword in pcl2afp Configuration File	Keyword in pcl2afpd Configuration File
-a <i>OutputType</i>	pcl_output_type=value	pcl_output_type=value
-C <i>ConfigurationFile</i>	None	None
-c	None	None

Note: The valid values for configuration file keywords are the same as for the corresponding **pcl2afp** command flag. For keywords used only in the **pcl2afpd** daemon configuration file, which have no corresponding command flag, see “pcl2afpd Utility: Starts the pcl2afpd Daemon” on page 177.

Table 9 (Page 2 of 2). PCL Printing and Processing Options

pcl2afp Flag	Keyword in pcl2afp Configuration File	Keyword in pcl2afpd Configuration File
<i>InputFile ...</i>	None	None
-j <i>nnnn</i>	pcl_job_timeout=nnnn	pcl_job_timeout=nnnn
-l <i>nnnn.nnnu</i>	pcl_length=nnnn.nnnu	pcl_length=nnnn.nnnu
-M <i>nnnnn</i>	pcl_max_memory=nnnnn	pcl_max_memory=nnnnn
-o <i>OutputFile</i>	None	None
-P <i>nnnnn</i>	port=PortNumber	port=PortNumber
-p <i>PageRange</i>	None	None
-q	None	None
-r <i>nnn</i>	pcl_resolution=nnn	pcl_resolution=nnn
-S <i>ServerName</i>	server=ServerName	None
-s <i>nnnn</i>	pcl_server_timeout=nnnn	pcl_server_timeout=nnnn
-w <i>nnnn.nnnu</i>	pcl_width=nnnn.nnnu	pcl_width=nnnn.nnnu
-x <i>nnnn.nnnu</i>	pcl_x_offset=nnnn.nnnu	pcl_x_offset=nnnn.nnnu
-y <i>nnnn.nnnu</i>	pcl_y_offset=nnnn.nnnu	pcl_y_offset=nnnn.nnnu
None	None	log_file=PathName
None	None	mail_command=PathName
None	None	notify=UserID
None	None	pcl_program=PathName
None	None	pcl_support_program=PathName
None	None	work_directory=PathName

Simple Examples

This section shows some simple examples of using **pcl2afp**. For more detailed examples, see “More Complex Examples” on page 259.

- To submit the sample PCL file `sample.pcl` supplied with InfoPrint to the logical printer named `Pserv-lp`, enter:


```
enq -PPserv-lp -odatat=pcl /usr/lpp/psf/pcl2afp/sample.pcl
```
- To transform the PCL file `myfile` into an AFP data stream, and then submit it to the InfoPrint logical printer called `Pserv-lp`, enter:


```
pdpr -p Pserv-lp -x "default-printer-resolution=300" myfile
```

or

```
pcl2afp -r300 myfile | pdpr -p Pserv-lp
```

Note: You need to specify a resolution of 300 pels (**default-printer-resolution=300**) because the `Pserv-lp` printer routes jobs to a 4019 printer device. The 4019 is a 300-pel resolution printer and the default resolution for the **pcl2afp** command is 240 pels.
- To transform the PCL file `myfile` into an AFP data stream, with an image that is 8 inches high and 5 inches wide, and write the result to a file called `myfile.afp`, enter:

```
pcl2afp -l 8i -w 5i -o myfile.afp myfile
```

or

```
pcl2afp -l 8i -w 5i myfile > myfile.afp
```

- To transform the PCL `myfile` file into an AFP data stream in 300-pel resolution, as an IO1_MMR image, and send the result to the printer with the **pdpr** command, enter:

```
pcl2afp -aIO1_MMR -r300 myfile | pdpr -X myafp.X
```

or

```
pdpr -X mypcl.X myfile
```

where the attributes file named `myafp.X` contains the following settings:

```
document-format=modca-p
```

```
printer-name-requested=robin-lp
```

and the attributes file named `mypcl.X` contains the following settings:

```
document-format=pcl
```

```
printer-name-requested=robin-lp
```

```
image-output-format=io1_mmr
```

```
default-printer-resolution=300
```

- Assume that the PCL file `myfile` uses the `BarCode.pcl` font that is a PCL resource on an AIX system named `molly`. Also assume that the **pcl2afpd** daemon is running on `robin`, but you are logged in to the AIX system named `molly`. To transform `myfile` into an AFP data stream, but not print it:

```
pcl2afp -S robin -c -o myfile.afp BarCode.pcl myfile
```

The **-c** flag concatenates the two input files, with the file `BarCode.pcl` first, so that the two files are processed together. In this way, `myfile` uses `BarCode.pcl` as an inline resource.

- Because the **pcl2afp** transform does not accept HP-GL/2 directly as input, you can use the **-c** flag to concatenate some sample PCL files that allow the HP-GL/2 file to be processed. To transform the HP-GL/2 file `myfile.gl` into a MO:DCA-P data stream file `myfile.afp`, enter:

```
pcl2afp -o myfile.afp -c /usr/lpp/psf/pcl2afp/gl_before.pcl
  myfile.gl /usr/lpp/psf/pcl2afp/gl_after.pcl
```

The **-c** flag concatenates the three input files, making `myfile.gl` appear as a PCL file that includes HP-GL/2 commands.

More Complex Examples

This section shows the following examples of transforming and printing PCL files:

- “Printing a PCL File” on page 260
- “Printing a PCL File with a Defined Image Size” on page 261
- “Printing a PCL File at 300-Pel Resolution” on page 262
- “Printing a PCL File with a Custom Configuration File” on page 263
- “Transforming Three PCL Files at the Same Time” on page 265
- “Transforming an HP-GL/2 File” on page 265

Printing a PCL File

In this example, you will submit a PCL file called PCLFile1 for printing on an InfoPrint printer called molly-lp.

Configuration Assumptions: This example assumes the following tasks have been performed by your system support group:

- InfoPrint, including the **pcl2afp** transform, has been installed on the workstation on which the **pcl2afp** command is executed.
- The **pcl2afpd** daemon has been started on the workstation on which the **pcl2afp** command is executed.
- A 3825 printer device has been installed and defined to InfoPrint. A logical printer called molly-lp routes jobs to the physical printer representing that device.

Using the SMIT Submit an InfoPrint Job Panel: To print this example, do the following steps:

1. On the AIX command line, enter:

```
smit ipsub
```

SMIT displays a list of attributes files to select from.

Note: The attributes file must contain the **document-format** attribute.

Although InfoPrint can determine the document format without being told, SMIT cannot.

2. Select template_PCL.X.

SMIT displays the Submit an InfoPrint Job panel.

3. Enter PCLFile1 in the NAMES of files to be submitted in the job field.
4. Select molly-lp from the list for the Logical PRINTER field.
5. Press Enter (ASCII interface) or select **Do** (AIXwindows interface).

Using the Command Line Options: To print this example, enter the following on the command line: or

```
pdpr -p molly-lp PCLFile1
```

or

```
enq -P molly-lp PCLFile1
```

Using an Attributes File with the pdpr Command: To print this example, enter the following on the command line:

```
pdpr -X pcllex1.X -p molly-lp /usr/docs/PCLFile1
```

where the attributes file named pcllex1.X contains the following settings:

```
document-format=pcl           A data type of PCL
```

Printing a PCL File with a Defined Image Size

In this example, you will submit a PCL file called `PCLfile2.pcl` for printing on an InfoPrint printer called `Dserv-1p`. In addition, you will specify the form definition `F100S` and an image size of 9 inches in length and 6 inches in width, measured from the upper-left corner of the image.

Configuration Assumptions: This example assumes the following tasks have been performed by your system support group:

- InfoPrint, including the **pcl2afp** transform, has been installed on the workstation on which the **pcl2afp** command is executed.
- The **pcl2afpd** daemon has been started on the workstation on which the **pcl2afp** command is executed.
- A 3900 printer device has been installed and defined to InfoPrint. A logical printer called `Dserv-1p` routes jobs to the physical printer representing that device.

Using the SMIT Submit an InfoPrint Job Panel: To print this example, do the following steps:

1. On the AIX command line, enter:

```
smit ipsub
```

SMIT displays a list of attributes files to select from.

Note: The attributes file must contain the **document-format** attribute.

Although InfoPrint can determine the document format without being told, SMIT cannot.

2. Select `template_PCL.X`.

SMIT displays the Submit an InfoPrint Job panel.

3. Enter `PCLfile2.pcl` in the NAMES of files to be submitted in the job field.
4. Select `Dserv-1p` from the list for the Logical PRINTER field.
5. Enter `F100S` in the FORM DEFINITION name field.
6. Enter `9i` in the Image LENGTH field.
7. Enter `6i` in the Image WIDTH field.
8. Press Enter (ASCII interface) or select Do (AIXwindows interface).

Using the Command Line Options: To print this example, enter the following on the command line:

```
pdpr -p Dserv-1p -x "form-definition=F100S
    image-length=19i image-width=6i" PCLfile2.pcl
```

or

```
enq -P Dserv-1p -oformdef=F100S -o-19i -o-w6i PCLfile2.pcl
```

InfoPrint identifies the input data type as PCL without being told. InfoPrint automatically runs **pcl2afp**, and passes `-19i` and `-w6i` from the **enq** command to **pcl2afp**.

You can get the same result by piping the output of the **pcl2afp** command to the input of the **enq** command:

```
pcl2afp PCLFile2.pcl -l9i -w 6i | enq -P Dserv-1p -oformdef=F100S
```

Using an Attributes File with the pdpr Command: To print this example, enter the following on the command line:

```
pdpr -X pcl2afp.pcl -p Dserv-1p /usr/docs/PCLFile2.pcl
```

where the attributes file named `pcl2afp.pcl` contains the following settings:

```
image-length=9i           Image length is nine inches
image-width=6i           Image width is six inches
form-definition=F100S     Use the F100S formdef for printing the job
```

Printing a PCL File at 300-Pel Resolution

In this example, you will submit a PCL file called `PCLFile3.pcl` for printing on an InfoPrint printer called `G4019-Serv1`. In addition, you will specify a resolution of 300 pels.

Configuration Assumptions: This example assumes the following tasks have been performed by your system support group:

- InfoPrint, including the **pcl2afp** transform, has been installed on the workstation on which the **pcl2afp** command is executed.
- The **pcl2afpd** daemon has been started on the workstation on which the **pcl2afp** command is executed.
- The 4019 printer has been installed and defined to AIX. A logical printer, named `G4019-Serv1`, has been configured to route jobs to the physical printer representing the 4019.

Using the SMIT Submit an InfoPrint Job Panel: To print this example, do the following steps:

1. On the AIX command line, enter:

```
smit ipsub
```

SMIT displays a list of attributes files to select from.

Note: The attributes file must contain the **document-format** attribute. Although InfoPrint can determine the document format without being told, SMIT cannot.

2. Select `template_PCL.X`.

SMIT displays the Submit an InfoPrint Job panel.

3. Enter `PCLFile3.pcl` in the NAMES of files to be submitted in the job field.
4. Select `G4019-Serv1` from the list for the Logical PRINTER field.
5. Select 300 from the list for the Printer RESOLUTION field.
6. Press Enter (ASCII interface) or select Do (AIXwindows interface).

Using the Command Line Options: To print this example, enter the following on the command line:

```
pdpr -o G4019-Serv1 -x "default-printer-resolution=300" PCLFile3.pcl
```

or

```
enq -P G4019-Serv1 -o-r300 PCLFile3.pcl
```


InfoPrint determines that the input data type is PCL and automatically runs **pcl2afp**, passing `-r300` from the **enq** command to **pcl2afp**.

You can get the same result by piping the output of the **pcl2afp** command to the input of the **enq** command:

```
pcl2afp PCLFile3.pcl -r 300 | enq -P G4019-Serv1
```

Using an Attributes File with the pdpr Command: To print this example, enter the following on the command line:

```
pdpr -X pcl3.X /usr/docs/PCLFile3.pcl
```

where the attributes file named `pcl3.X` contains the following settings:

```
document-format=pcl          A data type of PCL
```

```
default-printer-resolution=300
                             Image resolution is 300 pels
```

```
printer-name-requested=G4019-Serv1
                             Submit the job to the G4019-Serv1 logical printer
```

Printing a PCL File with a Custom Configuration File

In this example, you will submit a PCL file called `PCLFile4.pcl` for printing on an InfoPrint printer called `molly-1p`. In addition, you will specify the form definition `F100D`, as well as a customized PCL configuration file called `custom.cfg`, which is located in the directory `/usr/lpp/psf/pcl2afp`. The output file name is `PCLFile4.afp`.

Configuration Assumptions: This example assumes the following items have been done by your system support group:

- InfoPrint, including the **pcl2afp** transform, has been installed on the workstation on which the **pcl2afp** command is executed.
- The **pcl2afpd** daemon has been started on the workstation on which the **pcl2afp** command is executed.
- A 3825 printer device has been installed and defined to InfoPrint. A logical printer called `molly-1p` routes jobs to the physical printer representing that device.
- The customized configuration file is `custom.cfg`, located in the directory `/usr/lpp/psf/pcl2afp`; and you have permission to read this file.

Using the SMIT Submit an InfoPrint Job Panel: To print this example, do the following steps:

1. On the AIX command line, enter:

```
smit ipsub
```

SMIT displays a list of attributes files to select from.

Note: The attributes file must contain the **document-format** attribute.

Although InfoPrint can determine the document format without being told, SMIT cannot.

2. Select `template_PCL.X`.

SMIT displays the Submit an InfoPrint Job.

3. Enter `PCLFile4.pcl` in the NAMES of files to be submitted in the job field.

4. Select molly-lp from the list for the Logical PRINTER field.
5. Enter F100D in the FORM DEFINITION name field.
6. Enter /usr/lpp/psf/pcl2afp/custom.cfg in the PCL transform OPTIONS file field.
7. Press Enter (ASCII interface) or select Do (AIXwindows interface).

Using the Command Line Options: To print this example, enter the following on the command line:

```
pdpr -p molly-lp -x "form-definition=F100D
      other-transform-options='-o-C/usr/lpp/psf/pcl2afp/custom.cfg'"
      PCLFile4.pcl
```

or

```
enq -P molly-lp -oformdef=F100D
     -o-C/usr/lpp/psf/pcl2afp/custom.cfg PCLFile4.pcl
```

InfoPrint determines the data type, automatically runs **pcl2afp**, and passes `-C/usr/lpp/psf/pcl2afp/custom.cfg` to **pcl2afp**. (When you use the **-C** flag with an AIX print command, no spaces are allowed between the **-C** flag and the configuration file name, and the configuration file name must be fully qualified).

You can get the same result by invoking **pcl2afp** first, then using **enq** to process the output of **pcl2afp**:

```
pcl2afp PCLFile4.pcl -o PCLFile4.afp -C /usr/lpp/psf/pcl2afp/custom.cfg
enq -P molly-lp -oformdef=F100D PCLFile4.afp
```

Using an Attributes File with the pdpr Command: To print this example, enter the following on the command line:

```
pdpr -X pcl4.X /usr/docs/PCLFile4.pcl
```

where the attributes file named `pcl4.X` contains the following settings:

```
document-format=pcl           A data type of PCL
other-transform-options='-C /usr/lpp/psf/pcl2afp/custom.cfg'
                              Use the /usr/lpp/psf/pcl2afp/custom.cfg
                              pcl2afp configuration file
form-definition=F100D         Use the F100D form definition for printing the job
printer-name-requested=molly-lp
                              Submit the job to the molly-lp logical printer
```

Transforming Three PCL Files at the Same Time

In this example, you will transform three PCL files to create one AFP data stream file. The PCL files are called PCLFile5.pcl, PCLFile6.pcl, and PCLFile7.pcl. You write the output of the transform to the file called PCLFile0.afp. Other options you want to specify are an image type of **IM1**.

Configuration Assumptions: This example assumes the following tasks have been performed by your system support group:

- InfoPrint, including the **pcl2afp** transform, has been installed on the workstation on which the **pcl2afp** command is executed.
- The **pcl2afpd** daemon has been started on the workstation on which the **pcl2afp** command is executed.

Using the SMIT Submit an InfoPrint Job Panel: You cannot perform the PCL to AFP data stream transform using the Submit an InfoPrint Job panel without also submitting the output file as a print job.

Using the Command Line Options: To transform this example, enter the following on the command line:

```
pcl2afp -aim1 PCLFile5.pcl PCLFile6.pcl PCLFile7.pcl -oPCLFile0.afp
```

Transforming an HP-GL/2 File

Because the **pcl2afp** transform does not accept HP-GL/2 directly as input, you can use the **-c** flag to concatenate some sample PCL files that allow the HP-GL/2 file to be processed. To transform the HP-GL/2 file myfile.gl into a MO:DCA-P data stream file myfile.afp, enter:

```
pcl2afp -o myfile.afp -c /usr/lpp/psf/pcl2afp/gl_before.pcl
myfile.gl /usr/lpp/psf/pcl2afp/gl_after.pcl
```

The **-c** flag concatenates the three input files, making myfile.gl appear as a PCL file that includes HP-GL/2 commands.

Files

/usr/lpp/psf/pcl2afp/sample.pcl	PCL sample program
/usr/lpp/psf/bin/pcl2afp	Transform program
/usr/lpp/psf/bin/pcl2afpd	PCL daemon
/usr/lpp/psf/bin/ppxpcli	PCL interpreter program
/usr/lpp/psf/bin/ppxpclis	PCL interpreter support program
/usr/lpp/psf/pcl2afp/pcl2afp.cfg	PCL pcl2afp command configuration file
/usr/lpp/psf/pcl2afp/pcl2afpd.cfg	PCL pcl2afpd daemon configuration file
/var/psf/pcl2afp	Work directory for PCL transform

pdf2afp and ps2afp Transforms: Transform PDF or PostScript Data to AFP

Syntax

```
{pdf2afp | ps2afp}
  [-aOutputType] [-CConfigurationFile] [-c]
  [-FFontMapFile[:FontMapFile...]] [-gPageRange] [-jnxxx]
  [-lxxxx.nnnu] [-Mnnxxx] [-oOutputFile]
  [-Pnnxxx] [-pPageRange] [-q] [-rxxx]
  [-SServerName] [-snnxxx] [-wnxxx.nnnu]
  [-xnnxxx.nnnu] [-ynxxx.nnnu] [InputFile ...]
```

Description

The **ps2afp** command and its alias, the **pd2afp** command, transform a PostScript or Portable Document Format (PDF) data stream file into an AFP data stream file.

The PSF DSS runs the **ps2afp** command automatically whenever:

- InfoPrint identifies the format of a document in a print job as PostScript or PDF.
- You use the **pdpr** command to specify **document-format=postscript** or **document-format=pdf** with the **-x** flag or in an attributes file.
- You specify a data type of **-odatatype=ps** or **-odatatype=pdf** with an AIX print command (**enq**, **lp**, or **qprt**) or with the **lprafp** command.

If you specify multiple values of the same flag, **ps2afp** uses the last value specified, with the exception of the **-F**, **-g**, and **-p**, flags. **ps2afp** concatenates multiple values of the **-F** flag from left-to-right (first entered to last entered). Multiple values of the **-g** and **-p** flags are accumulated and the pages identified for printing are printed in normal numerical sequence, regardless of the order you specify.

When using the **ps2afp** or **pdf2afp** command, you can specify an optional input file name. If you do not specify an input file name, **ps2afp** reads standard input. The output file name is also optional; if you do not specify one, the **ps2afp** command writes the results to standard output.

Note the following about the flags you can specify with the **ps2afp** or **pdf2afp** command:

1. When you run **ps2afp** or **pdf2afp** as a standalone transform, flags can appear anywhere on the command line with or without a blank in the flag and value pair.

When you specify **ps2afp** transform flags with the **other-transform-options** attribute, any string containing a blank must be surrounded by single quotes.

Do not use a blank between the flag and the value when you specify **ps2afp** transform flags with an AIX print command or with the **lprafp** command.

2. When you specify flags with the **ps2afp** or **pdf2afp** command, the command echoes them back to your display along with the settings for the flags. To suppress the command echoing, enter the **-q** (quiet) flag along with the **ps2afp** or **pdf2afp** command.

3. Finally, be aware that the PostScript or PDF file may contain the commands **letter** and **legal**. If these commands are present in the PostScript or PDF file, you may not get what you expect due to the interaction of the **letter** and **legal** commands with the **-l** and **-w** flags of the **ps2afp** or **pdf2afp** command. The order in which **ps2afp** uses PostScript and PDF options is as follows:
 - a. The PostScript program commands **letter** and **legal**, if they are present.
 - b. Any options you specify on the command line with the **ps2afp** or **pdf2afp** command (for example, **-r300**), including values contained in the customized configuration file you specify with the **ps2afp -C** or **pdf2afp** command. If you specify the same option more than once, InfoPrint uses the last value.
 - c. Values contained in the configuration file, **ps2afp.cfg**, in the current directory, if you invoked **ps2afp** or **pdf2afp** directly. If you invoked **ps2afp** indirectly by requesting **enq -odatatype=ps**, or **enq -odatatype=pdf**, **ps2afp** ignores any configuration files in the current directory, and proceeds to step 3d.
 - d. Values contained in the **ps2afp.cfg** file in the user's home directory.
 - e. Values contained in the default **ps2afp** command configuration file, **/usr/lpp/psf/ps2afp/ps2afp.cfg**.
 - f. Values contained in the customized configuration file you specify with the **ps2afpd -C** command.
 - g. Values contained in the default **ps2afpd** daemon configuration file, **/usr/lpp/psf/ps2afp/ps2afpd.cfg**.
 - h. Values contained in the **ps2afpd.cfg** file when **ps2afpd** was started.
 - i. The defaults that are built into **ps2afpd**. These defaults are the same as the defaults for the **ps2afp** flags, except that the default output type (**-a** flag) is an IM1 uncompressed image.
4. The position of PostScript or PDF data on the page depends on the interaction of the **-l** and **-w** flags, the **-x** and **-y** flags, and the form definition you use. In general, to position data on the page,
 - Use **-l** and **-w** to set the physical page dimensions.
 - Use a form definition that specifies zero vertical offset and zero horizontal offset (for example, **F100S**, **F100D**, or **F100T**) or specify X and Y offsets of 0 when you submit the print job.
 - Use **-x** and **-y** to avoid any areas that your printer cannot print.
5. You can specify the **ps2afp** flags and values with the **ps2afp** or **pdf2afp** command, or with **enq -o**, **lp -o**, **qprt -o**, or or **lprafp**. You can also specify equivalent attribute values with the **-x** flag or in an attributes file with the **pdpr** command.

Note: If you are migrating from PSF for AIX, see Appendix B, "Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents" on page 619 for a table of attributes equivalent to the job script keywords that you used to use to specify flags and values for transforms.

Limitations

- InfoPrint, including the **psf2afp** transform, must be installed, and the **ps2afpd** daemon must be running.
- PostScript data can contain device commands (for example, to begin or end duplexing or to change the input bin). Because the AFP architecture defines those device functions in a form definition resource instead of the print data, the **ps2afp** transform ignores the device commands in the print data. To access those device functions (such as duplexing and bin selection), you must specify them in the form definition or attributes file, or on a print command, when you print the job.
- Resolution conversion algorithms may yield degraded appearance when used to reduce the resolution of a datastream. For this reason, **ps2afp** may degrade the appearance of higher-resolution datastreams when used with 240-peI printers. You should verify that print fidelity is satisfactory.

Flags and Values

-a {**IO1_G4** | **IM1** | **IO1** | **IO1_MMR** | **PSEG_IO1_G4** | **PSEG_IM1** | **PSEG_IO1** | **PSEG_IO1_MMR** | **OVLY_IO1_G4** | **OVLY_IM1** | **OVLY_IO1** | **OVLY_IO1_MMR**}

Determines the type of AFP data stream image to generate for each page in the PostScript or PDF file.

Values are:

IO1_G4 Compressed Image Object Content Architecture (IOCA) image in Modified TSS (formerly CCITT) T.6 G4 Facsimile Coding Scheme (G4 MMR) format. This is the recommended output type because it takes up less space on the fixed disk, and it prints faster. It is the default specified in the **ps2afpd** daemon and **ps2afp** command configuration files.

Note: The IBM 3812 and 3816 printers do not support printing with an image type of **IO1_G4**. For these printers, specify an image type of **IO1_MMR** because it is the compressed image type supported by these printers. This will result in faster printing than uncompressed image types.

PPDS, PCL, and TCP/IP-attached IPDS printers can print IOCA images; however, only channel-attached printers that have the Advanced Function Image and Graphics (AFIG) feature installed can print IOCA images. Therefore, if you are printing images on channel-attached printers without the AFIG feature, select the **IM1** value.

IM1 IM1 image. This type of image is not compressed.

IO1 IOCA image. This type of image is not compressed.

IO1_MMR Compressed IOCA image in Modified Modified Read (MMR) format.

PSEG_IO1_G4 | **PSEG_IM1** | **PSEG_IO1** | **PSEG_IO1_MMR**
Page segment of the specified image type.

Note: When generating page segments from multiple-page documents, you may want to use the **-p** flag to select which

page is to be made into a page segment; otherwise, multiple page segments will be created, one for each page of PostScript or PDF.

OVLY_IO1_G4 | OVLY_IM1 | OVLY_IO1 | OVLY_IO1_MMR

Overlay of the specified image type.

Note: When generating overlays from multiple-page documents, you may want to use the **-p** flag to select which page is to be made into an overlay; otherwise, multiple overlays will be created, one for each page of PostScript or PDF.

This flag is similar to the **image-out-format** document attribute on the **pdpr** command.

-C ConfigurationFile

Specifies the path and file name of the customized configuration file InfoPrint uses with the transform. If you specify the **-C** flag with an AIX print command (**enq**, **lp**, or **qprt**), or with the **lprafp** command, specify the fully qualified name of the file, including its path; for example **/usr/lpp/ps2afp/myfile.cfg**.

-c

Concatenates multiple input files without putting a Ctrl-D (end of job) character between the files. The **ps2afp** command interprets the input files as a continuous data stream, and processes them as if they were one PostScript or PDF job. This flag can be useful when processing PostScript or PDF files with inline resources. (See “Examples” on page 278).

Note: Do not use this flag when you perform the data stream transform by submitting a print job with the **pdpr** command.

-F FontMapFile[:FontMapFile...]

Specifies the path and file name **ps2afp** uses for the font mapping file. This file correlates PostScript font names with their file locations. A font mapping file must exist on the AIX system where the **ps2afpd** daemon is running (specified by the **-S** flag).

You can include multiple values in the **-F** flag by separating each value with a colon (:). The files will be concatenated. When you specify multiple **-F** flags, **ps2afp** concatenates them from left-to-right (first entered to last entered) in that order.

The **-F** value overrides the **ps_font_map_files** value in the **ps2afp** configuration file (**/usr/lpp/psf/ps2afp/ps2afp.cfg**) and the **ps2afpd** configuration file (**/usr/lpp/psf/ps2afp/ps2afpd.cfg**). If you do not specify **-F**, **ps2afp** uses the font mapping file specified in the **ps2afp** command or **ps2afpd** daemon configuration file. (By default, the **ps2afpd** daemon configuration file specifies the font mapping file, **/usr/lpp/psf/ps/psfonts.map**.)

If you specify **-F** without a file name, or if the file does not exist, the **ps2afp** command does not work.

Notes:

1. PostScript or PDF processing is slower when you use the **-F** flag, because the **ps2afpd** daemon must stop and re-start the PostScript interpreter. You may improve performance by changing the **ps_font_map_files** value in the **ps2afpd** daemon configuration file rather than using **-F** on a regular basis.
2. Specify the fully qualified name of the file if you specify the **-F** flag with an AIX print command.

-g PageRange

Specifies that the output should only contain selected pages. When you specify multiple **-g** flags, the **ps2afp** command transforms only the specified pages in the PostScript or PDF input data stream, then prints the transformed pages in normal numerical order, regardless of the order you specify. Examples of values include:

-g even	Output even pages.
-g odd	Output odd pages.
-g 1-10	Output pages 1 through 10.
-g 10-	Output pages from page 10 until the end of the job.
-g 1 -g 3 -g 6	Output pages 1, 3, and 6, in that order.
-g1 -g6 -g3	Output pages 1, 3, and 6, in that order.

This flag is equivalent to the **page-select** document attribute on the **pdpr** command.

Note: You should only specify the **-g** flag when the input data conforms to Adobe Document Structuring Conventions (DSC). If you have any doubt about the input data, use the **-p** flag.

You cannot specify both the **-g** flag and the **-p** flag.

InputFile ...

Specifies one or more input files to be transformed. If you specify more than one input file name, the **ps2afp** command concatenates the files and separates them with the Ctrl-D (end of job) character. The results of the transform are written to a single output file (if one is specified) or to standard output.

In addition, you can specify PostScript inline resource files as input files to the **ps2afp** command. The file name of the inline resource file must precede the file name of the PostScript or PDF print file so that **ps2afp** concatenates the files in the correct order.

If you do not specify an input file, **ps2afp** uses standard input. If the **ps2afp** command cannot read from standard input, **ps2afp** issues a message.

-j {20 | 1 to 9998 | 9999}

Specifies the maximum amount of time, in minutes, to spend processing the job.

Values are:

<u>20</u>	20 minutes, the default
1 to 9998	The timer ranges from 1 to 9998 minutes, in one-minute increments
9999	No time limit

-l *nnnn.nnnu*

Specifies the length of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **ps2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If a text margin is already built into the file, try **-l11i** to set the length to 11 inches.

For 240-pel resolution printers, values are:

11i 11 inches, the default

16 to 8160 The length can be from 16 pels to 8160 pels, 0.065i to 34i, or 1.641m to 863.628m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 4000

For 300-pel resolution printers, values are:

11i 11 inches, the default

16 to 10200 The length can be from 16 pels to 10200 pels, 0.052i to 34i, or 1.313m to 863.628m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 5000

For 480-pel resolution printers, values are:

11i 11 inches, the default

16 to 16320 The length can be from 16 pels to 16320 pels, 0.065i to 34i, or 1.641m to 863.628m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 8000

For 600-pel resolution printers, values are:

11i 11 inches, the default

16 to 20400 The length can be from 16 pels to 20400 pels, 0.052i to 34i, or 1.313m to 863.628m. For example, the following are all valid:

- l 40m
- l 200.5m
- l 13i
- l 10000

This flag is equivalent to the **image-length** document attribute on the **pdpr** command.

-M {15000 | 11000 to *nnnnn*}

Determines the maximum amount of memory, in KB, that the transform can use. This flag may be useful if you are processing large PostScript or PDF jobs that require a lot of memory.

Values are:

15000 15000KB (15MB)

11000 to *nnnnn*

The maximum memory ranges from 11000 to *nnnnn* (where *nnnnn* is the maximum upper limit allowed by AIX) up to 64MB. 15000 is the default.

-o *OutputFile*

Specifies the output path and file into which the transformed files are to be written. If more than one output file is specified, the last specified file name and path is the one used. If no output file is specified, the result is written to standard output.

You cannot use **-o *OutputFile*** on the command line with the **enq**, **lp**, **qprt**, or **lprafp** commands. You can only use **-o *OutputFile*** with the **ps2afp** command. You can also specify the **transform-output-file-name** document attribute on the **pdpr** command.

-P {8251 | 924 to *nnnnn*}

Specifies the TCP/IP port number **ps2afp** uses to make a connection with the workstation on which the **ps2afpd** daemon is running (set by the **-S** flag). If your InfoPrint installation uses more than one PostScript daemon, use this flag to select the daemon.

This port should not be the same port used by the TCP/IP-attached IPDS printer or the PCL transform. To find out which ports are already being used on your system (although they may or may not be active), look in the **/etc/services** file.

Values are:

8251 The default port number.

924 to *nnnnn* Any valid port number greater than or equal to 924. The maximum value, *nnnnn*, depends on AIX, but it must be equal to or less than 65535.

Note: You can only access secure ports, 924 to 1023, with **root** user authority.

-p *PageRange*

Specifies that the output should only contain selected pages. When you specify multiple **-p** flags, the **ps2afp** command transforms all the pages in the input, then extracts the specified MO:DCA-P pages and prints them in normal numerical order, regardless of the order you specify.

You cannot specify both the **-g** flag and the **-p** flag.

Examples of values include:

-p even Output even pages.

-p odd Output odd pages.

-p 1-10 Output pages 1 through 10.

-p 10- Output pages from page 10 until the end of the job.

-p 1 -p 3 -p 6 Output pages 1, 3, and 6, in that order.

-p1 -p6 -p3 Output pages 1, 3, and 6, in that order.

This flag is equivalent to the **page-select** document attribute on the **pdpr** command.

-q

Quiets (suppresses) the echoing of the **ps2afp** command to the display.

-r {240 | 300 | 480 | 600}

Specifies the resolution of the output image. Select the resolution based on the printer on which you will be printing the image.

Values are:

240 240 pels-per-inch (for example, IBM 3812, 3825, 3827, 3835, and 3900 printers).

300 300 pels-per-inch (for example, IBM 4019, 4028, 4029, and 4039 printers and Hewlett-Packard printers)

480 480 pels-per-inch

600 600 pels-per-inch (for example, IBM 3900 printers), the default

This flag is equivalent to the **default-printer-resolution** document attribute on the **pdpr** command.

Note: If you specify a resolution that the printer does not support, InfoPrint will print the image under most conditions, but with degraded results. Specify the correct resolution for the printer on which you will print the job.

-S ServerName

Specifies the name of the AIX system on which the **ps2afpd** daemon is running. If you do not specify this flag, the *ServerName* defaults to the effective name of the workstation on which you issued the **ps2afp** command. The value is:

ServerName Any valid AIX workstation name on which the **ps2afpd** daemon is installed and running. The name is defined in the **/etc/hosts** file or by a name server, and may be a nickname like **molly**, or a dotted decimal address like **9.99.9.23**.

-s {20 | 1 to 9998 | 9999}

Specifies the maximum amount of time, in minutes, that the PostScript interpreter remains idle between jobs before it goes down. When the PostScript interpreter is running, it uses some of the workstation memory. If the PostScript interpreter goes down, you do not need to bring it back up; the interpreter automatically starts when you submit another PostScript or PDF job as long as the **ps2afpd** daemon is running.

Values are:

20 The default time is 20 minutes.

1 to 9998 The time is the number of minutes specified in one-minute increments.

9999 There is no time limit.

-w *nnnn.nnnu*

Specifies the width of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **ps2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

Note: If a text margin is already built into the file, try **-w8.5i** to set the width to 8.5 inches.

For 240-pel resolution printers, values are:

8.5i 8.5 inches, the default

16 to 8160 The width can be from 16 pels to 8160 pels, 0.065i to 34i, or 1.641m to 863.628m. For example, the following are all valid:

-w 40m
-w 200.5m
-w 13i
-w 3300

For 300-pel resolution printers, values are:

8.5i 8.5 inches, the default

16 to 10200 The width can be from 16 pels to 10200 pels, 0.052i to 34i, or 1.313m to 863.628m. For example, the following are all valid:

-w 40m
-w 200.5m
-w 13i
-w 5000

For 600-pel resolution printers, values are:

8.5i 8.5 inches, the default

16 to 20400 The width can be from 16 pels to 20400 pels, 0.052i to 34i, or 1.313m to 863.628m. For example, the following are all valid:

-w 40m
-w 200.5m
-w 13i
-w 5000

This flag is equivalent to the **image-width** document attribute on the **pdpr** command.

-x *nnnn.nnnu*

Specifies an X offset (horizontal offset) of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **ps2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

An offset value specifies a border or margin around the generated image to avoid the non-printable areas of some printers. An X-offset value specifies the left and right margins of the generated image.

Values are:

- 0** No border is specified. This is the default.
- 0 to 17i** The value specified here can be no greater than half of the value specified on the **-w** flag. For example, if you specified **-w=12i**, this value can be no greater than 6i.

This flag is equivalent to the **x-image-shift** document attribute on the **pdpr** command.

Notes:

1. The X offset specified with **-x** must be less than the width specified with **-w**. If the **-x** value is greater than or equal to the **-w** value, a blank page is printed.
2. The X-offset value specifies margins on both the left and right sides of the page. If you have a width of 8.5 inches and specify an X offset of 5 inches, a blank page will also result because the margins on the left and right sides of the paper exceed the width of the paper.
3. PostScript or PDF processing is slower when you use the **-x** flag, because the **ps2afpd** daemon must stop and re-start the PostScript interpreter. You may improve performance by changing the **ps_x_offset** value in the **ps2afpd** daemon configuration file rather than using **-x** on a regular basis.

-y nnnn.nnnu

Specifies a Y offset (vertical offset) of the generated image; *nnnn.nnn* is a number that can optionally contain a decimal point, and *u* is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit (**i** or **m**), then **ps2afp** uses pels as the unit type. You cannot specify fractional values (that is, you cannot use a decimal point) for pels.

An offset value specifies a border or margin around the generated image to avoid the non-printable areas of some printers. A Y-offset value specifies the top and bottom margins of the generated image.

Values are:

- 0** No border is specified. This is the default.
- 0 to 17i** The value specified here can be no greater than half of the value specified on the **-l** flag. For example, if you specified **-l=16i**, this value can be no greater than 8i.

This flag is equivalent to the **y-image-shift** document attribute on the **pdpr** command.

Notes:

1. The Y offset specified with **-y** must be less than the length specified with **-l**. If the **-y** value is greater than or equal to the **-l** value, a blank page is printed.
2. The Y offset value specifies margins on *both* the top and bottom edges of the page. If you have a length of 11 inches and specify an Y offset of 6 inches, a blank page will also result because the margins on the top and bottom of the paper exceed the length of the paper.

3. PostScript or PDF processing is slower when you use the **-y** flag, because the **ps2afpd** daemon must stop and re-start the PostScript interpreter. You may improve performance by changing the **ps_y_offset** value in the **ps2afpd** daemon configuration file rather than using **-y** on a regular basis.

The ps2afp and ps2afpd Configuration Files

Instead of typing flags on the command line with the **ps2afp** or **pdf2afp** command, you can use the **-C** flag to specify a configuration file that contains the flags. In this way, you can simply specify a configuration file name, rather than typing many flags. You may find it convenient to use a configuration file if you repeatedly use the same flags with the **ps2afp** or **pdf2afp** command, or if you are using different PostScript or PDF processing values than the defaults defined by your system support group.

When your system support group installed the **ps2afp** transform and its alias, **pdf2afp**, a default **ps2afp** command configuration file, **ps2afp.cfg**, was installed in the directory **/usr/lpp/psf/ps2afp**. If you want to create your own files, copy the **ps2afp.cfg** file and then use a system editor to modify the options in this ASCII file to suit your needs.

A default **ps2afpd** daemon configuration file, **ps2afpd.cfg**, was also installed in **/usr/lpp/psf/ps2afp**. The **ps2afpd** daemon configuration file can contain most of the same keywords as the **ps2afp** command configuration file, plus some keywords that control the operation of the **ps2afpd** daemon. Values in the command configuration file override values in the daemon configuration file.

Figure 5 shows an example of a configuration file.

```
# ps2afp configuration file

# KEYWORD          EQUIVALENT ps2afp FLAG          PURPOSE
#####

port = 8251         # -P                which TCP/IP port to use
server = 127.0.0.1 # -S                which server to connect with

ps_max_memory = 14000K # -M            maximum amount of memory that
#                               PostScript uses; the 'K' is ignored

ps_job_timeout = 20 # -j            maximum number of minutes
#                               to process PostScript job
ps_server_timeout = 20 # -s            maximum number of minutes
#                               server waits between jobs

ps_width = 8.5i    # -w            width of generated image
ps_length = 11i   # -l            length of generated image
ps_x_offset = 0i  # -x            left and right margins
ps_y_offset = 0i  # -y            top and bottom margins
ps_resolution = 600 # -r            resolution of printer
ps_output_type = I01_G4 # -a            type of AFP image to generate
```

Figure 5. Sample ps2afp Configuration File

Table 10 on page 277 shows the **ps2afp** flags and their equivalent configuration file keywords. To override the values in the default configuration file, **/usr/lpp/psf/ps2afp/ps2afp.cfg**, you can do one of the following:

- Specify flags with the **ps2afp** or **pdf2afp** command at transform time.
- Specify a configuration file with **ps2afp -C** at transform time.
- Specify **ps2afp** flags with **-o** flags on an AIX print command, or with equivalent attributes with the **-x** flag or in an attributes file on the **pdpr** command, to transform a file and print it at the same time.

Note: If you are migrating from PSF for AIX, see Appendix B, “Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents” on page 619 for a table of attributes equivalent to the job script keywords that you used to use to specify flags and values for transforms.

Table 10 (Page 1 of 2). PostScript and PDF Printing and Processing Options

ps2afp or pdf2afp Flag	Keyword in ps2afp Configuration File	Keyword in ps2afpd Configuration File
Note: The valid values for configuration file keywords are the same as for the corresponding ps2afp or pdf2afp command flag. For keywords used only in the ps2afpd daemon configuration file, which have no corresponding command flag, see “ps2afpd Utility: Starts the ps2afpd Daemon” on page 180.		
-a <i>OutputType</i>	ps_output_type=value	ps_output_type=value
-C <i>ConfigurationFile</i>	None	None
-c	None	None
-F <i>FontMapFile[: ...]</i>	ps_font_map_file=PathName	ps_font_map_file=PathName
-g <i>PageRange</i>	None	None
<i>InputFile ...</i>	None	None
-j <i>nnnn</i>	ps_job_timeout=nnnn	ps_job_timeout=nnnn
-l <i>nnnn.nnnu</i>	ps_length=nnnn.nnnu	ps_length=nnnn.nnnu
-M <i>nnnnn</i>	ps_max_memory=nnnnn	ps_max_memory=nnnnn
-o <i>OutputFile</i>	None	None
-P <i>nnnnn</i>	port=PortNumber	port=PortNumber
-p <i>PageRange</i>	None	None
-q	None	None
-r <i>nnn</i>	ps_resolution=nnn	ps_resolution=nnn
-S <i>ServerName</i>	server=ServerName	None
-s <i>nnnn</i>	ps_server_timeout=nnnn	ps_server_timeout=nnnn
-w <i>nnnn.nnnu</i>	ps_width=nnnn.nnnu	ps_width=nnnn.nnnu
-x <i>nnnn.nnnu</i>	ps_x_offset=nnnn.nnnu	ps_x_offset=nnnn.nnnu
-y <i>nnnn.nnnu</i>	ps_y_offset=nnnn.nnnu	ps_y_offset=nnnn.nnnu
None	None	log_file=PathName
None	None	mail_command=PathName
None	None	notify=UserID
None	None	ps_init_file=PathName
None	None	ps_program=PathName

Table 10 (Page 2 of 2). PostScript and PDF Printing and Processing Options

<i>ps2afp</i> or <i>pdf2afp</i> Flag	<i>Keyword in ps2afp Configuration File</i>	<i>Keyword in ps2afpd Configuration File</i>
None	None	ps_support_program=PathName
None	None	work_directory=PathName

Examples

- To submit the PostScript file `sample.ps` to the logical printer named `molly-lp`, enter:

```
enq -Pmolly-lp -odatat=ps /usr/lpp/psf/ps2afp/sample.ps
```
- To transform the PDF file `myfile1` into an AFP data stream, and then submit it to the InfoPrint logical printer called `robin-lp`, enter:

```
or
```

```
pdpr -p robin-lp -x "default-printer-resolution=300" myfile1
```

```
or
```

```
pdf2afp -r300 myfile1 | pdpr -p robin-lp
```

Note: You need to specify a resolution of 300 pels (default-printer-resolution=300 or -r300) because `robin-lp` routes jobs to a 4019 printer device. The 4019 printer is a 300-pel resolution printer and the default resolution for the **pdf2afp** command is 600 pels.
- To transform the PostScript file `myfile2` into an AFP data stream, with an image that is 8 inches high and 5 inches wide, and write the result to a file called `myfile2.afp`, enter:

```
ps2afp -l 8i -w 5i -o myfile2.afp myfile2
```

```
or
```

```
ps2afp -l 8i -w 5i myfile2 > myfile2.afp
```
- To transform the PostScript file `myfile2` into an AFP data stream, creating a compressed IO (IOCA) image (the default image type for the **ps2afp** command), and piping the result to the **pdpr** command to submit the file to the InfoPrint logical printer called `molly-lp`, enter:

```
ps2afp myfile2 | pdpr -p molly-lp
```

You can get the same result without piping (that is, using **pdpr** directly) by entering:

```
pdpr -p molly-lp myfile2
```
- To transform the PDF `myfile1` file into an AFP data stream in 300-pel resolution, as an IO1_MMR image, and send the result to the printer with the **pdpr** command, enter:

```
pdf2afp -aIO1_MMR -r300 myfile1 | pdpr -X myafp.X
```

```
or
```

```
pdpr -X myps.X myfile1
```

where the attributes file named `myafp.X` contains the following settings:

```
document-format=modca-p
printer-name-requested=david-lp
```


and the attributes file named `myps.X` contains the following settings:

```
document-format=pdf
printer-name-requested=david-lp
image-out-format=io1_mmr
default-printer-resolution=300
```

- Assume that the PostScript file `myfile2` uses the **BarCode.pfa** font that is a PostScript resource not installed for use by the **ps2afpd** on an AIX system named `robin`. Also assume that the **ps2afpd** daemon is running on `robin`, but you are logged into the AIX system named `molly`. To transform `myfile2` into an AFP data stream, but not print it:

```
ps2afp -S robin -c -o myfile2.afp BarCode.pfa myfile2
```

The **-c** flag concatenates the two input files, with the file `BarCode.pfa` first, so that the two files are processed together. In this way, `myfile2` uses `BarCode.pfa` as an inline resource.

Files

/usr/lpp/psf/bin/ps2afpd	PostScript daemon
/usr/lpp/psf/bin/ps2afp	PostScript transform executable
/usr/lpp/psf/bin/pdf2afp	PDF transform executable (linked to /usr/lpp/psf/bin/ps2afp)
/usr/lpp/psf/ps2afp/ps2afpd.cfg	ps2afpd daemon configuration file
/usr/lpp/psf/ps2afp/ps2afp.cfg	ps2afp command configuration file
/usr/lpp/psf/bin/ppxps2i	PostScript level 2 interpreter program
/usr/lpp/psf/bin/ps2afpi	PostScript Level 1 interpreter program
/usr/lpp/psf/bin/ps2afpi.vm	PostScript interpreter program initial virtual memory
/usr/lpp/psf/ps2afp/ppxps2.ps	PostScript level 2 initialization file
/usr/lpp/psf/ps2afp/ps2afp.ps	PostScript Level 1 initialization file
/usr/lpp/psf/ps2afp/ps2afpe.ps	PostScript Level 1 initialization file for extended error reporting
/usr/lpp/psf/bin/fontsave	PostScript executable for saving fonts
/usr/lpp/psf/psfonts.map	Default PostScript font mapping file
/var/psf/psfonts	User-defined PostScript fonts file

sap2afp Command: Transforms SAP OTF or ABAP Data to AFP

Syntax

```
sap2afp -d DeviceName {-f FileName | -i | -q} [-g ]
          [-r { 240 | 300 | 480 | 600}] [-t]
```

Description

Use the **sap2afp** command to transform a SAP Output Text Format (OTF) or Advanced Business Application Programming (ABAP) file into an AFP data stream file and to submit it to an InfoPrint destination.

Flags

- d *DeviceName*
Specifies the name of the R/3 output device. This name is converted to the name of an InfoPrint logical destination as specified in the **printer.tab** configuration file.
- f *FileName*
Specifies the input file to be converted. This file is erased after successful conversion.
- g
Invokes the Graphics Object Content Architecture (GOCA) feature of the printer device. The GOCA feature allows you to print boxes with four different levels of shading, as well as clear and solid boxes.
- i
Specifies that input comes from standard input (**stdin**). A temporary file (**sap2afp.tmp**) is created, processed as with the **-f** parameter, then erased.
- q
Invokes the **lpq** command to display the queue.
- r { 240 | 300 | 480 | 600}
Specifies the printer resolution used to print image data in the job. If you do not specify the **-r** flag, the **DEFRES** value in the **image.tab** file is used. In the **image.tab** file shipped with InfoPrint, the **DEFRES** value is **600**.
- t
Traces program execution.

The sap2afp Configuration Files

This section consists of examples for the following configuration files that are required for the **sap2afp** transform:

```
barcode.tab
defcp.tab
fonts.tab
image.tab
pagedef.tab
printer.tab
xxxxyyyyy.tab
```

Notes:

1. All tables can contain comments (starting with // in column 1) and empty lines. These lines are ignored by the **sap2afp** transform.
2. All table entries are case-sensitive.

barcode.tab Configuration File

This table describes the bar code mappings. SAP calls bar codes by names that must be mapped into the matching bar codes available with Bar Code Object Content Architecture (BCOCA).

barcode.tab uses the following keyword-value pairs:

BarCode	Specifies the OTF bar code names (SAPBARCODE parameter of the BC OTF command). The maximum length of this field is 8 bytes. It can contain any value.
Type	Specifies the AFP bar code type as defined in <i>IBM Data Stream and Object Architectures: Bar Code Object Content Architecture Reference</i> for the Barcode Type parameter of the Barcode Data Descriptor Structured Field. The content can be any decimal value between 0 and 999. The sap2afp transform does not verify that this value maps to a valid hexadecimal barcode type.
Mode	Specifies the modifier byte within the Barcode Modifier parameter of the Barcode Data Descriptor Structured Field. Any numeric value between 0 and 999 is accepted and not verified.
Flag	Controls the printing of the Human Readable Interface (HRI) character. Specify one of the following values: <ul style="list-style-type: none"> 0 Causes the HRI character to be printed 128 Causes the HRI character not to be printed

Notes:

1. The system administrator is responsible for the values entered in the table. Invalid values are not verified and may result in errors.
2. The second group of bar codes in the **barcode.tab** file (following the blank line) is supported from R/3 Release 3.0A only.

Figure 6 on page 282 shows a sample **barcode.tab** configuration file.

```

// Barcode table

// Format : Barcode=ARTNR Type=017 Mode=002

//Barcode = 30F9      Type = 001 Mode = 001 Flag = 000
//Barcode = 30F91    Type = 001 Mode = 002 Flag = 000
//Barcode = MSI      Type = 002 Mode = 002 Flag = 000
//Barcode = UPCA     Type = 003 Mode = 000 Flag = 000
//Barcode = UPCE     Type = 005 Mode = 000 Flag = 000
//Barcode = UPC2     Type = 006 Mode = 000 Flag = 000
//Barcode = UPC5     Type = 007 Mode = 000 Flag = 000
//Barcode = EAN8     Type = 008 Mode = 000 Flag = 000
//Barcode = EAN13    Type = 009 Mode = 000 Flag = 000
//Barcode = IND25    Type = 010 Mode = 002 Flag = 000
//Barcode = MAT25    Type = 011 Mode = 002 Flag = 000
//Barcode = INTER    Type = 012 Mode = 002 Flag = 000
//Barcode = CODA     Type = 013 Mode = 002 Flag = 000
//Barcode = C128     Type = 017 Mode = 002 Flag = 000
//Barcode = EAN2     Type = 022 Mode = 000 Flag = 000
//Barcode = EAN5     Type = 023 Mode = 000 Flag = 000
//Barcode = POST     Type = 024 Mode = 002 Flag = 000
//Barcode = AUFNR    Type = 001 Mode = 001 Flag = 128

Barcode = ARTNR      Type = 017 Mode = 002 Flag = 000
Barcode = AUFNR      Type = 017 Mode = 002 Flag = 000
Barcode = BARCLVS    Type = 001 Mode = 001 Flag = 000

Barcode = BC_C128B   Type = 017 Mode = 002 Flag = 128
Barcode = BC_CD39    Type = 001 Mode = 001 Flag = 128
Barcode = BC_CD39C   Type = 001 Mode = 002 Flag = 128
Barcode = BC_EAN13   Type = 009 Mode = 000 Flag = 128
Barcode = BC_EAN8    Type = 008 Mode = 000 Flag = 128
Barcode = BC_I25     Type = 012 Mode = 001 Flag = 128
Barcode = BC_I25C    Type = 012 Mode = 002 Flag = 128
Barcode = BC_MSI     Type = 002 Mode = 001 Flag = 128
Barcode = BC_MSIC    Type = 002 Mode = 002 Flag = 128
Barcode = BC_MSIC1   Type = 002 Mode = 003 Flag = 128
Barcode = BC_MSIC2   Type = 002 Mode = 005 Flag = 128

Barcode = KUNAUNR    Type = 017 Mode = 002 Flag = 000
Barcode = KUNAUPS    Type = 017 Mode = 002 Flag = 000
Barcode = MBBARC     Type = 017 Mode = 002 Flag = 000
Barcode = MBBARC1    Type = 008 Mode = 000 Flag = 000
Barcode = RSNUM      Type = 017 Mode = 002 Flag = 000
Barcode = RSPOS      Type = 017 Mode = 002 Flag = 000
Barcode = RUECKNR    Type = 017 Mode = 002 Flag = 000

```

Figure 6. Sample barcode.tab Configuration File

defcp.tab Configuration File

Figure 7 shows the default conversion table for the conversion of ASCII characters into EBCDIC. The **sap2afp** transform uses this table for ABAP data conversion.

The left column consists of the ASCII code, while the right column contains the corresponding EBCDIC value. The values are checked for a numeric value between 0 and 255.

```
// Linedata CodePage
//-----
// This file is used internally by sap2afp, as well as
// to convert ABAP data to linedata.

// Format : Ascii=EbcDic

// T1000819 + box characters -> T1DABASE

000 = 064
001 = 064
002 = 064
  :
253 = 064
254 = 062
255 = 223
```

Figure 7. Sample defcp.tab Configuration File

fonts.tab Configuration File

This table maps the fonts used in the OTF data stream to AFP fonts.

The following font families are predefined with R/3:

FONTFAMILY	Font
COURIER	Courier
HELVE	Helvetica
LETGOTH	Letter Gothic
LNPRINT	Line Print
TIMES	Times New Roman
OCRA	Optical Character Recognition A
OCRB	Optical Character Recognition B
JPMINCHO	Heisei Mincho
DBMINCHO	Heisei Mincho
DBGOTHIC	Heisei Gothic

Note: **JPMINCHO** and **DBMINCHO** are different names for the same font.

A font named **BARCODE** must be defined for the **HRI** character of a bar code.

The following parameters in the **fonts.tab** configuration file set the format of the fonts you use to print with R/3:

DefCodePage

Specifies the default SBCS code page used if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

DefCharSet

Specifies the default SBCS character set used if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

DBDefCodePage

Specifies the default DBCS code page used if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

DBDefCharSet

Specifies the default DBCS character set used if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

SBDefCodePage

Specifies the default SBCS code page used for half-width characters in DBCS fonts if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

SBDefCharSet

Specifies the default SBCS character set used for half-width characters in DBCS fonts if no **FC** OTF command is given or if the requested font is not found in the **fonts.tab** table.

Font

Describes the font family (**FONTFAMILY** parameter of the **FC** OTF command). The maximum size is 8 bytes and content is not verified.

Size

Specifies the font size in 1/10 of a point (**FONT SIZE** parameter of the **FC** OTF command). The value must be numeric and is not verified.

Type

Defines the font type (**BOLD** and **ITALIC** parameter of the **FC** OTF command). **Type=0** is normal, **Type=1** is italic, **Type=2** is bold, and **Type=3** is italic bold. Any other value is invalid.

CodePage

Specifies the code page and requires a valid AFP code page name (8 bytes). The value is not verified. An invalid name can result in an error message.

CharSet

Specifies the AFP font character set. The content is not verified.

CodedFont

Specifies the AFP coded font. The content is not verified.

DB

Specifies whether the font is an SBCS font (**DB=0**) or a DBCS font (**DB=1**).

SBCodePage

Specifies the single-byte code page used for half-width characters in DBCS fonts. The value is not verified. An invalid name can result in an error message.

SBCharSet

Specifies the AFP single-byte font character set used for half-width characters in DBCS fonts. The content is not verified.

SBCodedFont

Specifies the AFP single-byte coded font used for half-width characters in DBCS fonts. The content is not verified.

If an SBCS font that matches the **Font**, **Size** and **Type** values is not found, the code page and font character set from the **DefCodePage** and **DefCharSet** keywords are used and a warning message is displayed. If a DBCS font that

matches the **Font**, **Size** and **Type** values is not found, the code pages and font character sets from the **DBDefCodePage**, **SBDDefCodePage**, **DBDefCharSet**, and **SBDDefCharSet** keywords are used and a warning message is displayed.

The device types **IBMAFP** and **IBMAFP3** support the predefined font families. These font families are also supported as IBM Expanded Core Fonts, or IBM Chinese, Japanese, and Korean (CJK) Fonts.

ISO 8859-1 (Latin-1) is the default code page that maps to the **1148** code page in the **fonts.tab** configuration table. This ISO code page maps to the German **T1V10273** code page and must be modified for non-Latin-1 R/3 installations. You can make this change on the **xxxxyyyy.tab** configuration file that is used to convert data from ASCII data to EBCDIC data so that these characters are mapped correctly. If you have installed a SAP R/3 Release 2.2 or earlier, use the **S9148.CPA** file to determine the modifications you need to make.

Use the font Letter Gothic Latin1 of the coordinated font family for ABAP listings. If you do not want to install the coordinated font family and plan to use the traditional Gothic text fonts found within the IBM Compatibility Fonts, you can adjust the font names in the **pagedef.tab** configuration file.

If you wish to use fonts that are not supported, take the following steps:

1. Obtain the font as Adobe Type 1.
2. Convert the font into a raster using the Type Transformer in the IBM AFP Font Collection (program number 5648-113).
3. Contact your IBM representative for further details.

Figure 8 on page 286 and Figure 9 on page 286 show examples of sections of the **fonts.tab** configuration file.

```

// Fonts table

// Format : Font=COURIER Size=070 Type=0 CodePage=T1V10273 CharSet=C0420070 DB=0
//          or
//          Font=COURIER Size=090 Type=0 CodedFont=X0GT2A DB=0
//          or
//          Font=JPMINCHO Size=060 Type=0 CodePage=T10300 CharSet=CZJHMN DB=1 SBCodePage=T1H01027 SBCharSet=CZJHMN
//          or
//          Font=JPMINCHO Size=060 Type=0 CodedFont=XZJHMN DB=1 SBCodedFont=XZN16J

DefCodePage = T1V10273
DefCharSet   = C0420000
DBDefCodePage = T10300
DBDefCharSet  = CZJHMN
SBDefCodePage = T1H01027
SBDefCharSet  = CZJHMN

// Courier
Font=COURIER Size=070 Type=0 CodePage=T1V10273 CharSet=C0420070 DB=0
Font=COURIER Size=070 Type=1 CodePage=T1V10273 CharSet=C0430070 DB=0
Font=COURIER Size=070 Type=2 CodePage=T1V10273 CharSet=C0440070 DB=0
Font=COURIER Size=070 Type=3 CodePage=T1V10273 CharSet=C0450070 DB=0
Font=COURIER Size=080 Type=0 CodePage=T1V10273 CharSet=C0420080 DB=0
Font=COURIER Size=080 Type=1 CodePage=T1V10273 CharSet=C0430080 DB=0
Font=COURIER Size=080 Type=2 CodePage=T1V10273 CharSet=C0440080 DB=0
Font=COURIER Size=080 Type=3 CodePage=T1V10273 CharSet=C0450080 DB=0
Font=COURIER Size=100 Type=0 CodePage=T1V10273 CharSet=C0420000 DB=0
Font=COURIER Size=100 Type=1 CodePage=T1V10273 CharSet=C0430000 DB=0
Font=COURIER Size=100 Type=2 CodePage=T1V10273 CharSet=C0440000 DB=0
Font=COURIER Size=100 Type=3 CodePage=T1V10273 CharSet=C0450000 DB=0
Font=COURIER Size=120 Type=0 CodePage=T1V10273 CharSet=C04200B0 DB=0
Font=COURIER Size=120 Type=1 CodePage=T1V10273 CharSet=C04300B0 DB=0
Font=COURIER Size=120 Type=2 CodePage=T1V10273 CharSet=C04400B0 DB=0
Font=COURIER Size=120 Type=3 CodePage=T1V10273 CharSet=C04500B0 DB=0
Font=COURIER Size=140 Type=0 CodePage=T1V10273 CharSet=C04200D0 DB=0
Font=COURIER Size=140 Type=1 CodePage=T1V10273 CharSet=C04300D0 DB=0
Font=COURIER Size=140 Type=2 CodePage=T1V10273 CharSet=C04400D0 DB=0
Font=COURIER Size=140 Type=3 CodePage=T1V10273 CharSet=C04500D0 DB=0
Font=COURIER Size=200 Type=0 CodePage=T1V10273 CharSet=C04200J0 DB=0
Font=COURIER Size=200 Type=1 CodePage=T1V10273 CharSet=C04300J0 DB=0
Font=COURIER Size=200 Type=2 CodePage=T1V10273 CharSet=C04400J0 DB=0
Font=COURIER Size=200 Type=3 CodePage=T1V10273 CharSet=C04500J0 DB=0

```

Figure 8. Header and Courier Portions of a Sample fonts.tab Configuration File

```

// Japanese Gothic
Font=DBGOTHIC Size=060 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=080 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=100 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=100 Type=1 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=120 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=140 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=160 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG
Font=DBGOTHIC Size=180 Type=0 CodePage=T10300 CharSet=CZJHKG DB=1 SBCodePage=T1H01027 SBCharSet=CZJHKG

```

Figure 9. Heisei Gothic Portion of a Sample fonts.tab Configuration File

image.tab Configuration File

This table defines values used to print image data. It contains the following parameters:

DEFRES Specifies the default resolution used for printing image data if you do not specify a value for the **-r** flag of the **sap2afp** command. Valid values are **240**, **300**, **480**, and **600**.

Width Specifies the width of the dither matrix.

Height Specifies the height of the dither matrix.

Cell Specifies the values for the dither matrix.

Transform

Specifies 256 grayscale correction values.

Figure 10 shows an example of the **image.tab** configuration file.

```
// image.tab
// from image.tab.85lr
//
// This file is used to determine the dither matrix and the
// grayscale correction values.

// Define the default output resolution
DEFRES = 600

// Define the dither matrix
Width = 78
Height = 78
Cell =
 15  63 184 219 249 240 158 109  98  54  82 118 133 113  75  64
 87 104 166 215 234 229 179  62  38  4  15  59 186 220 246 240
166 123  87  61  65 108 133 118  78  64 100 105 167 219 234 230
  ⋮
 28  73 193 223 253 247 199  76  31  8  20  93 148 156 203 178
136 126 144 186 201 155 151  90  43  24  28  75 199 222 254 251
196  79  31  7

//
// Grayscale correction values
//

Transform =
0
1
2
⋮
248
252
255
```

Figure 10. Sample image.tab Configuration File

pagedef.tab Configuration File

The pagedef table provides the **PAGEDEF** and **FORMDEF** values used from the value of the ***PJPAPER** parameter that is passed to the **sap2afp** transform with the **Z** access method. It also provides the fonts used for ABAP data.

The name of a **PAGEDEF** for line data is restricted to five digits instead of the usual six characters. The reason for this restriction is that the **PJPAPER** field is twelve bytes long and **must** begin with a **Z**. This restriction applies to ABAP reports (line data) with user-specific formatting only.

- Paper** Specifies the value of the OTF print option parameter **PJPAPER**. The value is not verified.
- FormDef** Specifies the name of the form definition to be used for printing both OTF and ABAP reports. This value is not verified. An error results if the form definition is not found on the print server system.
- PageDef** Specifies the name of the page definition to be used for printing ABAP reports. This value is not verified. An error results if the page definition is not found on the print server system.
- FontNorm** Specifies the normal coded font used for line data printing. The value is not verified.
- FontBold** Specifies the bold coded font used for line data printing. The value is not verified.

Figure 11 shows a sample **pagedef.tab** configuration file:

```
// PageDef table
// Format : Paper=X_65_132 FormDef=F1A10111 PageDef=P1H01SP1
// FontNorm = 50D0 FontBold = 50F0

// Notes:
// =====
// 1) The pagedefs apply to letter size paper.
//    A4 paper size may require modifying the PageDef field.
// 2) Z_INCH12 is a sample for a user specification

Paper=X_65_132 FormDef=F1A10111 PageDef=P1V06683 FontNorm = GB2A FontBold = GB2A
Paper=X_44_120 FormDef=F1A10111 PageDef=P1V06683 FontNorm = GB2A FontBold = GB2A
Paper=X_58_170 FormDef=F1A10111 PageDef=P1V06683 FontNorm = GT8A FontBold = GT8A
Paper=X_65_255 FormDef=F1A10111 PageDef=P1V06683 FontNorm = GT24 FontBold = GT24
Paper=X_65_80 FormDef=F1A10111 PageDef=P1C09182 FontNorm = GT2A FontBold = GB2A
Paper=X_90_120 FormDef=F1A10111 PageDef=P1C09182 FontNorm = GT5A FontBold = GT5A
Paper=X_PAPER FormDef=F1A10111 PageDef=P1C09182 FontNorm = GT2A FontBold = GB2A
// Sample of an added user-defined pagedef entry:
// Paper=Z_INCH12 FormDef=F1SAPFD PageDef=P1SAPPD FontNorm = GT2A FontBold = GB2A
```

Figure 11. Sample pagedef.tab Configuration File

printer.tab Configuration File

Before you can use the R/3 output device, you must map it to an InfoPrint logical printer. This is done in the **printer.tab** configuration file that comes with the **sap2afp** transform. **printer.tab** is located in the **/usr/lpp/psf/sap2afp** directory. Because SAP R/3 restricts the names of output devices to four characters, the **printer.tab** configuration file allows you to map these names to longer and more meaningful names.

Note: You must update the **printer.tab** file every time you add or delete an R/3 AFP printer.

printer.tab uses the following keyword-value pairs:

- | | |
|---------------|--|
| Dest | Specifies the four-character name of the R/3 output device. Specify this value for the -d flag of the sap2afp command. |
| System | Specifies the operating system from which the sap2afp output is printed. |
| Queue | Specifies the name of the InfoPrint logical destination. |
| Node | Specifies the IP address of the target operating system. The content (a maximum of 15 bytes) is not verified. |
- Note** is required for all values of the **System** keyword, but the value is used only when **System=OS/2**.

Figure 12 shows a sample **printer.tab** configuration file. Note that you can include comments in lines preceded by two slashes (**//**).

```
// Printer table
// Format : Dest=SPRT System=AIX Queue=pc14039 Node=192.9.200.220
// Note: The Node parameter is not used for entries where the
// System field is AIX or MVS, but you must still enter a value.
Dest=MVSP System=MVS Queue=pc14039 Node=192.9.200.220
Dest=AIX1 System=AIX Queue=pc14029 Node=192.9.200.116
Dest=AIX2 System=AIX Queue=PSF4039 Node=192.9.200.220
Dest=OS2P System=OS2 Queue=OS2AFP Node=192.9.201.66
Dest=OS2 System=OS2 Queue=OS2AFP Node=192.9.201.66
```

Figure 12. Sample printer.tab Configuration File

For example, suppose that you have defined an R/3 AFP printer called **AFPT**. To map **AFPT** to the InfoPrint logical destination **psf3116**, add the following line to **printer.tab**:

```
Dest=AFPT System=AIX Queue=psf3116 Node=0.0.0.0
```

xxxxyyyy.tab Configuration File

These tables are used for the mapping of characters of an individual SAP ASCII code page into an EBCDIC codepage. SAP uses two kinds of code pages: input code pages and output code pages.

SAP provides the the code page configuration files listed in Table 11 on page 290.

Table 11. SAP Code Page Configuration Files

File Name	Input Code Page	Description	Output Code Page	Description
00000000.tab	T1000819	Latin-1 ISO ANSI 8-bit	T1V10273	Germany F.R./Austria-CECP
11000000.tab	T1000819	Latin-1 ISO ANSI 8-bit	T1V10273	Germany F.R./Austria-CECP
40010000.tab	T1000876 1	OCR-A ASCII	T1000892	OCR-A
40040000.tab	T1000877 1	OCR-B ASCII	T1000893	OCR-B
80000000.tab	IBM-932	Japanese	IBM-1031-SAP2AFP	Japanese

1. Both the OCR-A and the OCR-B code pages are equivalent to ISO-8859/1 with the special characters **hook**, **fork**, and **chair**.

The file names correspond to the 4-digit value of the **INPUTCODEPAGE** plus the 4-digit value **OUTPUTCODEPAGE** parameter of the **CP** OTF command.

```
// Codepage table

// Inp CodePage 0000
// Out CodePage 0000

// Format : Ascii=Ebcdic

000 = 000
001 = 001
002 = 002
003 = 003
  ⋮
253 = 064
254 = 062
255 = 223
```

Figure 13. Sample xxxxyyyy.tab Configuration File (Single-Byte Code Pages)

```
// Japanese
// SAP2AFP is configured to use IBM-932-SAP2AFP as the iconv "From" value.
// This table sets the "To" value to IBM-1031-SAP2AFP.
//

CONVERT FOR=8000
CONVERT TO=IBM-1031-SAP2AFP
```

Figure 14. Sample xxxxyyyy.tab Configuration File (Double-Byte Code Pages)

Examples

Transforming and Printing a File

This command converts the file **FONTSHP.OTF** and queues the AFP datastream for the destination called **3825**. After conversion, SAP R/3 erases the input file **FONTSHP.OTF**.

```
sap2afp -d 3825 -f FONTSHP.OTF
```

Transforming and Printing from Standard Input

This command redirects the spooled file **SP11041** to **stdin**, which is read by the **sap2afp** transform. The input from **stdin** is placed in the **sap2afp.tmp** file, which is processed and then erased. AFP data stream output is sent to destination **LPRT**.

```
sap2afp -d LPRT -i < /usr/sap/DEV/DVEBMGS00/SP11041
```

Tracing the Transform

This command converts the file **ANYFILE.OTF** and sends output to destination **3825**. A trace of the execution can be found in the file **sap2afp.trc**, which is placed in the current directory.

```
sap2afp -d 3825 -f ANYFILE.OTF -t
```

tiff2afp Command: Transforms TIFF Data to AFP

Syntax

```
tiff2afp [-a ImageType] [-alg ProcessingAlgorithms]
          [-calib calibration] [-choice ImageChoice]
          [-C ConfigurationFile] [-clean cleanup]
          [-cmp compression] [-crop CropFactors]
          [-fit {trim | scale}] [-force]
          [-gcorr GrayscaleMappingTable] [-ink color] [-inv]
          [-j ScanOffsetFileName] [-l ImageLength ]
          [-M MemoryBound] [-mp | -nomp]
          [-ms space] [-msf SpaceFraction]
          [-o OutputFile] [-outbits NumberOfOutputBits]
          [-outcolor OutputColorModel] [-p PageRange]
          [-pagetype PageType] [-paper PaperSize]
          [-r resolution] [-respath ResourceSearchPath]
          [-rot rotation] [-scale ImageSize]
          [-sgcorr ScannerCorrection]
          [-sniff | -nosniff] [-term | -noterm]
          [-thresh HalftoneFile] [-v | -nov]
          [-w ImageWidth] [-wrkdir WorkDirectory]
          [-x LeftMargin] [-y TopMargin] [-z]
          [[file | directory | -f FileList | @FileList]...]
```

Description

The **tiff2afp** command transforms a TIFF (Tag Image Format File) data stream into an AFP (MO:DCA-P) or PostScript Level 2 data stream file.

The transform can process extended TIFF Revision 6.0 images, including bilevel, grayscale and color images. The output can be bilevel (IM1 or IOCA FS10), 4-bit or 8-bit grayscale, or 24-bit YCbCr color (IOCA FS11). The transform automatically uses halftoning to convert the grayscale and color images to bilevel.

Automatic Invocation

The PSF DSS automatically invokes the **tiff2afp** transform command whenever you submit a TIFF file for printing. You can pass options to **tiff2afp** using the **other-transform-options** attribute on the **pdpr** command or the **-o** flag of the AIX print commands and the **lprafp** command.

Input and Output

tiff2afp can process either standard input, or multiple files specified on the command line. If no input file is specified, **stdin** is assumed. Standard input is cached to a file (see the **-wrkdir** option) and then processed. Only a single TIFF file should be submitted via **stdin**. If multiple TIFF files are concatenated via standard input, all except the first one are ignored.

If an input file is specified on the command line, it can be either a TIFF file, a directory, or a file list (**-f** and **@** prefixes). Multiple input file specifications are allowed. The transform processes each file in the order in which it was specified on the command line. If the **-z** option is specified, a list of file names to be processed is also submitted via standard input. The files on the list are processed

as if the list were given via the **-f** option on the same place on the command line as **-z**.

If the file name points to a directory, **tiff2afp** processes every file in that directory. The files are processed in the order they would be shown using the **ls -a** command. Directory search is not recursive, that is, the subdirectories are not searched.

If the file name is preceded by the **-f** option or the at sign (**@**), **tiff2afp** assumes that the file contains the list of TIFF files to be processed. Each of the files in the list is processed in the order it was listed.

If a TIFF file has the extension **.tif**, **.tiff**, **.TIF**, or **.TIFF**, this extension need not be given explicitly. **tiff2afp** first tries to open the file as specified and, if unsuccessful, tries to append the extensions **.tif**, **.tiff**, **.TIF**, and **.TIFF** in turn.

For example, suppose that:

- The directory `tFiles` contains the files `file1.tif`, `file2.tif`, `file3.tif`, and `file4.tif` and nothing else.
- The file `flist` in the current directory contains the two file names `tFiles/file2.tif` and `tFiles/file3.tif`. The names listed in the file list may have their extensions omitted.
- The file `flist2` contains the file name `tFiles/file4`. Again, the names listed in the file list may have their extensions omitted.

In order to process files `file1.tif`, `file2.tif`, `file3.tif`, and `file4.tif`, any of the following invocations of **tiff2afp** would work:

```
tiff2afp tFiles/file1.tif tFiles/file2.tif tFiles/file3.tif tFiles/file4.tif
tiff2afp tFiles/file1 tFiles/file2 tFiles/file3 tFiles/file4
tiff2afp tFiles/file*.tif
tiff2afp tFiles
tiff2afp tFiles/file1 -fflist tFiles/file4
tiff2afp tFiles/file1 -f flist tFiles/file4
tiff2afp tFiles/file1 -f flist -f flist2
tiff2afp tFiles/file1 @flist @flist2
```

The file list files allow the display text to be added for each file. A display text is any text starting with the pound character (**#**) and extending to the end of the line. The display text should follow the file name, and can extend over several lines, up to 2048 characters long. The initial **#** character on each line is discarded. If a display text is present for a file name, that text is displayed in the status and error messages instead of the file name. This is useful if the **tiff2afp** is invoked using temporary files whose names are meaningless to the user. Any display text before the first file name is treated as comment and discarded. Display text is allowed also if the **-z** option is used to submit the file list via standard input.

TIFF files may contain multiple images. The **tiff2afp** transform can process and output all the images in the file, both full and reduced resolutions, subject to the values given in the **-choice** and **-p** options. Transparency maps are ignored. If the page numbers are available in the TIFF data, the pages are sorted on output. The pages are not sorted across file boundaries.

The output file name can be either specified explicitly via the **-o** option, or derived from the input file name. If multiple input files have been specified, the default output file is standard output. If a single input file is given and the output file is not specified explicitly, the transform strips the **.tif** or **.tiff** extension from the input file name (if one is present), and appends the **.afp** extension for AFP output, or the **.ps** extension for PostScript output, to get the output file name.

To disable automatic output file name generation and force the default output stream to be the standard output in all cases, set the environment variable **TIFF2AFP_o** to **-** or **stdout**, or, alternatively, put the line **o=-** or **o=stdout** into the configuration file and invoke that configuration file using the **-C** option or the **TIFF2AFP_C** environment variable.

For example, all the following commands:

```
tiff2afp myfile
tiff2afp myfile.tif
tiff2afp myfile -o myfile.afp
```

have **myfile.afp** as the output file. Note that there is no requirement for the explicitly specified input and output files to have **.tif** and **.afp** extensions. To process TIFF file **foo.bar** into an AFP file **foo.bar2**, invoke the transform using `tiff2afp foo.bar -o foo.bar2`

The output data stream is MODCA-P IS/1, MODCAP-P IS/2, or PostScript Level 2. IS/1 images are bilevel and are encoded as IOCA Function Set 10 or IM1. IM1 images are uncompressed. IOCA FS10 output images can be either uncompressed, or compressed via one of the four available compression algorithms (see the **-cmp** option). The default is ITU-T T.6 Group 4 compression. IM1 images are always uncompressed. IS/2 images can be either bilevel, 4-bit or 8-bit grayscale, or 24 bit YCbCr color. Multibit images are encoded as IOCA Function Set 11. Be aware that the only product that supports IOCA FS11 images is the AFP Workbench, that is, grayscale and color AFP images are not currently supported by any printer.

PostScript Level 2 images can be uncompressed or ITU-T T.6 Group 4 bilevel, uncompressed 8-bit grayscale or uncompressed 24-bit RGB color. By default, the transform leaves scaling and halftoning to the printer (that is, color TIFF images are output as 24-bit RGB color images).

Errors and Error Recovery

tiff2afp divides errors into fatal and non-fatal. The fatal error categories are the following:

- Errors in the user-specified parameters, either in the environment variables, the configuration file, or the command line arguments. These errors include unrecognized options, invalid values for parameters, or inability to open the configuration file or the output file.
- Out of memory errors. The requested memory is larger than the memory specified using the **-M** option or the dynamic memory allocation has failed.
- Disk space errors. The transform guards against trying to write to a full file system. See the **-ms** and **-msf** options for setting the minimum free disk space requirements. If the file system is full, the transform deletes the partial output file before terminating.

- Internal errors.

In the case of a fatal error, the last output page might not be complete.

Errors encountered in the TIFF files are non-fatal and **tiff2afp** attempts to recover from them. These errors include not being able to open an input file, an input file not being a TIFF file, or an input file containing features that cannot be processed. If the transform fails to open 15 or more input files, it assumes an error in the parameter list (for example, **-f** was used with a file that does not contain a file list) and terminates.

If an error is encountered in a file, the transform attempts to recover with the next image in the file. If such recovery is not possible, **tiff2afp** attempts to recover with the next input file. In both cases, a warning message is issued. Errors and warnings are output to standard error.

For example, let a directory `tFiles` contain files `file1.tif`, `file1.txt`, `file2.tif` and `file3.tif`, where `file1.txt` is an ASCII file. Invoking the transform via `tiff2afp tFiles`

processes the bilevel images in all three TIFF files correctly. A warning is issued that `file1.txt` is not a TIFF file.

Non-fatal errors can be made fatal by using the option **-term**, or the corresponding environment variable or configuration file entry. If **-term** is set, the transform terminates in error if it encounters an error in the TIFF data stream.

Data Transformations

If the input image is grayscale or color, and the output image type is bilevel (IOCA FS10 or IM1), the transform internally scales the image to the desired size, then uses a halftoning algorithm (ordered dither, the default, or Floyd-Steinberg) to convert it to bilevel. In converting the image to bilevel, the characteristics of the output device such as dot shape and dot gain must be taken into consideration. The internal grayscale mapping table has been optimized for the 600-peI IBM InfoPrint 4000 laser printer. The **-gcorr** option can be used to specify a different mapping of gray levels.

For very light or very dark images, the halftoning algorithms can be automatically recalibrated to preserve details that would be lost using the default calibration. See the **-alg** option for more information.

To maintain the image quality, scaling must be done prior to halftoning. Halftoning algorithm is very computation-intensive. Unless the images are small, **tiff2afp** cannot process the color images fast enough to feed even a slow printer.

The size and position of the output image depend on several factors:

- The size specified to the transform
- The form map specified at print time
- The forms and options loaded in the printer

If the image is too large to fit on the page, it is trimmed to size by default. Use the **-fit scale** option to instruct the printer to scale the image to the paper size. If the paper size is not specified explicitly via the **-paper** option, the paper size

defaults to US letter size (8.5 by 11 inches). If the image is larger than this, the paper dimensions are increased as necessary. If the paper size is been specified explicitly, it is not increased if the image does not fit on paper. The options **-l** and **-w** have the same effect as **-paper**.

The size of the actual image (as opposed to the paper size) is controlled by the **-scale** option. You can either specify a value of **orig** for the **-scale** option or give an actual size. If you specify **orig**, the output image is the same size as the input image. If you specify **-scale** with an actual size, the output image is scaled to the desired size. You can also specify a percentage for enlargement or reduction.

Even if you specify **-scale orig**, the image may still have to be scaled if the input resolution is different from the output resolution. By default, the transform leaves scaling to the printer. The exceptions are:

- Images that are being halftoned, which are always scaled in the transform
- Images that have different resolutions in X and Y directions

You can use the **-alg** option to instruct the transform to perform internal image scaling. Options **-alg**, **-clean**, and **-ink** choose and configure various scaling algorithms.

If possible, **tiff2afp** rewraps the TIFF raster data in MODCA-P headers. This does not change the compression algorithm used in the data, even though it might be different from the output compression algorithm specified on the command line. The data is rewrapped only if no changes are to be made in the image and if the compression algorithm is supported by the IOCA standard. Besides uncompressed data, the bilevel compression algorithms supported by both TIFF and IOCA are ITU-T Group 3 and Group 4 algorithms.

For 8-bit grayscale and 24-bit color images, both TIFF and IOCA FS11 support JPEG compression algorithms. However, TIFF and JPEG standards have different subsampling defaults than IOCA FS11. Thus, most 24-bit color images are not suitable for rewrapping, even if they use a JPEG compression algorithm and a color model supported by IOCA FS11.

Note also that JPEG is a lossy compression algorithm. Decompressing a JPEG image and then recompressing it for output might result in reduced image quality. For that reason, the default is to use no compression for the gray or color output.

Be aware that not all the printers support all the recognized IOCA compression standards. To make sure that the transform decompresses the data and recompresses it using the specified algorithm, use the option **-force**. If the output image is IM1, the image is always decompressed and scaled in the transform.

The TIFF images are often divided into many segments for efficient memory handling. Some printers terminate the printing in error if the page is too complex. For that reason, **tiff2afp** decompresses, repartitions, and compresses the data if it deems there are too many segments in the picture.

Parameters

tiff2afp behavior is governed by many parameters. The parameters are set by the following hierarchy (least significant first):

- Internal defaults
- Environment variables
- Configuration file
- Command-line arguments

Command Line Arguments

Note the following points regarding the command line arguments for the **tiff2afp** transform:

- Options and input file names can appear on the command line in any order.
- When you run **tiff2afp** as a standalone transform, the blank between option and value is optional (for example, both `-inkblack` and `-ink black` are valid).
- When you use the `-o` flag of the **enq**, **lp**, **qprt**, or **lprafp** commands to pass options to **tiff2afp**, no blank is permitted between option and value is optional (for example, `-o-inkblack` is valid, but `-o -ink black` is not).
- When you use the **other-transform-options** attribute on the **pdpr** command to pass options to **tiff2afp**, any string containing a blank must be surrounded by single quotes (for example, both `other-transform-options=-inkblack` and `other-transform-options='-ink black'` are valid).
- All values except file names are case-insensitive.
- If an option is specified multiple times, the last specification remains in force.
- If multiple configuration file names are given, they are processed in order.

Configuration File

The configuration file has entries of the form *option=value*, where each pair must reside on a separate line. Options and other syntax are the same as for the command line arguments and the option names are the same. Input files and configuration files cannot be specified in the configuration file (that is, nested configuration files are not supported). In the case of options without values (for example, **-inv**), the equals sign must be present.

Some command line options, for example, **-calib**, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

If you do not specify a configuration file on the command line with the **-C** option, the transform checks for the existence of the default configuration file, **/usr/lpp/psf/tiff2afp/tiff2afp.cfg**. If this file exists, the transform uses it as the configuration file.

The following is an example of a valid configuration file:

```
scale = letter
r= 300
o = -
inv=
alg=afp
```

Note that the spaces around the equals sign (=) are optional. In this example, the option-value pair `o = -` means that the default output file is the standard output. Output file name computation has been disabled.

Environment Variables

Environment variables have the form `TIFF2AFP_option`, where *option* is the same as on the command line and the configuration file.

Some command line options, for example, `-calib`, cannot be used in the configuration file or as environment variables. Options available only on the command line are noted as such in their descriptions.

For example, to achieve the same effect as the configuration file in the last example, the following statements have to be executed in the calling shell:

```
export TIFF2AFP_scale=letter
export TIFF2AFP_r=300
export TIFF2AFP_o=-
export TIFF2AFP_inv=" "
export TIFF2AFP_alg=afp
```

There must be some value set for each desired option. For options that do not take a value, specify a blank surrounded by double quotes, for example:

```
export TIFF2AFP_inv=" "    correct
export TIFF2AFP_inv=      has no effect
```

Resource Search Path

For resource files, such as scan offset files and grayscale correction files, the transform searches the current directory by default. You can use the `-respath` option to specify a list of directories to be searched for such files. This resource path does not apply to the configuration file.

Limitations

- Only Huffman coding with baseline DCT JPEG algorithm is supported.
- Old style JPEG specification (Photometric Interpretation 6) is not supported. Photometric Interpretation 6 is obsolete and will be removed from the TIFF specification. Use the Photometric Interpretation 7 to incorporate the JPEG compressed images in TIFF files.
- Additional color information, such as alpha data, is disregarded.
- Transparency maps are ignored.
- At most 8-bit grayscale and 24-bit color are supported.

Acknowledgments

This software is partially based on the Independent JPEG Group's JPEG compression and decompression code.

Options and Values

@FileList Specifies a name of a file that contains a list of files to be processed by the transform. If the @ option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple @ options are allowed. Also see the **-f** and **-z** options. The @ is not preceded by the dash, and is implemented to maintain compatibility with the **ps2afp** transform.

-a {ioca | ioca10 | ioca11 | im1 | PS.2}

-a {IO1_G4 | IM1 | IO1 | IO1_MMR | PSEG_IO1_G4 | PSEG_IM1 | PSEG_IO1 | PSEG_IO1_MMR | OVLY_IO1_G4 | OVLY_IM1 | OVLY_IO1 | OVLY_IO1_MMR}

Choice of the output image type. The first syntax chooses between the IOCA FS 10 (**ioca**, **ioca10**), IOCA FS11 (**ioca11**), IM1, and PostScript Level 2 (**PS.2**) output. IOCA FS10 and IM1 yield bilevel images, while IOCA FS11 results in 4-bit or 8-bit gray or 24-bit color output (see option **-outbits**). Note that presently the only product that supports IOCA FS11 is the AFP Workbench. The output compression algorithm is set via the option **-cmp**. To set the page type (page, overlay, page segment or object), use the **-pagetype** option.

The second syntax is to maintain compatibility with the **ps2afp** transform, and sets the image type (**IO1** for IOCA FS10 or **IM1** for IM1 output), compression (**G4** for Group 4 or **MMR** for Group 3), and page type (**PSEG** for page segment or **OVLY** for overlay). If **PSEG** or **OVLY** is not specified, the output is a printable page. If no compression algorithm is specified, the output is not compressed. The second syntax cannot be used for IOCA FS11 output.

Some older printers do not support IOCA images. In such cases, the IM1 output type should be chosen. IM1 images are uncompressed and thus use more space. The processing might also take longer since the IM1 image cannot be scaled by the printer and so internal scaling algorithms must be used. See option **-alg**.

The default is **ioca** for IOCA FS10 output compressed via Group 4 algorithm.

This option is similar to the **image-out-format** document attribute on the **pdpr** command.

-alg {afp | alg1 | alg2 | alg3}

-alg {htod1 | htfs}

-alg htcal1

Choice of the scaling and halftoning algorithms. You can specify multiple choices, separated by commas, for one **-alg** option. The effect is the same as specifying multiple **-alg** options. For example, **-alg htfs,htcal1** is equivalent to **-alg htfs -alg htcal1**.

The scaling algorithms are:

- If **afp** is chosen, the scaling is done using the default algorithm in the printer. This makes the transform much faster. If the image must be reduced, however, this algorithm may drop some information from the image, such as thin lines.
- **alg1** activates the internal scaling algorithm to scale the image explicitly to the specified size. This algorithm is guaranteed not to discard any ink. “White space” in the image, however, may be lost (that is, features close to one another might merge). This algorithm makes the transform run longer, and might occasionally make for a “dirty” image, since the occasional “noise pixels” in the scanned images tend to be amplified.
- **alg2** activates the more flexible version of **alg1**. If this algorithm is selected, option **-clean** can be used to specify the amount of ink “cleanup” to be performed. Option **-clean 0.0** makes the algorithm **alg2** perform like **alg1** (albeit more slowly). Increasing the value specified in **-clean** discards more and more ink, until **-clean 1.0** results in a blank page.
- **alg3** activates a scaling algorithm that works by deleting or duplicating rows and columns in the image. This is a fast general-purpose algorithm.

For bilevel images, the default is **afp** if the output image type is IOCA and **alg3** if the output image type is IM1. For color images with bilevel output, the scaling is always done prior to the halftoning algorithm. If a grayscale or color output is chosen (**-a ioca11**), this option is ignored and the algorithm is set to **afp**.

The halftoning algorithms are:

- **htod1** uses an ordered dither with a screen derived from the value of the **-thresh** option. The default is an 85 line per inch screen.
- **htfs** uses the Floyd-Steinberg algorithm.
- **htcal1** recalibrates the halftoning algorithm for each image. **htcal1** forces the transform to read the whole image into memory and requires an additional pass through the image. It should be used only for very light or very dark images.

The default is **htod1**. Each halftoning algorithm uses a different internal default calibration curve. If the automatic calibration is turned on, a still different set of calibration curves are used.

See options **-clean**, **-gcorr**, **-ink**, **-paper**, **-scale**, **-thresh**, **-l**, **-w**, **-x**, and **-y**.

-calib scanner

-calib {scanner | printer | patch | patchr},name1...

Transform calibration for the scanner or printer. If **scanner** is specified, **-sgcorr** must be present. If **printer** is specified, **-sgcorr** may or may not be present. If **patch** or **patchr** is specified, **-sgcorr** (if present) is ignored. Detailed explanation of the calibration process is beyond the scope of this entry.

You cannot specify **-calib** in the configuration file or as an environment variable.

-choice {full | reduced | both}

TIFF image files may contain both full and reduced resolution versions of each image. The transform can output both versions, or full resolution only, or reduced resolution only, depending on the value for this option. The default is to output the full resolution images only.

See the **-mp** and **-nomp** options.

-C ConfigurationFileName

The name of a configuration file containing option-value pairs. If multiple **-C** options are given on the command line, they are processed in order. Specifying the configuration file on the command line overrides any specification done via the **TIFF2AFP_C** environment variable.

The default configuration file is **/usr/lpp/psf/tiff2afp/tiff2afp.cfg**.

-clean {0.5 | x.xxx}

The internal scaling algorithm **alg2** allows for variable thresholding. The scaled pixel is declared painted if the fraction of its area greater than the threshold is painted in the original image. The value *x.xxx* is a real number between zero and 1 inclusive and gives this threshold.

If the option **-clean 0.0** is issued, **alg2** behaves like **alg1** and turns on a pixel as long as any part of the pixel has been painted in the original image. **-clean 1.0** results in a blank image because the output pixels are never painted.

Note that setting **-clean 0.95** and **0.9999999** turns on the pixels that had essentially all the area painted in the original picture. Depending on the data, most of the image will probably be preserved. Increasing **-clean** by a small amount to **1.0** erases the image. If the scaling algorithm is not **alg2**, this option is ignored. The default is **-clean 0.5**.

-cmp {none | mh | mmr | g3 | g4 | jpeg}

Choice of the output image compression algorithm:

none	Uncompressed output
mh	ITU-T T.4 G3 Modified Huffman
mmr	IBM Modified Modified Read
g3	ITU-T T.4 G3 Modified Read
g4	ITU-T T.6 G4
jpeg	JPEG non-differential Huffman coding with baseline DCT. The output image data should be compressed to reduce the file sizes and increase the printing speed.

The default compression is ITU-T T.6 Group 4 for bilevel images and no compression for grayscale or color images. Note that some printers may not support Group 4 compression algorithm and require using the **-cmp** option to choose a different one. The JPEG algorithm can compress only 8-bit grayscale and 24-bit color images. 4-bit grayscale images cannot be compressed.

-crop t,b,l,r[i | m | p | d]

Image cropping. *t,b,l,r* specify how much should be cropped from the image top, bottom, left edge, and right edge. The numbers are floating point and can be either positive or negative. Negative numbers indicate that a blank space should be inserted. The units are inches, millimeters,

points, and dots (pels), with the default being dots. The cropping is specified in the context of the output page, so that “top” means the top of the output page and so on, regardless of the **-rot** option. To crop, the transform will enlarge the image by the amount to be cropped, then crop the specified amount by manipulating the actual bitmap. The resulting image has the size as specified by the explicit (or implicit) **-scale** option. See also option **-j**.

If **-fit trim** is specified, the right and the bottom edge of the image are not cropped. Instead, the image grows as necessary. Because **-fit trim** causes the output data stream to contain the “position and trim” specification, the printer discards any extra image.

-f *FileList* Specifies the name of a file that contains a list of files to be processed by the transform. If the **-f** option is present, the output file defaults to standard output, even if the list of files contains only a single entry. Multiple **-f** options are allowed. See also options **@** and **-z**.

-fit {trim | scale}

Determines whether the printer behavior will be position-and-trim or scale-to-fit if the image is too large to fit on the paper. The default is **trim**.

This option is equivalent to the **image-fit** document attribute on the **pdpr** command.

-force If present, this option forces **tiff2afp** to decompress and recompress the image, regardless of other factors.

-gcorr *FileName*

Specifies a file with grayscale mapping table for halftoning of the grayscale and color images to bilevel for output. The mapping table must be provided to compensate for the printing characteristics of the particular output device and paper type, such as dot gain. This file must contain either:

- 256 real numbers, one for each level of gray in the 8-bit grayscale image
- The PostScript **settransfer** operator

The algorithm converts every image to 8-bit grayscale before applying the halftoning algorithm. The default internal mapping table has been optimized for the 600-pel IBM InfoPrint 4000 laser printer. You shouldn't change this unless you know what you are doing. See also options **-alg** and **-thresh**. PostScript code submitted via the **-thresh** option can have the same effect as **-gcorr**.

-ink {black | white}

This option is used only with scaling algorithm **alg1** or **alg2**. The TIFF images can be either black on white or white on black. The internal scaling algorithm must know which, because “ink” is preserved at the expense of “non-ink” The default value, “black,” indicates that the image is black on white.

If the option **-inv** is used to print the reversed image, the inversion is done as the data is read by the transform, before any processing is done. The black or white must thus be specified in the terms of the printed image, not in the terms of the input TIFF image.

-inv Reverses the image. Areas that are black in the original image become white and vice versa. Note that the reversed image may be either black on white or white on black, depending on the original image.

-j *ScanOffsetFileName*

Sometimes input images must be shifted to get the desired positioning on the page. The scan offset file contains the directions for shifting.

The file has the format of

```
[attribute]
values
:
values
[attribute]
values
:
values
```

Currently, the recognized attributes are **[Units]** (values **millimeters**, **mm**, **inches**, **in**, **points**, **dots**, **pels**) **[Page_Offset_Type]** (values **crop** or **grow**) and **[Page_Offsets]**. The values for page offsets are in the format *FileName,Hhoriz,Vvert* Each entry refers to a file. The file names must be specified (or at least the leading comma must), but are currently ignored and the offset factors are applied to each file in turn. Note that the same factors are applied to each image in the file. The *horiz* and *vert* values are the amount that the image is to be shifted, in the horizontal and vertical direction. The positive directions are down and right (that is, the origin is in the left upper corner of the page). The default units are millimeters. Like the values for the **-crop** option, the shifts are specified in the output space context.

Extra spaces and blank lines are allowed. Unrecognized attributes and their values are ignored. See the sample file **shift.sample**.

If the image is moved left or up, part of the bitmap is removed. If the image is moved down or right, removal is governed by the value of the **[Page_Offset_Type]** attribute. If **crop** is chosen, the transform removes the requisite amount from the right and bottom edges of the bitmap. If **grow** is chosen, the transform does not remove any space. The bitmap grows and the trimming, if any, is left to the printer. If the **-fit trim** option (the default) is specified, **[Page_Offset_Type]** defaults to **grow**. For **-fit scale**, **[Page_Offset_Type]** defaults to **crop**.

-l **{11i | yyy.yy[d | m | i | p]}**

Specifies the paper length. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. If the unit is dots, decimals (if any) are ignored. The default paper length is 11 inches. See options **-w** to set the paper width or **-paper** to set both dimensions at the same time.

-M **{0 | nnn}**

Limits the amount of memory available to **tiff2afp**. *nnn* is the maximum amount of memory in kilobytes. A value of **0** means there is no memory limit. *nnn* can be set from **0** to the maximum value that AIX allows. The default is **0**.

[-mp | -nomp]

Each TIFF image is supposed to have a marker bit set if there are multiple TIFF images in the file. This marker is sometimes missing, even if there are multiple images present in the file. The **-mp** option instructs the transform to behave as if the multipage marker bit were set. The transform then processes all the images in the file, subject to the **-p** and **-choice** options. The default is to leave the marker bit unset (**-nomp**).

-ms {10 | *nnn*}

Requires that at least *nnn* kilobytes of disk space be available on the file system that contains the output file. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **10**. See option **-msf**.

-msf {0.1 | *x.xxx*}

The number *x.xxx* is a real number between 0 and 1. It denotes the minimum space that must be left unused on the file system containing the output file. The space is given as a fraction of the total space in the file system. This limit is enforced every time data is written to the output file. If the output is standard output, this option is ignored. The default is **0.1**. See option **-ms**.

-nomp See [-mp | -nomp].

-nosniff See [-sniff | -nosniff].

-noterm See [-term | -noterm].

-nov See [-v | -nov].

-o *FileName*

Optional output file name. Specify - for standard output.

-outbits *NumberOfOutputBits*

Sets the number of bits per pel in output. This value must be **1**, **4**, **8**, or **24**. If the output image type is IOCA FS10 or IM1, the number of output bits is set to **1** and this option is ignored. For IOCA FS11 output, the default is **24**. Note that this number represents the maximum number of bits used per pel. Thus, even if the number of bits is set to **24**, a 4-bit grayscale image is still displayed in 4-bit format.

-outcolor {rgb | ycbcr | ycrcb}

Sets the output color model to RGB, YCbCr, or YCrCb if the image type is IOCA FS11 and the number of output bits is 24. Otherwise, this option is ignored. The default is **ycbcr**.

-p {even | odd | *nn* | *nn-mm* | *nn-*}

Specifies that the output should only contain the specified pages. If no **-p** option is given, all the pages are output (but see the **-choice** option for printing full or reduced resolution images of each page). Multiple **-p** options may be specified. Their effect is cumulative. Regardless of the order in which the pages are specified, they are always printed in ascending order. The recognized values are:

even	Print all even pages
odd	Print all odd pages
<i>nn</i>	Print page <i>nn</i>
<i>nn-mm</i>	Print pages <i>nn</i> to <i>mm</i> , inclusive.
<i>nn-</i>	Print all pages starting with page <i>nn</i>

Pages are numbered starting with 1.

-pagetype {page | overlay | ovly | pseg | object}

Sets the output page type to be page, overlay, page segment or object. The same page type is set for every page in the output. Thus, unless option **-p** is used to select a single page, multiple overlays, page segments or overlays are stored in the output file. The default is **page**. See option **-a**.

-paper {a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p]}

Specifies the output paper size. The supported values are:

a3 A3 format (297 by 420 mm or 11.69 by 16.54 inches)

a4 A4 format (210 by 297 mm or 8.27 by 11.69 inches)

a5 A5 format (148 by 210 mm or 5.83 by 8.27 inches)

letter 8.5 by 11 inches (216 by 279 mm)

folio 8.5 by 13.0 inches (216 by 330 mm)

legal 8.5 by 14.0 inches (216 by 356 mm)

ledger 11.0 by 17.0 inches (279 by 432 mm)

xxx.xx,yy.yy[d | m | i | p]

Horizontal and vertical page dimensions. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**.

The default paper size is letter. If **-paper** is not used, the paper size is increased, if necessary, to contain the output image.

See options **-l**, **-w**, and **-scale**.

-r {300 | nnn}

The output device resolution, specified in dots per inch. The default is **300**.

This option is equivalent to the **default-printer-resolution** document attribute on the **pdpr** command.

-respath *directory*[:*directory*...]

Sets the search path for resource files, such as the scan offset files and grayscale calibration curve files. If a resource file name is specified as a relative name (does not start with a */*), the transform searches every directory in the path, in the order specified in the path, until it finds the file (or fails). See options **-j** and **-gcorr** for scan offsets and grayscale calibration curve. The default is the current directory.

-rot {0 | 90 | 180 | 270[p | i]}

The image is rotated in the clockwise direction by the amount specified. The default is zero, that is, no rotation.

If **p** is specified, the transform sets the output datastream in such a way that the printer performs the actual image rotation. If **i** is specified, the transform rotates the output bitmap. When **i** is chosen, the transform takes much longer to run and uses much more memory. If no letter is specified, the default or any previous value (such as the value specified in the configuration file) remains in force. The default is **p**.

-scale {orig | a5 | a4 | a3 | letter | folio | legal | ledger | xxx.xx,yyy.yy[d | m | i | p] | xxx%}

Specifies the output image size. The image is scaled to this size and

centered in the area defined by the paper size and margin options. The supported values are:

orig	Preserve the input image size, regardless of the printable paper area.
a3	A3 format (297 by 420 mm or 11.69 by 16.54 inches)
a4	A4 format (210 by 297 mm or 8.27 by 11.69 inches)
a5	A5 format (148 by 210 mm or 5.83 by 8.27 inches)
letter	8.5 by 11 inches (216 by 279 mm)
folio	8.5 by 13.0 inches (216 by 330 mm)
legal	8.5 by 14.0 inches (216 by 356 mm)
ledger	11.0 by 17.0 inches (279 by 432 mm)

*xx.xx,yy.yy***[d | m | i | p]**

Horizontal and vertical image dimensions. The optional units are **d**ots (pels), **m**illimeters, **i**nches, or **p**oints.

xxx% Magnification relative to the original image size. Numbers below 100% mean reduction, while Numbers above 100% mean enlargement. For example, **-scale 200%** causes the output image to be twice as long and twice as wide as the input image.

The default image size is **orig**.

-sgcorr *FileName*

Specifies the name of the scanner-related calibration file. To use this option in the calibration process (with the option **-calib**) you must specify a single file name. If **-calib** is absent, this option is ignored.

A detailed discussion of **-sgcorr** is beyond the scope of this document.

[-sniff | -nosniff]

Turns automatic conversion to black on white for bilevel images on (**-sniff**) or off (**-nosniff**). The automatic conversion algorithm counts the number of 0 and 1 bits in the image. If there are fewer zeros, it assumes the printed features are represented by zeros (white on black), and inverts the image to be black on white. The detection and conversion are done after the conversion specified by the Photometric Interpretation tag is applied (if any).

This option is ignored if the image is not bilevel. The default is **-nosniff**.

[-term | -noterm]

Disables (**-term**) or enables (**-noterm**) error recovery.

- When error recovery is disabled, on encountering an error in a TIFF file, the transform terminates with an error message and a nonzero return code.
- When error recovery is enabled, the errors in TIFF files are treated as non-fatal. The transform attempts to recover with the next image in the file, or with the next file. The return code is zero.

The default is **-noterm**.

-thresh *FileName*

Specifies a file that contains a PostScript Type 1 or Type 3 halftone dictionary. Alternatively, the PostScript code can specify the **setscreen** operator instead of a Type 1 dictionary. The halftone cell in the dictionary is used to overwrite the default ordered dither clustered dot halftone cell. If the PostScript code contains a transfer function, either in the halftone dictionary or specified by the **settransfer** operator, the current grayscale correction curve is overwritten as if **-gcorr** were used.

[-v | -nov]

Turns verbose mode on (**-v**) or off (**-nov**).

- When verbose mode is on, the transform prints a message as it opens each resource file, then echoes the command line, then prints a message for each file name as it is processed.
- When verbose mode is off, the transform prints only error messages.

The default is **-nov**.

-w **{8.5i | yyy.yy[d | m | i | p]}**

Specifies the paper width. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default page width is 8.5 inches. See options **-l** to set the paper length or **-paper** to set both dimensions at the same time.

-wrkdir *WorkDirectoryName*

The TIFF data stream is by definition non-sequential. Thus, input from **stdin** must be cached on disk before it can be processed. This option specifies which directory to use for the caching of the standard input. If this option is absent or the directory cannot be opened, the transform first tries to use **/var/psf/tiff2afp** as the working directory and, if **/var/psf/tiff2afp** is absent, uses **/tmp**.

The **stdin** cache file is never visible to the user because it is immediately unlinked after creation. Thus, the cache file is always deleted when **tiff2afp** finishes execution, even if **tiff2afp** is killed or otherwise terminates in error.

-x **{0 | nnn.nn[d | m | i | p]}**

Specifies the left margin. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default is zero (no margin).

-y **{0 | nnn.nn[d | m | i | p]}**

Specifies the top margin. The optional units are **dots** (pels), **millimeters**, **inches**, or **points**. The default unit is dots. The default is zero (no margin).

-z

Signifies that a list of files to be processed is submitted from standard input. See also options **-f** and **@**.

tiff2afp

Chapter 7. InfoPrint Object Attributes

This chapter lists the attributes for these InfoPrint print objects:

- “Attributes for Actual Destinations” on page 310
- “Attributes for Auxiliary-Sheet Objects” on page 399
- “Attributes for Documents and Default Documents” on page 403
- “Attributes for Jobs and Default Jobs” on page 464
- “Attributes for Logs” on page 506
- “Attributes for Logical Destinations” on page 511
- “Attributes for Media” on page 538
- “Attributes for Queues” on page 544
- “Attributes for Resource Contexts” on page 555
- “Attributes for Servers” on page 558

Attribute Disclaimer

There are attributes and attribute values identified in the *ISO 10175-1 Information Technology - Text and Office Systems - Document Printing Application (DPA) Part 1: Abstract-Service Definition and Procedures* standard that InfoPrint does not support. If you use any of these non-supported attributes or values, InfoPrint may accept them. However, the results may be different than you expect. Sometimes, InfoPrint may issue a message indicating this it does not support the attribute or value.

Attributes for Actual Destinations

- InfoPrint uses actual destinations for job validation and scheduling. See Appendix C, “Job Validation and Scheduling” on page 623 for an explanation of job validation and scheduling and for tables showing the attributes used for these tasks.
- InfoPrint uses the actual destination attributes **xxx-supported** for job validation. InfoPrint uses both the **xxx-ready** and the **xxx-supported** attributes for job scheduling.
- InfoPrint issues an error if you update an **xxx-ready** attribute with a value not currently assigned to the corresponding **xxx-supported** attribute.
- Actual destinations have different attribute sets based on the DSS that supports the destination.
- InfoPrint supplies some attributes files that have the values for some of the actual destination attributes already set, based on the output device model or destination attachment type. You will find these attributes files in the **/usr/lpp/pd/attr** directory.

Attributes Not Displayed in the InfoPrint Administrator's GUI

While all actual destination attributes and attribute values are supported for both basic and advanced InfoPrint installations, neither InfoPrint administrator's GUI displays a complete set.

- The basic InfoPrint administrator's GUI displays only the attributes of greatest interest to InfoPrint administrators.
- The advanced InfoPrint administrator's GUI displays most attributes and attribute values, but omits a few that are used primarily in basic InfoPrint installations.

You can list the values of attributes not displayed in the InfoPrint administrator's GUI using the **pdls** command. You can set the values of initially settable and resettable attributes using the **pdcreate** command. You can change the values of resettable attributes using the **pdset** command.

Initially Settable Attribute Listing

You can set these attributes with the **pdcreate** command when you create an actual destination.

attachment-type
destination-data-stream
destination-realization
destination-support-system
device-name
print-queue-name

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create an actual destination or modify them with the **pdset** command after you create the actual destination.

accept-jobs
accounting-exit
ack-interval
add-carriage-returns
add-line-feeds
ascii-character-mapping
ascii-font-map
associated-queue
attribute-map
audit-exit
automatic-postscript-mode-switch
auxiliary-sheet-selections-supported
carriage-control-types-supported
character-mappings-supported
checkpoint-at-stacker
connection-timeout
content-orientations-supported
convert-to-ebcdic-supported
data-fidelity-problem-reported-supported
default-font-fidelity-action
default-font-resolution
default-input-tray
descriptor
destination-command
destination-locations
destination-model
destination-pass-through
destination-register-threshold
destination-release-timer
destination-tcpip-internet-address
destination-tcpip-port-number
document-finishings-supported
document-formats-supported
document-types-supported
dss-job-message-disposition
dss-job-message-log-size
dss-job-message-log-wrap
ebcdic-character-mapping
end-message-supported
end-sheets-supported
font-resolutions-supported
force-destination-setup
form-definition
image-fit-supported
image-length
image-out-formats-supported
image-width
input-data-user-exit
input-trays-medium

input-trays-supported (BSD only; otherwise non-settable)
intervention-timer
job-batches-ready
job-finishings-supported
job-retry-count-limit
job-retry-interval
job-rip-actions-supported
job-size-range-ready
job-size-range-supported
job-start-wait-supported
list-of-managers
log-accounting-data
maximum-concurrent-jobs
maximum-copies-supported
maximum-fonts-to-keep
maximum-overlays-to-keep
maximum-segments-to-keep
media-ready (BSD only; otherwise non-settable)
media-supported
message
message-font-type
message-form-definition
non-process-runout-timer
notification-profile
notify-operator
number-up-supported
offset-stacking-available
optimize-for-multiple-copies
output-appearances-supported
output-bin
output-bin-numbers
output-data-user-exit
output-format-supported
overlay
page-select-supported
pcl-server-address
pcl-server-port
plex
plexes-supported
postscript-server-address
postscript-server-port
presentation-fidelity-problem-reported
print-edge-marks
print-qualities-supported
printer-end-sheet
printer-escape-codes
printer-hot-folder
printer-memory
printer-resolutions-ready
printer-resolutions-supported
printer-separator-sheet
printer-start-sheet
printer-s370-channel-device-address
printer-s370-channel-slot-number

printer-timeout-period
 protected-attributes
 psf-tray-characteristics
 remote-queue
 resource-context-font
 resource-context-form-definition
 resource-context-overlay
 resource-context-page-definition
 resource-context-page-segment
 reverse-output
 rip-ini-file
 rip-server
 scanner-corrections-supported
 screen-frequencies-supported
 scheduler-sort-primary-order
 scheduler-sort-secondary-order
 separator-sheets-supported
 sides
 sides-supported
 snmp-community-name
 snmp-retry-count
 snmp-timeout
 start-message-supported
 start-sheets-supported
 table-reference-characters-supported
 transform-output-location
 use-snmp
 x-image-shift-range-supported
 y-image-shift-range-supported

accept-jobs (All DSS)

This **resettable**, **single-valued** attribute indicates whether InfoPrint can assign newly submitted or resubmitted jobs to this actual destination.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- A value of **false** does not prevent you from using the basic InfoPrint administrator's GUI to reassign jobs that have been assigned to another actual destination to this actual destination.
- When this value is **true** and the value of the queue attribute **assign-to-destination** is true, InfoPrint can assign jobs to this actual destination even if it is disabled. Of course, the jobs will not be printed or transmitted until the destination is enabled.

accounting-exit (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the name of an auxiliary-sheet object that sets accounting exit parameters.

Allowed Values

You can enter the name of an auxiliary sheet or any of these fixed values:

accounting-log

Accounting information is written to the **/var/psf/accounting.log** file.

blank This value is technically valid, but should not be used.

brief A sheet with brief accounting information is printed after the job.

full A sheet with full accounting information is printed after the job.

job-ticket Accounting information is written to the **/var/psf/podaccount.log** file.

none No accounting information is produced.

Default Value

Basic InfoPrint administrator's GUI

job-ticket

Advanced InfoPrint administrator's GUI and command line

accounting-log

ack-interval (PSF)

This **resettable, single-valued** attribute determines how often InfoPrint sends acknowledgement requests to the destination.

Allowed Values

You can enter a value of 1 through 9999. This value represents pages.

Default Value

100

Usage Guidelines

The unit for this attribute is pages. If you change this attribute value, the change can affect performance. You can control how often InfoPrint updates the job attribute **pages-completed** by decreasing or increasing this value:

- Decreasing the value (number of pages) increases the number of acknowledgement requests during normal printing activities. This decreases the destination throughput and reduces the complexity of the exception recovery activities that InfoPrint performs.
- Increasing the value (number of pages) decreases the number of acknowledgement requests. This provides less accurate information about the destination and exception conditions.

add-carriage-returns (PSF)

This **resettable, single-valued** attribute indicates whether InfoPrint should add carriage return characters when transforming ASCII documents for printing on this actual destination.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

add-line-feeds (PSF)

This **resettable, single-valued** attribute indicates whether InfoPrint should add line feed characters when transforming ASCII documents for printing on this actual destination.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

ascii-character-mapping (PSF)

This **resettable, single-valued** attribute indicates the ASCII code page that AIX uses to map the attributes of this PSF upload-TCP/IP-attached or PSF upload-SNA-attached physical printer.

Allowed Values

You can enter the name of an ASCII code page.

Default Value

No default value.

Usage Guidelines

InfoPrint requires this attribute for PSF upload-SNA-attached and upload-TCP/IP-attached physical printers and ignores it for other attachment types.

ascii-font-map (PSF)

This **resettable, multi-valued complex** attribute defines how the destination maps the ASCII font escape sequences to AFP character sets that InfoPrint uses for ASCII fonts. InfoPrint uses this attribute to map each font-change escape to an AFP font character set.

Allowed Values

This complex attribute has these components for each value:

font-escape
font-name

Syntax

font-escape:font-name

For example:

10cpi:C02055D0

Default Values

<i>font-escape Value</i>	<i>font-name Value</i>
10cpi	C02055D0
10cpi-emphasized	C02075D0
10cpi-subscript	C02055P0
10cpi-subscript-emphasized	C02075P0
10cpi-2wide	C02059A0
10cpi-2wide-emphasized	C02079A0
10cpi-2wide-2high	C02059L0
10cpi-2wide-2high-emphasized	C02079L0
10cpi-2wide-subscript	C02055J0
10cpi-2wide-subscript-emphasized	C02075J0
10cpi-2high	C02051K0
10cpi-2high-emphasized	C02071K0
10cpi-condensed	C02055F0
10cpi-condensed-subscript	C02051R0
10cpi-condensed-2wide	C02059C0
10cpi-condensed-2wide-subscript	C02056N0
12cpi	C02055E0
12cpi-emphasized	C02075E0
12cpi-subscript	C02054Q0
12cpi-subscript-emphasized	C02074Q0
12cpi-2wide	C02059B0
12cpi-2wide-emphasized	C02079B0
12cpi-2wide-subscript	C02058M0
12cpi-2wide-subscript-emphasized	C02078M0
proportional	C02055G0
proportional-emphasized	C02075G0
proportional-subscript	C02055S0
proportional-subscript-emphasized	C02075S0
proportional-2wide	C02059G0
proportional-2wide-emphasized	C02079G0
proportional-2wide-subscript	C02051H0
proportional-2wide-subscript-emphasized	C02071H0
proportional-2high	C02055H0
proportional-2high-emphasized	C02075H0

associated-queue (All DSS)

This **resettable, single-valued** attribute identifies the queue from which this actual destination receives jobs.

Allowed Values

You can enter a text string up to 255 characters long that contains the ID of the queue. The ID cannot contain the cell name.

Default Value

No default value.

Usage Guidelines

The value for this attribute is the name of a queue. The associated queue must exist and be in communication with the destination before you can enable the actual destination.

associated-server (All DSS)

This **non-settable, single-valued** attribute identifies the name of the server in which this actual destination resides.

Allowed Values

InfoPrint sets this value to the value of the *ServerName* portion of the argument from the **pdcreate** command used to create this actual destination.

Default Value

No default value.

attachment-type (PSF)

This **initially settable, single-valued** attribute identifies how the output device that this actual destination represents attaches to the PSF DSS and how InfoPrint communicates with the output device.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
aix	InfoPrint communicates with this printer device by forwarding print requests to the AIX print system. An AIX print queue must exist for this printer device.
channel	InfoPrint communicates with this S/370 channel-attached printer device through the channel.
direct	InfoPrint communicates directly with the printer device through an AIX printer backend program.
tcpip	InfoPrint communicates with this TCP/IP LAN-attached printer device directly through the TCP/IP network.
upload-sna	This printer device is attached to an MVS system. InfoPrint communicates with PSF/MVS through the SNA LU 6.2 network.
upload-tcpip	This printer device is attached to an MVS system. InfoPrint communicates with PSF/MVS through the TCP/IP network.

Default Value

No default value.

Usage Guidelines

- You need to specify a value for this attribute when you create a PSF actual destination.
- For fax destinations and e-mail destinations, the only valid value is **tcpip**.
- Some actual destination attributes apply only to certain attachment types.

attribute-map (BSD)

This **resettable, multi-valued complex** attribute provides a list of InfoPrint attributes and their associated BSD flags.

Allowed Values

You can enter a text string that contains a mapping between InfoPrint attributes and the BSD flags. This complex attribute has these components for each value:

InfoPrint-attribute
BSD-flag

Syntax

attribute:flag

For example:

`destination-pass-through:-o`

Default Values

destination-pass-through:-o
job-name:-o-Z

Usage Guidelines

- By default, BSD assumes the generated command is a **rembak** command.
- Some printer devices, for example, the IBM 4317 Network Printer 17, IBM InfoPrint 20 Printer, and IBM InfoPrint 32 Printer, do not support the BSD **-Z** flag. If you receive the following error message when you try to print on one of these printers:

```
0782-597 The value of _Z attribute is not in the ring list
          specified in the limits field
```

delete the **job-name:-o-Z** value from the **attribute-map** attribute.

audit-exit (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the name of the auxiliary-sheet object that sets audit exit parameters.

Allowed Values

You can enter the name of an auxiliary sheet or any of these fixed values:

accounting-log

Audit information is written to the */var/psf/audit.log* file.

blank This value is technically valid, but should not be used.

brief A sheet with brief audit information is printed after the job.

full A sheet with full audit information is printed after the job.

job-ticket A sheet with full audit information from the job ticket is printed after the job.

none No audit information is produced.

Default Value

No default value.

Usage Guidelines

If you do not set a value, InfoPrint produces no audit information at the end of a job submitted to this actual destination.

automatic-postscript-mode-switch (AIX)

This **resettable, single-valued** attributes indicates whether this actual destination supports switching into PostScript mode using controls placed in the data stream.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

- If this actual destination has this feature, it can print PostScript documents among non-PostScript documents.
- The value for this attribute does not change if you delete the **document-formats-supported** value of **postscript**.

auxiliary-sheet-selections-supported (AIX, PSF)

This **resettable, multi-valued** attribute identifies the combination of start, separator, and end sheets that this physical printer supports for jobs.

Allowed Values

You can enter any of these fixed values:

end
none
sep
sep-end
start
start-end
start-sep

start-sep-end

Default Values

end, none, sep, sep-end, start, start-end, start-sep, start-sep-end

Usage Guidelines

- InfoPrint compares the job attribute **auxiliary-sheet-selection** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.
- For PSF physical printers, if you remove all values that specify a particular auxiliary sheet (such as **start**), the job submitter cannot “turn off” the corresponding actual destination attribute (such as **printer-start-sheet**).

cancel-individual-document-supported (All DSS)

This **non-settable, single-valued** attribute indicates whether this actual destination is capable of cancelling a single document within a multi-document job.

Allowed Values

InfoPrint sets this value to **false**.

Default Value

false

carriage-control-types-supported (PSF, Email, Fax)

This **resettable, multi-valued** attribute identifies the types of carriage controls that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

ansi-ascii
ansi-ebcdic
machine
none

Default Values

ansi-ascii, ansi-ebcdic, machine, none

Usage Guidelines

- InfoPrint compares the document attribute **carriage-control-type** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

character-mappings-supported (AIX, PSF, Email, Fax)

This **resettable, multi-valued** attribute identifies the character mappings (code pages) that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

ibm-437
ibm-850
ibm-860
ibm-863
ibm-865
ibm-932
ibm-938
ibm-euccn
ibm-eucjp
ibm-euckr
ibm-euctw

Default Values

AIX

The value of the **destination-model** attribute for the actual destination determines the default value.

PSF, Email, Fax

ibm-437, ibm-850, ibm-860, ibm-863, ibm-865, ibm-eucjp, ibm-euckr, ibm-euctw

Usage Guidelines

InfoPrint compares the document attribute **default-character-mapping** to this attribute for scheduling.

checkpoint-at-stacker (PSF)

This **resettable, single-valued** attribute indicates where to pause jobs printing on this physical printer.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

When this attribute is set to **false** (the default), the checkpoint for paused jobs occurs at the operator viewing point on the printer device (the printhead). This means that when a paused job resumes, printing begins where it stopped, without reprinting any pages.

Set this attribute to **yes** if you want the checkpoint to occur at the stacker. This means that when a paused job resumes, all pages not stacked will be reprinted. This guarantees that, even if there is a paper jam between the printhead and the stacker, you will have at least one copy of each printed page.

checkpoint-formats-supported (AIX, PSF, Email, Fax)

InfoPrint sets this **non-settable, multi-valued** attribute to identify the checkpoints supported for paused jobs for this actual destination.

Allowed Values

InfoPrint sets this value to any of these fixed values:

dsf-document-number
dsf-job-copy
dsf-results-profile
no-context-info

Default Values

AIX	dsf-document-number, dsf-job-copy, dsf-results-profile
PSF, Email, Fax	dsf-results-profile

Usage Guidelines

InfoPrint uses this information to reschedule paused jobs.

command (AIX, BSD, PSF)

See **destination-command**.

connection-timeout (PSF)

This **resettable, single-valued** attribute sets the connection timeout parameter for TCP/IP-attached, upload-SNA-attached, and upload-TCP/IP-attached physical printers. This time period is the amount of time that InfoPrint waits before it stops trying to communicate with the output device when it cannot make a connection.

Allowed Values

You can enter a value of 0 through 9999. The unit is seconds.

Default Value

30

Usage Guidelines

- A value of **0** prevents any time out.
- InfoPrint uses this attribute with TCP/IP-attached, upload-SNA-attached, and upload-TCP/IP-attached physical printers and ignores it for other attachment types.

content-orientations-supported (AIX, 3170)

This **resettable, multi-valued** attribute identifies the page presentations that this actual destination supports.

Input Synonym

You can use the synonym **orientations-supported**.

Allowed Values

You can enter any of these fixed values:

landscape
 portrait
 reverse-landscape
 reverse-portrait

Default Values

portrait

Usage Guidelines

- InfoPrint compares the document attribute **content-orientation** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

convert-to-ebcdic-supported (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates whether this actual destination supports converting document data from ASCII to EBCDIC.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- InfoPrint compares the value of the document attribute **convert-to-ebcdic** to this attribute for job validation and scheduling.
- InfoPrint uses the document attribute **convert-to-ebcdic** when printing line-data documents.
- You can use this attribute to restrict use of this actual destination.

data-fidelity-problem-reported-supported (PSF)

This **resettable, multi-valued** attribute identifies which types of data fidelity errors this actual destination reports.

Allowed Values

You can enter any of these fixed values:

all
 character
 none
 position

Default Values

all, character, none, position

Usage Guidelines

- InfoPrint compares the document attribute **data-fidelity-problem-reported** to this attribute for scheduling.
- Use this attribute to specify whether InfoPrint issues error messages for print-positioning and invalid-character errors that occur for channel-attached, TCP/IP-attached, upload-SNA-attached, and upload-TCP/IP-attached printer devices.

Print positioning errors occur when the print position for the data is beyond the valid printable areas as defined by the intersection of the physical and logical pages. (A logical page identifies the printing boundaries of a physical page.)

Invalid-character errors occur when the code point does not map to a character in a font.

default-font-fidelity-action (PSF)

This **resettable, single-valued** attribute indicates what InfoPrint should do if a font required to print a document is not available in the resolution specified by the data stream, the document **font-resolution** attribute, or the actual destination **default-font-resolution** attribute.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
stop	Stop printing the job.
continue	Attempt to substitute a similar font at a different resolution.

Default Value

continue

Usage Guidelines

The value of the document attribute **font-fidelity-action** and the value specified in the data stream override the value of this attribute.

default-font-resolution (PSF)

This **resettable, single-valued** attribute specifies the font resolution used for documents printed on this actual destination when no value is specified in the data stream or by the document **font-resolution** attribute.

Allowed Values

You can enter one of these fixed values:

240
300
outline

Default Value

outline

Usage Guidelines

- The value of this attribute must be one of the values of the **font-resolutions-supported** attribute.
- Usually the font resolution and the printer resolution match, but there are two cases when they do not:
 - Some printer devices, for example, the InfoPrint 60 and InfoPrint 4000, can print fonts of any resolution, although the print head is always 600 pels.
 - It is possible to print a document created with fonts of one resolution on a printer device with a different resolution by substituting fonts. Depending on the document, the output may or may not be acceptable.

default-input-tray (AIX, PSF)

This **resettable, single-valued** attribute specifies the name of an input tray for a PSF actual destination.

Allowed Values

You can enter any value as long as the value maps to one of the actual destination **input-trays-supported** or **psf-tray-characteristics** attribute values.

Default Value

No default value.

Usage Guidelines

- The value you specify must be one of the values specified for the **input-trays-supported** or **psf-tray-characteristics** actual destination attribute.
- InfoPrint only uses the value you supply for this attribute if:
 - The user does not specify a medium or input tray.
 - The form definition InfoPrint uses for the job does not specify an input tray.

descriptor (All DSS)

This **resettable, single-valued** attribute provides a textual description of this actual destination.

Allowed Values

You can enter a text string up to 4095 characters long that describes this actual destination. You may want to include such things as the type and location of the output device that this actual destination represents and any usage information, such as restrictions for this actual destination.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description is useful to users who want to specify a given destination or to determine which destination can handle their jobs. A description is also helpful when you create a new logical destination and want to determine which actual destinations you should associate with the new logical destination.

destination-command (AIX, BSD, PSF)

This **resettable, single-valued** attribute specifies the command-line entry to invoke the desired device driver.

Input Synonyms

You can use the synonym **printer-command** or **command**.

Allowed Values

You can enter a text string up to 4095 characters long that contains the command.

Default Value

AIX **/usr/lib/lpd/piobe**

BSD **/usr/lpd/rembak**

PSF direct-attached physical printers

/usr/lib/lpd/piobe

PSF AIX-attached physical printers

qprt -Pxxx -dp -Z!

where *xxx* is the value of the **print-queue-name** attribute. If there is no value for the **print-queue-name** attribute, *xxx* is

asc If the **destination-data-stream=ppds**

pcl If the **destination-data-stream=pcl4, pcl5, or pcl5c**

Usage Guidelines

- For AIX physical printers, InfoPrint uses the value as the command that the AIX physical printer executes for each document printed. It should include the full path name for the print driver you are using for your printer device.
- For PSF physical printers:
 - This attribute applies only to AIX-attached or direct-attached physical printers.
 - InfoPrint uses the value as the command string to print a job on the AIX-attached printer and to send the job to the correct AIX queue.
 - InfoPrint uses the command string to invoke the printer backend program for direct-attached physical printers.
 - If you do not specify this attribute for AIX-attached physical printers, InfoPrint fills in the value of *xxx* (shown under Default Value) with the value of the **print-queue-name** attribute.

destination-data-stream (PSF)

This **initially settable, single-valued** attribute identifies the data stream format that is output to the printer device.

Allowed Values

You can enter one of these fixed values:

pcl4
pcl5
pcl5c
ipds
ppds

Input Synonym

You can use the synonym **printer-data-stream**.

Default Value

Direct-attached physical printers	pcl4
AIX-attached physical printers	pcl4
Other attachment types	ipds

destination-locations (All DSS)

This **resettable, multi-valued** attribute identifies the location of the output device.

Input Synonyms

You can use the synonym **printer-locations** or **locations**.

Allowed Values

You can enter a text string up to 4095 characters long, for each value, that describes the physical location of the output device. Each value is a different description for the same location.

Default Values

No default values.

Usage Guidelines

InfoPrint compares the job attribute **destination-locations-requested** to this attribute for scheduling. The user can specify the **destination-locations-requested** job attribute to request that InfoPrint use the output device at this specific location to process the job.

destination-model (All DSS)

This **resettable, single-valued** attribute identifies the make and model number defined by the manufacturer of the output device.

Input Synonyms

You can use the synonym **printer-model** or **model**.

Allowed Values

You can enter a text string up to 4095 characters long that contains the make and model number of the output device.

Default Value

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise no default value.

Usage Guidelines

- You must set this value when you create an AIX or PSF actual destination, unless InfoPrint can determine the value by means of SNMP.
- If you allow SNMP to determine this value for an AIX physical printer or a PSF direct-attached physical printer, it must be one of the values of the server **snmp-aix-printer-models** attribute.
- For AIX physical printers and PSF direct-attached physical printers, this value must match the file prefix of a file in the **/usr/lib/lpd/pio/predef** directory on the AIX processor on which the physical printer was created.
- For AIX physical printers, InfoPrint uses the value you specify here to determine the values to set for the **document-formats-supported** attribute.
- For PSF TCP/IP-attached actual destinations capable of printing halftones, and for any PSF physical printer that represents a printer device with a finisher attached, specify the model name in the format **InfoPrintxxxx**, where **xxxx** is the model number, for example, **InfoPrint4000-708**. Do not put a space between **InfoPrint** and the model number.
Note: If you configure these printer models as PSF direct-attached physical printers or as AIX physical printers, specify the model name as the file prefix of a file in the **/usr/lib/lpd/pio/predef** directory.
- InfoPrint compares the job attribute **destination-models-requested** to this attribute for scheduling.

destination-name (All DSS)

This **non-settable, single-valued** attribute identifies the name of this actual destination.

Input Synonyms

You can use the synonym **printer-name**, **printer**, or **physical-printer**.

Allowed Values

InfoPrint set this value to the *DestinationName* portion of the argument used with the **pdcreate** command or with the **pdmigpp** utility when this actual destination was created.

Default Value

No default value.

Usage Guidelines

- InfoPrint compares the job attribute **actual-destination-requested** to this attribute for validation and scheduling.
- The name must be unique within the namespace.

destination-needs-attention-time (All DSS)

This **non-settable, single-valued** attribute reports the amount of time the output device has been waiting for simple intervention, such as loading paper.

Input Synonym

You can use the synonym **printer-needs-attention-time**.

Allowed Values

InfoPrint sets this value to *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

destination-needs-key-operator-attention-time (All DSS)

This **non-settable, single-valued** attribute reports the amount of time the output device has been waiting for the attention of a key (or skilled) operator.

Input Synonym

You can use the synonym **printer-needs-key-operator-attention-time**.

Allowed Values

InfoPrint sets this value to *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

destination-pass-through (AIX, BSD, PSF, 3170)

This **resettable, single-valued** attribute contains information that you want InfoPrint to pass to the DSS (destination driver). InfoPrint does not process the information, but passes it directly to the DSS.

Input Synonyms

You can use the synonym **printer-pass-through** or **other-options**.

Allowed Values

You can enter a text string up to 4095 characters long that contains information for the printer driver.

Default Value

No default value.

Note: If you use the **destination-pass-through** attribute when submitting a job to a PSF direct-attached physical printer you can either direct the options to the PSF DSS or to the backend specified in the value for the **destination-command** attribute. When you specify **-BE** in the value for the **destination-pass-through** attribute, InfoPrint passes all values preceding **-BE** to the PSF DSS. InfoPrint passes any values following **-BE** to the backend program.

destination-realization (All DSS)

This **initially settable, single-valued** attribute indicates whether the destination is an actual destination or a logical destination.

Input Synonym

You can use the synonym **printer-realization**.

Allowed Values

You can enter one of these fixed values:

actual
logical

Default Value

logical

destination-register-threshold (All DSS)

This **resettable, single-valued** attribute specifies the amount of time that this actual destination will wait between attempts to communicate (register) with the server.

Input Synonyms

You can use the synonym **printer-register-threshold** or **register-threshold**.

Allowed Values

You can enter a value of *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

10

Usage Guidelines

- If you lower this value, network traffic increases when the server is down, but the actual destination registers more quickly when you bring up the server.
- If you raise this value, network traffic decreases when the server is down, but the actual destination registers more slowly when you bring up the server.

destination-release-timer (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the maximum amount of time between jobs, in seconds, before InfoPrint gives up control of a PSF actual destination.

Input Synonym

You can use the synonym **printer-release-timer**.

Allowed Values

You can enter an integer from 0 through 9999. Unit value is seconds.

Default Value

9999

Usage Guidelines

- The **destination-release-timer** allows InfoPrint to share an output device with a print manager, such as PSF Direct. Specify a value of 9999 if the output device is not shared.
- The **destination-release-timer** allows time for all processes to stop running gracefully as InfoPrint gives up control of the attached PSF actual destination.
- If the **non-process-runout-timer** attribute has a greater value than the **destination-release-timer** attribute, InfoPrint issues an automatic NPRO. However, IBM recommends that you set **non-process-runout-timer** to a lower value than **destination-release-timer**.

destination-state (All DSS)

This **non-settable, single-valued** attribute identifies the current state of the actual destination.

Input Synonym

You can use the synonym **printer-state**.

Allowed Values

InfoPrint sets and updates the value to one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
connecting-to-printer	The actual destination has received a job and is trying to connect to its printer device. After it connects to the device, the actual destination locks the printer device until it finishes processing the job so that another print system cannot use the device. Note: This state applies only to AIX physical printers and PSF direct-attached physical printers.
idle	The actual destination is waiting for a job. An actual destination can be idle even if its output device is printing a job from some other AIX process or from the AIX print-spooling subsystem.

Actual Destination

needs-attention	The actual destination can connect to the output device, but for some reason the output device cannot print.
needs-key-operator	This state occurs when there is a serious problem with the output device. Either the actual destination cannot connect to the output device or there is some other problem. For example, a printer device may be out of toner. InfoPrint automatically disables the actual destination when the actual destination enters this state. If the actual destination uses SNMP, InfoPrint automatically reenables it when the problem is corrected. To prevent automatic reenabling, manually disable the actual destination.
paused	The actual destination was paused with the pdpause command or by a job with job-start-wait=true .
printing	The actual destination is processing a job.
shutdown	The actual destination was shut down with the pdshutdown command. Note: This state applies only to PSF actual destinations.
timed-out	The actual destination received a job, but the actual destination could not connect to the printer device in the time specified by the printer-timeout-period actual destination attribute. Note: This state applies only to AIX physical printers and PSF direct-attached physical printers.

Default Value

No default value.

destination-support-system (All DSS)

This **initially settable, single-valued** attribute identifies the type of device driver for this actual destination.

Input Synonym

You can use the synonym **device-support-system**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
aix	piobe
bsd	
psf	
3170	
email	
fax	

Default Value

psf

Usage Guidelines

- InfoPrint compares the job attribute **dss-requested** to this attribute for scheduling.
- You must enter a value for this attribute when you create a actual destination unless it will use the PSF DSS.

destination-tcpip-internet-address (AIX, BSD, PSF, 3170)

This **resettable, single-valued** attribute identifies the Internet Protocol address (IP Address parameter) of this physical printer. This is the Internet Protocol address assigned to the output device.

Input Synonym

You can use the synonym **printer-tcpip-internet-address**.

Allowed Values

You can enter a text string up to 4095 characters long that is either of these types of address:

Dotted decimal address

A series of integers within the range of 0 to 255, each separated by a period, . (decimal address). For example:

9.99.12.85

Hostname

For example:

leo.boulder.IBM.com

Default Value

No default value.

Usage Guidelines

- You must enter a value for destinations that use SNMP.
- You must enter a value for PSF TCP/IP-attached physical printers, for PSF upload-TCP/IP-attached physical printers, and for 3170 physical printers.
- InfoPrint ignores this attribute for PSF channel-attached, direct-attached, and upload-SNA-attached physical printers.
- For printers attached using the i-data 7913 IPDS Printer LAN Attachment, use the IP address of the 7913.

destination-tcpip-port-number (PSF)

This **resettable, single-valued** attribute identifies the Port Number parameter for PSF TCP/IP-attached and upload-TCP/IP-attached actual destinations. This is the TCP/IP port number configured at the output device.

Input Synonym

You can use the synonym **printer-tcpip-port-number**.

Allowed Values

You can enter an integer from 1 through 2147483647, but you typically enter an integer from 5001 to 65535. For devices whose port is configurable, the port you specify must match the port configured at the output device. For printers attached using the i-data 7913 IPDS Printer LAN attachment, you must use the value of 5001.

Default Value

No default value.

Usage Guidelines

You must enter a value for PSF TCP/IP-attached and upload-TCP/IP-attached actual destinations. InfoPrint ignores this attribute for other attachment types.

device-name (AIX, PSF, Email, Fax)

This **initially settable, single-valued** attribute identifies the name of the output device that this actual destination represents.

Allowed Values

You can enter a text string up to 255 characters long that contains the name (ID) of the output device that prints jobs assigned to this actual destination. The value usually identifies the path to the device name, commonly located in a **/dev** directory.

Default Value

No default value.

Usage Guidelines

- You must enter a value for this attribute when you create a PSF AIX-attached physical printer.
- You must configure the device name you specify in AIX. You can determine which device names exist by using the SMIT fastpath **smit pdp** and then listing all defined printers and plotters. If you need to create the output device within AIX, use the SMIT fastpath **smit makprt**.
- If an AIX print queue has been configured for this physical printer, the device name appears in the **/etc/qconfig** file.
- Do not specify a value for PSF TCP/IP-attached, upload-TCP/IP-attached, upload-SNA-attached, or channel-attached destinations.

device-support-system (All DSS)

See **destination-support-system**.

document-attributes-supported (All DSS)

This **non-settable, multi-valued** attribute identifies the document attributes that this actual destination supports. InfoPrint checks this attribute during validation to allow jobs whose documents have these attributes to continue on to this actual destination.

Allowed Values

InfoPrint sets a text string that contains a list of document attributes that this actual destination supports.

Note: This list includes only document attributes that directly affect the actual destination. Documents with attributes that affect the server, for example, **initial-value-document**, can be printed even though those attributes are not on this list.

Default Value

AIX	content-orientation, copy-count, default-input-tray, default-medium, destination-pass-through, document-comment, document-content, document-content-list, document-format, document-type, maximum-messages-printed, plex, print-quality, sides
BSD	copy-count, destination-pass-through, document-comment, document-content, document-content-list, document-format, document-type, maximum-messages-printed, plex, print-quality, sides
PSF	account-text, address1-text, address2-text, address3-text, address4-text, base-printer, building-text, carriage-control-type, chars, convert-to-ebcdic, copy-count, data-fidelity-problem-reported, default-character-mapping, default-input-tray, default-medium, default-printer-resolution, department-text, destination-pass-through, document-comment, document-content, document-content-list, document-finishing, document-format, document-type, font-fidelity-action, font-resolution, form-definition, image-fit, image-length, image-out-format, image-width, input-exit, input-tray-select, maximum-messages-printed, maximum-transform-pages-ahead, mvs-class, mvs-destination, mvs-forms, mvs-segment-id, name-text, new-line-option, node-id-text, number-up, other-transform-options, output-appearance, output-bin, output-format, overlay, page-definition, page-media-select, page-select, plex, programmer-text, resource-context, resource-context-font, resource-context-form-definition, resource-context-overlay, resource-context-page-definition, resource-context-page-segment, resource-context-user, resource-exit, room-text, scanner-correction, screen-frequency, segment-file-size, shared-formdef, shift-out-shift-in, sides, start-on-new-sheet, table-reference-characters, title-text, transform-message-file-name, transform-output-file-name, user-id-text, x-image-shift, x-image-shift-back, y-image-shift, y-image-shift-back
3170	bits-per-spot, black-overprint, cms-proclink, cms-product, compressed-output, content-orientation, control-strip, copy-count, default-medium, default-printer-resolution,

	<code>destination-pass-through</code> , <code>document-content</code> , <code>document-content-list</code> , <code>document-format</code> , <code>document-type</code> , <code>dot-shape</code> , <code>enable-settrap</code> , <code>image-center-x</code> , <code>image-center-y</code> , <code>image-length</code> , <code>image-scale</code> , <code>image-width</code> , <code>maximum-messages-printed</code> , <code>output-bin</code> , <code>output-face-up</code> , <code>overprint</code> , <code>page-clip</code> , <code>plex</code> , <code>sides</code> , <code>x-image-shift</code> , <code>y-image-shift</code>
Email	<code>account-text</code> , <code>address1-text</code> , <code>address2-text</code> , <code>address3-text</code> , <code>address4-text</code> , <code>carriage-control-type</code> , <code>chars</code> , <code>convert-to-ebcdic</code> , <code>copy-count</code> , <code>default-character-mapping</code> , <code>document-comment</code> , <code>document-content</code> , <code>document-format</code> , <code>document-type</code> , <code>email-from-address</code> , <code>email-to-address</code> , <code>form-definition</code> , <code>image-fit</code> , <code>image-length</code> , <code>image-width</code> , <code>input-exit</code> , <code>maximum-messages-printed</code> , <code>new-line-option</code> , <code>number-up</code> , <code>other-transform-options</code> , <code>output-format</code> , <code>overlay</code> , <code>page-definition</code> , <code>page-select</code> , <code>resource-context</code> , <code>resource-context-font</code> , <code>resource-context-form-definition</code> , <code>resource-context-overlay</code> , <code>resource-context-page-definition</code> , <code>resource-context-page-segment</code> , <code>resource-context-user</code> , <code>resource-exit</code> , <code>shared-formdef</code> , <code>shift-out-shift-in</code> , <code>subject-text</code> , <code>table-reference-characters</code> , <code>title-text</code> , <code>transform-message-file-name</code> , <code>transform-output-file-name</code> , <code>x-image-shift</code> , <code>y-image-shift</code>
Fax	<code>account-text</code> , <code>address1-text</code> , <code>address2-text</code> , <code>address3-text</code> , <code>address4-text</code> , <code>callback-number</code> , <code>carriage-control-type</code> , <code>chars</code> , <code>convert-to-ebcdic</code> , <code>copy-count</code> , <code>default-character-mapping</code> , <code>destination-company-text</code> , <code>document-comment</code> , <code>document-content</code> , <code>document-format</code> , <code>document-type</code> , <code>fax-number</code> , <code>fax-to-name</code> , <code>form-definition</code> , <code>image-fit</code> , <code>image-length</code> , <code>image-width</code> , <code>input-exit</code> , <code>maximum-messages-printed</code> , <code>new-line-option</code> , <code>number-up</code> , <code>originating-company-text</code> , <code>other-transform-options</code> , <code>output-format</code> , <code>overlay</code> , <code>page-definition</code> , <code>page-select</code> , <code>resource-context</code> , <code>resource-context-font</code> , <code>resource-context-form-definition</code> , <code>resource-context-overlay</code> , <code>resource-context-page-definition</code> , <code>resource-context-page-segment</code> , <code>resource-context-user</code> , <code>resource-exit</code> , <code>shared-formdef</code> , <code>shift-out-shift-in</code> , <code>subject-text</code> , <code>table-reference-characters</code> , <code>title-text</code> , <code>transform-message-file-name</code> , <code>transform-output-file-name</code> , <code>x-image-shift</code> , <code>y-image-shift</code>

document-finishing-supported (PSF)

This **resettable**, **multi-valued** attribute identifies the document finishing options that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

z-fold

Default Values

z-fold

Usage Guidelines

- InfoPrint compares the document attribute **document-finishing** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

document-formats-supported (All DSS)

This **resettable, multi-valued** attribute identifies the document formats that this actual destination supports. InfoPrint sets this value dynamically to the document formats for which transforms are available.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>	<i>DSS</i>
ascii		AIX, BSD, PSF (except upload printers)
dbcs-ascii		AIX, BSD, PSF
ditroff		BSD, PSF, email, fax
d630		AIX, BSD
gif		BSD, PSF, email, fax
hpgl	hp-gl	AIX, BSD
iso-6429		AIX, BSD
jpeg		BSD, PSF, email, fax
line-data		BSD, PSF, email, fax
modca-p	afpds	BSD, PSF, email, fax
passthru		AIX, BSD
pcl	hppcl, hp-pcl	AIX, BSD, PSF, email, fax
pdf		BSD, PSF, email, fax
postscript	ps	All
ppds		BSD
sap		BSD, PSF, email, fax
sap-abap		BSD, PSF, email, fax
simple-text	text	BSD
tiff		BSD, PSF, email, fax

Default Values

AIX **ascii, hpgl, iso-6429, passthru, pcl, pdf, and postscript.**

Based on the value of the **destination-model** attribute and how the **/usr/lpd/pio/predef** directory defines the printer model.

BSD **ascii, iso-6429, pcl, ppds, postscript, simple-text.**

PSF upload-SNA-attached and upload-TCP/IP-attached physical printers

If all transforms are available, **dbcs-ascii, ditroff, gif, jpeg, line-data, modca-p, pcl, postscript, sap, sap-abap, tiff**

Other PSF physical printers

If all transforms are available, **ascii, dbcs-ascii, ditroff, gif, jpeg, line-data, modca-p, pcl, postscript, sap, sap-abap, tiff**

3170 **postscript**

Email **ditroff, gif, jpeg, line-data, modca-p, pcl, postscript, sap, sap-abap, tiff**

Actual Destination

Fax **ditroff, gif, jpeg, line-data, modca-p, pcl, postscript, sap, sap-abap, tiff**

Usage Guidelines

- When you create a PSF actual destination, InfoPrint sets these values to the document formats for which transforms are available. When the server is shut down and restarted, InfoPrint updates the values to reflect transforms that have been added or deleted. You can also modify these values.
- InfoPrint compares the document attribute **document-format** to this attribute for validation and scheduling.
- Delete attribute values to restrict use of this actual destination.

document-types-supported (All DSS)

This **resettable, multi-valued** attribute identifies the types of documents that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>DSS</i>
cover-sheet	Fax
document-definition	PSF, 3170, email, fax
email-body	Email
email-signature	Email
file-reference	All
font	PSF, email, fax
form-definition	PSF, email, fax
formatted-job-ticket	PSF, 3170, email, fax
insert	PSF
job-ticket	PSF, 3170, email, fax
overlay	PSF, email, fax
page-definition	PSF, email, fax
page-segment	PSF, email, fax
page-shift-file	PSF, email, fax
printable	All
resource	PSF, 3170, email, fax
variable-data	PSF, 3170, email, fax

Default Values

AIX	file-reference, printable
BSD	file-reference, printable
PSF	document-definition, file-reference, font, form-definition, formatted-job-ticket, insert, job-ticket overlay, page-definition, page-segment, page-shift-file, printable, resource, variable-data
3170	document-definition, file-reference, formatted-job-ticket, job-ticket printable, resource, variable-data
Email	document-definition, email-body, email-signature, file-reference, font, form-definition, formatted-job-ticket, job-ticket overlay, page-definition, page-segment, page-shift-file, printable, resource, variable-data

Fax **cover-sheet, document-definition, file-reference, font, form-definition, formatted-job-ticket, job-ticket overlay, page-definition, page-segment, page-shift-file, printable, resource, variable-data**

Usage Guidelines

- InfoPrint compares the document attribute **document-type** to this attribute for scheduling.
- You can use this attribute to restrict use of this actual destination.

dss-job-message-disposition (PSF)

This **resettable, single-valued** attribute indicates how job messages about errors detected by the the device support system (DSS), such as data stream errors, are recorded.

Allowed Values

You can enter one of these fixed values:

log
print

Default Value

print

Usage Guidelines

If you specify **log**, messages are written to */var/psf/DestinationName/jobmessage.log*, where *DestinationName* is the name of this actual destination.

dss-job-message-log-size (PSF)

This **resettable, single-valued** attribute indicates the size, in kilobytes, of the DSS job message log.

Allowed Values

You can enter an integer from 1 to 2000000. The unit is kilobytes.

Default Value

8192

Usage Guidelines

This attribute is used only when the value of the **dss-job-message-disposition** attribute is **log**.

dss-job-message-log-wrap (PSF)

This **resettable, single-valued** attribute indicates whether InfoPrint should start overwriting messages at the beginning of the DSS job message log when the log is full.

Actual Destination

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

This attribute is used only when the value of the **dss-job-message-disposition** attribute is **log**.

ebcdic-character-mapping (PSF)

This **resettable, single-valued** attribute indicates the EBCDIC code page that PSF/MVS uses to map the attributes of this PSF upload-TCP/IP-attached or PSF upload-SNA-attached physical printer.

Allowed Values

You can enter the name of an EBCDIC code page.

Default Value

ibm-037

Usage Guidelines

InfoPrint requires this attribute for PSF upload-SNA-attached and upload-TCP/IP-attached physical printers and ignores it for other attachment types.

enabled (All DSS)

This **non-settable, single-valued** attribute indicates whether this actual destination is enabled and can accept jobs.

Allowed Values

InfoPrint sets this value to:

- **true** when an InfoPrint administrator has issued the **pdenable** command, and the queue associated with the destination exists and is in communication with this actual destination.
- **false** when an InfoPrint administrator has disabled this actual destination with the **pddisable** command.

Default Value

false

end-message-supported (All DSS)

This **resettable, single-valued** attribute indicates whether this actual destination supports the job attribute **job-end-message**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- Use this attribute to allow operators to receive messages that users specify with the **job-end-message** job attribute when they submit the job. When the value of this attribute is **true**, InfoPrint sends the message to the operators specified by the **notify-operator** attribute for this actual destination when the job finishes printing.
- InfoPrint compares the job attribute **job-end-message** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

end-sheets-supported (AIX, PSF)

This **resettable, multi-valued** attribute identifies the types of end sheets that this physical printer supports.

Allowed Values

You can enter any of the following fixed values. For PSF only, you can enter a string up to 255 characters long that contains identifiers of auxiliary-sheet objects.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for end sheets.
blank	PSF	The end sheet is blank.
brief	AIX, PSF	The end sheet style is brief.
full	AIX, PSF	The end sheet style is full.
job-ticket	PSF	The job ticket is printed on the end sheet.
none	AIX, PSF	No end sheet prints.

Default Values

AIX **brief, full, none**

PSF **accounting-log, blank, brief, full, job-ticket, none**, and the names of other defined auxiliary sheets which have legal PSF auxiliary sheet attributes.

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print start and end sheets, but they do not use auxiliary-sheet objects.
- InfoPrint verifies that the value of the **printer-end-sheet** attribute is a value of this attribute.

Actual Destination

- You cannot delete a value from this attribute if the value you want to delete is the value of the **printer-end-sheet** attribute.
- For PSF physical printers, InfoPrint sets this value dynamically to the names of all defined auxiliary sheets with legal attributes. You should never have to reset this value.

font-resolutions-supported (PSF)

This **resettable, multi-valued** attribute indicates the values of the document attribute **font-resolution** that this physical printer accepts.

Allowed Values

You can enter any of these fixed values:

240
300
outline

Default Values

240, 300, outline

Usage Guidelines

- Usually the font resolution and the printer resolution match, but there are two cases when they do not:
 - Some printer devices, for example, the InfoPrint 60 and InfoPrint 4000, can print fonts of any resolution, although the print head is always 600 pels.
 - It is possible to print a document created with fonts of one resolution on a printer device with a different resolution by substituting fonts. Depending on the document, the output may or may not be acceptable.
- InfoPrint compares the document attribute **font-resolution** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

force-destination-setup (AIX, PSF, 3170)

This **resettable, single-valued** attribute indicates whether jobs requiring resources that this actual destination does not have ready or does not support should be held or scheduled to print.

Input Synonym

You can use the synonym **force-printer-setup**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

- When the value of **force-destination-setup** is **false**, InfoPrint checks that the actual destination can process each job in the queue before scheduling the job to print. If the job requires any resources that are not ready or not supported, the job is RIPped if appropriate, then held. The **required-resources-not-ready** job attribute indicates what resources are not ready. The **required-resources-not-supported** job attribute indicates what resources are not supported.
- When the value of **force-destination-setup** is **true**, InfoPrint does not check whether the actual destination can process the job until the job is sent to the actual destination. At that time, if any required resources are not ready or not supported, InfoPrint disables the actual destination and sends a message to the operator to change the destination setup. When the operator enables the actual destination, the job is printed or transmitted.

force-printer-setup (AIX, PSF, 3170)See **force-destination-setup**.**form-definition (PSF)**

This **resettable, single-valued** attribute identifies the default form definition that the output device uses when printing or transmitting a document.

Allowed Values

You can enter a text string up to 8 characters long that contains the form-definition ID.

Default Value

Basic InfoPrint administrator's GUI

F100D

Advanced InfoPrint administrator's GUI and command line

F1A10111**Usage Guidelines**

- The form definition controls positioning of the output image on the page.
- A form definition can specify overlays, a paper source for cut-sheet printers (input bin selection), duplex printing, and text suppression on a page.

image-fit-supported (PSF, Email, Fax)

This **resettable, multi-valued** attribute specifies the methods of adjusting TIFF, GIF, and JPEG images to fit on the printed page that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

position-and-trim
scale-to-fit

Default Value

No default value.

Usage Guidelines

InfoPrint compares the document attribute **image-fit** to this attribute for validation and scheduling.

image-length (3170)

This **resettable, single-valued** specifies the default length of a page of PostScript, PCL, TIFF, GIF, JPEG, or PDF data after it has been transformed for InfoPrint printing or transmission.

Allowed Values

The value you specify is in the form *nnnn.nnnu*

nnnn.nnn is a number that can optionally contain a decimal point.

u is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit, the default unit is pels. You cannot use a decimal point when the unit is pels.

For 240-pel resolution printers, valid values are:

16 - 8160	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 300-pel resolution printers, valid values are:

16 - 10200	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

For 480-pel resolution printers, valid values are:

16 - 16320	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 600-pel resolution printers, valid values are:

16 - 20400	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PCL, PDF, PostScript, and TIFF documents.
- If a text margin is already built into the file, try **image-length=11i** to set the length to 11 inches.
- This attribute is used if you do not specify a value for the **image-length** document attribute or in the file specified by the **rip-ini-file** attribute.

image-out-formats-supported (PSF)

This **resettable, multi-valued** attribute specifies the formats of image data, produced by the program that transforms line data to AFP data, that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

ioca-uncompressed
im1
io1
io1-g4
io1-mmr
asis

Default Values

ioca-uncompressed, im1, io1, io1-g4, io1-mmr, asis

Usage Guidelines

- InfoPrint compares the document attribute **image-out-format** to this attribute for validation and scheduling. You should use the document attribute when you print line-data documents.
- The value **io1-g4** applies only to the actual destination. You cannot request this value with the document attribute **image-out-format**. If the document format is **postscript** and the value **io1-g4** for this attribute is:

Present	The PostScript transform produces IO1-G4 images.
Not present	The PostScript transform produces IM1 images instead of IO1-G4 images, which the output device associated with this actual destination cannot print.

image-width (3170)

This **resettable, single-valued** attribute specifies the default width of a page of PostScript, PCL, TIFF, GIF, JPEG, or PDF data after it has been transformed for InfoPrint printing or transmission.

Allowed Values

The value you specify is in the form *nnnn.nnnu*

nnnn.nnn is a number that can optionally contain a decimal point.

u is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit, the default unit is pels. You cannot use a decimal point when the unit is pels.

For 240-pel resolution printers, valid values are:

16 - 8160	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 300-pel resolution printers, valid values are:

16 - 10200	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

For 480-pel resolution printers, valid values are:

16 - 16320	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 600-pel resolution printers, valid values are:

16 - 20400	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PCL, PDF, PostScript, and TIFF documents.
- If a text margin is already built into the file, try **image-width=8.5i** to set the length to 8.5 inches.
- This attribute is used if you do not specify a value for the **image-width** document attribute or in the file specified by the **rip-ini-file** attribute.

input-data-user-exit (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the name of a program that monitors input data to this actual destination. For example, if a certain document format is printed on special media, the input data exit program can issue a message requesting the operator to change the paper whenever a job in that format is submitted.

Allowed Values

You can enter a text string of up to 255 characters.

Default Value

No default value.

Usage Guidelines

You can use the sample input data exit program supplied with InfoPrint, **/usr/lpp/psf/bin/ainuxind** (source **/usr/lpp/psf/exits/ainuxind.c**) or write your own. To use your own user-exit program:

1. Verify that the XL C Compiler and the **bosadt.bosadt.obj**, **bosadt.bosadt.data**, and **bosadt.lib.obj** components of the Base Application Development Toolkit of the AIX operating system are installed. You will need them to compile your user exit.
2. Log on as **root**.
3. Using **/usr/lpp/psf/exits/ainuxind.c** as a model, create your source file in the **/usr/lpp/psf/exits** directory. The function name of the user exit must be **INDATA** (in all uppercase letters) because that is the entry point in the module.
4. Make a backup copy of the existing executable input-data user exit, **/usr/lpp/psf/bin/ainuxind**, in another directory, then delete it from **/usr/lpp/psf/bin**.
5. Change to the **/usr/lpp/psf/exits** directory and enter:


```
make
```

 to compile your user-exit program.
6. Enter:


```
make install
```

 to copy the executable user-exit program from the **/usr/lpp/psf/exits** directory into the **/usr/lpp/psf/bin** directory.

input-trays-medium (AIX)

This **resettable, multi-valued complex** attribute identifies which output medium is in which printer tray.

Allowed Values

This complex attribute has these components for each value:

tray-identification
medium-identifier

You can specify multiple values, one for each input tray on the printer device.

Syntax

tray-identification:medium-identifier

For example:

tray-1:A4-colored

Default Values

If Simple Network Management Protocol (SNMP) communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise **tray-1:letter**

Usage Guidelines

- InfoPrint automatically sets the values for the **input-trays-supported** and **media-ready** attributes from the values of this attribute.
- InfoPrint verifies that the values of the *medium-name* component of this attribute are values of the **media-supported** attribute.

Components and Values

There are two components:

tray-identification: This **single-valued** component identifies the type of input tray. You can enter one of these fixed values:

auto-envelope-feed
bottom
continuous-form-feed
envelope
large-capacity
manual
manual-envelope-feed
middle
top
tray-1
tray-2

The default value for this component is **tray-1**.

medium-name: This **single-valued** component identifies the medium in the input tray. You can enter a text string up to 255 characters long that contains the name of the medium or one of the fixed values of the **medium-identifier** attributes of the default media. See the medium attribute **medium-identifier** for a list of these values. The default value for this component is **letter**.

input-trays-supported (AIX, BSD, PSF)

This **non-settable** (AIX and PSF) or **resettable** (BSD), **multi-valued** attribute identifies the types of input trays, such as top or envelope, installed on the printer device.

Allowed Values

- | | |
|-----|--|
| AIX | InfoPrint sets the values for this attribute based on the values of the input-trays-medium attribute. |
| BSD | You can enter any names that describe input trays. |
| PSF | InfoPrint sets the values for this attribute based on the values of the psf-tray-characteristics attribute. |

Default Values

AIX	The value of the input-trays-medium attribute.
BSD	No default value.
PSF	The value of the psf-tray-characteristics attribute.

Usage Guidelines

- InfoPrint uses this attribute for job validation and scheduling:

AIX	InfoPrint compares the document attribute default-input-tray to this attribute.
BSD	This attribute is for information only.
PSF	InfoPrint compares the document attribute default-input-tray or input-tray-select to this attribute.
- You can use this attribute to restrict use of this actual destination.

intervention-timer (PSF)

This **resettable, single-valued** attribute specifies the maximum amount of time, in seconds, that InfoPrint waits before it treats an intervention-required condition at the output device as a permanent error.

Allowed Values

You can enter a value of 1 through 9999. The unit is seconds.

Default Value

9999

Usage Guidelines

A value of **9999** specifies that a permanent error condition can never occur.

job-attributes-supported (All DSS)

This **non-settable, multi-valued** attribute identifies the job attributes that this actual destination supports.

Allowed Values

InfoPrint sets a text string that contains a list of job attributes that this actual destination supports.

Note: This list includes only job attributes that directly affect the actual destination. Jobs with attributes that affect the server, for example, **job-retention-period**, can be printed even though those attributes are not on this list.

Default Values

AIX	auxiliary-sheet-selection, job-batch, job-start-wait
BSD	job-batch, job-start-wait
PSF	auxiliary-sheet-selection, formatted-job-ticket-content, job-batch, job-finishing, job-rip-action, job-start-wait, media-sheets-completed, optimize-for-multiple-copies
3170	formatted-job-ticket-content

Actual Destination

Email	formatted-job-ticket-content, job-batch, job-rip-action, job-start-wait, media-sheets-completed
Fax	formatted-job-ticket-content, job-batch, job-rip-action, job-start-wait, media-sheets-completed

job-batches-ready (All DSS)

This **resettable, multi-valued** attribute specifies which job-batch values are acceptable to this actual destination.

Allowed Values

You can enter a text string up to 4095 characters long, for each value, that contains the job-batch name.

Default Values

No default values.

Usage Guidelines

InfoPrint compares the value of the job attribute **job-batch** to this attribute during job scheduling.

job-finishings-supported (PSF)

This **resettable, multi-valued** attribute identifies the job finishing options that this actual destination supports.

Allowed Values

You can enter any of these fixed values:

**edge-stitch
edge-stitch-2
edge-stitch-3
saddle-stitch
staple-bottom-left
staple-top-left**

Default Values

edge-stitch, edge-stitch-2, edge-stitch-3, saddle-stitch, staple-bottom-left, staple-top-left

Usage Guidelines

- InfoPrint compares the job attribute **job-finishing** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

job-retry-count-limit (AIX, BSD, PSF, 3170, Fax)

This **resettable, single-valued** attribute indicates the number of times that InfoPrint should attempt to submit a job to this actual destination after an initial failure.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

0

Usage Guidelines

- Values greater than **0** are useful when poor network line quality causes temporary loss of communication between this actual destination and the backend program. A second or subsequent attempt to submit the job may succeed if communication can be reestablished.
- If the job cannot be submitted within the specified number of attempts, InfoPrint disables the destination and places it in the **needs-key-operator** state.
- The **job-retry-interval** actual destination attribute indicates the number of seconds between attempts.
- If the value of this attribute is **0**, the **job-retry-interval** attribute is ignored.
- If the value of the **job-retry-interval** attribute is **0**, this attribute is ignored.

job-retry-interval (AIX, BSD, PSF)

This **resettable, single-valued** attribute indicates the number of seconds that InfoPrint should wait between attempts to submit a job to this actual destination.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

0

Usage Guidelines

- If the job cannot be submitted within the specified number of attempts, InfoPrint disables the destination and places it in the **needs-key-operator** state.
- The **job-retry-count-limit** actual destination attribute indicates the number of attempts after an initial failure.
- If the value of this attribute is **0**, the **job-retry-count-limit** attribute is ignored.
- If the value of the **job-retry-count-limit** attribute is **0**, this attribute is ignored.

job-rip-actions-supported (PSF, Email, Fax)

This **resettable, multi-valued** attribute indicates whether this actual destination supports converting a PostScript job to raster image patterns and holding the job, printing the job, or neither.

Allowed Values

You can enter any of these fixed values:

rip-and-hold
rip-and-hold-ignore-ready
rip-and-print
rip-and-print-ignore-ready
rip-only

rip-only-ignore-ready

Default Value

rip-and-hold, rip-and-hold-ignore-ready, rip-and-print, rip-and-print-ignore-ready, rip-only, rip-only-ignore-ready

Usage Guidelines

InfoPrint compares the job attribute **job-rip-action** to this attribute for validation and scheduling.

job-size-range-ready (All DSS)

This **resettable, single-valued complex** attribute defines the range of job sizes in bytes (octets) that this actual destination can accept and print.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each limit can be an integer from 0 to 9223372036854775800. The first integer is the lower limit and the second integer is the upper limit. The lower limit must be less than or equal to the upper limit. Separate the limits by a colon (:). The unit value is bytes (octets).

Syntax

lower-limit:upper-limit

For example,

1025:1000000

Default Value

0:9223372036854775800

Usage Guidelines

- You can use this attribute to restrict jobs sent to this actual destination according to the capacity of the output device or your policy for output device use.
- You must set the range for this attribute within the range of the **job-size-range-supported** value.
- InfoPrint compares the job attribute **total-job-octets** to this attribute for scheduling.

Components and Values

There are two components:

lower-limit: This **single-valued** component identifies the lower limit value of the job size. The unit value is octets (bytes). If you only supply the lower limit value, InfoPrint sets the upper limit to 9223372036854775800.

upper-limit: This **single-valued** component identifies the upper limit value of the job size. The unit value is octets (bytes). If you only supply the upper limit value, InfoPrint sets the lower limit to 0.

job-size-range-supported (All DSS)

This **resettable, single-valued complex** attribute defines the range of job sizes in bytes (octets) that this actual destination can accept.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each limit can be an integer from 0 to 9223372036854775800. The first integer is the lower limit and the second integer is the upper limit. The lower limit must be less than or equal to the upper limit. Separate the limits by a colon (:). The unit value is bytes (octets).

Syntax

lower-limit:upper-limit

For example:

1025:1000000

Default Value

0:9223372036854775800

Usage Guidelines

- You can use this attribute to restrict jobs sent to this actual destination according to the capacity of the output device or your policy for output device use.
- You must set the range for this attribute equal to or greater than the range you specify for the **job-size-range-ready** attribute value.
- InfoPrint compares the job attribute **total-job-octets** to this attribute for validation and scheduling.

Components and Values

There are two components:

lower-limit: This **single-valued** component identifies the lower limit value of the job size. The unit value is octets (bytes). If you only supply the lower limit value, InfoPrint sets the upper limit to 9223372036854775800.

upper-limit: This **single-valued** component identifies the upper limit value of the job size. The unit value is octets (bytes). If you only supply the upper limit value, InfoPrint sets the lower limit to 0.

job-start-wait-supported (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates whether job submitters are allowed to pause the actual destination just before the job prints.

Actual Destination

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

InfoPrint compares the job attribute **job-start-wait** to this attribute for validation and scheduling.

list-of-managers (All DSS)

This **resettable, multi-valued** attribute identifies the people responsible for the configuration of this actual destination and maintenance of the output device associated with this actual destination.

Input Synonym

You can use the synonym **managers**.

Allowed Values

You can enter a text string up to 255 characters long, for each value, that contains such things as the name, user ID, office number, or telephone number of the person responsible for this actual destination and the output device associated with it.

Default Values

No default values.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

locations (All DSS)

See **destination-locations**.

log-accounting-data (All DSS)

This **resettable, single-valued** attribute, if set, defines whether the accounting log is active for this actual destination. If you set the value to the default by using the **==** operator, the value of the server attribute **log-accounting-data** is used.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

You can use this attribute to activate or deactivate the accounting log for this actual destination.

Note: The accounting log contains the following job attributes and values for each job submitted to this actual destination:

job-identifier
submission-time
completion-time
pages-completed
job-owner
logical-destination-assigned

managers (All DSS)

See [list-of-managers](#).

maximum-concurrent-jobs (All DSS)

This **resettable, single-valued** attribute defines an upper limit for the number of jobs that this actual destination can process at a time.

Allowed Values

AIX	You can enter an integer from 1 through 9.
BSD	You can enter an integer from 1 through 9.
PSF	You can enter an integer from 1 through 99.
3170	You can enter an integer from 1 through 99.
Email	You can enter an integer from 1 through 99.
Fax	You can enter an integer from 1 through 99.

Default Value

AIX	2
BSD	1
PSF direct-attached physical printers	2
PSF AIX-attached physical printers	1
Other PSF physical printers	4
3170	4
Email	12
Fax	12

Usage Guidelines

You can use this attribute to tune your InfoPrint system to efficiently use your destination resources.

maximum-copies-supported (All DSS)

This **resettable, single-valued** attribute indicates the number of document copies, in a single job, that this actual destination allows.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

AIX, BSD, PSF, 3170	2147483647
Email, Fax	1

Usage Guidelines

- You can use this attribute to restrict jobs sent to this actual destination according to the capacity of the output device or your policy for output device use.
- InfoPrint compares the document attribute **copy-count** to this attribute for scheduling.

maximum-fonts-to-keep (PSF)

This **resettable, single-valued** attribute specifies the maximum number of fonts to keep in the memory of the printer device between jobs.

Allowed Values

You can enter an integer from 0 through 999.

Default Value

10

Usage Guidelines

- Fonts are a single size and typeface in a particular type family, including letters, numerals, punctuation marks, special characters, and ligatures.
- If you specify that the printer device can store fonts in its memory between jobs, the printer will not have to download the same fonts for the next job. However, this requires additional printer memory.

maximum-overlays-to-keep (PSF)

This **resettable, single-valued** attribute specifies the maximum number of overlays to keep in the memory of the printer device between jobs.

Allowed Values

You can enter an integer from 0 through 999.

Default Value

0

Usage Guidelines

- Overlays are collections of predefined data such as lines, shading, test boxes, and logos that the printer device can merge with variable data on a page or a form.
- If you specify that the printer device can store overlays in its memory between jobs, the printer will not have to download the same overlays for the next job. However, this requires additional printer memory.

maximum-segments-to-keep (PSF)

This **resettable, single-valued** attribute specifies the maximum number of page segments to keep in the memory of the printer device between jobs.

Allowed Values

You can enter an integer from 0 through 999.

Default Value

0

Usage Guidelines

- Page segments contain text and images that the printer device can include at any addressable point on a page or an electronic overlay.
- If you specify that the printer device can store page segments in its memory between jobs, the printer will not have to download the same page segments for the next job. However, this requires additional printer memory.

media-ready (AIX, BSD, PSF, 3170)

This **non-settable** (AIX, PSF, and 3170) or **resettable** (BSD), **multi-valued** attribute identifies the media presently loaded in the printer device.

Allowed Values

AIX	InfoPrint sets the values for this attribute based on the values of the input-trays-medium attribute.
BSD	You can enter any values of the media-supported attribute.
PSF	InfoPrint sets the values for this attribute based on the values of the psf-tray-characteristics attribute.
3170	InfoPrint sets the values for this attribute based on the values of the media-supported attribute.

Default Values

AIX	The values of the input-trays-medium attribute.
BSD	No default value.
PSF	The values of the psf-tray-characteristics attribute.
3170	The values of the media-supported attribute.

Usage Guidelines

- InfoPrint restricts the possible values for this attribute to the values currently specified for the **media-supported** attribute.
- InfoPrint compares the document attribute **default-medium** to this attribute for job scheduling.

media-supported (AIX, BSD, PSF, 3170)

This **resettable, multi-valued** attribute identifies the types of media that the actual destination supports.

Allowed Values

You can enter a text string up to 255 characters long that contains the names of the media. These can be:

- The medium identifiers of medium objects created by the **pdcrmed** utility. For these fixed values, see the medium **medium-identifier** attribute.
- The medium identifiers of medium objects you created yourself
- For PSF physical printers and BSD physical printers, any names that describe the media, even if no medium objects with those names exist

Default Values

For AIX, BSD, and PSF physical printers, if SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise:

AIX	letter
BSD	No default values.
PSF (basic InfoPrint administrator's GUI)	All allowed fixed values.
PSF (advanced InfoPrint administrator's GUI and command line)	

AIX-attached physical printers

letter

Direct-attached physical printers

letter

Other physical printers

No default values.

3170 The names of all default medium objects.

Usage Guidelines

- InfoPrint uses this attribute for job validation:

AIX	InfoPrint compares the document attribute default-medium to this attribute for job validation and scheduling.
BSD	This attribute is for information only.
PSF	InfoPrint compares the document attribute default-medium or page-media-select to this attribute for job validation and scheduling.
3170	InfoPrint compares the document attribute default-medium to this attribute for job validation and scheduling.

- For AIX physical printers, InfoPrint verifies that the values of the *medium-identifier* component of the **input-trays-medium** attribute are values of this attribute.
- For PSF physical printers, InfoPrint verifies that the values of the *medium-loaded* component of the **psf-tray-characteristics** attribute are values of this attribute.
- The physical printer does not automatically update this attribute. When you create a medium object, you must add its medium identifier to each physical printer that supports it.
- You can use this attribute to restrict use of this actual destination.

message (All DSS)

This **resettable, single-valued** attribute provides information associated with this actual destination.

Allowed Values

You can enter a text string up to 4095 characters long that contains information about this actual destination.

Default Value

No default value.

Usage Guidelines

Use of this descriptive attribute is optional.

message-font-type (PSF)

This **resettable, single-valued** attribute identifies the font type that the printer device uses to print the message page.

Allowed Values

You can enter one of these fixed values:

normal
condensed

Default Value

normal

message-form-definition (PSF)

This **resettable, single-valued** attribute identifies the AFP form definition that the printer device uses to process the message page.

Allowed Values

A text string up to 255 characters long that contains the form definition ID.

Actual Destination

Default Value

F1MG0110

model (All DSS)

See **destination-model**.

non-process-runout-timer (PSF)

This **resettable, single-valued** attribute designates the amount of time, in seconds, that a continuous-forms printer device waits for the next job before it runs the forms from the print transfer station to the stacker after the last page of a job prints.

Allowed Values

You can enter an integer from 0 through 9999. The unit is seconds.

Default Value

60

Usage Guidelines

If you enter a value of **0**, InfoPrint does not allow the timer to expire.

notification-profile (All DSS)

This **resettable, multi-valued complex** attribute designates which users InfoPrint notifies of specified events related to this actual destination, and how InfoPrint notifies them.

Allowed Values

This complex attribute has these components for each value:

- event-identifiers**
- delivery-address**
- delivery-method**
- event-comment**
- locale**

Syntax

```
-x "notification-profile={event-identifiers=event ...  
  delivery-address=name@node delivery-method=value  
  event-comment='some text' locale=locale}"
```

For example:

```
-x "notification-profile={event-identifiers=class-actual-destination-status  
  delivery-address=jeff@ttank delivery-method=message  
  event-comment='Its still going' locale=En_US.IBM-850}"
```

Components and Values

This attribute has five components:

event-identifiers: This **multi-valued** component specifies the events for which the user receives messages. You can enter any of the values listed for the server attribute **events-supported**. The default values are:

- object-deleted**

object-cleaned
printer-needs-administrator
printer-needs-attention
printer-needs-operator
printer-timed-out

delivery-address: This **single-valued** component provides the address of the person who receives the event messages or the directory location and file name where InfoPrint stores the message. You can enter a text string up to 255 characters long that contains the user name and node or the directory and file name. If no value is provided, InfoPrint uses the login ID of the user who created this actual destination as a default.

delivery-method: This **single-valued** component specifies how the user receives event messages. The values you can enter are:

<i>Fixed Value</i>	<i>Input Synonym</i>
electronic-mail	e-mail, email
file	
file-add-to	
message	
none	

The default is **message**.

If you specify a value of **file** or **file-add-to**, you must specify a value for the **delivery-address** component.

event-comment: This **single-valued optional** component supplies textual information that InfoPrint appends to the event message. You can enter a text string up to 4095 characters long that contains the comment. There is no default value for this component.

locale: This **single-valued** component defines the language and code page of notification messages. The default for this component is the locale of the person who created this actual destination.

Note: The InfoPrint messages in the language corresponding to the locale must be installed.

notify-operator (All DSS)

This **resettable, multi-valued complex** attribute identifies people that are to receive the attribute **job-start-message** or **job-end-message** message.

Input Synonym

You can use the synonym **operators**.

Allowed Values

This complex attribute has these components for each value:

delivery-method
delivery-address

Syntax

delivery-method:delivery-address

For example:

message:op2@phyptr1

Do not specify the component names; specify only values separated by a colon. Specify the method value first, then the address value.

Default Value

message:*user@node*, where the *user@node* is the login ID of the user who created this actual destination.

Components and Values

This attribute has two components:

delivery-method: This **single-valued** component specifies how the person receives the messages. You can enter one of these fixed values:

electronic-mail
message
none

If you do not enter a value, InfoPrint uses the value **message** as a default.

delivery-address: This **single-valued** component provides the address of the person to receive the messages. You enter the login ID and node of the person as a value. InfoPrint uses the login ID of the person who created this actual destination with the **pdcreate** command as a default if you do not enter a value.

number-up-supported (PSF, Email, Fax)

This **resettable, multi-valued** attribute specifies the number of pages that this actual destination can print on a single side of the paper.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
imposition-simple-1-up	1up
imposition-simple-2-up	2up
imposition-simple-3-up	3up
imposition-simple-4-up	4up
generic-none	

Default Values

imposition-simple-1-up, imposition-simple-2-up, imposition-simple-3-up, imposition-simple-4-up, generic-none

Usage Guidelines

- The value **generic-none** applies only to the actual destination. You cannot request this value with the document attribute **number-up**.

When the values for **number-up-supported** include **generic-none**, the actual destination accepts documents without a value for the **number-up** attribute.

The actual destination also accepts documents without a value for the **number-up** attribute when there are no values for **number-up-supported**.

- InfoPrint compares the document attribute **number-up** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

object-class (All DSS)

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **destination**.

Default Value

destination

offset-stacking-available (PSF)

This **resettable, single-valued** attribute indicates whether PSF AIX-attached or direct-attached physical printers support offsetting jobs in the output stack.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

- This attribute applies only to PSF AIX-attached and direct-attached physical printers. Other actual destinations ignore this attribute.
- Offset stacking occurs only if the form definition for the job specifies offset stacking.
- PPDS and PCL4 data streams do not support the offset stacking option; therefore, this attribute has no effect on destinations using those data streams.
- This attribute is not used for job validation or scheduling.

operators (All DSS)

See **notify-operator**.

optimize-for-multiple-copies (AIX, BSD, PSF, 3170)

This **resettable, single-valued** is used with the **optimize-for-multiple-copies** job attribute to indicate whether the printer device should save pages in order to print multiple copies of the job faster.

Actual Destination

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true	Physical printers representing InfoPrint 4000 printer devices (printer-model=InfoPrint4000) that are migrated from PSF for AIX or created using the InfoPrint administrator's GUI
false	All other actual destinations

Usage Guidelines

- This attribute is used in combination with the **optimize-for-multiple-copies** job attribute:

<i>Job Attribute</i>	<i>Destination Attribute</i>	<i>Results</i>
true	true	Pages are saved
true	false	Pages are not saved
false	true	Pages are not saved
false	false	Pages are not saved
No value	true	Pages are saved
No value	false	Pages are not saved

- If the printer device cannot save pages, the job is printed and this attribute is ignored.

orientations-supported (AIX, 3170)

See **content-orientations-supported**.

other-options (AIX, BSD, PSF, 3170)

See **destination-pass-through**.

output-appearances-supported (PSF)

This **resettable, multi-valued** attribute identifies the values for the document attribute **output-appearance** that this physical printer supports.

Allowed Values

You can enter a customized value or any of these fixed values:

standard
highlight-midtones
dark

Default Values

standard, highlight-midtones, dark

Usage Guidelines

- InfoPrint compares the document attribute **output-appearance** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

output-bin (PSF)

This **resettable, single-valued** attribute specifies the name of the output bin to which you want InfoPrint to direct the output from jobs.

Allowed Values

You can enter a text string up to 255 characters long that contains the output bin name.

Default Value

No default value.

Usage Guidelines

- The name you specify must match the name in one of the values for the **output-bin-numbers** actual destination attribute.
- InfoPrint only uses the value you specify for the **output-bin** actual destination attribute if the user does not specify a value for the **output-bin** document attribute and if the form definition InfoPrint uses for the job does not specify an output bin.

output-bin-numbers (PSF)

This **resettable, multi-valued complex** attribute specifies a bin name followed by a bin number. InfoPrint uses this attribute to map names of an output-bin, such as top, to bin numbers that the printer device understands.

Allowed Values

This complex attribute has these components for each value:

bin-name
bin-number

The bin-name component is a text string, the bin-number component is a numeric value. Separate the values with a colon.

Syntax

bin-name:bin-number

For example:

top:1
staple:2

Default Values

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise no default values.

Usage Guidelines

InfoPrint automatically updates the **output-bins-supported** actual destination attribute from the value or values you set for this attribute.

output-bins-supported (PSF, 3170)

This **non-settable, multi-valued** attribute identifies the supported output bins on the printer device.

Allowed Values

- | | |
|------|---|
| PSF | InfoPrint sets this value from the values you supply for the output-bin-numbers actual destination attribute. If you add or delete a value from the output-bin-numbers attribute, InfoPrint modifies this attribute to match your change. |
| 3170 | InfoPrint sets this value to the names of the output bins on the InfoColor 70 printer device. |

Default Values

- | | |
|------|--------------------|
| PSF | No default values. |
| 3170 | main, test |

Usage Guidelines

- InfoPrint compares the value of the **output-bin** document attribute to this attribute during job validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

output-data-user-exit (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the name of a program that monitors output data from this actual destination. For example, the output data exit program can print a report at the end of a job listing the start and end time and the number of fonts, page segments, and overlays in the job so that you can track output device performance.

Allowed Values

You can enter a text string of up to 255 characters.

Default Value

No default value.

Usage Guidelines

You can use the sample output data exit program supplied with InfoPrint, **/usr/lpp/psf/bin/ainuxout** (source **/usr/lpp/psf/exits/ainuxout.c**) or write your own. To use your own user-exit program:

1. Verify that the XL C Compiler and the **bosadt.bosadt.obj**, **bosadt.bosadt.data**, and **bosadt.lib.obj** components of the Base Application Development Toolkit of the AIX operating system are installed. You will need them to compile your user exit.
2. Log on as **root**.
3. Using **/usr/lpp/psf/exits/ainuxout.c** as a model, create your source file in the **/usr/lpp/psf/exits** directory. The function name of the user exit must be

OUTDATA (in all uppercase letters) because that is the entry point in the module.

4. Make a backup copy of the existing executable output-data user exit, **/usr/lpp/psf/bin/ainuxout**, in another directory, then delete it from **/usr/lpp/psf/bin**.
5. Change to the **/usr/lpp/psf/exits** directory and enter:


```
make
```

 to compile your user-exit program.
6. Enter:


```
make install
```

 to copy the executable user-exit program from the **/usr/lpp/psf/exits** directory into the **/usr/lpp/psf/bin** directory.

output-format-supported (PSF, Email, Fax)

This **resettable**, **multi-valued** attribute is used with the **number-up-supported** attribute to identify the ways of imposing pages on a sheet that this actual destination supports.

Allowed Values

You can specify any of these fixed values:

```
side-by-side-copies
simple-n-up
booklet-print
slit-and-merge
```

Default Value

side-by-side-copies, simple-n-up, booklet-print, slit-and-merge

Usage Guidelines

- See the document attribute **output-format** for explanations of the attribute values.
- InfoPrint compares the document attribute **output-format** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

overlay (PSF, Email, Fax)

This **resettable**, **single-valued** attribute specifies an overlay that InfoPrint uses for each page for all jobs printed on this actual destination.

Allowed Values

You can enter a text string up to eight characters long that contains the name of the overlay.

Actual Destination

Default Value

No default value.

Usage Guidelines

This overlay prints in addition to any overlay that the form definition for the job specifies.

page-select-supported (PSF, Email, Fax)

This **resettable, multi-valued** attribute specifies the type of page numbering that this actual destination supports.

Allowed Values

You can enter a fixed value of **numeric**.

Default Value

numeric

Usage Guidelines

InfoPrint compares the document attribute **page-select** to this attribute for validation and scheduling.

pcl-server-address (All DSS)

This **resettable, single-valued** attribute identifies the Internet Protocol address (IP Address parameter) of the host where the daemon that transforms PCL data imbedded in an AFP data file resides.

Allowed Values

You can enter a text string up to 4095 characters long that is either of these types of address:

Dotted decimal address

A series of integers within the range of 0 to 255, each separated by a period, . (decimal address). For example:

9.99.12.85

Hostname

For example:

leo.boulder.IBM.com

Default Value

127.0.0.1 (the local host)

Usage Guidelines

This attribute is not used in transforming PCL data that is not imbedded in AFP data files.

pcl-server-port (All DSS)

This **resettable, single-valued** attribute identifies the Port Number parameter of the host where the daemon that transforms PCL data imbedded in an AFP data file resides.

Allowed Values

You can enter an integer from 1 through 2147483647, but you typically enter an integer from 5001 to 65535.

Default Value

8253

Usage Guidelines

This attribute is not used in transforming PCL data that is not imbedded in AFP data files.

physical-printer (All DSS)

See **destination-name**.

plex (PSF)

This **resettable, single-valued** attribute identifies the plexes that this printer prints. Plex indicates whether the page images of the output document are conditioned for eventual one-sided or two-sided printing, and the relative orientation of consecutive pages.

Allowed Values

You can enter one of these fixed values:

simplex
tumble

Default Values

AIX	simplex
BSD	No default value.
PSF	simplex

Usage Guidelines

- The value of the **plex** attribute must be one of the values of the **plexes-supported** attribute.
- InfoPrint uses plex specifications in this order:
 1. **plex** document attribute
 2. The plex specification in the form definition
 3. **plex** actual destination attribute

Note: Because all IBM-supplied form definitions contain a plex specification, the **plex** actual destination attribute is used only with custom form definitions that do not contain a plex specification.

plexes-supported (AIX, BSD, PSF, 3170)

This **resettable, multi-valued** attribute identifies the plexes that this physical printer supports. Plex indicates whether the page images of the output document are conditioned for eventual one-sided or two-sided printing, and the relative orientation of consecutive pages.

Allowed Values

You can enter any of these fixed values:

- simplex**
- tumble**

Default Values

AIX **simplex**

BSD No default value.

PSF (basic InfoPrint administrator's GUI)

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise **simplex, tumble**.

PSF (advanced InfoPrint administrator's GUI and command line)

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise **simplex**.

3170 **simplex, tumble**.

Usage Guidelines

InfoPrint compares the document attribute **plex** to this attribute for scheduling.

postscript-server-address (All DSS)

This **resettable, single-valued** attribute identifies the Internet Protocol address (IP Address parameter) of the host where the daemon that transforms PostScript data imbedded in an AFP data file resides.

Allowed Values

You can enter a text string up to 4095 characters long that is either of these types of address:

Dotted decimal address

A series of integers within the range of 0 to 255, each separated by a period, . (decimal address). For example:

9.99.12.85

Hostname

For example:

leo.boulder.ibm.com

Default Value

127.0.0.1 (the local host)

Usage Guidelines

This attribute is not used in transforming PostScript data that is not imbedded in AFP data files.

postscript-server-port (All DSS)

This **resettable, single-valued** attribute identifies the Port Number parameter of the host where the daemon that transforms PostScript data imbedded in an AFP data file resides.

Allowed Values

You can enter an integer from 1 through 2147483647, but you typically enter an integer from 5001 to 65535.

Default Value

8251

Usage Guidelines

This attribute is not used in transforming PostScript data that is not imbedded in AFP data files.

presentation-fidelity-problem-reported (PSF)

This **resettable, single-valued** attribute identifies the types of errors that cause this actual destination to stop printing when InfoPrint detects them.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
barcode	InfoPrint stops printing the file when it detects an error in bar code data in the Bar Code Object Content Architecture (BCOCA) data stream, or if the printer device does not support BCOCA.
image	InfoPrint stops printing the file when it detects an error in image or graphics data in the Image Object Content Architecture (IOCA) or Graphics Object Content Architecture (GOCA) data streams, or if the printer device does not support IOCA or GOCA.
all	InfoPrint stops printing the file if it detects either barcode or image data problems.
none	InfoPrint prints the file without reporting barcode or image errors.

Default Value

none

print-edge-marks (AIX, BSD, PSF, 3170)

This **resettable, single-valued** specifies whether this physical printer prints edge marks on the output.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

print-qualities-supported (AIX, BSD)

This **resettable, multi-valued** attribute identifies the levels of print quality available on this physical printer.

Input Synonym

You can use the synonym **qualities-supported**.

Allowed Values

You can enter any of these fixed values:

draft
high
normal

Default Values

AIX **normal**
BSD No default value.

Usage Guidelines

- InfoPrint compares the document attribute **print-quality** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

print-queue (PSF)

See **print-queue-name**.

print-queue-name (PSF)

This **initially settable, single-valued** attribute specifies which AIX print queue is the default value for the **destination-command** attribute.

Note: Do not confuse this attribute with the **associated-queue** attribute, which specifies the InfoPrint queue that sends jobs to this physical printer.

Input Synonym

You can use the synonym **print-queue**.

Allowed Values

You can enter a text string up to 255 characters long that contains the name of the AIX print queue.

Default Value

No default value.

Usage Guidelines

- If the attachment-type is **aix**, InfoPrint uses this attribute to determine the default value following the **-P** flag in the **destination-command** attribute.
- If the attachment type is not **aix**, InfoPrint does not use the **print-queue-name** attribute.

printer (All DSS)

See **destination-name**.

printer-command (AIX, BSD, PSF)

See **destination-command**.

printer-data-stream (PSF)

See **destination-data-stream**.

printer-end-sheet (AIX, PSF)

This **resettable, single-valued** attribute identifies the style of end sheet that the printer device uses.

Allowed Values

You can enter one of the following fixed values. For PSF only, you can enter an identifier of an auxiliary-sheet object.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for end sheets.
blank	PSF	The end sheet is blank.
brief	AIX, PSF	The end sheet style is brief.
full	AIX, PSF	The end sheet style is full.
job-ticket	PSF	The job ticket is printed on the end sheet.
none	AIX, PSF	No end sheet prints.

Default Value

AIX	full
PSF	none

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print auxiliary sheets, but they do not use auxiliary-sheet objects.
- InfoPrint verifies that the value of this attribute is a value of the **end-sheets-supported** attribute.

printer-escape-codes (PSF)

This **resettable, single-valued** attribute specifies the printer escape codes this physical printer uses to print line-data jobs.

Allowed Values

You can enter a string up to 255 characters long containing the printer escape codes.

Syntax

Escape codes must be in lowercase format and cannot include spaces. You must enter unprintable characters, and may enter printable characters, in this format:

`\xnn`

where *nn* is a two-character (one-byte) hexadecimal code. For example:

`\x1b`

represents ESC

Default Value

No default value.

Usage Guidelines

Use printer escape codes to control fonts, line spacing, and the size of the output page, enabling more than 80 characters to print on a line.

For example, this hex string:

`\x1b\x5b\x53\x0c\x00\x01\x20\x01\x20\x00\x00\x4b\x60\x38\x40\x4e\xc0`

translates to the following values:

1b	ESC
5b	Left square bracket
53	S
0c00	Length of command
0120	Top margin (0.2 inches)
0120	Bottom margin (0.2 inches)
0000	Left margin (0 inches)
4b60	Right margin (13.4 inches)
3840	Page length (10 inches)
4ec0	Page width (14 inches)

The first four values (ESC, [, S, command length) are always the same in a string of escape codes specifying page dimensions. The values representing the margins and page length and width are hex values in 1440ths of an inch and can be

changed to meet your specifications. All dimensions are measured as if the page were printed in portrait.

printer-hot-folder (3170)

This **resettable, single-valued** attribute identifies the directory to be used as a hot folder for this physical printer.

Allowed Values

You can enter a text string up to 255 characters long that contains the full path name of the hot folder.

Default Value

No default value.

Usage Guidelines

If the InfoColor 70 is not attached to the same host where the InfoPrint server is running, or if any other hosts are specified as values for the **rip-server** attribute, you must export the hot folder and mount it on each of the other RIP servers and on the host where the InfoPrint server is running. Refer to *IBM InfoPrint Manager for AIX: Administrator's Guide* for instructions.

printer-locations (All DSS)

See **destination-locations**.

printer-memory (PSF)

This **resettable, single-valued** attribute describes the amount of printer memory (in kilobytes) for this PSF AIX-attached or direct-attached printer.

Note: If the printer device reports an out-of-memory condition, you can add more memory to the printer device or decrease the value for this attribute.

Allowed Values

You can enter an integer from 512 to 65535. The unit is kilobytes.

Default Value

Direct-attached physical printers

1024

AIX-attached physical printers

1024

Other attachment types

No default value.

Usage Guidelines

InfoPrint uses this attribute with PSF AIX-attached physical printers and direct-attached physical printers and ignores it for other attachment types.

printer-model (All DSS)

See `destination-model`.

printer-name (All DSS)

See `destination-name`.

printer-needs-attention-time (All DSS)

See `destination-needs-attention-time`.

printer-needs-key-operator-attention-time (All DSS)

See `destination-needs-key-operator-attention-time`.

printer-pass-through (AIX, BSD, PSF, 3170)

See `destination-pass-through`.

printer-realization (All DSS)

See `destination-realization`.

printer-register-threshold (All DSS)

See `destination-register-threshold`.

printer-release-timer (PSF, Email, Fax)

See `destination-release-timer`.

printer-resolutions-ready (PSF, 3170)

This **resettable, multi-valued** attribute specifies which of the values specified for the **printer-resolutions-supported** attribute this physical printer is ready to use.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>DSS</i>
240	PSF
300	PSF
480	PSF
600	PSF, 3170

The unit is pels.

Default Values

No default values.

Usage Guidelines

- This attribute applies only for printing image data. It has no effect on font resolutions.
- Refer to the printer device documentation for information on the resolution you should specify.
- If you specify a resolution that the printer device does not support, jobs will still print under most conditions. However, you may see poor printed results.

- The values of the **printer-resolutions-ready** attribute must be a subset of the values of the **printer-resolutions-supported** attribute.
- InfoPrint compares the document attribute **default-printer-resolution** to this attribute for scheduling.

printer-resolutions-supported (PSF, 3170)

This **resettable, multi-valued** attribute specifies the resolution, in pels, at which the printer device can print PostScript and PCL jobs.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>DSS</i>
240	PSF
300	PSF
480	PSF
600	PSF, 3170

The unit is pels.

Default Values

PSF (basic InfoPrint administrator's GUI)

240, 300, 480, 600

PSF (advanced InfoPrint administrator's GUI and command line)

240

3170 **600**

Usage Guidelines

- This attribute applies only for printing image data. It has no effect on font resolutions.
- Refer to the printer device documentation for information on the resolution you should specify.
- If you specify a resolution that the printer device does not support, jobs will still print under most conditions. However, you may see poor printed results.
- InfoPrint compares the document attribute **default-printer-resolution** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

printer-separator-sheet (AIX, PSF)

This **resettable, single-valued** attribute identifies the style of separator sheet that the printer device uses.

Allowed Values

You can enter one of the following fixed values. For PSF only, you can enter an identifier of an auxiliary-sheet object.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for separator sheets.
blank	PSF	The separator sheet is blank.
brief	PSF	The separator sheet style is brief.
full	PSF	The separator sheet style is full.
job-ticket	PSF	The job ticket is printed on the separator sheet.
none	AIX, PSF	No separator sheet prints.

Default Value

AIX	none
PSF	none

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print start and end sheets, but they do not use auxiliary-sheet objects.
- Because AIX physical printers do not print separator sheets, the only valid value for them is **none**.
- InfoPrint verifies that the value of this attribute is a value of the **separator-sheets-supported** attribute.

printer-start-sheet (AIX, PSF, 3170)

This **resettable, single-valued** attribute identifies the type of start sheet that this printer device uses.

Allowed Values

You can enter one of the following fixed values. For PSF only, you can enter an identifier of an auxiliary-sheet object.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for start sheets.
blank	PSF	The start sheet is blank.
brief	AIX, PSF	The start sheet style is brief.
full	AIX, PSF, 3170	The start sheet style is full.
job-ticket	PSF	The job ticket is printed on the start sheet.
none	AIX, PSF, 3170	No start sheet prints.

Default Value

AIX	full
PSF (basic InfoPrint administrator's GUI)	job-ticket
PSF (advanced InfoPrint administrator's GUI and command line)	brief
3170	full

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print start and end sheets, and 3170 physical printers print start sheets; but they do not use auxiliary-sheet objects.
- InfoPrint verifies that the value of this attribute is a value of the **start-sheets-supported** attribute.

printer-state (All DSS)

See **destination-state**.

printer-s370-channel-device-address (PSF)

This **resettable, single-valued** attribute identifies the control unit address parameter for channel-attached physical printers. This is the device address of the control unit for the printer device.

Allowed Values

You can enter a hexadecimal address expressed as a series of characters in the range: integer (0..9), alpha (a..f, A..F); legal values are 01-FE.

Default Value

No default value.

Usage Guidelines

You must enter a value for PSF channel-attached physical printers. InfoPrint ignores this attribute for other attachment types.

printer-s370-channel-slot-number (PSF)

This **resettable, single-valued** attribute identifies the slot number parameter for channel-attached physical printers. This is the slot number in which the S/370 Channel Emulator/A adapter adapter is installed.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

No default value.

Usage Guidelines

You must enter a value for PSF channel-attached physical printers. InfoPrint ignores this attribute for other attachment types.

printer-tcpip-internet-address (AIX, BSD, PSF, 3170)

See **destination-tcpip-internet-address**.

printer-tcpip-port-number (PSF)

See **destination-tcpip-port-number**.

printer-timeout-period (AIX, PSF)

This **resettable, single-valued** attribute specifies the amount of time, in seconds, that InfoPrint allows for the server to try to connect to a shared network printer (printer device) after the physical printer receives a new job request.

Input Synonym

You can use the synonym **timeout-period**.

Allowed Values

You can enter an integer from 0 through 2147483647. The unit is seconds.

Default Value

60

Usage Guidelines

- For PSF actual destinations, this attribute applies only to physical printers with an attachment type of **direct**.
- While the server is attempting to connect to the printer device, this physical printer is in the **timed-out** state, but it can still accept jobs.
- If the server cannot connect to the printer device within the specified time, the following happens:
 - The printer state becomes **timed-out**.
 - This physical printer will not accept new jobs.
 - InfoPrint may issue a warning message, depending on the notification profile of this physical printer.
 - The server continues to try to connect to the printer device until successful, or until this physical printer is disabled.
 - InfoPrint sends a warning message at the end of each timeout period (if specified by the notification profile).

problem-message (All DSS)

This **non-settable, single-valued** actual destination attribute provides information on the cause of a problem with a actual destination.

Allowed Values

InfoPrint sets this value to a text string that contains the message information.

Default Value

No default value.

Usage Guidelines

- This attribute may contain problem information whenever the actual destination state is not **idle**, **connecting-to-printer**, or **printing**.
- If the actual destination state is **needs-key-operator**, InfoPrint disables the actual destination. If the actual destination uses SNMP, InfoPrint automatically reenables it when the problem is corrected. To prevent automatic reenabling, manually disable the actual destination.

protected-attributes (All DSS)

This **resettable**, **multi-valued** attribute specifies one or more actual destination attributes that DCE prevents InfoPrint operators from setting or changing.

Allowed Values

You can enter one or more actual destination attributes.

Default Values

This attribute always specifies itself, **protected-attributes**, as a value.

Usage Guidelines

Normally, anyone with DCE **write** permission for actual destinations can set values for actual destination attributes. By default, the **pd_admin** and **pd_operator** DCE groups both have **write** permission. Once you define an actual destination attribute as a protected attribute, you must have DCE **delete** permission to modify the attribute. Members of the **pd_operator** DCE group do not have **delete** permission unless the DCE administrator modifies the default permissions for that group.

psf-tray-characteristics (PSF)

This **resettable**, **multi-valued complex** attribute defines the characteristics of the PSF input trays.

Allowed Values

This complex attribute has these components for each value:

input-tray
medium-loaded
job-bin-number
tray-number
duplex-supported

You can specify multiple values, one for each input tray of the printer device up to the maximum of five.

Syntax

input-tray:medium-loaded:job-bin-number:tray-number:duplex-supported

For example:

top:letter:1:1:false

Default Values

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise, the default values are as described for each component.

Usage Guidelines

- InfoPrint automatically sets the **media-ready** and **input-trays-supported** actual destination attributes from the value you set here.
- InfoPrint verifies that the values of the **media-loaded** component of this attribute are values of the **media-supported** attribute.

Components and Values

This attribute has five components:

input-tray: This **single-valued** component specifies which input tray this value defines. You can use any name you want, for example:

alternate
bottom
envelope
insert
large-capacity
main
manual
side
top

The default value for PSF AIX-attached and direct-attached physical printers is **top**. For other physical printers, there is no default value.

Note: The **insert** input tray is on the finisher, not the printer device itself. This means that you cannot print inserts with the rest of the job. If you want printed inserts, preprint them and load the printed sheets into the **insert** input tray.

media-loaded: This **single-valued** component specifies the media that is presently in the specified input tray. InfoPrint adds the value you specify for this component automatically to the **media-ready** actual destination attribute.

The value you specify does not have to match one of the values specified by the **medium-identifier** medium attributes. However, it must be one of the values specified by the **media-supported** attribute for this physical printer.

Note: If you want to change the value of this component, make sure you add the value to the **media-supported** attribute first.

The default value for PSF AIX-attached and direct-attached physical printers is **letter**. For other physical printers, there is no default value.

job-bin-number: This **single-valued** component specifies a bin number that the data stream can specify to select this input tray. Each AFP printer device model has its own configuration of paper input trays, known as bins, each with a specific number. This component maps the value specified for the input tray and loaded media to a bin number that InfoPrint understands and uses. Some values have special meanings:

<i>Input Tray Name</i>	<i>Job Bin Number</i>	<i>Tray Number</i>
alternate	1	5
bottom	2	4
envelope	65	6
manual	100	2
top	1	1

You can enter an integer from 1 to 255. The default value for PSF AIX-attached and direct-attached physical printers is **1**. For other physical printers, there is no default value.

If you specify any of the values for the **input-tray** name shown in the table, and no values for this component and the **tray-number** component, the values for both of these components default to the values shown in the explanation of this component. You can specify values for all three components if those values are not appropriate for a particular printer device.

tray-number: This **single-valued** component identifies the tray number of the input tray, depending on the printer model, associated with the job bin number.

You can enter an integer of 1 or 2. The default value for PSF AIX-attached and direct-attached physical printers is **1**. This component does not apply to other attachment types.

For AIX-attached physical printers and direct-attached physical printers, if you specify any of the values for the **input-tray** name shown in the table under **job-bin-number** and no value for this component, the value for this component defaults to the value shown in the explanation of the **job-bin-number** component.

Note: See the documentation for the printer device for further information on which types of input trays this printer supports.

duplex-supported: This **single-valued** component specifies that two-sided printing is possible from this input tray. You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

The default value for PSF AIX-attached and direct-attached physical printers is **false**. This component does not apply to other attachment types.

qualities-supported (AIX, BSD)

See **print-qualities-supported**.

register-threshold (All DSS)

See **destination-register-threshold**.

registered-with-spooler (All DSS)

This **non-settable, single-valued** attribute indicates whether this actual destination and a server have established communication.

Allowed Values

InfoPrint sets one of these fixed values:

true
false

Default Value

false

remote-queue (AIX)

This **resettable, single-valued** attribute indicates whether the backend program sends data to a remote print queue rather than controlling this AIX physical printer directly.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

If the printer backend program is a variation of, or front end to, **rembak**, specify **true**.

resource-context-font (PSF, Email, Fax)

This **resettable, single-valued** attribute defines the directory paths that InfoPrint searches for fonts for the job.

Allowed Values

You can enter the name of a resource-context object or a text string up to 255 characters long that defines the directory path to fonts. Separate multiple paths with a colon. You can specify one or more paths for one resource context. You can specify paths for file systems mounted to AIX, such as MVS data sets and VM minidisks.

Syntax

path:path

For example:

```
/fonts:/dept123/fonts
```

Default Value

No default values, but InfoPrint always searches **/usr/lpp/psf/reslib**, **/usr/lpp/afpfonts**, and **/usr/lpp/psf/fontlib**.

Usage Guidelines

- You can specify fonts either within the job or in a page definition for the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-font** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-font** actual destination attribute
 6. **/usr/lpp/psf/reslib**
 7. **/usr/lpp/afpfonts**
 8. **/usr/lpp/psf/fontlib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-form-definition (PSF, Email, Fax)

This **resettable, single-valued** attribute defines the directory paths that InfoPrint searches for the form definition for the job.

Allowed Values

You can enter the name of a resource-context object or a text string up to 255 characters long that defines the directory path to form definitions. Separate multiple paths with a colon. You can specify one or more paths for one resource context. You can specify paths for file systems mounted to AIX, such as MVS data sets and VM minidisks.

Syntax

path:path

For example:

```
/formdef:/dept123/form
```

Default Value

No default values, but InfoPrint always searches **/usr/lpp/psf/reslib**.

Usage Guidelines

- You can use either the document or the actual destination **form-definition** attribute to specify the form definition.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-form-definition** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-form-definition** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-overlay (PSF, Email, Fax)

This **resettable, single-valued** attribute defines the directory paths that InfoPrint searches for an overlay for the job.

Allowed Values

You can enter the name of a resource-context object or a text string up to 255 characters long that defines the directory path to overlays. Separate multiple paths with a colon. You can specify one or more paths for one resource context. You can specify paths for file systems mounted to AIX, such as MVS data sets and VM minidisks.

Syntax

path:path

For example:

```
/overlay:/dept123/overlay
```

Default Value

No default values, but InfoPrint always searches **/usr/lpp/psf/reslib**.

Usage Guidelines

- You use a form definition for the job to specify the overlay.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-overlay** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-overlay** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints an error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-page-definition (PSF, Email, Fax)

This **resettable, single-valued** attribute defines the directory paths that InfoPrint searches for a page definition for the job.

Allowed Values

You can enter the name of a resource-context object or a text string up to 255 characters long that defines the directory path to page definitions. Separate multiple paths with a colon. You can specify one or more paths for one resource context. You can specify paths for file systems mounted to AIX, such as MVS data sets and VM minidisks.

Syntax

path:path

For example:

```
/pagedef:/dept123/page-definition
```

Default Value

No default values, but InfoPrint always searches **/usr/lpp/psf/reslib**.

Usage Guidelines

- You use the **page-definition** document attribute to specify the page definition for the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-page-definition** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-page-definition** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-page-segment (PSF, Email, Fax)

This **resettable, single-valued** attribute defines the directory paths that InfoPrint searches for page segments for the job.

Allowed Values

You can enter the name of a resource-context object or a text string up to 255 characters long that defines the directory path to page segments. Separate multiple paths with a colon. You can specify one or more paths for one resource context. You can specify paths for file systems mounted to AIX, such as MVS data sets and VM minidisks.

Syntax

path:path

For example:

`/pageseg:/dept123/page-segment`

Default Value

No default values, but InfoPrint always searches **/usr/lpp/psf/reslib**.

Usage Guidelines

- You specify the page segments within the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-page-segment** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-page-segment** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

reverse-output (3170)

This **resettable, single-valued** attribute indicates whether this physical printer should print jobs in reverse (last page first).

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

If you specify **true**, you may also wish to specify **true** for the document attribute **output-face-up** so that pages will be collated in the right order.

rip-ini-file (3170)

This **resettable, single-valued** attribute identifies the default **.ini** file for this physical printer. This file contains default page setup values used to RIP files.

Allowed Values

You can enter a text string up to 255 characters long that contains the full path name of the file.

Default Value

/usr/lpp/pd/bin/default.ini

rip-server (3170)

This **resettable, multi-valued** attribute identifies the Internet Protocol address (IP Address parameter) of hosts capable of RIPping documents for this physical printer.

Allowed Values

You can enter a text string up to 4095 characters long that contains either of these types of address:

Dotted decimal address

A series of integers within the range of 0 to 255, each separated by a period, . (decimal address). For example:

9.99.12.85

Hostname

For example:

leo.boulder.IBM.com

Default Value

The value of the **destination-tcpip-internet-address** attribute.

scanner-corrections-supported (PSF)

This **resettable, multi-valued** attribute identifies the scanner calibration methods for which this physical printer supports correction.

Allowed Values

You can enter any of these fixed values:

Ricoh420
XeroxDocuimage620S
none

Default Values

Ricoh420, XeroxDocuimage620S, none

Usage Guidelines

InfoPrint compares the document attribute **scanner-correction** to this attribute for validation and scheduling.

scheduler-sort-primary-order (All DSS)

This **resettable, single-valued** attribute identifies which of the schedulers specified by the **schedulers-supported** attribute InfoPrint uses to determine how to schedule jobs.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
deadline	InfoPrint schedules jobs with the earliest deadline first.
fifo	InfoPrint schedules jobs in the order they are submitted.
job-priority	InfoPrint schedules jobs in order of priority.
longest-job-first	InfoPrint schedules jobs in order of size, longest first.
shortest-job-first	InfoPrint schedules jobs in order of size, shortest first.

Default Value

job-priority

scheduler-sort-secondary-order (All DSS)

This **resettable, single-valued** attribute identifies which of the schedulers specified by the **schedulers-supported** attribute InfoPrint uses to determine how to break ties produced by the scheduler specified by the **scheduler-sort-primary-order** attribute. For example, if you normally schedule jobs by priority, you can specify that when two jobs have the same priority, InfoPrint should schedule the shorter one first.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Definition</i>
deadline	InfoPrint schedules jobs with the earliest deadline first.
fifo	InfoPrint schedules jobs in the order they are submitted.
job-priority	InfoPrint schedules jobs in order of priority.
longest-job-first	InfoPrint schedules jobs in order of size, longest first.
shortest-job-first	InfoPrint schedules jobs in order of size, shortest first.

Default Value

fifo

schedulers-supported (All DSS)

This **non-settable, multi-valued** attribute identifies the scheduling algorithms that this actual destination supports.

Allowed Values

InfoPrint sets this value to these fixed values:

<i>Fixed Value</i>	<i>Definition</i>
deadline	InfoPrint schedules jobs with the earliest deadline first.
fifo	InfoPrint schedules jobs in the order they are submitted.
job-priority	InfoPrint schedules jobs in order of priority.
longest-job-first	InfoPrint schedules jobs in order of size, longest first.
shortest-job-first	InfoPrint schedules jobs in order of size, shortest first.

Default Values

deadline, fifo, job-priority, longest-job-first, shortest-job-first

screen-frequencies-supported (PSF)

This **resettable, multi-valued** attribute identifies the screen frequencies used for printing halftones that this physical printer supports.

Allowed Values

You can enter any of these fixed values:

- 71
- 85
- 106
- 141

Default Values

71, 85, 106, 141

Usage Guidelines

InfoPrint compares the document attribute **screen-frequency** to this attribute for validation and scheduling.

separator-sheets-supported (AIX, PSF)

This **resettable, multi-valued** attribute identifies the separator sheets that this physical printer supports.

Allowed Values

You can enter any of the following fixed values. For PSF only, you can enter a string up to 255 characters long that contains identifiers of auxiliary-sheet objects.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for separator sheets.
blank	PSF	The separator sheet is blank.
brief	PSF	The separator sheet style is brief.
full	PSF	The separator sheet style is full.
job-ticket	PSF	The job ticket is printed on the separator sheet.
none	AIX, PSF	No separator sheet prints.

Default Values

AIX	none
PSF	accounting-log, blank, brief, full, job-ticket, none , and the names of other defined auxiliary sheets which have legal PSF auxiliary sheet attributes.

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print start and end sheets, but they do not use auxiliary-sheet objects.
- Because AIX physical printers do not print separator sheets, the only valid value for them is **none**.
- InfoPrint verifies that the value of the **printer-separator-sheet** attribute is a value of this attribute.
- You cannot delete a value from this attribute if the value you want to delete is the value of the **printer-separator-sheet** attribute.
- For PSF physical printers, InfoPrint sets this value dynamically to the names of all defined auxiliary sheets with legal attributes. You should never have to reset this value.

sides (PSF)

This **resettable, single-valued** attribute identifies whether the printer device prints on one or two sides of the media.

Allowed Values

You can enter an integer value of **1** or **2**.

Default Values

If SNMP communication is active, InfoPrint queries the printer device and sets the values according to the response; otherwise **1**

Usage Guidelines

- The value of the **sides** attribute must be one of the values of the **sides-supported** attribute.
- InfoPrint uses sides specifications in this order:
 1. **sides** document attribute

Actual Destination

2. The sides specification in the form definition
3. **sides** actual destination attribute

Note: Because all IBM-supplied form definitions contain a sides specification, the **sides** actual destination attribute is used only with custom form definitions that do not contain a sides specification.

sides-supported (AIX, BSD, PSF, 3170)

This **resettable, multi-valued** attribute identifies whether this physical printer supports printing on one or two sides of the media.

Allowed Values

You can enter an integer of 1 or 2.

Default Values

AIX	1
BSD	No default value.
PSF (basic InfoPrint administrator's GUI)	1, 2
PSF (advanced InfoPrint administrator's GUI and command line)	1
3170	1, 2

Usage Guidelines

- You can use this attribute to restrict jobs sent to this actual destination according to the capacity of the output device or your policy for output device use.
- InfoPrint compares the document attribute **sides** to this attribute for scheduling.

snmp-active (AIX, BSD, PSF, Fax, Email)

This **non-settable, single-valued** attribute indicates whether InfoPrint has established Simple Network Management Protocol (SNMP) communications with the output device that this actual destination represents.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

Default Value

If you have defined a value for the **destination-tcpip-internet-address** attribute and InfoPrint has established SNMP communication with the printer device, **true**; otherwise **false**.

snmp-community-name (AIX, BSD, PSF)

This **resettable, single-valued** attribute indicates the name of the SNMP community to which the printer device that this physical printer represents belongs.

Allowed Values

You can enter a text string up to 255 characters long that contains the SNMP community name.

Default Value

public

Usage Guidelines

If the value of the **use-snmp** attribute is **false**, this attribute is ignored.

snmp-retry-count (AIX, BSD, PSF)

This **resettable, single-valued** attribute indicates the number of times, after an initial failure, that InfoPrint should attempt to establish SNMP communication with the printer device that this physical printer represents.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

2

Usage Guidelines

- If the value of the **use-snmp** attribute is **true**, and if you have defined a value for the **destination-tcpip-internet-address** attribute, InfoPrint attempts to establish SNMP communication with the printer device when:
 - The physical printer is created.
 - Any of the SNMP attributes of the physical printer are changed,
 - The physical printer is enabled and the value of the **snmp-active** attribute is **false**.
 - The server is started.
- If the value of the **use-snmp** attribute is **false**, this attribute is ignored.

snmp-timeout (AIX, BSD, PSF)

This **resettable, single-valued** attribute indicates the number of seconds that InfoPrint should wait for SNMP operations on the printer device that this physical printer represents to complete.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

5

Usage Guidelines

- Set a value of **0** to use the SNMP default timeout period.
- If the value of the **use-snmp** attribute is **false**, this attribute is ignored.

start-message-supported (All DSS)

This **resettable, single-valued** attribute indicates whether the actual destination supports the job attribute **job-start-message**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- When you set this attribute value to **true**, operators can receive messages that users specify with the **job-start-message** job attribute when they submit the job. InfoPrint sends the message to the operators specified by the **notify-operator** attribute for this actual destination when the job starts printing. Sending a start message does not stop the job from printing; normally the job prints without operator intervention.
- InfoPrint compares the job attribute **job-start-message** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

start-sheets-supported (AIX, PSF, 3170)

This **resettable, multi-valued** attribute identifies the start sheets that this physical printer supports.

Allowed Values

You can enter any of the following fixed values. For PSF only, you can enter a string up to 255 characters long that contains identifiers of auxiliary-sheet objects.

<i>Fixed Value</i>	<i>DSS</i>	<i>Explanation</i>
accounting-log	PSF	This value is technically valid, but should not be used for start sheets.
blank	PSF	The start sheet is blank.
brief	AIX, PSF	The start sheet style is brief.
full	AIX, PSF, 3170	The start sheet style is full.
job-ticket	PSF	The job ticket is printed on the start sheet.
none	AIX, PSF, 3170	No start sheet prints.

Default Values

AIX **brief, full, none**

PSF **accounting-log, blank, brief, full, job-ticket, none**, and the names of other defined auxiliary sheets which have legal PSF auxiliary sheet attributes.

3170 **full, none**

Usage Guidelines

- PSF physical printers can use auxiliary-sheet objects if they have valid **psf-exit-xxx** values. AIX physical printers print start and end sheets, and 3170 physical printers print start sheets; but they do not use auxiliary-sheet objects.
- InfoPrint verifies that the value of the **printer-start-sheet** attribute is a value of this attribute.
- You cannot delete a value from this attribute if the value you want to delete is the value of the **printer-start-sheet** attribute.
- For PSF physical printers, InfoPrint sets this value dynamically to the names of all defined auxiliary sheets with legal attributes. You should never have to reset this value.

table-reference-characters-supported (PSF, Email, Fax)

This **resettable, single-valued** attribute identifies whether this actual destination supports table reference characters. Some line-data applications produce table reference characters to specify font changes.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- InfoPrint compares the document attribute **table-reference-characters** to this attribute for scheduling.
- You can use this attribute to restrict use of this actual destination.

timeout-period (AIX, PSF)

See **printer-timeout-period**.

transform-output-location (3170)

This **resettable, single-valued** attribute identifies the directory where InfoPrint stores files that have been RIPped for this physical printer.

Allowed Values

You can enter a text string up to 255 characters long that contains the full path name of the directory.

Default Value

\$PDBASE/server

Usage Guidelines

- Do not specify the name of a hot folder. Files stored in a hot folder are deleted quickly.
- Each RIP server, including the AIX host where the InfoColor 70 is attached, stores files in a subdirectory whose name is its IP address. For example, if the value of this attribute is /custdisk1, the RIP server at 9.99.12.85 stores files in /custdisk1/9.99.12.85.
- If the InfoColor 70 is not attached to the same host where the InfoPrint server is running, or if any other hosts are specified as values for the **rip-server** attribute, you must export the subdirectory where each RIP server stores files and mount it on each of the other RIP servers and on the host where the InfoPrint server is running. Refer to *IBM InfoPrint Manager for AIX: Administrator's Guide* for instructions.

use-snmp (AIX, BSD, PSF, Fax, Email)

This **resettable, single-valued** attribute indicates whether InfoPrint should attempt SNMP communication with the output device that this actual destination represents.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

If InfoPrint fails to establish SNMP contact with an output device, it uses the **ping** command to test whether it is possible to communicate with the device in other ways. If the **ping** command succeeds, InfoPrint concludes that the device is not an SNMP device and resets this attribute to **false**.

warning-message (AIX, BSD, PSF)

This **non-settable, single-valued** actual destination attribute provides information about printer device conditions that require attention but allow printing to continue, such as low paper or low toner.

Allowed Values

InfoPrint sets this value to a text string that contains the message information.

Default Value

No default value.

Usage Guidelines

InfoPrint uses this attribute only when SNMP communication is active with the printer device.

x-image-shift-range-supported (PSF, 3170, Email, Fax)

This **resettable, single-valued complex** attribute specifies, in millimeters, the lower and upper numeric boundaries for the X offset of a page. The X offset, along with the Y offset, sets the origin of the logical page on the physical page.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each component can have a numeric value from -2147483647 through 2147483647. Separate the values with a colon.

Syntax

lower-limit:upper-limit

Each value uses a format of *nnnn.nnn*, where *nnnn.nnn* is the decimal millimeter value. For example,

1:10

InfoPrint uses millimeters for the unit of measure.

Default Values

0:2147483647

Components and Values

This attribute has two components:

lower-limit: This **single-valued** component defines the minimum amount of image shift that you can specify with the document or default document attribute **x-image-shift** or **x-image-shift-back**.

upper-limit: This **single-valued** component defines the maximum amount of image shift that you can specify with the document or default document attribute **x-image-shift** or **x-image-shift-back**.

Usage Guidelines

- InfoPrint compares the document attributes **x-image-shift** and **x-image-shift-back** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

y-image-shift-range-supported (PSF, 3170, Email, Fax)

This **resettable, single-valued complex** attribute specifies, in millimeters, the lower and upper numeric boundaries for the Y offset of a page. The Y offset, along with the X offset, sets the origin of the logical page on the physical page.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each component can have a numeric value from -2147483647 through 2147483647. Separate the values with a colon.

Syntax

lower-limit:upper-limit

Each value uses a format of *nnnn.nnn*, where *nnnn.nnn* is the decimal millimeter value. For example,

1:20

InfoPrint uses millimeters for the unit of measure.

Default Values

0:2147483647

Components and Values

This attribute has two components:

lower-limit: This **single-valued** component defines the minimum amount of image shift that you can specify with the document or default document attribute **y-image-shift** or **y-image-shift-back**.

upper-limit: This **single-valued** component defines the maximum amount of image shift that you can specify with the document or default document attribute **y-image-shift** or **y-image-shift-back**.

Usage Guidelines

- InfoPrint compares the document attributes **y-image-shift** and **y-image-shift-back** to this attribute for validation and scheduling.
- You can use this attribute to restrict use of this actual destination.

Attributes for Auxiliary-Sheet Objects

An auxiliary-sheet object represents:

- An auxiliary sheet that prints with a job sent to a PSF physical printer
- An exit program that generates information about the job for printing on an auxiliary sheet or writing to an accounting log or an audit log

An auxiliary sheet is a sheet of paper that prints at the beginning or end of output, or separating different parts of the output. The auxiliary sheet may have information printed on it identifying the output or may be blank.

The PSF DSS uses the names of auxiliary-sheet objects as values for actual destination attributes, such as **accounting-exit**, **audit-exit**, **start-sheets-supported**, and **printer-start-sheet**. The fax and email DSSs use the names of auxiliary-sheet objects as values for the **accounting-exit** and **audit-exit** actual destination attributes. AIX physical printers print start and end sheets, and 3170 physical printers print start sheets; but they do not use auxiliary-sheet objects.

Initially Settable Attribute Listing

There are no initially settable attributes for auxiliary-sheet objects.

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create an auxiliary-sheet object or you can modify them with the **pdset** command after you create the object.

descriptor
psf-exit-form-definition
psf-exit-page-mark
psf-exit-program-name

associated-server

This **non-settable**, **single-valued** attribute indicates the name of the server where this auxiliary sheet resides.

Allowed Values

InfoPrint sets this value when you create an auxiliary sheet for a given server. InfoPrint assigns the *ServerName* portion of the argument from the **pdcreate** command used to create this auxiliary sheet object.

Default Value

No default value.

auxiliary-sheet-identifier

This **non-settable**, **single-valued** attribute identifies the auxiliary sheet ID.

Allowed Values

InfoPrint sets this value when you create an auxiliary sheet for a given server. InfoPrint sets this value to the *AuxiliarySheet* portion of the argument used with the **pdcreate** command when this auxiliary sheet object was created. The value of this attribute must be unique within the server.

Default Value

No default value.

descriptor

This **resettable, single-valued** attribute provides a description of this auxiliary sheet.

Allowed Values

You can enter a text string of up to 4095 characters that describes this auxiliary sheet.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description of this auxiliary sheet might be useful to other users or to someone who needs to modify its contents.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **auxiliary-sheet**.

Default Value

auxiliary-sheet

psf-exit-form-definition

This **resettable, single-valued** attribute sets the form definition to use when printing this auxiliary sheet.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the form definition. See Appendix D, "Form Definitions and Page Definitions Supplied with InfoPrint" on page 627 for a list of available form definitions.

Default Value

No default value.

Usage Guidelines

A form definition defines the placement of the data on the auxiliary sheet and other formatting information, such as a printer device bin number. You can use the form definition to select a bin for the auxiliary sheet that is different from the bin used for jobs. For example, you can print auxiliary sheets on a different colored paper than used for the jobs.

psf-exit-page-mark

This **resettable, single-valued** attribute specifies whether you want page marks (black marks at the extreme edge of the page used for sorting) to print on this auxiliary sheet.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
false	no
true	yes

Default Value

No default value, see Usage Guidelines.

Usage Guidelines

Page marks are useful for printer devices that cannot perform offset stacking, such as continuous form printers. The marks allow printer operators to see the boundaries of jobs.

psf-exit-program-name

This **resettable, single-valued** attribute sets the name of the exit program used to generate this auxiliary sheet.

Allowed Values

You can enter a text string of up to 4095 characters that contains a name of a user exit program, an empty string, or no value. Names of some user exit programs that you can use are:

Accounting

<i>/usr/lpp/psf/bin/ainuxacc2</i>	Full style
<i>/usr/lpp/psf/bin/ainuxacc</i>	Brief style
<i>/usr/lpp/psf/bin/ainuxaccp</i>	Job ticket
<i>/usr/lpp/psf/bin/ainacclog</i>	Log

Auditing

<i>/usr/lpp/psf/bin/ainuxaud2</i>	Full style
<i>/usr/lpp/psf/bin/ainuxaud</i>	Brief style
<i>/usr/lpp/psf/bin/ainuxaudp</i>	Job ticket
<i>/usr/lpp/psf/bin/ainaudlog</i>	Log

Start Sheets

<i>/usr/lpp/psf/bin/ainuxhdr2</i>	Full style
<i>/usr/lpp/psf/bin/ainuxhdr</i>	Brief style
<i>/usr/lpp/psf/bin/ainuxhdrp</i>	Job ticket

<code>/usr/lpp/psf/bin/ainuxhdrx</code>	Start sheet without vertical lines for IBM 64xx printers
<code>/usr/lpp/psf/bin/pduxblkh</code>	Blank

Separator Sheets

<code>/usr/lpp/psf/bin/ainuxsep2</code>	Full style
<code>/usr/lpp/psf/bin/ainuxsep</code>	Brief style
<code>/usr/lpp/psf/bin/ainuxsepp</code>	Job ticket
<code>/usr/lpp/psf/bin/ainuxsepx</code>	Separator sheet without vertical lines for IBM 64xx printers
<code>/usr/lpp/psf/bin/pduxblks</code>	Blank

End Sheets

<code>/usr/lpp/psf/bin/ainuxtlr2</code>	Full style
<code>/usr/lpp/psf/bin/ainuxtlr</code>	Brief style
<code>/usr/lpp/psf/bin/ainuxtlrp</code>	Job ticket
<code>/usr/lpp/psf/bin/ainuxtlrx</code>	End sheet without vertical lines for IBM 64xx printers
<code>/usr/lpp/psf/bin/pduxblkt</code>	Blank

Input Data

<code>/usr/lpp/psf/bin/ainuxind</code>	This example does not perform any tasks. Use it as a model for writing your own user exit program.
--	--

Output Data

<code>/usr/lpp/psf/bin/ainuxout</code>	This example does not perform any tasks. Use it as a model for writing your own user exit program.
--	--

Default Value

No default value, see Usage Guidelines.

Usage Guidelines

- If the attribute has:

No value	The auxiliary sheet does not print.
An empty string (' ')	InfoPrint uses the default user exit program:
Accounting	<code>/usr/lpp/psf/bin/ainacclog</code>
Audit	No default program
Start sheet	<code>/usr/lpp/psf/bin/ainuxhdr</code>
Separator sheet	No default program
End sheet	No default program
Input data	No default program
Output data	No default program
Any other value	InfoPrint uses the specified user exit program to generate auxiliary sheets.

- While you can specify only one user exit program as a value for this attribute, the default auxiliary-sheet objects can invoke any of a set of user exit programs. For example, the **brief** default auxiliary-sheet object invokes `/usr/lpp/psf/bin/ainuxacc` for accounting exits, `/usr/lpp/psf/bin/ainuxaud` for audit exits, `/usr/lpp/psf/bin/ainuxhdr` for start sheets, `/usr/lpp/psf/bin/ainuxsep` for separator sheets, and `/usr/lpp/psf/bin/ainuxtlr` for end sheets.

Attributes for Documents and Default Documents

This section contains the attributes for both documents and default documents.

Document

An InfoPrint document represents a grouping of data within a job. A job can contain one or more documents. The documents in a job can differ from each other in some ways. For example, they can contain different data. A document within a job can contain printable data or a resource that is not printable by itself.

Default Document

Use default documents to set default values for document attributes.

Default documents contain two types of attributes:

- Attributes that describe the default document itself
- Attributes that you can set as default values for document attributes

Attributes Not Displayed in the InfoPrint Administrator's GUI

While all document and default document attributes and attribute values are supported for both basic and advanced InfoPrint installations, neither InfoPrint administrator's GUI displays a complete set.

- The basic InfoPrint administrator's GUI displays only the attributes of greatest interest to InfoPrint administrators.
- The advanced InfoPrint administrator's GUI displays most attributes and attribute values, but omits a few that are used primarily in basic InfoPrint installations.

You can list the values of attributes not displayed in the InfoPrint administrator's GUI using the **pdls** command or the **pdq** command. You can set the values of initially settable and resettable attributes using the **pdcreate** command or the **pdpr** command. You can change the values of resettable attributes using the **pdmod** command or the **pdset** command.

Initially Settable Attribute Listing

You can set these attributes with the **pdpr** command when you create a document.

document-file-name
document-type
initial-value-document
transfer-method

There are no initially settable attributes for default documents.

Resettable Attribute Listing

You can set these attributes with the **pdpr** command when you create a document or with the **pdcreate** command when you create a default document. You can modify them with the **pdset** command after you create the document or the default document. You can also modify them for the document using the **pdmod** command.

account-text

address1-text
address2-text
address3-text
address4-text
base-printer
bits-per-spot
black-overprint
building-text
callback-number
carriage-control-type
chars
cms-proclink
cms-product
compressed-output
content-orientation
control-strip
convert-to-ebcdic
copy-count
data-fidelity-problem-reported
default-character-mapping
default-input-tray
default-medium
default-printer-resolution
department-text
descriptor (default document only)
destination-company-text
destination-pass-through
document-comment
document-finishing
document-format
dot-shape
email-from-address
email-to-address
enable-settrap
fax-number
fax-to-name
font-fidelity-action
font-processing-messages
font-resolution
form-definition
image-center-x
image-center-y
image-fit
image-length
image-out-format
image-scale
image-width
input-exit
input-tray-select
list-of-managers (default document only)
maximum-messages-printed
maximum-transform-pages-ahead
message (default document only)
mvs-class

mvs-destination
mvs-forms
mvs-segment-id
name-text
new-line-option
node-id-text
number-up (document only)
originating-company-text
other-transform-options
output-appearance
output-bin
output-face-up
output-format
overlay
overprint
page-clip
page-count (document only)
page-definition
page-media-select
page-select (document only)
plex
print-quality
programmer-text
resource-context
resource-context-font
resource-context-form-definition
resource-context-overlay
resource-context-page-definition
resource-context-page-segment
resource-context-user
resource-exit
room-text
scanner-correction
screen-frequency
segment-file-size
shared-formdef
shift-out-shift-in
sides
start-on-new-sheet
subject-text
table-reference-characters
title-text
transform-message-file-name
transform-output-file-name
user-id-text
x-image-shift
x-image-shift-back
y-image-shift
y-image-shift-back

Per-Document Attribute Listing

These attributes can have a different value for each document in a job. For initially settable and resettable per-document attributes, you can specify a different value for each document in a job using the **pdpr** command. Specify **-x** "*AttributeName=value*" before the name of each file.

For example, to print a job consisting of two documents, one with an estimated size of 10 pages and the other with an estimated size of 15 pages, enter:

```
pdpr -x "page-count=10" -f File1 -x "page-count=15" File2
```

Note: All documents in a job must have the same value for all initially settable and resettable attributes if

- The job is submitted from tape
- The documents are in ASCII format

Initially Settable
document-type

Resettable
 bits-per-spot
 black-overprint
 carriage-control-type
 chars
 cms-proclink
 cms-product
 compressed-output
 content-orientation
 control-strip
 convert-to-ebcdic
 copy-count
 default-input-tray
 default-medium
 document-finishing
 document-format
 dot-shape
 enable-settrap
 image-center-x
 image-center-y
 image-fit
 image-length
 image-out-format
 image-scale
 image-width
 input-exit
 new-line-option
 other-transform-options
 output-appearance
 output-bin
 output-face-up
 overprint
 page-clip
 page-count
 page-definition
 page-select
 plex
 print-quality
 resource-context-page-definition
 resource-context-user
 resource-exit
 sides
 scanner-correction
 screen-frequency
 shift-out-shift-in
 start-on-new-sheet
 table-reference-characters
 transform-message-file-name
 transform-output-file-name
 x-image-shift
 x-image-shift-back
 y-image-shift
 y-image-shift-back

Non-Settable
 document-content
 document-content-list
 document-sequence-number
 initial-value-document
 octet-count

All other document attributes are per-job attributes. They must have the same value for each document in the job.

account-text (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies account information that InfoPrint prints in the **ACCOUNT:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the account information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the text string you supply to 20 characters or less to ensure that there is enough room available on the printed page for all of the account information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

address1-text (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies address information that InfoPrint prints on the first line of the **ADDRESS:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the address information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 57 characters or less to ensure that there is enough room available on the printed page for all address information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

address2-text (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies address information that InfoPrint prints on the second line of the **ADDRESS:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the address information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 57 characters or less to ensure that there is enough room available on the printed page for all address information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

address3-text (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies address information that InfoPrint prints on the third line of the **ADDRESS:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the address information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 57 characters or less to ensure that there is enough room available on the printed page for all address information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

address4-text (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies address information that InfoPrint prints on the fourth line of the **ADDRESS:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the address information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 57 characters or less to ensure that there is enough room available on the printed page for all address information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

associated-server (Default Document Only) (All DSS)

This **non-settable, single-valued** attribute indicates the name of the server in which this default document resides.

Allowed Values

InfoPrint sets this value to the *ServerName*: portion of the argument used with the **pdcreate** command when this default document is created.

Default Value

No default value.

base-printer (PSF)

This **resettable, single-valued, per-job** attribute indicates the printer model you want to RIP the document for.

Allowed Values

You can enter one of these fixed values:

IP4000	InfoPrint4000
IP60	InfoPrint60

Default Value

The value of the **printer-model** attribute for the actual destination where the document prints.

Usage Guidelines

You can RIP a document for a different printer than you actually print it on. This is useful for printing proof documents.

bits-per-spot (3170)

This **resettable, single-valued, per-document** attribute specifies the number of bits used to describe the gray value for each pixel.

Allowed Values

You can enter an integer value of **2** or **4**.

Default Value

No default value.

Usage Guidelines

- A value of **2** means that each pixel can have one of four levels of gray from 0 to maximum density. A value of **4** means that each pixel can have one of sixteen levels of gray from 0 to maximum density.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

black-overprint (3170)

This **resettable, single-valued, per-document** attribute indicates whether to print black over colors.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- Specify **true** to print a colored background with black over it. Specify **false** to omit colors from areas where black will be printed.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

building-text (PSF)

This **resettable, single-valued, per-job** attribute specifies building information that InfoPrint prints in the **BUILDING:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the building information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 24 characters or less to ensure that there is enough room available on the printed page for all building information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

callback-number (Fax)

This **resettable, single-valued, per-job** attribute specifies the callback telephone number that appears on the cover sheet of a fax job.

Allowed Values

You can enter a text string up to 4096 characters long that contains the telephone number.

Default Value

No default value.

carriage-control-type (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute identifies the type of carriage control characters that the printer device uses when interpreting and printing this document.

Allowed Values

You can enter one of these fixed values:

ansi-ascii
ansi-ebcdic
machine
none

Default Value

none

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **carriage-control-types-supported**.
- This attribute is valid only for line-data documents.

chars (PSF, Email, Fax)

This **resettable, multi-valued, per-document** attribute identifies from zero to four coded fonts used to print a line-data document.

Coded fonts are character set and code page pairs. Coded font names begin with a two-character prefix (X0 or XZ), followed by up to four alphanumeric characters. X042B2 is an example of a coded font name.

Allowed Values

You can enter a text string that contains the name or global ID of the fonts. The name of each font can be one to four characters long. Omit the two-character prefix from the coded font name or the alternate coded font name.

For the names of coded fonts, refer to *IBM AFP Fonts: Font Summary*.

If you specify more than one coded font on the command line, separate the font names by spaces and surround the attribute and value with double quotation marks, for example:

```
"chars=GT10 GT12"
```

If you specify more than one coded font in the InfoPrint administrator's GUI, separate the font names by commas, for example:

```
GT10,GT12
```

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for line-data documents.
- If the page definition does not identify fonts, you must specify fonts with this attribute if you want to print in more than one font.
- If you specify more than one coded font with the **chars** attribute, the file must contain table reference characters and you must specify the **table-reference-characters** attribute value as **true**.
- InfoPrint uses this attribute only if the page definition specifies no coded fonts. If you specify fonts with this attribute and the page definition also specifies fonts, InfoPrint uses the fonts named in the page definition.

cms-proclink (3170)

This **resettable, single-valued, per-document** attribute identifies the translation table used by the Xeikon color correction program.

Allowed Values

You can enter one of these fixed values:

matchp_ndtg2xkn_2

Match print, normal dot gain, 2 bits per spot

matchp_ndtg2xkn_4

Match print, normal dot gain, 4 bits per spot

swop_crom2xkn_2

SWOP Cromalin, 2 bits per spot

swop_crom2xkn_4

SWOP Cromalin, 4 bits per spot

Default Value

No default value.

Usage Guidelines

- To enable Xeikon color correction, specify a value of **xeikon** for the **cms-product** attribute or in the file specified by the **rip-ini-file** actual destination attribute.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

cms-product (3170)

This **resettable, single-valued, per-document** attribute identifies the color correction program.

Allowed Values

You can enter one of these fixed values:

xeikon

Default Value

No default value.

Usage Guidelines

- When Xeikon color correction is enabled, you must specify a translation table using the **cms-proclink** attribute or in the file specified by the **rip-ini-file** actual destination attribute.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

compressed-output (3170)

This **resettable, single-valued, per-document** attribute indicates whether to compress the RIPped file.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

content-orientation (AIX, 3170)

This **resettable, single-valued, per-document** attribute identifies the page presentation (the placement of data on a page) for the document.

Input Synonym

You can use the synonym **orientation**.

Allowed Values

You can enter one of these fixed values:

landscape
portrait
reverse-portrait
reverse-landscape

Default Value

AIX	The first value of the destination attribute content-orientations-supported .
3170	No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **content-orientations-supported**.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

control-strip (3170)

This **resettable, single-valued, per-document** attribute specifies the control strip to print with this document.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the control strip.

Default Value

No default value.

Usage Guidelines

- The control strip must be pre-RIPped and must reside in the collator.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

convert-to-ebcdic (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute indicates whether to convert this file from ASCII to EBCDIC before the document prints.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **convert-to-ebcdic-supported**.
- This attribute is valid only for line-data documents.

copies (All DSS)

See **copy-count**.

copy-count (All DSS)

This **resettable, single-valued, per-document** attribute specifies the number of document copies printed per job copy.

Input Synonym

You can use the synonym **copies**.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

1

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **maximum-copies-supported**.
- A value of zero (**0**) is an error.
- This attribute is not valid for AFP documents with inline resources. To print multiple copies of these documents, use the *job-copies* component of the **results-profile** job attribute.
- For BSD (by default), this document attribute maps to the **qprt -N** option.

data-fidelity-problem-reported (PSF)

This **resettable, single-valued, per-job** attribute indicates the type of data fidelity problems, print-positioning or invalid-character errors, that the destination reports while printing this document.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Report</i>
all	Both print-positioning and invalid-character errors
character	Only invalid-character errors
none	No errors
position	Only print-positioning errors

Default Value

none

Usage Guidelines

InfoPrint validates and schedules jobs using this attribute against the destination attribute **data-fidelity-problem-reported-supported**.

default-character-mapping (AIX, PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute defines the character-mapping (codepage) used while printing an ASCII or double-byte character set (DBCS) ASCII document.

Allowed Values

You can enter one of these fixed values:

ibm-437
ibm-850
ibm-860
ibm-863
ibm-865

ibm-932
ibm-938
ibm-euccn
ibm-eucjp
ibm-euckr
ibm-euctw

Default Value

No default value.

Usage Guidelines

InfoPrint validates and schedules jobs using this attribute against the destination attribute **character-mappings-supported**.

default-input-tray (AIX, PSF)

This **resettable, single-valued, per-document** attribute identifies an input-tray on the printer device that contains the medium that InfoPrint uses for normal document pages.

Allowed Values

For AIX physical printers, use one of these values:

auto-envelope-feed
bottom
continuous-form-feed
envelope
large-capacity
manual
manual-envelope-feed
middle
top
tray-1
tray-2

For PSF physical printers, you can enter one of these values or any other value that maps to one of the actual destination **psf-tray-characteristics** attribute values.

Default Value

No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **input-trays-supported**.
- For AIX physical printers, any input tray selection in the data stream or form definition overrides the value you specify for this attribute.
- For PSF physical printers, the value you specify for this attribute overrides any input tray selection in the data stream or form definition, with one exception. If you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute, InfoPrint ignores the different values and uses the input tray selection in the form definition.

- If this attribute and the **default-medium** attribute have conflicting values, InfoPrint uses the value of the **default-medium** attribute.

default-medium (AIX, PSF, 3170)

This **resettable, single-valued, per-document** attribute identifies the medium for document pages on which this document prints.

Allowed Values

AIX You can enter a text string of up to 255 characters that contains one of the values listed for the **medium-identifier** attribute for the medium object or a name of a medium you have created. Refer to the medium object **medium-identifier** attribute.

PSF You can specify any text string that is listed as a supported medium.

Default Value

No default value.

Usage Guidelines

- InfoPrint validates the document against the logical destination attribute **media-supported** and the actual destination attribute **media-supported**.
- InfoPrint schedules the document against the actual destination attributes **media-supported** and **media-ready**.
- For AIX physical printers, any medium selection in the data stream or form definition overrides the value you specify for this attribute.
- For PSF physical printers, the value you specify for this attribute overrides any medium selection in the data stream or form definition, with one exception. If you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute, InfoPrint ignores the different values and uses the medium selection in the form definition.
- If this attribute and the **default-input-tray** attribute have conflicting values, InfoPrint uses the value of this attribute.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the smallest medium that the image will fit on.

default-printer-resolution (PSF, 3170)

This **resettable, single-valued, per-job** attribute specifies the resolution, in pels, at which the printer device should print this document.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>DSS</i>
240	PSF
300	PSF
480	PSF
600	PSF, 3170

Default Value

PSF	240
3170	600

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PCL, PDF, PostScript, and TIFF documents.
- This attribute applies only to image data. It has no effect on font resolutions.
- InfoPrint validates jobs using this attribute against the destination attribute **printer-resolutions-supported**.
- InfoPrint schedules jobs using this attribute against the destination attribute **printer-resolutions-ready**.

department-text (PSF)

This **resettable, single-valued, per-job** attribute specifies department information that InfoPrint prints in the **DEPARTMENT:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the department information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 24 characters or less to ensure that there is enough room available on the printed page for all department information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

descriptor (Default Document Only) (All DSS)

This **resettable, single-valued** attribute provides a description of this default document.

Allowed Values

You can enter a text string of up to 4095 characters that describes this default document.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description helps job submitters to determine if this is the default document they want to use.

destination-company-text (Fax)

This **resettable, single-valued, per-job** attribute specifies the name of the destination company that appears on the fax cover sheet.

Allowed Values

You can enter a text string up to 4095 characters long that contains the name of the destination company.

Default Value

No default value.

destination-initial-value-document (Document Only) (All DSS)

This **non-settable, single-valued, per-job** attribute identifies the default document associated with the logical destination to which you submitted the document and that InfoPrint used to create the document.

Input Synonym

You can use the synonym **printer-initial-value-document**.

Allowed Values

InfoPrint sets this value to the name of the default document used.

Default Value

No default value.

destination-pass-through (AIX, BSD, PSF)

This **resettable, single-valued, per-job** attribute allows you to submit specific DSS (print driver) information along with the document. InfoPrint does not process the information, but passes it directly to the DSS.

Input Synonyms

You can use the synonym **printer-pass-through** or **other-options**.

Allowed Values

You can enter a text string of up to 4095 characters that contains the DSS information.

Default Value

No default value.

Usage Guidelines

For BSD, InfoPrint appends the contents of this attribute to the contents of the actual destination attribute **destination-command** after the mapped options.

document-comment (AIX, BSD, PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute provides information that InfoPrint associates with this document.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about this document, such as the fonts it requires.

Default Value

No default value.

document-content (Document Only) (All DSS)

This **non-settable, single-valued, per-document** attribute contains the document file identifier.

Allowed Values

InfoPrint sets this value to the name of the file.

Default Value

No default value.

document-content-list (Document Only) (AIX, BSD, PSF, 3170)

This **non-settable, multi-valued, per-document** attribute lists the files in a file-reference document.

Allowed Values

InfoPrint sets this value to a list of file identifiers.

Default Value

No default value.

Usage Guidelines

A file-reference document is a list of similar printable documents. All the printable documents must have the same format, because InfoPrint processes them all the same way.

document-file-name (Document Only) (All DSS)

This **initially settable, single-valued, per-job** attribute provides the name you want to assign to the file (document).

Input Synonym

You can use the synonym **file-name**.

Allowed Values

You can enter a text string of up to 4095 characters that contains the file name or source specified with the **pdpr** command.

Default Value

The file name of the first document in the job.

document-finishing (PSF)

This **resettable, multi-valued, per-document** attribute identifies the finishing options for this document.

Allowed Values

You can enter any of these fixed values:

z-fold

Default Values

No default values.

Usage Guidelines

- When you specify a value for **document-finishing**, InfoPrint creates a form definition. Do not use the **form-definition** attribute to specify another form definition.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **document-finishings-supported**.

document-format (All DSS)

This **resettable, single-valued, per-document** attribute identifies the format (data type) of this document.

Input Synonym

You can use the synonym **format**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>	<i>DSS</i>
ascii		AIX, BSD, PSF (except upload printers)
dbcs-ascii		AIX, BSD, PSF
ditroff		BSD, PSF, email, fax
d630		AIX, BSD
gif		BSD, PSF, email, fax
hpgl	hp-gl	AIX, BSD
iso-6429		AIX, BSD
jpeg		BSD, PSF, email, fax
line-data		BSD, PSF, email, fax
modca-p	afpds	BSD, PSF, email, fax
passthru		AIX, BSD
pcl	hppcl, hp-pcl	AIX, BSD, PSF, email, fax
pdf		BSD, PSF, email, fax
postscript	ps	All
ppds		BSD
sap		BSD, PSF, email, fax
sap-abap		BSD, PSF, email, fax
simple-text	text	BSD
tiff		BSD, PSF, email, fax

Note: By default, BSD physical printers support only a subset of the formats that the BSD DSS can print. You can update the destination attribute **document-format-supported** to include any or all of these values.

Default Value

The server identifies the document format. If the format cannot be determined, **ascii**

Usage Guidelines

- If you or a default document you specify do not provide a value for this attribute with the **pdpr** command, the server attempts to determine the file format. If it is unable to determine the format, InfoPrint uses the default.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **document-formats-supported**.
- You cannot print ASCII documents and documents with other formats in the same job.

document-number (Document Only) (All DSS)

See **document-sequence-number**.

document-sequence-number (Document Only) (All DSS)

InfoPrint sets this **non-settable, single-valued, per-document** attribute to identify this document in relation to the other documents of a multi-document job.

Input Synonyms

You can use the synonym **sequence-number** or **document-number**.

Allowed Values

An integer from 1 through 2147483647.

Default Value

No default value.

Usage Guidelines

Use this number as part of the local ID or global ID to identify a given document within a job.

document-type (Document Only) (All DSS)

This **initially settable, single-valued, per-document** attribute indicates that the document is either a printable document, a group of printable documents, a font, or some other resource.

Input Synonym

You can use the synonym **type**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>DSS</i>
cover-sheet	Fax
document-definition	PSF, 3170, email, fax
email-body	Email
email-signature	Email
file-reference	All
font	PSF, email, fax
form-definition	PSF, email, fax
formatted-job-ticket	PSF, 3170, email, fax
insert	PSF
job-ticket	PSF, 3170, email, fax
overlay	PSF, email, fax
page-definition	PSF, email, fax
page-segment	PSF, email, fax
page-shift-file	PSF, email, fax
printable	All
resource	PSF, 3170, email, fax
variable-data	PSF, 3170, email, fax

Default Value

printable

Usage Guidelines

- A file-reference document is a list of similar printable documents. All the printable documents must have the same format, because InfoPrint processes them all the same way.
- Insert documents normally require media sheets from the **insert** input tray, which is on the finisher. This means that you cannot print an insert with the rest of the job. If you want printed inserts, preprint them and load the printed sheets into the **insert** tray.

This does not mean that the insert document should not have any printable content. The insert document should be a MO:DCA-P, PostScript, or TIFF (not ASCII) file containing text like this:

This is an insert sheet.

A MO:DCA-P insert document is supplied with InfoPrint Submit. If you submit jobs in other ways, create your own insert document.

If the **insert** input tray is not available (for example, if you are proofing a job on a printer without a finisher), InfoPrint prints the insert document on a sheet from the default input bin, so that you can easily see where sheets from the insert tray will be inserted in the final job.

- To print a booklet with a cover, specify **insert** as the document format of the first document in the job.
- A fax job must not include more than one **cover-sheet** document.
- An email job must not include more than one **email-body** document or more than one **email-signature** document.

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **document-types-supported**.

dot-shape (3170)

This **resettable, single-valued, per-document** attribute indicates the shape of pixels.

Allowed Values

You can enter a customized value or one of these fixed values:

Fixed Value	Equivalent
classic	/c=r,170,15/m=r,170,75/y=r,170,90/k=r,170,45
combined	/c=c,170,15/m=c,170,75/y=c,170,90/k=c,170,45
sofocles	/c=l,158,15/m=l,158,75/y=l,158,90/k=l,158,45
sofocles-not-calibrated	/c=ln,158,15/m=ln,158,75/y=ln,158,90/k=ln,158,45

Default Value

No default value.

Usage Guidelines

- Customized values have the following format:

/color,=shape, lpi, angle...

for example:

/c=r,170,15/m=r,170,75/y=r,170,90/k=r,170,45

where:

color Indicates the dot color:

c	Cyan
m	Magenta
y	Yellow
b	Black

shape Indicates the dot shape:

r	Round
c	Combined
l	Line
ln	Line not calibrated

lpi Is the screen frequency in lines per inch. Specify **600** for no screening.

angle Is the screen angle.

- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

email-from-address (Email)

This **resettable, single-valued, per-job** attribute specifies the electronic mailing address of the sender of this document.

Allowed Values

You can enter a text string up to 4096 characters long that contains the electronic mailing address.

Default Value

No default value.

email-to-address (Email)

This **resettable, single-valued, per-job** attribute specifies the electronic mailing address of the recipient of this document.

Allowed Values

You can enter a text string up to 4096 characters long that contains the electronic mailing address.

Default Value

No default value.

Usage Guidelines

This value is required for documents submitted to email destinations.

enable-settrap (3170)

This **resettable, single-valued, per-document** attribute indicates whether to turn on trapping for Quark XPress jobs.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- The InfoColor 70 receives composite PostScript jobs. Because Quark XPress cannot change the dimensions of PostScript elements to create chokes and spreads with composite PostScript, it sends PostScript codes to indicate what changes are needed. These changes are called the *settrap operators*.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

fax-number (Fax)

This **resettable, single-valued, per-job** attribute specifies the fax number of the recipient of this document.

Allowed Values

You can enter a text string up to 4096 characters long that contains the fax number.

Default Value

No default value.

Usage Guidelines

This value is required for documents submitted to fax destinations.

fax-to-name (Fax)

This **resettable, single-valued, per-job** attribute specifies the name of the person to whom this fax document is addressed.

Allowed Values

You can enter a text string up to 4096 characters long that contains the person's name.

Default Value

No default value.

file-name (Document Only) (All DSS)

See **document-file-name**.

font-fidelity-action (PSF)

This **resettable, single-valued, per-job** attribute indicates what InfoPrint should do if a font required to print the document is not available in the resolution specified by the data stream, the **font-resolution** attribute, or the actual destination **default-font-resolution** attribute.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
stop	Stop printing the job.
continue	Attempt to substitute a similar font at a different resolution.

Default Value

No default value. If you do not specify a value for this attribute, InfoPrint uses the value in the data stream, then the value of the actual destination attribute **default-font-fidelity-action**.

font-processing-messages (PSF)

This **resettable, single-valued, per-job** attribute indicates whether InfoPrint should issue messages when it substitutes a font with a different resolution for a font with the resolution specified by the data stream, the **font-resolution** attribute, or the actual destination **default-font-resolution** attribute.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

font-resolution (PSF)

This **resettable, single-valued, per-job** attribute identifies the resolution of the fonts used to create this document.

Allowed Values

You can enter one of these fixed values:

240
300
outline

Default Value

No default value. If there is no font resolution specified in the data stream and you do not specify a value for this attribute, InfoPrint uses the value of the actual destination attribute **default-font-resolution**.

Usage Guidelines

- The font resolution specified in the data stream overrides this attribute.
- Usually the font resolution and the printer resolution match, but there are two cases when they do not:
 - Some printer devices, for example, the InfoPrint 60 and InfoPrint 4000, can print fonts of any resolution, although the print head is always 600 pels.
 - It is possible to print a document created with fonts of one resolution on a printer with a different resolution by substituting fonts. Depending on the document, the output may or may not be acceptable.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **font-resolutions-supported**.

form-definition (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute identifies the form definition used when printing this document.

Allowed Values

You can enter a text string of up to 8 characters that contains the identification for this resource.

Default Value

No default value. If you omit this attribute or if it contains no value, and if InfoPrint does not create a form definition using the values of other document and job attributes, InfoPrint uses the form definition defined by the actual destination attribute **form-definition**.

Usage Guidelines

- If you specify a value for the **document-finishing** or **job-finishing** attribute, InfoPrint creates its own form definition. Do not specify a value for this attribute.
- InfoPrint does not support inline form definitions in multi-document jobs. If you want to print more than one PostScript document in a single job, configure the **/usr/lpp/psf/ps2afp/ps2afpd.cfg** file to include this line:

```
device_controls = any
```

and use this attribute to specify a form definition when you submit the job to print.

format (All DSS)

See **document-format**.

image-center-x (3170)

This **resettable, single-valued, per-document** attribute indicates whether to center the image horizontally.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- This attribute overrides the **x-image-shift** attribute.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

image-center-y (3170)

This **resettable, single-valued, per-document** attribute indicates whether to center the image vertically.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- This attribute overrides the **y-image-shift** attribute.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

image-fit (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies how InfoPrint adjusts a TIFF, GIF, or JPEG image to fit on the printed page.

Allowed Values

You can specify one of these fixed values:

position-and-trim
scale-to-fit

Default Value

No default value

Usage Guidelines

- When the value of **image-fit** is **position-and-trim**, images larger than the page size are trimmed to fit on any sides that extend beyond the page boundary. For example, if the top left corner of the image is aligned with the top left corner of the logical page, the right side and bottom of the image are trimmed off.

Use the **x-image-shift**, **x-image-shift-back**, **y-image-shift**, and **y-image-shift-back** attributes to adjust the positioning of the image on the page.

Images smaller than the page size are not changed.
- Images larger than the page size are reduced proportionately in both dimensions to fit. The whole image is preserved, but it is smaller than the original.

Images smaller than the page size are not changed.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **image-fits-supported**.

image-length (PSF, 3170, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the length of a page of PostScript, PCL, TIFF, GIF, JPEG, or PDF data after it has been transformed for InfoPrint printing.

Allowed Values

The value you specify is in the form *nnnn.nnnu*

nnnn.nnn is a number that can optionally contain a decimal point.

u is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit, the default unit is pels. You cannot use a decimal point when the unit is pels.

For 240-pel resolution printers, valid values are:

16 - 8160	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 300-pel resolution printers, valid values are:

16 - 10200	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

For 480-pel resolution printers, valid values are:

16 - 16320	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 600-pel resolution printers, valid values are:

16 - 20400	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PCL, PDF, PostScript, and TIFF documents.
- If a text margin is already built into the file, try **image-length=11i** to set the length to 11 inches.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

image-out-format (PSF)

This **resettable, single-valued, per-document** attribute indicates which type of image data that InfoPrint produces.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
ioca-uncompressed	InfoPrint produces all image data in the Image Object Content Architecture (IOCA) uncompressed format.
im1	InfoPrint produces all image data in IBM's IM uncompressed format. This image format prints on all InfoPrint printers.
io1	InfoPrint produces all image data in the Image Object Content Architecture uncompressed format.
io1-mm	InfoPrint produces all image data in the Image Object Content Architecture compressed Modified Modified Read (MMR) format.
asis	InfoPrint produces all image data in the same format as it is in the input file.

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, line-data, PCL, PDF, PostScript, and TIFF documents.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **image-out-formats-supported**.
- The value **io1-g4** applies only to the actual destination attribute **image-out-formats-supported**. You cannot request this value with the document attribute **image-out-format**. If the document format is **postscript** and the value **io1-g4** for the **image-out-formats-supported** attribute is:

Present The PostScript transform produces IO1-G4 images.

Not present

The PostScript transform produces IM1 images instead of IO1-G4 images, which the printer device associated with the actual destination cannot print.

image-scale (3170)

This **resettable, single-valued, per-document** attribute specifies the scaling factor for the image.

Allowed Values

You can enter a numeric value from 0 to 2147483647.

The value you specify is in the form *nnnn.nnn*, which is a number that can optionally contain a decimal point. For example, to scale 120%, enter:

1.2

Default Value

No default value.

Usage Guidelines

If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

image-width (PSF, 3170, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the width of a page of PostScript, PCL, TIFF, GIF, JPEG, or PDF data after it has been transformed for InfoPrint printing.

Allowed Values

The value you specify is in the form *nnnn.nnnu*

nnnn.nnn is a number that can optionally contain a decimal point.

u is the units in inches (**i**) or millimeters (**m**). If you do not specify a unit, the default unit is pels. You cannot use a decimal point when the unit is pels.

For 240-pel resolution printers, valid values are:

16 - 8160	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 300-pel resolution printers, valid values are:

16 - 10200	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

For 480-pel resolution printers, valid values are:

16 - 16320	pels
0.065 - 34	inches
1.641 - 863.628	millimeters

For 600-pel resolution printers, valid values are:

16 - 20400	pels
0.052 - 34	inches
1.313 - 863.628	millimeters

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PCL, PDF, PostScript, and TIFF documents.
- If a text margin is already built into the file, try **image-width=8.5i** to set the length to 8.5 inches.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

initial-value-document (Document Only) (All DSS)

This **initially settable, single-valued, per-document** attribute identifies a default document (within a given server) that InfoPrint uses to create this document.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the desired default document.

Default Value

No default value.

Usage Guidelines

If you specify this attribute, InfoPrint uses the attribute values from the default document to set the document attribute values, unless you override the default document attribute values by supplying attribute values at the command line.

initial-value-document-identifier (Default Document Only) (All DSS)

This **non-settable, single-valued** attribute identifies this default document.

Allowed Values

InfoPrint sets this value to the *DefaultDocumentName* portion of the argument used with the **pdcreate** command when this default document is created.

Default Value

No default value.

Usage Guidelines

The value for this attribute must be unique within the server.

input-exit (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the name or the full path name of the input record exit program that InfoPrint uses to process this line-data document. If you specify the file name without a path, InfoPrint searches for the exit program in the paths specified by the **PATH** environment variable. If you do not specify this option, the InfoPrint does not use an input record exit program.

Allowed Values

You can enter any valid input record exit program name. The exit program name is case-sensitive.

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for line-data documents.
- If the input file is unformatted ASCII, but the fonts you are using contain EBCDIC, not ASCII, code points (you specify **convert-to-ebcdic=yes**), you can specify:

/usr/lpp/psf/bin/apka2e

Converts ASCII stream data to EBCDIC stream data.

/usr/lpp/psf/bin/asciinpe

Converts unformatted ASCII data into a record format and then converts the ASCII stream data to EBCDIC stream data.

- If your input file uses fonts that have ASCII code points (you specify **convert-to-ebcdic=no**), you should *not* use the **apka2e** or **asciinpe** exit programs. However, if your unformatted ASCII file contains carriage returns and form feeds, you may want to specify the following exit program supplied with InfoPrint:

/usr/lpp/psf/bin/asciinp

Converts unformatted ASCII data that contains carriage returns and form feeds into a record format that contains an American National Standards Institute (ANSI) carriage control character. This exit encodes the ANSI carriage control character in byte 0 of every record.

input-tray-select (PSF)

Use the **default-input-tray** attribute or default to the input tray specified in the data stream or form definition.

list-of-managers (Default Document Only) (All DSS)

This **resettable, multi-valued** attribute lists the people responsible for this default document.

Input Synonym

You can use the synonym **managers**.

Allowed Values

You can enter a text string up to 255 characters long, per value, that contains the name or user ID of the person responsible for this default document.

Default Values

No default values.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

logical-destinations-ready (Default Document Only) (All DSS)

This **non-settable, multi-valued** attribute lists the enabled logical destinations that reference this default document.

Input Synonym

You can use the synonym **logical-printers-ready**.

Allowed Values

InfoPrint sets and updates this value with the destination names of the enabled logical destinations that reference this object.

Default Values

No default values.

Usage Guidelines

- InfoPrint sets this attribute when the destination attribute **destination-initial-value-document** of an enabled logical destination references this default document.
- InfoPrint removes the destination identification from the list if the destination is disabled.
- You cannot delete this default document while any of the logical destinations identified in this list are enabled.

logical-printers-ready (Default Document Only) (All DSS)

See `logical-destinations-ready`.

managers (Default Document Only) (All DSS)

See `list-of-managers`.

maximum-messages-printed (All DSS)

This **resettable**, **single-valued**, **per-job** attribute specifies the maximum number of error messages InfoPrint prints with the job.

Allowed Values

You can enter an integer from 0 through 9999.

Default Value

9999

Usage Guidelines

- This attribute identifies how many error messages InfoPrint prints, not how many messages InfoPrint generates.
- If the value is:

0	No messages print
9999	All messages print

Default Value

No default value.

maximum-transform-pages-ahead (PSF)

This **resettable**, **single-valued**, **per-job** attribute specifies the maximum number of pages by which the InfoPrint transform programs can get ahead of the printing process.

Allowed Values

You can enter an integer from 500 through 2147483647.

Default Value

No default value.

Usage Guidelines

Pages that have been transformed but not printed are stored in a print buffer. Set a value for this attribute to keep the print buffer from overflowing.

message (Default Document Only) (All DSS)

This **resettable**, **single-valued** attribute provides a message associated with this default document.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about this default document.

Default Value

No default value.

mvs-class (PSF)

For jobs originating on MVS systems and directed to InfoPrint through the MVS Download program, this **resettable, single-valued, per-job** attribute contains the value specified for the MVS **class** parameter. InfoPrint can print the class information on an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a single alphanumeric character.

Default Value

If you do not specify a class value when you submit the job from the MVS system, MVS defaults the value of the **class** parameter to **A**.

Usage Guidelines

- See the *Print Services Facility/MVS: MVS Download Guide* for further information, including restrictions, on the MVS **class** parameter.
- You can use this attribute within a shell script used with MVS Download.

mvs-destination (PSF)

For jobs originating on MVS systems and directed to InfoPrint through the MVS Download program, this **resettable, single-valued, per-job** attribute contains the value specified for the MVS **dest** parameter. InfoPrint can print the destination information on an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a one-to-eight character destination name.

Default Value

No default value.

Usage Guidelines

- See the *Print Services Facility/MVS: MVS Download Guide* for further information, including restrictions, on the MVS **dest** parameter.
- You can use this attribute within a shell script used with MVS Download.

mvs-forms (PSF)

For jobs originating on MVS systems and directed to InfoPrint through the MVS Download program, this **resettable, single-valued, per-job** attribute contains the value specified for the MVS **forms** parameter. InfoPrint can print the forms information on an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a one-to-eight character form name.

Default Value

If you do not specify a forms value when you submit the job from the MVS system, MVS defaults the value of the **forms** parameter to an installation-defined default.

Usage Guidelines

- See the *Print Services Facility/MVS: MVS Download Guide* for further information on the MVS **forms** parameter.
- You can use this attribute within a shell script used with MVS Download.

mvs-segment-id (PSF)

For line-mode data jobs originating on MVS systems and directed to InfoPrint through the MVS Download program, this **resettable, single-valued, per-job** attribute contains the value specified for the MVS **segment** parameter. The **segment** parameter specifies that output data is segmented into separate data sets consisting of the number of pages specified by the parameter value. The MVS Download program transmits each data set separately.

InfoPrint can print the segment information on an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a one-to-ten character segment identifier representing the page count.

Default Value

No default value.

Usage Guidelines

- See the *Print Services Facility/MVS: MVS Download Guide* for further information, including restrictions, on the MVS **segment** parameter.
- You can use this attribute within a shell script used with MVS Download.

name-text (PSF)

This **resettable, single-valued, per-job** attribute specifies name information that InfoPrint prints in the **NAME:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the name information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 24 characters or less to ensure that there is enough room available on the printed page for all name information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

new-line-option (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute identifies how the document input data delimits lines.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>FILEFORMAT</i>
counted-4-octet-aligned	RECORD (S/370 format record data where each line starts with a 4-octet-aligned length field)
If	STREAM
record,<i>n</i>	RECORD,<i>n</i> (S/370 format record data where each line is <i>n</i> bytes long)
	<i>n</i> is an integer from 1 to 32767

Default Value

If

Usage Guidelines

- This attribute is valid only for line-data documents.
- This attribute corresponds to the **fileformat** print submission parameter information for the **line2afp** transform.

node-id-text (PSF)

This **resettable, single-valued, per-job** attribute specifies node-identification information that InfoPrint prints in the **NODEID:** field of an auxiliary sheet.

Allowed Values

You can enter a text string of up to 4095 characters that contains the node-identification information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 10 characters or less to ensure that there is enough room available on the printed page for all node-identification information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

number-up (Document Only) (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute specifies the number of pages to print on a single side of the paper when the value of the **output-format** attribute is **side-by-side-copies** or **simple-n-up**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
imposition-simple-1-up	1up
imposition-simple-2-up	2up
imposition-simple-3-up	3up
imposition-simple-4-up	4up

Default Value

No default value.

Usage Guidelines

- In two-sided jobs, the number of pages printed on each sheet is twice the **number-up** value.
- This attribute is not valid for ASCII documents.
- If you specify a value for the document **form-definition** attribute, InfoPrint ignores the **number-up** attribute and uses the number-up value in the form definition. This attribute overrides the number-up value in any other form definition.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **number-up-supported**.

object-class (All DSS)

This **non-settable, single-valued, per-job** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **document** for a document or to **initial-value-document** for a default document.

Default Value

Document	document
Default document	initial-value-document

octet-count (Document Only) (All DSS)

This **non-settable, single-valued, per-document** attribute specifies the document size in octets (bytes).

Allowed Values

InfoPrint computes this value when it creates the document. The value can be an integer from 0 to 9223372036854775800.

Default Value

The size of the document in bytes (octets).

Usage Guidelines

- InfoPrint uses this attribute to compute total octet count for a job and to provide information about this document.
- For jobs consisting of two or more documents, you can query for the octet count of each document in the job by specifying **-r octet-count** with the **pdls** command.

orientation (AIX, 3170)

See **content-orientation**.

originating-company-text (Fax)

This **resettable, single-valued, per-job** attribute specifies the name of the sending company that appears on the fax cover sheet.

Allowed Values

You can enter a text string up to 4095 characters long that contains the name of the sending company.

Default Value

No default value.

other-options (AIX, BSD, PSF)

See **destination-pass-through**.

other-transform-options (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute allows you to submit options for the transform that converts this document to the AFP data stream.

Allowed Values

You can enter a text string of up to 4095 characters that contains the transform options.

Default Value

No default value.

Usage Guidelines

See Chapter 6, “InfoPrint Transform Commands” on page 183 for information about transform options.

output-appearance (PSF)

This **resettable, single-valued, per-document** attribute identifies the desired style of the printed document.

Allowed Values

You can enter a customized value or one of these fixed values:

standard
highlight-midtones
dark

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PDF, PostScript, and TIFF documents.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **output-appearances-supported**.

output-bin (PSF, 3170)

This **resettable, single-valued, per-document** attribute specifies the name of the output bin to which you want InfoPrint to direct the output from your job.

Allowed Values

You can enter an output bin name of up to 255 characters that contains the name of an output bin, such as top or staple.

Default Value

No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the **output-bins-supported** actual destination attribute, which InfoPrint sets according to the values supplied for the **output-bin-numbers** PSF physical printer attribute.
- The value you specify for the **output-bin** attribute overrides any output bin specified in the form definition InfoPrint uses to process the job.
- InfoPrints maps the value to an actual bin number using the actual destination attribute **output-bin-numbers**.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

output-face-up (3170)

This **resettable, single-valued, per-document** attribute indicates whether to start the document on the side of the sheet that faces up in the output bin.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- A value of **true** for this attribute corresponds to a value of **0** for the **outputfaceup** keyword in the **.ini** file and results in face-up output. A value of **false** for this attribute corresponds to a value of **1** for the **outputfaceup** keyword in the **.ini** file and results in face-down output.
- You may want to specify **true** for this attribute when the value of the actual destination attribute **reverse-output** is **true** so that pages will be collated in the right order.
- When printing multiple-document duplex jobs, use this attribute to control whether a document starts on a new sheet. For example, if you specify **output-face-up=false** for the first document in the job, which is 3 pages long, specify **output-face-up=false** for the second document to make it start on a new sheet. Specify **output-face-up=true** for the second document to make it start on the reverse of the last page of the first document. If you specify the same value for all the documents in the job, they will all start on new sheets whether the preceding document has an odd or even number of pages.
- If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

output-format (PSF, Email, Fax)

This **resettable**, **single-valued**, **per-job** attribute is used with the **number-up** attribute to specify how pages should be imposed on a sheet of paper.

Allowed Values

You can specify one of these fixed values:

side-by-side-copies
simple-n-up
booklet-print
slit-and-merge

Usage Guidelines

- **side-by-side-copies** and **simple-n-up** both print as many pages on one sheet as the **number-up** value allows.
 - **side-by-side-copies** prints multiple copies of one page on the sheet.
 - **simple-n-up** prints multiple pages on the sheet in numerical order.
- **booklet-print** arranges pages like this:

Page 2 backed by Page 1	Page n-1 backed by Page n
-------------------------------	---------------------------------

Document/Default Document

so that when the sheet is folded in half and collated with the rest of the booklet, the pages appear in sequence.

To print a booklet with a cover, specify **insert** as the document format of the first document in the job.

To saddle-stitch the booklet, specify a value of **saddle-stitch** for the **job-finishing** job attribute.

booklet-print does not require a value for **number-up**.

- **slit-and-merge** arranges pages like this:

Page 1 backed by Page 2	Page 3 backed by Page 4
-------------------------------	-------------------------------

so that when the sheet is cut in half and the left half is stacked on top of the right half, the pages appear in sequence.

slit-and-merge does not require a value for **number-up**.

- You can specify one-sided or two-sided printing and simplex or tumble with any of these formats except **booklet-print**.
- This attribute is not valid for ASCII documents.
- If you specify a value for the document **form-definition** attribute, InfoPrint ignores the **output-format** attribute and uses the value in the form definition. This attribute overrides the output format value in any other form definition.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **output-format-supported**.

Default Value

No default value.

overlay (PSF, Email, Fax)

This **resettable**, **single-valued**, **per-job** attribute specifies the name of an overlay that InfoPrint uses for each page in the job. An overlay contains predefined data, such as lines, shading, text, boxes, or logos that can merge with variable data on a page.

Allowed Values

You can enter an overlay name up to eight characters in length.

Default Value

No default value.

Usage Guidelines

This overlay prints in addition to any overlay specified by the form definition for the job.

overprint (3170)

This **resettable, single-valued, per-document** attribute indicates how to handle overprinting.

Allowed Values

You can enter one of these fixed values:

overprint-on	Render objects as if they would truly overprint each other
overprint-off	Ignore overprinting
overprint-from-postscript	Handle overprinting according to PostScript specifications, knocking out in separations where the object applies ink

Default Value

No default value.

Usage Guidelines

If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

page-clip (3170)

This **resettable, single-valued, per-document** attribute indicates how to clip images that are too wide for the page.

Allowed Values

You can enter one of these fixed values:

center-clip	Center the image horizontally and clip both sides
right-clip	Clip the right side of the image
error	Issue an error message and end the job

Default Value

No default value.

Usage Guidelines

If you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.

page-count (Document Only) (All DSS)

This **resettable, single-valued, per-document** attribute specifies the estimated length of the document in pages.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

No default value.

Usage Guidelines

InfoPrint determines the size of a job based on the total number of octets (bytes) in the job. For operator job-management purposes, you may find that job size based on pages is easier.

Note: Because InfoPrint does not estimate document or job size in pages or use the page-count value you specify, the value for the **page-count** attribute should closely represent the actual number of pages in the document if the operator is to make valid decisions based on page count.

page-definition (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute identifies the page definition used when printing an ASCII or line-data document.

Allowed Values

You can enter a text string of up to 8 characters that contains the name of the desired page-definition resource.

Default Value

No default value.

Usage Guidelines

You must supply a value for this attribute for line-data documents. This attribute is optional for ASCII documents. It is not valid for any other document format.

page-media-select (PSF)

Use the **default-medium** attribute or default to the medium specified in the data stream or form definition.

page-select (Document Only) (PSF, Email, Fax)

This **resettable, complex, per-document** attribute has two components that specify the first and last page of a document that InfoPrint prints.

Allowed Values

This is a complex attribute with these components:

first-page
last-page

Each component can have a value of 1 through 2147483647.

Syntax

first-page:last-page

For example:

25:48

- Separate the first-page and last-page values with a colon.
- You can omit the first-page value or the last-page value, for example:


```
page-select=:6
page-select=10:
```

See “Usage Guidelines.”

Default Value

No default values.

Usage Guidelines

- Page numbering always starts at one, (1) even if the job you print uses an alternate numbering system, such as roman numerals or folio-by-chapter (1-1, 1-2, and so on) numbering. You cannot request a range of pages using page numbers from an alternate numbering system.
- This attribute is not valid for ASCII documents.
- If you omit the first-page value, for example **:6**, InfoPrint prints from the first page of the job through page 6.
- If you omit the last-page value, for example **6:**, InfoPrint prints from page 6 through the last page of the job.
- Entering a combination of first-page last-page values where the first-page value is greater than the last-page value is an error.
- If InfoPrint cannot find the first-page value in the document, no pages print and InfoPrint issues an error.
- If InfoPrint cannot find the last-page value in the document, it prints pages from first-page value to the end of the document. InfoPrint does not issue an error.

plex (AIX, BSD, PSF, 3170)

This **resettable, single-valued, per-document** attribute indicates whether InfoPrint conditions the page images of this document for one-sided or two-sided printing and the relative orientation of consecutive pages.

Allowed Values

You can enter one of these fixed values:

```
simplex
tumble
```

Default Value

AIX	The first value listed in the destination attribute plexes-supported
BSD	No default value.
PSF	simplex
3170	No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **plexes-supported**.
- InfoPrint uses this attribute in combination with the **sides** attribute. The results are:

Document/Default Document

plex Value	sides Value	Output
simplex	1	Simplex
simplex	2	Duplex
tumble	1	Not valid
tumble	2	Tumble duplex

- InfoPrint uses plex specifications in this order:
 1. **plex** document attribute unless you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute. In that case, InfoPrint ignores the document **plex** attribute.
 2. For the 3170 DSS, the value in the file specified by the **rip-ini-file** actual destination attribute.
 3. The plex specification in the form definition
 4. **plex** actual destination attribute

print-quality (AIX, BSD)

This **resettable, single-valued, per-document** attribute specifies the desired output quality of the printed document.

Allowed Values

You can enter one of these fixed values:

draft
high
normal

Default Value

normal

Usage Guidelines

InfoPrint validates and schedules jobs using this attribute against the destination attribute **print-qualities-supported**.

printer-initial-value-document (Document Only) (All DSS)

See **destination-initial-value-document**.

printer-pass-through (AIX, BSD, PSF)

See **destination-pass-through**.

programmer-text (PSF)

This **resettable, single-valued, per-job** attribute specifies programmer information that InfoPrint prints in the **PROGRAMMER:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the programmer information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you specify to 24 characters or less to ensure that there is enough room available on the printed page for all programmer information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

resource-context (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute defines the directory path location for all document-specific resources: fonts, form definitions, overlays, page definitions, and page segments.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for resources. Separate multiple paths with a colon.

Syntax

path:path

For example:

`/res:/dept123/res`

Default Value

No default value.

Usage Guidelines

- Because InfoPrint searches the path specified by this attribute *after* the individual paths for different types of resources, you can use this attribute to locate default resources.
- You can use this attribute instead of specifying individual values for:
 - resource-context-font**
 - resource-context-form-definition**
 - resource-context-overlay**
 - resource-context-page-definition**
 - resource-context-page-segment**
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment** document attribute, as appropriate for the type of resource
 3. **resource-context** document attribute

4. **PSFPATH** environment variable
 5. **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment** actual destination attribute, as appropriate for the type of resource
 6. **/usr/lpp/psf/reslib**
 7. **/usr/lpp/afpfonts**, for fonts
 8. **/usr/lpp/psf/fontlib**, for fonts
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-font (PSF, Email, Fax)

This **resettable**, **single-valued**, **per-job** attribute defines the directory path location of the document-specific fonts.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for fonts. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/fonts:/dept123/fonts
```

Default Value

/usr/lpp/psf/reslib

Usage Guidelines

- You can specify fonts either within the job or in a page definition for the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-font** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-font** actual destination attribute
 6. **/usr/lpp/psf/reslib**
 7. **/usr/lpp/afpfonts**
 8. **/usr/lpp/psf/fontlib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-form-definition (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute defines the directory path location of the document-specific form definitions.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for form definitions. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/form_definition:/dept123/form_definition
```

Default Value

/usr/lpp/psf/reslib

Usage Guidelines

- You can use either the document or the actual destination **form-definition** attribute to specify the form definition.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-form-definition** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-form-definition** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-overlay (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute defines the directory path location of the document-specific overlays.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for overlays. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/overlay:/dept123/overlay
```

Default Value

/usr/lpp/psf/reslib.

Usage Guidelines

- You use a form definition for the job to specify the overlay.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-overlay** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-overlay** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-page-definition (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute defines the directory path location of the document-specific page definitions.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for page definitions. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/page_definition:/dept123/page_definition
```

Default Value

/usr/lpp/psf/reslib

Usage Guidelines

- This attribute is valid only for line-data documents.
- You use the **page-definition** document attribute to specify the page definition for the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-page-definition** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-page-definition** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-page-segment (PSF, Email, Fax)

This **resettable, single-valued, per-job** attribute defines the directory path location of the document-specific page segments.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for page segments. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/page_segment:/dept123/page_segment
```

Default Value

/usr/lpp/psf/reslib

Usage Guidelines

- You specify the page segments within the job.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-page-segment** document attribute
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-page-segment** actual destination attribute
 6. **/usr/lpp/psf/reslib**
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-context-user (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute defines the directory path location for all document-specific resources: fonts, form definitions, overlays, page definitions, and page segments.

Allowed Values

You can enter the name of a resource-context object or a text string of up to 255 characters that contains a specific directory path name for resources. Separate multiple paths with a colon.

Syntax

path:path

For example:

```
/res:/dept123/res
```

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for line-data documents.
- You should use this attribute only to migrate the PSF for AIX job script keyword **userlib**.
- InfoPrint searches paths in this order:
 1. **resource-context-user** document attribute
 2. **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment** document attribute, as appropriate for the type of resource
 3. **resource-context** document attribute
 4. **PSFPATH** environment variable
 5. **resource-context-font**, **resource-context-form-definition**, **resource-context-overlay**, **resource-context-page-definition**, or **resource-context-page-segment** actual destination attribute, as appropriate for the type of resource
 6. **/usr/lpp/psf/reslib**
 7. **/usr/lpp/afpfonts**, for fonts
 8. **/usr/lpp/psf/fontlib**, for fonts
- If InfoPrint cannot find the resource because none of the paths contain the resource, it still processes the job and prints error messages at the end of the job. InfoPrint reports the job as completed.

resource-exit (PSF)

This **resettable**, **single-valued**, **per-document** attribute specifies the name or the full path name of the resource exit program that InfoPrint uses to retrieve resources for this line-data document. If you specify the file name without a path, InfoPrint searches for the exit program in the paths specified by the **PATH** environment variable. If you do not specify this option, the InfoPrint does not use a resource exit program.

Allowed Values

You can enter any valid input record exit program name. The exit program name is case-sensitive.

Default Value

No default value.

Usage Guidelines

This attribute is valid only for line-data documents.

room-text (PSF)

This **resettable**, **single-valued**, **per-job** attribute specifies room information that InfoPrint prints in the **ROOM:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the room information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 24 characters or less to ensure that there is enough room available on the printed page for all room information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

scanner-correction (PSF)

This **resettable, single-valued, per-document** attribute indicates how you calibrated the scanner used to scan input images so that InfoPrint can make the appropriate modifications to halftones.

Allowed Values

You can enter one of these fixed values:

Ricoh420
XeroxDocuimage620S
none

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PDF, PostScript, and TIFF documents.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **scanner-corrections-supported**.

screen-frequency (PSF)

This **resettable, single-valued, per-document** attribute indicates the screen frequency, in lines per inch, to use for printing halftones.

Allowed Values

You can enter one of these fixed values:

71
85
106
141

Default Value

85

Usage Guidelines

- This attribute is valid only for GIF, JPEG, PDF, PostScript, and TIFF documents.
- Change the screen frequency if you see moire or two-dimensional repeating patterns in halftone images.
- Set the screen frequency to **106** if you see dark and light bands in printed output, with halftone images possibly showing a herringbone pattern under magnification.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **screen-frequencies-supported**.

segment-file-size (PSF)

This **resettable, single-valued, per-job** attribute specifies the minimum size in kilobytes of the segment files into which InfoPrint breaks jobs for processing.

Allowed Values

You can enter an integer from 1 to 102400.

Default Value

100

Usage Guidelines

Small values can adversely affect performance; large numbers can detract from InfoPrints ability to send the beginning of a job to a destination while still processing the remainder of the job.

sequence-number (Document Only) (All DSS)

See **document-sequence-number**.

shared-formdef (PSF, Email, Fax)

For MO:DCA-P documents originating on MVS systems and directed to InfoPrint through the MVS Download program, this **resettable, single-valued, per-job** attribute indicates whether the form definition used to print or transmit this document should be processed the same way as PSF/MVS would process it.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

- A value of **true** ensures consistent page placement when multiple pages are printed or transmitted on a single side of the sheet.
- If the document was created with a form definition defined specifically for the PSF DSS or for PSF for AIX, specify **false**.

shift-out-shift-in (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the printer scanning modes used when processing EBCDIC line-data that prints with either a single-byte or a double-byte font.

Allowed Values

You can enter an 8-character alphanumeric string, which is passed to all ACIF user exits, or one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
one	The line2afp transform uses a value of SOSI1 for the prmode= parameter. It converts each shift-out, shift-in code to a blank and a Set Coded Font Local text control.
two	The line2afp transform uses a value of SOSI2 for the prmode= parameter. It converts each shift-out, shift-in code to a Set Coded Font Local text control.

See "line2afp Command: Transforms S/370 Line Data and ASCII Data to AFP" on page 220 for more information about the **prmode=** parameter of the **line2afp** transform. Refer to *AFP Conversion and Indexing Facility: User's Guide* for information about ACIF user exits.

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for line-data documents.
- For the shift-in, shift-out process to work correctly, two coded fonts must be specified by the **chars** attribute or the page definition. The first must be a single-byte font and the second must be a double-byte font.

sides (AIX, BSD, PSF, 3170)

This **resettable, single-valued, per-document** attribute specifies the number of media sides on which this document prints.

Allowed Values

You can enter an integer value of **1** or **2**.

Default Value

AIX	1
BSD	No value; the printer device defaults the value
PSF	The value in the form definition
3170	No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **sides-supported**.
- InfoPrint uses this attribute in combination with the **plex** attribute. The results are:

sides Value	plex Value	Output
1	simplex	Simplex
2	simplex	Duplex
1	tumble	Not valid
2	tumble	Tumble duplex

- InfoPrint uses sides specifications in this order:
 1. **sides** document attribute, unless you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute. In that case, InfoPrint ignores the document **sides** attribute.
 2. For the 3170 DSS, the value in the file specified by the **rip-ini-file** actual destination attribute.
 3. The sides specification in the form definition
 4. **sides** actual destination attribute

start-on-new-sheet (PSF)

This **resettable, single-valued, per-document** indicates whether to start printing this document on a new sheet of paper.

Allowed Values

You can enter one of these fixed values:

Fixed Value	Input Synonym
true	yes
false	no

Default Value

true

Usage Guidelines

- When you print multiple-document jobs and do not want blank pages between the end of one document and the beginning of the next, set this attribute to **false**.
- The value you specify for this attribute overrides the value in the form definition, with one exception. If you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute, InfoPrint ignores the **start-on-new-sheet** attribute and uses the value in the form definition.

subject-text (Email, Fax)

This **resettable, single-valued, per-job** attribute specifies the subject text that appears on the cover sheet of fax jobs or the subject line of electronic mail jobs.

Allowed Values

You can enter a text string up to 4095 characters long that contains the subject.

Default Value

No default value.

table-reference-characters (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies whether the first character of each line in the document (or second character, if carriage control characters are used) is a table reference character. A table reference character selects a font character set named by the **chars** attribute or in the page definition used to print the job.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- This attribute is valid only for line-data documents.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **table-reference-characters-supported**.
- If the value of this attribute is **true** and the page definition does not identify fonts, you must specify fonts with the **chars** attribute.
- If the line data contains TRCs and you do not specify this attribute, your printed output will not be correct. InfoPrint interprets the TRCs as text characters instead of font identifiers.

title-text (PSF)

This **resettable, single-valued, per-job** attribute specifies title information that InfoPrint prints in the **TITLE:** field of an auxiliary sheet if the job uses the **full** auxiliary-sheet object.

Allowed Values

You can enter a text string of up to 4095 characters that contains the title information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 55 characters or less to ensure that there is enough room available on the printed page for all title information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

transfer-method (Document Only) (All DSS)

This **initially settable, single-valued, per-job** attribute identifies the method by which InfoPrint transfers the document to the print server.

Allowed Values

You can enter one of these fixed values:

pipe-pull
with-request

Default Value

pipe-pull

Usage Guidelines

InfoPrint validates jobs using this attribute against the server attribute **transfer-methods-supported**.

transform-message-file-name (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the file name where the transform that InfoPrint uses to process this document writes messages.

Allowed Values

You can enter a text string of up to 4095 characters that contains the file name.

Default Value

No default value. If you do not specify this attribute or if it has no value, the transform writes messages to **\$PDBASE/servername/error.log**.

Usage Guidelines

This attribute is valid only for line-data documents.

transform-output-file-name (PSF, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the file name of the output file produced by the InfoPrint transform that converts this document to the AFP data stream.

Allowed Values

You can enter a text string of up to 4095 characters that contains the file name.

Default Value

No default value unless the output format is **side-by-side-copies** or **booklet-print**. In that case, InfoPrint saves the transformed file in the directory specified by the **PDBASE** environment variable or in one of its subdirectories.

Usage Guidelines

- Use this attribute to save transformed files.
- Transform programs write output to a temporary file in the directory specified by the **PDBASE** environment variable or in one of its subdirectories. No single user can create a file larger than the amount of free space in the file system containing this directory. If many users are submitting print jobs that invoke transform programs, the directory may fill up and prevent all users from successfully running the transform programs.

type (Document Only) (All DSS)

See **document-type**.

user-id-text (PSF)

This **resettable**, **single-valued**, **per-job** attribute specifies user-identification information that InfoPrint prints at the top of the page and in the **USERID:** field of an auxiliary sheet.

Allowed Values

You can enter a text string of up to 4095 characters that contains the user-identification information.

Default Value

No default value.

Usage Guidelines

- While you can specify more characters, you should limit the value you supply to 10 characters or less to ensure that there is enough room available on the printed page for all user-identification information.
- If the text string you specify contains blank spaces, enclose the text string in single quotation marks.

x-image-shift (PSF, 3170, Email, Fax)

This **resettable**, **single-valued**, **per-document** attribute specifies the X offset, in millimeters, of the logical page origin to the right of the physical page origin.

Allowed Values

You can enter a numeric value from 0 to 2147483647.

The value you specify is in the form *nnnn.nnn*, which is a number that can optionally contain a decimal point. Millimeters is the unit of measure for the value you specify.

Default Value

No default value.

Usage Guidelines

- This attribute overrides any X-offset value in the form definition InfoPrint uses for the job, with one exception. If you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute, InfoPrint ignores the **x-image-shift** attribute and uses the X-offset value in the form definition.
- For the 3170 DSS, the **image-center-x** attribute overrides this attribute.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.
- InfoPrint validates and schedules jobs using this attribute against the **x-image-shift-range-supported** actual destination attribute.

x-image-shift-back (PSF)

This **resettable, single-valued, per-document** attribute specifies the X offset, in millimeters, of the logical page origin to the right of the physical page origin on the back side of a double-sided sheet.

Allowed Values

You can enter a numeric value from 0 to 2147483647.

The value you specify is in the form *nnnn.nnn*, which is a number that can optionally contain a decimal point. Millimeters is the unit of measure for the value you specify.

Default Value

No default value.

Usage Guidelines

- This attribute is not valid for ASCII documents.
- If you specify a value for the document **form-definition** attribute, InfoPrint ignores the **x-image-shift-back** attribute and uses the X-offset value in the form definition. This attribute overrides the X-offset value in any other form definition.
- InfoPrint validates and schedules jobs using this attribute against the **x-image-shift-range-supported** actual destination attribute.

y-image-shift (PSF, 3170, Email, Fax)

This **resettable, single-valued, per-document** attribute specifies the Y offset, in millimeters, of the logical page origin below the physical page origin.

Allowed Values

You can enter a numeric value from 0 to 2147483647.

The value you specify is in the form *nnnn.nnn*, which is a number that can optionally contain a decimal point. Millimeters is the unit of measure for the value you specify.

Default Value

No default value.

Usage Guidelines

- This attribute overrides any Y-offset value in the form definition InfoPrint uses for the job, with one exception. If you specify different values for this attribute for each document in a job, and also specify a value for the document **form-definition** attribute, InfoPrint ignores the **y-image-shift** attribute and uses the Y-offset value in the form definition.
- For the 3170 DSS, the **image-center-y** attribute overrides this attribute.
- For the 3170 DSS, if you do not specify a value for this attribute, InfoPrint uses the value in the file specified by the **rip-ini-file** actual destination attribute.
- InfoPrint validates and schedules jobs using this attribute against the **y-image-shift-range-supported** actual destination attribute.

y-image-shift-back (PSF)

This **resettable, single-valued, per-document** attribute specifies the Y offset, in millimeters, of the logical page origin below the physical page origin on the back side of a double-sided sheet.

Allowed Values

You can enter a numeric value from 0 to 2147483647.

The value you specify is in the form *nnnn.nnn*, which is a number that can optionally contain a decimal point. Millimeters is the unit of measure for the value you specify.

Default Value

No default value.

Usage Guidelines

- This attribute is not valid for ASCII documents.
- If you specify a value for the document **form-definition** attribute, InfoPrint ignores the **y-image-shift-back** attribute and uses the Y-offset value in the form definition. This attribute overrides the Y-offset value in any other form definition.
- InfoPrint validates and schedules jobs using this attribute against the **y-image-shift-range-supported** actual destination attribute.

Attributes for Jobs and Default Jobs

This section contains the attributes for default jobs and jobs.

Default Job

Use default jobs to set default values for job attributes.

Default jobs contain two types of attributes:

- Attributes that describe the default job itself
- Attributes that you can set as default values for job attributes

Job

A job is an InfoPrint object that represents a request to print or transmit one or more documents in a single session.

Attributes Not Displayed in the InfoPrint Administrator's GUI

While all job and default job attributes and attribute values are supported for both basic and advanced InfoPrint installations, neither InfoPrint administrator's GUI displays a complete set.

- The basic InfoPrint administrator's GUI displays only the attributes of greatest interest to InfoPrint administrators.
- The advanced InfoPrint administrator's GUI displays most attributes and attribute values, but omits a few that are used primarily in basic InfoPrint installations.

You can list the values of attributes not displayed in the InfoPrint administrator's GUI using the **pdls** command or the **pdq** command. You can set the values of initially settable and resettable attributes using the **pdcreate** command or the **pdpr** command. You can change the values of resettable attributes using the **pdmod** command or the **pdset** command.

Initially Settable Attribute Listing

You can set these attributes with the **pdpr** command when you submit the job.

destination-name-requested
initial-value-job
job-originator
job-owner
tape-exit
tape-format
tape-labeled
tape-max-block-size
tape-rewind-before
tape-rewind-unload

Note: There are no initially settable attributes for a default job.

Resettable Attribute Listing

You can set these attributes with the **pdpr** command when you submit a job or with the **pdcreate** command when you create a default job. You can modify them with the **pdset** command after InfoPrint has accepted the job or after you create the default job. You can also use the **pdmod** command to modify a job after InfoPrint accepts it.

actual-destinations-requested
auxiliary-sheet-selection
delete-segment-list
descriptor (default job only)
destination-locations-requested
destination-models-requested
dss-requested
estimated-processing-time (job only)
job-batch
job-comment
job-deadline-time (job only)
job-discard-time (job only)
job-end-message
job-finishing
job-hold
job-media-sheet-count (job only)
job-message-from-administrator (job only)
job-message-to-operator
job-name
job-page-count (job only)
job-print-after (job only)
job-priority
job-retain-until (job only)
job-retention-period
job-rip-action
job-start-message
job-start-wait
list-of-managers (default job only)
message (default job only)
notification-profile
optimize-for-multiple-copies
results-profile

actual-destinations-requested (All DSS)

This **resettable, multi-valued** attribute identifies a list of actual destinations, any one of which InfoPrint may use to process the job.

Input Synonym

You can use the synonym **physical-printers-requested**.

Allowed Values

You can enter a text string of up to 255 characters, per value, that contains the name of an actual destination.

Default Values

No default values.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **destination-name**.
- If you request more than one actual destination, the job will process on the first one that becomes available that can support the job.

associated-server (Default Job Only) (All DSS)

This **non-settable, single-valued** attribute indicates the name of the server in which this default job resides.

Allowed Values

InfoPrint sets this value to the *ServerName*: portion of the argument used with the **pdcreate** command when this default job is created.

Default Value

No default value.

auxiliary-sheet-selection (AIX, PSF)

This **resettable, single-valued** attribute identifies the combination of start, separator, and end sheets requested for this job. Whether InfoPrint prints the requested sheets depends on the physical printer.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Start</i>	<i>Separator</i>	<i>End</i>
end	No	No	Yes
none	No	No	No
sep	No	Yes	No
sep-end	No	Yes	Yes
start	Yes	No	No
start-end	Yes	No	Yes
start-sep	Yes	Yes	No
start-sep-end	Yes	Yes	Yes

Default Value

Default job	No default value
Job	start-sep-end

Usage Guidelines

InfoPrint validates and schedules jobs using this attribute against the destination attribute **auxiliary-sheet-selections-supported**.

comment (All DSS)

See **job-comment**.

completion-time (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the time when the job completed printing or transmitting.

Allowed Values

InfoPrint sets the value for this attribute in the local time format; USA is "*HH:MM:SS mm/dd/yy*".

Default Value

No default value.

Usage Guidelines

Provides status information.

current-job-state (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the current state of the job.

Input Synonym

You can use the synonym **job-state**.

Allowed Values

InfoPrint sets and updates this value as the job processes. The value set at a given time is one of these fixed values:

<i>Fixed Value</i>	<i>Reason</i>
cancelled	The job submitter or an operator cancelled the job. The job-state-reasons job attribute provides the reason.
held	The job is in a queue and InfoPrint cannot schedule it. Either the job-hold job attribute is set to true or the job is held for some other reason, such as resources not ready. The job-state-reasons job attribute provides the reason.
imposing	InfoPrint is arranging the job's pages so that they will print on the press sheets in the right order for final cutting, folding, and binding.
paused	The job was paused with the pdpause command.
pending	The job is in a queue and is waiting for InfoPrint to schedule and send it to an actual destination.
pre-processing	InfoPrint has created the job and is in the process of validating it.
printing	The job is printing on a PSF or 3170 physical printer. The printing state is not supported by the AIX, BSD, fax, or email DSS. Jobs printing on AIX or BSD physical printers, or

	transmitting on fax or email destinations, are in the processing state.
processing	InfoPrint has sent the job to an actual destination. The job is processing and printing on an AIX or BSD physical printer, processing and transmitting on a fax or email destination, or processing on a PSF or 3170 physical printer. Depending on the output device, this can indicate that InfoPrint has sent at least one document in the job to the output device.
retained	InfoPrint has retained the job in the server after it finished printing or transmitting or after it was cancelled. Either the value of the job-retention-period job attribute for the job is greater than zero, or the value of the job-retain-until job attribute for the job is a future time.
ripping	InfoPrint is converting the job to raster image patterns for printing. The ripping state is supported only by the PSF and 3170 DSS.
terminating	The job is terminating, either because it has finished processing or because it was aborted. The job-state-reasons job attribute provides the reason.
unknown	The server does not know the state of the job because it lost communication with the actual destination to which InfoPrint sent the job.

Default Value

No default value.

Usage Guidelines

Jobs are in the job state **cancelled**, **pre-processing**, and **terminating** for only a very short time. You may never see them as values for this attribute; however, you may see them as values for the **previous-job-state** job attribute.

current-page-printing (Job Only) (PSF, Email, Fax)

This **non-settable**, **single-valued** attribute reports the page number of the currently printing or transmitting page.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 through 2147483647.

Default Value

No default value.

Usage Guidelines

The differences between this attribute and **pages-completed** are:

- **current-page-printing** is the number of the page being printed or transmitted, while **pages-completed** is the number of pages placed in the stacker. For example, when page 12 of the first copy of a double-sided job is printing, the value of **current-page-printing** is 12 and the value of **pages-completed** is 10.
- **current-page-printing** is reset with every job copy, while **pages-completed** is cumulative within a job. For example, when page 6 of the second copy of a

10-page job is printing, the value of **current-page-printing** is 6. When the same page is stacked, the value of **pages-completed** is 16.

d-s-s-requested (All DSS)

See **dss-requested**.

deadline-in-jeopardy (Job Only) (PSF, Email, Fax)

This **non-settable, single-valued** attribute indicates whether the job is in danger of not completing before the time specified by the **job-deadline-time** attribute.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

Default Value

No default value.

Usage Guidelines

InfoPrint sets **deadline-in-jeopardy** to **true** under these conditions:

- If the queue attribute **assign-to-destination=true**, when the value of the **estimated-completion-time** attribute is later than the value of the **job-deadline-time** attribute.
- If the queue attribute **assign-to-destination=false**, when the current time is later than the value of the **job-deadline-time** attribute. InfoPrint cannot calculate a value for the **estimated-completion-time** attribute if **assign-to-destination=false**.

delete-segment-list (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates whether to delete the segment list file, where InfoPrint lists the segment files into which it breaks the job for processing, after the job is complete.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

descriptor (Default Job Only) (All DSS)

This **resettable, single-valued** attribute provides a description of this default job.

Allowed Values

You can enter a text string of up to 4095 characters that describes this default job.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description helps job submitters to determine if this default job is the one they want to use.

destination-initial-value-job (Job Only) (All DSS)

This **non-settable**, **single-valued** attribute identifies the default job associated with the logical destination to which you submitted the job and used to create the job.

Input Synonym

You can use the synonym **printer-initial-value-job**.

Allowed Values

InfoPrint sets this value to the name of the default job used.

Default Value

No default value.

destination-locations-requested (All DSS)

This **resettable**, **multi-valued** attribute identifies a list of destination locations. InfoPrint may use a destination at any of these locations to process the job.

Input Synonyms

You can use the synonym **printer-locations-requested** or **locations-requested**.

Allowed Values

You can enter a text string of up to 4095 characters, per value, that contains the actual location of each destination requested. InfoPrint will process the job on a destination at one of the locations if the validation is successful.

Default Values

No default values.

Usage Guidelines

- InfoPrint validates jobs using this attribute against the logical and actual destination attribute **destination-locations**.
- InfoPrint schedules the job against the actual destination attribute **destination-locations**.
- Any individual value specified for this attribute can select more than one actual destination. For example, the output devices could all be in the same location, such as a printer room.
- The values for both the job and destination attributes are text strings that can include blanks. They must match exactly for validation to occur.

destination-models-requested (All DSS)

This **resettable, multi-valued** attribute identifies a list of destination make and model IDs. InfoPrint may use any one of these destinations to process the job.

Input Synonyms

You can use the synonym **printer-models-requested** or **models-requested**.

Allowed Values

You can enter a text string of up to 4095 characters, per value, that identifies the destination model.

Default Values

No default values.

Usage Guidelines

- InfoPrint validates jobs using this attribute against the logical and actual destination attribute **destination-model**. Only one value must match for InfoPrint to validate the job.
- InfoPrint schedules the job against the actual destination attribute **destination-model**. Only one value must match for InfoPrint to schedule the job.
- This attribute is multi-valued whereas the destination attributes are single-valued.
- Any individual value specified for this attribute can select more than one actual destination.
- The value for this attribute and the values for the destination attributes for the BSD, PSF, 3170, email, and fax actual destinations are text strings that can include blanks. (The values for the AIX physical printer attribute never contain blanks.)
- The value for this attribute and the value for the destination attribute must match exactly for validation to occur.

destination-name-requested (Job Only) (All DSS)

This **initially settable, single-valued** attribute identifies the logical destination to which you submitted this job.

Input Synonyms

You can use the synonym **printer-name-requested**, **printer-requested**, or **logical-printer-requested**.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the logical destination.

Default Value

No default value.

Usage Guidelines

- If you do not specify a value for this attribute, InfoPrint uses the **-p** or **-d** value on the **pdpr** command, or the **PDPRINTER** environment variable of the job submitter.

To move the job to a different logical destination, use the **pdresubmit** command.

destinations-assigned (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the actual destination to which InfoPrint assigned the job for processing.

Allowed Values

InfoPrint sets this value to the name of the actual destination where it sent the job.

Input Synonym

You can use the synonym **printers-assigned**.

Default Values

No default value.

Usage Guidelines

If the value for this attribute is blank, the job is still waiting for InfoPrint to assign it to an actual destination.

destinations-used (Job Only) (All DSS)

This **non-settable, multi-valued** attribute identifies the actual destination that printed or transmitted this job.

Input Synonym

You can use the synonym **printers-used**.

Allowed Values

InfoPrint sets this value to the names of the actual destinations where it sent the job.

Default Values

No default value.

Usage Guidelines

Normally this value only contains one actual destination name. However, if InfoPrint restarted the job on another actual destination because the first actual destination failed for some reason, this value could contain more than one actual destination name.

device-support-system-requested (All DSS)

See **dss-requested**.

discard-time (Job Only) (All DSS)

See **job-discard-time**.

dss-requested (All DSS)

This **resettable, single-valued** attribute identifies the destination support system (DSS) requested for the job.

Input Synonyms

You can use the synonyms **device-support-system-requested** or **d-s-s-requested**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
aix	piobe
bsd	
psf	
3170	
email	
fax	

Default Value

No default value.

Usage Guidelines

- InfoPrint validates jobs using this attribute against the logical and actual destination attribute **device-support-system**.
- InfoPrint schedules the job against the actual destination attribute **device-support-system**.

end-message (All DSS)

See **job-end-message**.

estimated-completion-time (Job Only) (PSF, Email, Fax)

This **non-settable, single-valued** attribute indicates the time when InfoPrint expects the job to finish printing or transmitting.

Allowed Values

InfoPrint sets the value for this attribute in the local time format; USA is "*HH:MM:SS mm/dd/yy*".

Default Value

No default value.

Usage Guidelines

- InfoPrint uses the values it calculated for the **estimated-processing-time** attribute of this job and the jobs ahead of it in the queue to estimate the job's completion time.
- InfoPrint can calculate a value for this attribute only when the queue attribute **assign-to-destination** is set to **true**.

estimated-processing-time (Job Only) (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates how long the job should take to process.

Allowed Values

You can enter a value using *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

Usage Guidelines

- InfoPrint uses the values of the **total-job-octets** and **job-complexity** attributes to estimate the job's processing time. You can change this value.
- InfoPrint can calculate a value for this attribute only when the queue attribute **assign-to-destination** is set to **true**.

formatted-job-ticket-content (Job Only) (PSF, Email, Fax)

This **non-settable, single-valued** attribute contains the job ticket document for the job in human-readable format.

Input Synonyms

You can use the synonym **job-ticket-content** or **ticket-content**.

Allowed Values

InfoPrint sets the value of this attribute to the contents of the formatted job ticket document.

Default Value

No default value.

global-id (Job Only) (All DSS)

See **job-identifier**.

hold (All DSS)

See **job-hold**.

initial-value-job (Job Only) (All DSS)

This **initially settable, single-valued** attribute identifies the default job (within a given server) that InfoPrint uses to create this job.

Allowed Values

You can enter the name of an existing default job.

Default Value

No default value.

Usage Guidelines

If you specify a value for this attribute, the job uses the attributes and values from the specified object unless you override those with attribute values supplied at the command line.

initial-value-job-identifier (Default Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies this default job within the or server.

Allowed Values

InfoPrint sets this value to the *DefaultJobName* value of the **pdcreate** command argument *ServerName:DefaultName* when this default job is created.

Default Value

No default value.

Usage Guidelines

The value for this attribute must be unique within a server.

intervening-jobs (Job Only) (All DSS)

This **non-settable, single-valued** attribute indicates the number of jobs in the queue before this job.

Input Synonyms

You can use the synonym **position-in-queue** or **queue-position**.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 through 2147483647.

Default Value

No default value.

Usage Guidelines

- This attribute provides status information.
- A value of zero (0) means that the job is currently printing or transmitting.

job-batch (AIX, BSD, PSF, Email, Fax)

This **resettable, single-valued** attribute specifies that you have marked the job you are submitting as a specific type of job. InfoPrint processes this job only on an actual destination that is ready to print or transmit that specified job-batch type.

Allowed Values

You can enter a text string of up to 4095 characters that contains the job-batch name.

Default Value

No default value.

Usage Guidelines

InfoPrint schedules jobs using this attribute against the **job-batches-ready** actual destination attribute.

job-client-id (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the local job identifier number for the job.

Allowed Values

InfoPrint sets this value from 1 through the number specified as the value for the **PDIDTABLE** environment variable.

Default Value

No default value.

job-comment (All DSS)

This **resettable, single-valued** attribute provides information associated with this job.

Input Synonym

You can use the synonym **comment**.

Allowed Values

You can enter a text string of up to 4095 characters that contains information associated with this job.

Default Value

No default value.

job-complexity (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates the relative complexity of the job, based on the contents of the documents in the job. For example, a job with many graphics is more complex than a job that is mostly text.

Allowed Values

You can enter an integer from **1** to **9**.

Default Value

3

Usage Guidelines

- The default value, **3**, represents an average job. A job with complexity **1** is one-third as complex as the average job; a job with complexity **9** is three times as complex as average.
- InfoPrint uses this value and the size of the job to estimate the job processing time.
- InfoPrint uses this attribute only when the queue attribute **assign-to-destination** is set to **true**.

job-copies-completed (Job Only) (All DSS)

This **non-settable, single-valued** attribute indicates the total number of copies of the job that have finished printing or transmitting.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 through 2147483647 when:

AIX	Each job copy completes.
BSD	Each result-set completes.
PSF	Each result-set completes.
3170	Each result-set completes.
Email	Each result-set completes.
Fax	Each result-set completes.

Default Value

No default value.

job-deadline-time (Job Only) (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the time or time and calendar date by which you want to the job to complete.

Allowed Values

You can enter a value using the local time format. The USA format is *HH:MM:SS* or "*HH:MM:SS mm/dd/yy*". You must delimit the string with quotation marks if you specify a date. If you specify a time but no date, the date defaults to today.

Default Value

No default value.

job-discard-time (Job Only) (All DSS)

This **resettable, single-valued** attribute specifies the time or time and calendar date at which InfoPrint discards the job even if it is not complete.

Input Synonym

You can use the synonym **discard-time**.

Allowed Values

You can enter a value using the local time format. The USA format is *HH:MM:SS* or "*HH:MM:SS mm/dd/yy*". You must delimit the string with quotation marks if you specify a date. If you specify a time but no date, the date defaults to today.

Default Value

No default value.

job-end-message (All DSS)

This **resettable, single-valued** attribute provides a message conveying information about output handling when the job is complete.

Input Synonym

You can use the synonym **end-message**.

Allowed Values

You can enter a text string of up to 4095 characters that contains instructions to an operator, such as special output delivery instructions.

Default Value

No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **end-message-supported**.
- InfoPrint sends this message if the attribute **end-message-supported** value is **true** for the actual destination to which InfoPrint submitted the job.
- The destination attribute **notify-operator** identifies the operators that are to receive the message.

job-finishing (PSF)

This **resettable, multi-valued** attribute identifies the finishing options for this job.

Allowed Values

You can enter any of these fixed values:

edge-stitch
edge-stitch-2
edge-stitch-3
saddle-stitch
staple-bottom-left

staple-top-left**Default Values**

No default values

Usage Guidelines

- **edge-stitch-2**, **edge-stitch-3**, and **edge-stitch** all staple one edge of the job. The difference is the number of staples: 2, 3, or the finisher default.
- The placement of staples in relation to the data depends on the image orientation and the way the paper is loaded in the printer. Letter and A4 paper are normally loaded long edge first, but are loaded short edge first when rotated. Long media sheets, like legal paper, are always loaded short edge first.

Table 12. Staple Position

<i>Value</i>	<i>Long Edge First</i>		<i>Short Edge First</i>	
	<i>Portrait</i>	<i>Landscape</i>	<i>Portrait</i>	<i>Landscape</i>
edge-stitch				
edge-stitch-2	Left edge	Top edge	Top edge	Right edge
edge-stitch-3				
saddle-stitch	Not valid		Across center of sheet	
staple-bottom-left	Bottom left	Top left	Top left	Top right
staple-top-left	Top left	Top right	Top right	Bottom right

- **saddle-stitch** is valid only for the following medium sizes, all loaded short edge first:
 - A3**
 - A4** (rotated)
 - ledger**
 - legal**
 - letter** (rotated)
- When you specify a value for **job-finishing**, InfoPrint creates a form definition. Do not use the document attribute **form-definition** to specify another form definition.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **job-finishings-supported**.

job-hold (All DSS)

This **resettable**, **single-valued** attribute indicates whether InfoPrint can schedule the job for printing or transmission.

Input Synonym

You can use the synonym **hold**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

Default job	No default value.
Job	false

Usage Guidelines

- If **job-hold** is **true**, the **job-state** changes to **held** and InfoPrint sets the **job-state-reasons** to **job-hold-set**.
- A held job remains in the queue until:
 - **job-hold** is set to **false** and the job is printed or transmitted.
 - The time set in the **job-discard-time** attribute is reached and the job is discarded.
- When a job with **job-rip-action=rip-and-print-ignore-ready** is placed in the **held** state after RIPping because a required resource is not ready, the value of **job-hold** remains **false**. The job is automatically released when all required resources become ready.

job-identifier (Job Only) (All DSS)

This **non-settable**, **single-valued** attribute identifies the global job identifier. The global job ID uniquely identifies the job within the server.

Input Synonym

You can use the synonym **global-id**.

Allowed Values

InfoPrint sets this value.

Default Value

No default value.

job-log (Job Only) (All DSS)

This **non-settable**, **multi-valued** attribute contains messages that InfoPrint issues as this job is processed.

Allowed Values

InfoPrint sets the value of this attribute to the messages issued as the job is processed.

Default Values

No default value.

Usage Guidelines

InfoPrint creates this attribute when the value of the **delivery-method** component of the **notification-profile** attribute is **job-log**.

job-media-sheet-count (Job Only) (PSF, Email, Fax)

This **resettable, single-valued** attribute identifies the estimated total number of sheets used to print the job.

Input Synonym

You can use the synonym **media-sheet-count**.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

No default value.

job-message-from-administrator (Job Only) (All DSS)

This **resettable, single-valued** attribute describes the reasons that you are changing or have changed the job.

Input Synonym

You can use the synonym **message-from-administrator**.

Allowed Values

The administrator can enter a text string up to 4095 characters long that provides information concerning why a given action was taken. The administrator uses the **-m** flag or the command attribute **message** of certain InfoPrint commands. See "Usage Guidelines" for how you can set the value.

Default Value

No default value.

Usage Guidelines

Set this attribute by specifying a value with the **-m** flag or the **message** command attribute of these commands:

```
pdmod
pdpause
pdpromote
pdresume
pdrm
pdset
```

job-message-to-operator (All DSS)

This **resettable, single-valued** attribute provides a message that InfoPrint can send to an operator when it adds the job to the queue.

Input Synonym

You can use the synonym **message-to-operator**.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about job processing requirements, such as some type of special handling.

Default Value

No default value.

Usage Guidelines

The queue attribute **notify-operator** identifies the operator who receives the message.

job-name (All DSS)

This **resettable, single-valued** attribute provides a human-readable job identification.

Input Synonym

You can use the synonym **name**.

Allowed Values

You can enter a text string of up to 255 characters that contains the identification. The string can include any of the following characters:

- Uppercase alphabetic characters (A-Z)
- Lowercase alphabetic characters (a-z)
- Numeric characters (0-9)
- Underscore (_)
- Hyphen (-)
- Period (.)

Default Value

Default job	No default value.
Job	The file name of the first document in the job.

Usage Guidelines

- For PSF, this identification may print on the start sheet in the **JOB NAME** field.
- For BSD, InfoPrint maps this job attribute to the **qprt -T** option.

job-originator (Job Only) (All DSS)

This **initially settable, single-valued** attribute identifies the person who submitted the job or the program that initiated the job.

Input Synonym

You can use the synonym **originator**.

Allowed Values

You can enter a text string up to 255 characters long that contains the name, login ID, or login ID and node of the person submitting the job, or the name of the program initiating the job.

Default Value

username@node of the person submitting the job.

Usage Guidelines

You can use this attribute to identify yourself by name or to identify the program that initiated the job.

job-owner (Job Only) (All DSS)

This **initially settable, single-valued** attribute identifies the person responsible for the job by name or login ID.

Input Synonym

You can use the synonym **owner**.

Allowed Values

You can enter a text string of up to 255 characters. Normally the string contains the *username@node* of the person that is responsible for this job.

Default Value

The value of the job attribute **job-originator**.

Usage Guidelines

- You can use this attribute to specify a person other than yourself who is responsible for the job.
- For BSD, InfoPrint maps this attribute value to the **qprt -D** option.
- For PSF, this identification may print on the start sheet in the **USERID** field.

job-page-count (Job Only) (All DSS)

This **resettable, single-valued** attribute identifies the estimated total number of pages in the job.

Allowed Values

InfoPrint sets this numeric value to the total number of pages specified with the **page-count** document attribute for all documents in the job. You can enter an integer from 1 through 2147483647.

Default Value

The total of the values of the **page-count** attribute for all documents in the job.

Usage Guidelines

InfoPrint determines the size of a job based on the total number of octets (bytes) in the job. For operator job-management purposes, you may find that job size based on pages is easier.

Note: Because InfoPrint does not estimate document or job size in pages or use the page-count value you specify, the value for the **page-count** attribute should

closely represent the actual number of pages in the document if the operator is to make valid decisions based on page count.

job-priority (All DSS)

This **resettable, single-valued** attribute specifies a number representing the scheduling priority for the job. Queues that employ a priority-based scheduler use this attribute. A higher value specifies a higher priority.

Allowed Values

You can enter an integer from 1 to 100.

Default Value

Default job	No default value
Job	50

Usage Guidelines

If you use DCE:

- A job submitter cannot set this value higher than 50 unless the job submitter is an administrator. If the job submitter specifies a value greater than 50, InfoPrint sets the value to 50.
- An administrator can set the value to any valid value.

job-print-after (Job Only) (All DSS)

This **resettable, single-valued** attribute specifies the time or time and calendar date after which InfoPrint can schedule the job for printing or transmission.

Input Synonym

You can use the synonym **print-after**.

Allowed Values

You can enter a value using the local time format. The USA format is *HH:MM:SS* or "*HH:MM:SS mm/dd/yy*". You must delimit the string with quotation marks if you specify a date. If you specify a time but no date, the date defaults to today.

Default Value

No default value.

Usage Guidelines

- If you submit the job before the specified time, InfoPrint sets the **job-state** to **held** and the **job-state-reasons** attribute value for the job is **job-print-after-specified**.
- If you submit the job after the specified time, the job is printed or transmitted as soon as possible.

job-retain-until (Job Only) (PSF, Email, Fax)

This **resettable, single-valued** attribute specifies the time or time and calendar date until which InfoPrint retains the completed job before the server discards it.

Allowed Values

You can enter a value using the local time format. The USA format is *HH:MM:SS* or "*HH:MM:SS mm/dd/yy*". You must delimit the string with quotation marks if you specify a date. If you specify a time but no date, the date defaults to today.

Default Value

No default value.

Usage Guidelines

You can specify a value for either **job-retain-until** or **job-retention-period**, but not both.

job-retention-period (All DSS)

This **resettable, single-valued** attribute specifies the period of time that InfoPrint retains the job before the server discards it, whether it has completed or not.

Input Synonym

You can use the synonym **retention-period**.

Allowed Values

You can enter a value using [*HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

Usage Guidelines

- You can specify a value for either **job-retain-until** or **job-retention-period**, but not both.
- The retention period starts when the job enters the **retained** state.

job-rip-action (PSF, Email, Fax)

This **resettable, single-valued** attribute indicates that InfoPrint should convert the job to raster image patterns and whether to hold the RIPPed job, print or transmit it, or neither.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
rip-and-hold, rip-and-hold-ignore-ready	InfoPrint RIPS the job and returns it to the scheduler in the held state. The value of the job-state-reasons attribute is rip-and-hold-completed .
rip-and-print	If all required resources are ready on an actual destination, InfoPrint RIPS and prints the job. Otherwise, InfoPrint returns the job to the scheduler in the held state, without RIPPING it. The value of the job-state-reasons attribute is required-resource-not-ready .

rip-and-print-ignore-ready

If all required resources are ready, InfoPrint RIPs and prints the job. Otherwise, InfoPrint RIPs the job and returns it to the scheduler in the **held** state. The value of the **job-state-reasons** attribute is **rip-completed**. When the required resources become ready, InfoPrint automatically releases the job to print.

rip-only, rip-only-ignore-ready

InfoPrint RIPs the job and discards or retains it according to the values of the **job-retain-until** and **job-retention-period** attributes. For a retained job, the value of the **job-state-reasons** attribute is **processing-completed**.

Default Value

No default value.

Usage Guidelines

- Use the **rip-only** and **rip-only-ignore-ready** values to test for RIPping errors.
- The **rip-and-hold** and **rip-and-hold-ignore-ready** values override a value of **false** for the server **save-rip-files** attribute.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **job-rip-actions-supported**.

job-size (Job Only) (All DSS)

See **total-job-octets**.

job-start-message (All DSS)

This **resettable, single-valued** attribute provides a message that InfoPrint can send to an operator when the job starts printing or transmitting. This message can alert the operator to something special about the job, for example, that the job contains confidential information.

Input Synonym

You can use the synonym **start-message**.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about the job such as:

"This job is very important; call me if there is a problem."

Default Value

No default value.

Usage Guidelines

- InfoPrint validates and schedules jobs using this attribute against the destination attribute **start-message-supported**.
- InfoPrint sends a message if the actual destination attribute **start-message-supported** value is **true** for the actual destination to which InfoPrint submitted the job.

- The destination attribute **notify-operator** contains the identity of the operators that are to receive the message.
- Sending the start message does not stop the job; normally the job is printed or transmitted without operator intervention.
- Sending a start message is particularly useful for AIX printer devices that have manual forms feed capabilities. The user can send a message alerting the operator to load a special type of paper before starting the job.

job-start-wait (AIX, BSD, PSF, Email, Fax)

This **resettable, single-valued** attribute pauses the actual destination just before the job is printed or transmitted.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

- Use this attribute with the **job-start-message** attribute for jobs that require operator intervention, for example, loading special forms in the printer device. If the value of **job-start-wait** is true, when the job is about to be printed or transmitted, InfoPrint pauses the actual destination and the person specified by the actual destination **notify-operator** attribute receives the message specified by the **job-start-message** attribute. When the operator resumes the actual destination, the job is printed or transmitted.
- InfoPrint validates and schedules jobs using this attribute against the destination attribute **job-start-wait-supported**.

job-state (Job Only) (All DSS)

See **current-job-state**.

job-state-reasons (Job Only) (All DSS)

This **non-settable, multi-valued** attribute identifies the reasons that a job is in the **held**, **terminating**, or **retained** state. If this attribute value is blank, the job is not in one of these states.

Input Synonyms

You can use the synonym **state-reasons** or **reasons**.

Allowed Values

InfoPrint sets this value to any of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
aborted-by-system	The server aborted the job.

cancelled-by-operator	An operator or system administrator cancelled the job.
cancelled-by-user	The person who submitted the job cancelled the job.
completed-with-errors	The job completed with errors.
completed-with-warnings	The job completed with warnings.
completed-successfully	The job completed without any errors or warnings that InfoPrint could detect. This does not guarantee that there were no errors of any kind. For example, InfoPrint does not detect an error if you specify a nonexistent form definition.
deadline-in-jeopardy	The value of the estimated-completion-time attribute for the job is later than the time specified by the job-deadline-time attribute; or the time specified by the job-deadline-time attribute is past.
imposition-failed	<p>InfoPrint could not arrange the pages in the job on the press sheet.</p> <p>Note: You will see this reason only if the job is retained or if the value of the requeue-failed-jobs queue attribute is true. When neither of these conditions is true, jobs that fail to impose are discarded.</p>
job-hold-set	The job is in a queue and the job-hold job attribute of the job has a true value.
job-print-after-specified	The job is in a queue and the time specified by the job-print-after job attribute has not yet occurred.
processing-completed	<p>The raster image processor (RIP) has successfully converted the job. The job has not been scheduled because the value of the job-rip-action attribute is rip-only or is rip-only-ignore-ready.</p> <p>Note: You will see this reason only if the job is retained. Unretained jobs with these job-rip-action values are discarded after RIPping.</p>
required-resource-not-ready	The job is in a queue but InfoPrint cannot schedule it because one or more of the resources required by the job (such as media, fonts, and so on) are not ready on any of the actual destinations that can accept the job.
required-resource-not-supported	The job is in a queue but InfoPrint cannot schedule it because none of the actual destinations that can accept the job support one or more of the resources required by the job (such as media, fonts, and so on).

rip-and-hold-completed	The RIP has successfully converted the job. The job has not been scheduled because the value of the job-rip-action attribute is rip-and-hold or is rip-and-hold-ignore-ready .
rip-completed	A job with job-rip-action=rip-and-print-ignore-ready has been RIPped, but InfoPrint cannot schedule it because one or more of the resources required by the job are not ready on any of the actual destinations that can accept the job. Jobs held for this reason are released automatically when the required resources become ready.
rip-failed	The RIP failed to convert the job. Note: You will see this reason only if the job is retained or if the value of the requeue-failed-jobs queue attribute is true . When neither of these conditions is true, jobs that fail to rip are discarded.

Default Values

No default values.

job-submission-complete (Job Only) (All DSS)

This **non-settable, single-valued** attribute indicates whether the server has received all documents of the job.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

Default Value

No default value.

job-ticket-content (Job Only) (PSF, Email, Fax)

See **formatted-job-ticket-content**.

last-accessor (Job Only) (All DSS)

See **name-of-last-accessor**.

last-modifier (Job Only) (All DSS)

See **name-of-last-accessor**.

list-of-managers (Default Job Only) (All DSS)

This **resettable, multi-valued** attribute identifies the persons responsible for the maintenance of this default job.

Input Synonym

You can use the synonym **managers**.

Allowed Values

You can enter a text string up to 255 characters long, per value, that contains the name or user ID of the person responsible for this default job.

Default Values

No default values.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

locations-requested (All DSS)

See **destination-locations-requested**.

logical-destinations-ready (Default Job Only) (All DSS)

This **non-settable, multi-valued** attribute lists the enabled logical destinations that reference this default job.

Allowed Values

InfoPrint sets or deletes a text string containing the global ID of any logical destination that references this default job when the logical destination is enabled or disabled.

Input Synonym

You can use the synonym **logical-printers-ready**.

Default Values

No default values.

Usage Guidelines

- InfoPrint adds a value when a logical destination that references this default job through its **destination-initial-value-job** attribute is enabled.
- InfoPrint removes a value when a logical destination that references this default job is disabled.
- You cannot delete this default job until InfoPrint has removed all logical destinations from this list.

logical-printer-requested (All DSS)

See **destination-name-requested**.

logical-printers-ready (Default Job Only) (All DSS)

See **logical-destinations-ready**.

managers (Default Job Only) (All DSS)

See [list-of-managers](#).

media-sheet-count (Job Only) (PSF, Email, Fax)

See [job-media-sheet-count](#).

media-sheets-completed (Job Only) (PSF, Email, Fax)

This **non-settable, single-valued** attribute reports the number of sheets that have been used to print this job.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 through 2147483647 at the completion of each result-set.

Default Value

No default value.

Usage Guidelines

How this value relates to the value of **pages-completed** depends on the values of the **output-format**, **number-up**, and **sides** document attributes.

- For a single-sided, 1-up job, **pages-completed** is equal to **media-sheets-completed**.
- For a single-sided, slit-and-merge (2-up) job, **pages-completed** is twice as large as **media-sheets-completed**.
- For a double-sided, 3-up job, **pages-completed** is six times as large as **media-sheets-completed**.

message (Default Job Only) (All DSS)

This **resettable, single-valued** attribute provides a message associated with the default job.

Allowed Values

You can enter a text string of up to 4095 characters that provides information about this object.

Default Value

No default value.

message-from-administrator (Job Only) (All DSS)

See [job-message-from-administrator](#).

message-to-operator (All DSS)

See [job-message-to-operator](#).

models-requested (All DSS)

See `destination-models-requested`.

modification-time (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the time when the last modification to this job occurred.

Allowed Values

InfoPrint sets this value in the local time format; for example, "*HH:MM:SS mm/dd/yy*" in the USA.

Default Value

No default value.

name (All DSS)

See `job-name`.

name-of-last-accessor (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the person or program that submitted the job, or most recently modified the job.

Input Synonyms

You can use the synonym `last-accessor` or `last-modifier`.

Allowed Values

InfoPrint sets this value to the login ID of the person or the name of the program that submitted or most recently modified the job.

new-job-identifier (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the global job identifier for a job resubmitted to a logical destination on a different server than where you first submitted the job.

Allowed Values

InfoPrint sets this value to the correct values for `ServerName:JobIdentifier`

Default Value

No default value.

Usage Guidelines

If you resubmit the job to a logical destination on the same server, the job identifier remains the same.

notification-profile (All DSS)

This **resettable, multi-valued complex** attribute designates the people that InfoPrint notifies when specified events relating to this job occur and how InfoPrint notifies the people.

Allowed Values

This complex attribute has the following components for each value:

event-identifiers
delivery-address
delivery-method
event-comment
locale

Syntax

```
-x "notification-profile={event-identifiers.=event ...
  delivery-address=name@node delivery-method=value
  event-comment='some text' locale=locale}"
```

For example,

```
-x "notification-profile={event-identifiers=class-state-changed
  job-completed delivery-address=joe@newhope delivery-method=message
  event-comment='job progressing' locale=En_US.IBM-850}"
```

Usage Guidelines

A default job can have a notification profile that only has one or two components set. When you request this default job for a job, InfoPrint fills the remaining components with default values for that job.

Components and Values

There are five components for this attribute.

event-identifiers: This **multi-valued** component specifies the events for which the addressee receives notification that something has taken place. The values can be any of the job events or classes of job events listed for the server. See the **events-supported** attribute for the server for more information.

- For default jobs, this component has no default values.
- For jobs, the default values are:

document-aborted-by-destination
document-aborted-by-server
document-cancelled-at-destination
job-aborted-by-server
job-cancelled-by-operator
job-cannot-be-scheduled
job-completed
past-discard-time
destination-needs-attention
destination-needs-operator
destinations-not-ready-for-job

delivery-address: This **single-valued** component specifies the address of the person that receives the event messages or the directory and file name where InfoPrint sends the message. You can enter a text string that contains the name and node of the person that receives the information or the path to the file.

- For default jobs, this component has no default value.
- For jobs, the default value is the login ID of the person who submitted the job.

delivery-method: This **single-valued** component specifies if or how the user receives the information. You can enter one of these fixed values:

Fixed Value	Input Synonym
electronic-mail	e-mail, email
file	
file-add-to	
job-log	
message	
sapcb	
none	

The default value is **message** for both jobs and default jobs.

If you specify a value of **file** or **file-add-to**, you must specify a value for the **delivery-address** component.

If you specify a value of **job-log**, you cannot specify a value for the **delivery-address** component.

The **sapcb** notification method causes the SAP callback daemon to return messages about job events to the SAP database. The SAP print command sets this value; you should never have to specify it,

event-comment: This **single-valued, optional** component provides information that InfoPrint appends to the event message. You can enter a text string of up to 4095 characters that supplies additional information. There is no default value for this component for either jobs or default jobs.

locale: This **single-valued** component defines the language and coded character set of notification messages. You can enter a text string that contains the locale identification.

- For default jobs, this component has no default value.
- For jobs, the default value is the locale of the user who submitted the job.

Note: The InfoPrint messages in the language corresponding to the locale must be installed.

number-of-documents (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the number of documents in the job, including resource documents such as fonts.

Allowed Values

InfoPrint sets this value to an integer from 1 through 2147483647.

Default Value

No default value.

object-class (All DSS)

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **job** for a job or to **initial-value-job** for a default job.

Default Value

Job	job
Default job	initial-value-job

octets-completed (Job Only) (All DSS)

This **non-settable, single-valued** attribute reports the number of octets (bytes) in this job that have been printed or transmitted.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 to 9223372036854775800 when:

AIX	You query the job or after each document copy completes.
BSD	Each result-set completes.
PSF	Each result-set completes.
3170	Each result-set completes.
Email	Each result-set completes.
Fax	Each result-set completes.

Default Value

No default value.

optimize-for-multiple-copies (PSF)

This **resettable, single-valued** attribute is used with the **optimize-for-multiple-copies** actual destination attribute to indicate whether the destination should save pages in order to print multiple copies of the job faster.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value.

Usage Guidelines

- This attribute is used in combination with the **optimize-for-multiple-copies** actual destination attribute:

<i>Job Attribute</i>	<i>Destination Attribute</i>	<i>Results</i>
true	true	Pages are saved
true	false	Pages are not saved
false	true	Pages are not saved
false	false	Pages are not saved
No value	true	Pages are saved
No value	false	Pages are not saved

- If the actual destination cannot save pages, the job is printed and this attribute is ignored.

originator (Job Only) (All DSS)

See **job-originator**.

owner (Job Only) (All DSS)

See **job-owner**.

pages-completed (Job Only) (AIX, PSF)

This **non-settable, single-valued** attribute reports the number of pages in this job that have been printed and stacked.

Allowed Values

InfoPrint sets and updates this value to an integer from 0 through 2147483647 when:

- AIX You query the job or after each document copy completes.
- PSF The number of pages specified by the actual destination attribute **ack-interval** have printed and at the completion of each result-set.

Default Value

No default value.

Usage Guidelines

The differences between this attribute and **current-page-printing** are:

- **current-page-printing** is the number of the page being printed or transmitted, while **pages-completed** is the number of pages placed in the stacker. For example, when page 12 of the first copy of a double-sided job is printing, the value of **current-page-printing** is 12 and the value of **pages-completed** is 10.
- **current-page-printing** is reset with every job copy, while **pages-completed** is cumulative within a job. For example, when page 6 of the second copy of a 10-page job is printing, the value of **current-page-printing** is 6. When the same page is stacked, the value of **pages-completed** is 16.

physical-printers-requested (All DSS)

See **actual-destinations-requested**.

position-in-queue (Job Only) (All DSS)

See `intervening-jobs`.

previous-job-state (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the state of the job before the last job-state change.

Input Synonym

You can use the synonym `previous-state`.

Allowed Values

InfoPrint sets and updates this value to one of these fixed values:

- `cancelled`
- `held`
- `imposing`
- `paused`
- `pending`
- `pre-processing`
- `printing`
- `processing`
- `retained`
- `ripping`
- `terminating`
- `unknown`

See the `current-job-state` attribute for a description of these values.

Default Value

No default value.

previous-state (Job Only) (All DSS)

See `previous-job-state`.

print-after (Job Only) (All DSS)

See `job-print-after`.

printer-initial-value-job (Job Only) (All DSS)

See `destination-initial-value-job`.

printer-locations-requested (All DSS)

See `destination-locations-requested`.

printer-models-requested (All DSS)

See `destination-models-requested`.

printer-name-requested (All DSS)

See `destination-name-requested`.

printer-requested (All DSS)

See `destination-name-requested`.

printers-assigned (Job Only) (All DSS)

See `destinations-assigned`.

printers-used (Job Only) (All DSS)

See `destinations-used`.

processing-time (Job Only) (All DSS)

This **non-settable**, **single-valued** attribute reports the amount of time that the job has been printing or transmitting on the output device. If processing has completed, this value is the total amount of time needed to process the job.

Allowed Values

InfoPrint sets and updates this value using `[HH:]MM`. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

Usage Guidelines

InfoPrint updates this attribute when a user queries the job with the `pdls` command. InfoPrint calculates the value by comparing the value of the **started-printing-time** job-attribute value with the current time.

queue-assigned (Job Only) (All DSS)

This **non-settable**, **single-valued** attribute identifies the queue to which InfoPrint assigned the job.

Allowed Values

InfoPrint sets this value to the name of the queue assigned.

Default Value

No default value.

Usage Guidelines

If this attribute is blank, the job does not currently reside in a queue (it may be in the **retained** state).

queue-position (Job Only) (All DSS)

See `intervening-jobs`.

reasons (Job Only) (All DSS)

See `job-state-reasons`.

required-resources-not-ready (Job Only) (All DSS)

This **non-settable, multi-valued** attribute lists attribute values that this job requires, but that are not ready on the actual destination to which this job is assigned, or if the job is not assigned, on the most suitable actual destination.

Allowed Values

InfoPrint sets this attribute to the names of the resources that are not ready.

Default Value

No default value.

Usage Guidelines

- When the value of the actual destination attribute **force-destination-setup** is **true**, InfoPrint can assign a job to an actual destination even if the required resources are not ready. When the job is about to be printed or transmitted, InfoPrint disables the actual destination and sends a message to the operator to make the destination ready. When the operator enables the destination, the job is processed.
- When the value of the actual destination attribute **force-destination-setup** is **false** for all suitable actual destinations, InfoPrint holds jobs that require resources that are not ready and sets **required-resources-not-ready** to a list of those resources.

required-resources-not-supported (Job Only) (All DSS)

This **non-settable, multi-valued** attribute lists attribute values that this job requires, but that are not supported by the actual destination to which this job is assigned, or if the job is not assigned, by the most suitable actual destination.

Allowed Values

InfoPrint sets this attribute to the names of the unsupported resources.

Default Value

No default value.

Usage Guidelines

- Jobs that require unsupported attribute values can be found in the queue under either of these conditions:
 - The value of the server attribute **accept-unsupported-jobs** is **true**.
 - Job, document, or actual destination attributes change after the job has been accepted.
- When the value of the actual destination attribute **force-destination-setup** is **true**, InfoPrint can assign a job to an actual destination even if the required resources are not supported. When the job is about to be printed or transmitted, InfoPrint disables the actual destination and sends a message to the operator to make the destination ready. When the operator enables the destination, the job is printed or transmitted.

- When the value of the actual destination attribute **force-destination-setup** is **false** for all suitable destinations, InfoPrint holds jobs that require resources that are not supported and sets **required-resources-not-ready** to a list of those resources.

results-profile (AIX, BSD, PSF)

This **resettable, multi-valued complex** attribute specifies the delivery method for the hardcopy output, and designates who receives output and the number of copies per recipient.

Allowed Values

This is a complex attribute which has the following components for each value:

delivery-address
delivery-method
job-copies
results-set-comment
output-bin

Syntax

```
-x "results-profile=name@node:method:number:'some text':bin"
```

For example:

```
-x "results-profile=nr6445@bld25:pickup:2:'Please read'"
```

Usage Guidelines

- The only component that the BSD DSS uses from this complex attribute is the *job-copies* component.

Components and Values

There are five components:

delivery-address: This **single-valued** component specifies the address of the person that receives the job output. You can enter a text string that contains the address.

AIX	Prints the first 42 characters of the address.
PSF	Prints the first 8 characters of the address.

delivery-method: This **single-valued** component specifies how the person receives the job output. You can only enter the fixed value of **pickup** for this component. The default value for this component is **pickup**.

job-copies: This **single-valued** component specifies how many copies of the job the person receives. You can enter an integer identifying the number of copies; a value of 0 is an error. If you do not enter an integer, InfoPrint sets a value of 1.

results-set-comment: This **single-valued** component supplies a text string that describes the results-set value. You can enter a text string of up to 4095 characters that provides information such as "Please staple this document" for the operator, or information such as "Please read before meeting tomorrow" for the person who receives the document. This information may print on start sheets. There is no default value for this component.

output-bin: The server does not support this component.

retention-period (All DSS)

See **job-retention-period**.

start-message (All DSS)

See **job-start-message**.

started-printing-time (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the time when InfoPrint sent the job to the output device.

Allowed Values

InfoPrint sets this value using the local time format. The USA format is "*HH:MM:SS mm/dd/yy*".

Default Value

No default value.

state-reasons (Job Only) (All DSS)

See **job-state-reasons**.

submission-time (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the time InfoPrint added the job to the queue.

Allowed Values

InfoPrint sets this value using the local time format. The USA format is "*HH:MM:SS mm/dd/yy*".

Default Value

No default value.

Usage Guidelines

The AIX DSS prints this information on the start sheet.

tape-exit (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute identifies the user exit program used for reading this job from tape.

Allowed Values

You can enter any valid program name.

Default Value

No default value.

Usage Guidelines

- You must use this attribute if the tape is not in a standard format, or if you do not specify the format for an unlabeled tape.
- The **pdl**s command does not display the value of this attribute.

tape-format (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute identifies the format of the tape from which InfoPrint reads this job.

Allowed Values

You can enter one of these fixed values:

f	IBM fixed-block format
v	IBM variable-block format
j	JES2 spool offload format
a	Auto-detect. For IBM standard labeled tapes, InfoPrint determines the tape format.
p	Passthrough format. Data is passed from the tape to the tape exit program for formatting.

Default Value

IBM standard labeled tapes	a
Nonstandard and unlabeled tapes	p

Usage Guidelines

The **pdl**s command does not display the value of this attribute.

tape-label (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute indicates whether the tape from which InfoPrint reads this job is an IBM standard labeled tape.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

The **pdl**s command does not display the value of this attribute.

tape-max-block-size (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute identifies the maximum block size of the tape from which InfoPrint reads this job.

Allowed Values

You can enter an integer from 1 to 10485760.

Default Value

32768

Usage Guidelines

The default value is acceptable for all IBM standard labeled tapes from MVS host systems. Use the **tdump** utility to determine the maximum block size for other tapes. See “tdump Utility: Outputs Tape Contents in Human-Readable Format” on page 169.

Usage Guidelines

The **pdlis** command does not display the value of this attribute.

tape-rewind-before (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute indicates whether to rewind the tape before reading this job.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

The **pdlis** command does not display the value of this attribute.

tape-rewind-unload (Job Only) (PSF, Email, Fax)

This **initially settable, single-valued** attribute indicates whether to rewind and unload the tape after reading this job.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

The **pdlis** command does not display the value of this attribute.

ticket-content (Job Only) (PSF, Email, Fax)

See `formatted-job-ticket-content`.

total-job-octets (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the size of the job, which is the sum of all printable octets (bytes) in the job.

Input Synonym

You can use the synonym `job-size`.

Allowed Values

InfoPrint sets this value to an integer from 0 to 9223372036854775800.

Default Value

No default value.

Usage Guidelines

- The server computes this value by totaling the size of all printable documents, using this algorithm:
 1. For each printable document in the job, multiply the value of `octet-count` by the value of `copy-count`.
 2. Total the values from Step 1.
 3. Multiply the total by the value of `job-copies`.
- InfoPrint validates jobs using this attribute against the logical destination attribute `job-size-range-supported`.
- InfoPrint schedules the job against the actual destination attribute `job-size-range-ready`.

user-locale (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the language of the information that appears on the start, separator, and end sheets printed with the job and the messages for the job.

Allowed Values

The locale of the job submitter.

Default Value

InfoPrint sets this value to the locale of the job submitter.

user-name (Job Only) (All DSS)

This **non-settable, single-valued** attribute identifies the login ID of the job submitter.

Allowed Values

InfoPrint sets this value to the login ID of the job submitter: *username@node*.

Default Value

No default value.

Attributes for Logs

InfoPrint automatically creates logs when a server initializes. These logs contain and keep track of such things as error messages and trace messages for the server and objects contained in the server. You cannot create or delete these logs, but you can enable or disable them. InfoPrint uses a configuration file to set the initial values of attributes for error and trace logs when servers start.

The following restrictions apply to log attributes:

- The **log-severity** attribute applies only to error logs.
- The **log-trace-groups** attribute applies only to trace logs.
- You cannot set the values for the following attributes with the **pdset** command for trace logs. You can specify values using configuration files that InfoPrint uses during server initialization.

log-address
log-size
log-wrap

Initially Settable Attribute Listing

You set this attribute based on the object type.

log-type

Resettable Attribute Listing

You can set these attributes with the **pdset** command after InfoPrint creates the log.

descriptor
log-address
log-severity
log-size (error logs only; non-settable for trace logs)
log-trace-groups
log-wrap

associated-server

This **non-settable**, **single-valued** attribute indicates the name of the server in which this log resides.

Allowed Values

InfoPrint sets this value to the name of the server when it creates the log.

Default Value

No default value.

descriptor

This **resettable**, **single-valued** attribute provides a description of this log.

Allowed Values

You can enter a text string of up to 4095 characters that describes this log.

Default Value

If you do not enter a value, InfoPrint sets the value to:

<i>Log Type</i>	<i>Value</i>
Error	'This is the standard error log.'
Trace	'This is the standard trace log.'

Usage Guidelines

The use of this attribute is optional. However, a detailed description of the way you set up this log is useful to someone who wants to obtain information from the log.

enabled

This **non-settable, single-valued** attribute indicates if the log is enabled. An enabled log writes messages to a log file.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

InfoPrint implicitly sets this value through the **pdenable** and **pddisable** commands.

Default Value

The default values are:

<i>Log Type</i>	<i>Value</i>
Error	true
Trace	false

log-address

This **non-settable, single-valued** attribute specifies the pathname where the log resides.

Allowed Values

InfoPrint sets this value to the pathname.

Default Value

The path defined by the **PDBASE** environment variable plus the ServerName (**\$PDBASE/ServerName**).

log-identifier

This **non-settable, single-valued** attribute uniquely identifies this log.

log

Allowed Values

InfoPrint sets this value to the name of the log.

Default Value

<i>Log Type</i>	<i>Value</i>
Error	default_error
Trace	default_trace

log-messages

This **non-settable, multi-valued** attribute contains error messages that InfoPrint can return to you on a query. Only error logs use this attribute.

Allowed Values

InfoPrint stores error log information as the value of this attribute.

Default Values

No default value.

Usage Guidelines

Use this attribute in conjunction with the **pdlis** command and its **message-count** attribute to query for error log information.

log-severity

This **resettable, single-valued** attribute identifies the severity level of the messages that InfoPrint logs in this error log. Only error logs use this attribute.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
error	This setting produces a minimum of logging. InfoPrint only logs error messages. The letter E precedes each message. An error referencing a job signals a condition that may prevent the job from completing successfully, depending on the setting of other parameters.
warning	InfoPrint logs both error and warning messages. The letter W precedes each warning message. A warning referencing a job signals a condition that will not prevent completion of the job, but may require some action on the part of the user or operator.
audit	This is the default log severity setting. InfoPrint logs error, warning, and audit messages. The letter A precedes each audit message.
debug	This setting logs error, warning, audit, and debug messages. Servers generate debug messages when they begin processing each command and when they communicate with other servers. Debug messages are useful for helping to track what command a server was processing when an error occurred. The letter D precedes each debug messages.
info	This setting logs error, warning, audit, debug, and informational messages. Servers generate informational messages when potentially abnormal situations occur, such as when a server is unable to deliver a notification message

to a user because the user is logged off. The letter I precedes each informational message.

Default Value

audit

Usage Guidelines

This attribute is only for error logs.

log-size

This attribute is **non-settable** for trace logs; it is **resettable** for error logs.

This **single-valued** attribute specifies how large, in kilobytes, a log file can get before the file wraps, or InfoPrint stops logging events. The attribute **log-wrap** determines whether a log file wraps or stops logging.

Allowed Values

For an error log, you can enter an integer from 1 through 2147483647 (value represents kilobytes)

Default Value

<i>Log Type</i>	<i>Value</i>
Error	1024
Trace	8192

Usage Guidelines

- The value specified in the configuration file, if one is specified, overrides the default value when InfoPrint creates the server.
- If you change the value for this attribute, InfoPrint renames the current log file from *errorlogname* to *errorlogname.BAK*, and creates a new log file.

log-trace-groups

This **resettable, multi-valued** attribute is only for trace logs and specifies the active trace groups for the selective tracing of InfoPrint component groups.

Allowed Values

You can enter a text string of up to 4095 characters that contains trace group IDs that InfoPrint traces. You should enter a value only at the request of an IBM Service Representative.

Default Value

???? -1 (All trace groups).

Usage Guidelines

This attribute is only for trace logs. You should use it only at the request of an IBM Service Representative.

log

log-type

This **non-settable, single-valued** attribute identifies the type of log.

Allowed Values

InfoPrint sets this value to one of these fixed values:

errorlog
tracelog

Default Value

No default value.

log-wrap

This **resettable, single-valued** attribute specifies whether the log file should wrap when it reaches the specified value in the **log-size** attribute.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

true

Usage Guidelines

The value specified in the configuration file overrides the default value when InfoPrint creates the server.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **log**.

Default Value

log

Attributes for Logical Destinations

InfoPrint uses logical destinations for job routing, defaulting, and job validation. Some logical destination attributes specify the values that the logical destination supports for the corresponding job and document attributes. Before accepting a job, InfoPrint verifies that the logical destination supports the values of these job and document attributes.

Notes:

1. If a logical destination attribute has no value, the logical destination supports all valid values for the corresponding job or document attribute.
2. If the value of the server attribute **accept-unsupported-jobs** is **false**, InfoPrint also verifies that at least one actual destination supports the job and document attribute values before accepting the job.
3. See Appendix C, “Job Validation and Scheduling” on page 623 for tables showing the attributes used for job validation.

Attributes Not Displayed in the InfoPrint Administrator's GUI

While all logical destination attributes and attribute values are supported for both basic and advanced InfoPrint installations, neither InfoPrint administrator's GUI displays a complete set.

- The basic InfoPrint administrator's GUI displays only the attributes of greatest interest to InfoPrint administrators.
- The advanced InfoPrint administrator's GUI displays most attributes and attribute values, but omits a few that are used primarily in basic InfoPrint installations.

You can list the values of attributes not displayed in the InfoPrint administrator's GUI using the **pdls** command. You can set the values of initially settable and resettable attributes using the **pdcreate** command. You can change the values of resettable attributes using the **pdset** command.

Initially Settable Attribute Listing

You can set this attribute with the **pdcreate** command when you create a logical destination.

destination-realization

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create a logical destination or modify them with the **pdset** command after you create the logical destination.

associated-queue
authorize-jobs
auxiliary-sheet-selections-supported
carriage-control-types-supported
character-mappings-supported
content-orientations-supported
convert-to-ebcdic-supported
data-fidelity-problem-reported-supported

Logical Destination

descriptor
destination-initial-value-document
destination-initial-value-job
destination-locations
destination-model
destination-support-system
document-formats-supported
document-types-supported
end-message-supported
image-out-formats-supported
input-trays-supported
job-size-range-supported
list-of-managers
maximum-copies-supported
media-supported
message
notification-profile
os2-driver-names
page-select-supported
plexes-supported
print-qualities-supported
protected-attributes
sides-supported
start-message-supported
table-reference-characters-supported
windows-driver-names
windows-nt-driver-names
x-image-shift-range-supported
y-image-shift-range-supported

associated-queue

This **resettable**, **single-valued** attribute identifies the queue associated with this destination. Whenever InfoPrint accepts a job submitted to this logical destination, it sends the job to the queue specified by this attribute.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the queue.

Default Value

No default value.

associated-server

This **non-settable**, **single-valued** attribute indicates the name of the server in which this logical destination resides.

Allowed Values

InfoPrint sets this value to the *DestinationName* portion of the argument when this logical destination was created.

Default Value

No default value.

authorize-jobs

This **resettable, single-valued** attribute indicates whether the person submitting the job requires DCE authorization to submit a job to this logical destination.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

When the server security level is **medium**, the following rules apply when the value for this attribute is:

- true** InfoPrint uses the login ID of the job submitter to check if the person has **read** authority for this destination. If the person does have **read** authority, InfoPrint authorizes the job.
- false** InfoPrint automatically authorizes the job.

auxiliary-sheet-selections-supported

This **resettable, multi-valued** attribute identifies the combination of start, separator, and end sheets that this logical logical destination supports for jobs.

Allowed Values

You can enter any of these fixed values:

end
none
sep
sep-end
start
start-end
start-sep
start-sep-end

Default Values

No default values (all valid values supported).

Usage Guidelines

- If you do not specify a value, the corresponding actual destination attribute controls which auxiliary sheets a user can request. The default values for the actual destination attribute are all of the supported values.
- InfoPrint compares the job attribute **auxiliary-sheet-selection** to this attribute for validation.
- You can use this attribute to restrict use of this logical destination.

carriage-control-types-supported

This **resettable, multi-valued** attribute identifies the types of carriage controls that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

ansi-ascii
ansi-ebcdic
machine
none

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **carriage-control-type** to this attribute for job validation.
- You can use this attribute to restrict use of this logical destination.

character-mappings-supported

This **resettable, multi-valued** attribute identifies the character mappings (code pages) that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

ibm-437
ibm-850
ibm-860
ibm-863
ibm-865
ibm-932
ibm-938
ibm-euccn
ibm-eucjp
ibm-euckr
IBM-euctw

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **default-character-mappings** to this attribute for job validation.
- You can use this attribute to restrict use of this logical destination.

content-orientations-supported

This **resettable, multi-valued** attribute identifies the page presentations that this logical destination supports.

Input Synonym

You can use the synonym **orientations-supported**.

Allowed Values

You can enter any of these fixed values:

landscape
portrait
reverse-portrait
reverse-landscape

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **content-orientation** to this attribute for job validation.
- If you do not specify a value for this attribute, the corresponding actual destination attribute controls orientations. The default for the actual destination attribute is **portrait**.
- InfoPrint supplies attribute files that specify the values that a particular destination model supports.
- You can use this attribute to restrict use of this logical destination.

convert-to-ebcdic-supported

This **resettable, single-valued** attribute indicates whether this logical destination supports converting document data from ASCII to EBCDIC.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value (all valid values supported).

Usage Guidelines

- Use this attribute to request conversion for line-data jobs sent to a PSF physical printer.
- If you do not specify a value for this attribute, the corresponding actual destination attribute controls conversion. The default value for the actual destination attribute is **true**.

Note: The corresponding document attribute, **convert-to-ebcdic**, defaults to no value. Users specify **true** only if they want to convert the content of the document from ASCII to EBCDIC. Validation only fails if the user sets

Logical Destination

convert-to-ebcdic to **true** and either this logical destination value or the actual destination attribute value is **false**.

- InfoPrint compares the document attribute **convert-to-ebcdic** to this attribute for job validation.
- You can use this attribute to restrict use of this logical destination.

data-fidelity-problem-reported-supported

This **resettable, multi-valued** attribute indicates which type of data fidelity errors this logical destination can report.

Allowed Values

You can enter any of these fixed values:

all
character
none
position

Default Values

No default values (all valid values supported).

Usage Guidelines

- Use this attribute to specify whether InfoPrint issues error messages for print-positioning and invalid-character errors that occur for channel-attached and TCP/IP-attached printer devices.

Print positioning errors occur when the print position for the data is beyond the valid printable areas as defined by the intersection of the physical and logical pages. (A logical page identifies the printing boundaries of a physical page.)

Invalid-character errors occur when the code point does not map to a character in a font.

- InfoPrint compares the document attribute **data-fidelity-problem-reported** to this attribute for validation.
- You can use this attribute to restrict use of this logical destination.

descriptor

This **resettable, single-valued** attribute provides a textual description of this logical destination.

Allowed Values

You can enter a text string of up to 4095 characters that contains a description of this logical destination. You may want to include such information as:

- The name of the department or the account number of the users who use this logical destination.
- Usage information, such as whether the logical destination provides default values for jobs or restricts use of actual destination capabilities.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description is useful if you have several logical destinations or have set up restriction for this logical destination.

destination-associated-destinations

This **non-settable, multi-valued** attribute identifies the actual destinations that receive jobs from the queue associated with this logical destination.

Input Synonym

You can use the synonym **printer-associated-printers**.

Allowed Values

InfoPrint sets this value, and the queue attribute **actual-destinations-assigned** of the queue associated with this logical destination, when the actual destination registers.

Default Values

No default value.

destination-initial-value-document

This **resettable, single-valued** attribute associates a default document with this logical destination.

Input Synonym

You can use the synonym **printer-initial-value-document**.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the default document.

Default Value

No default value.

Usage Guidelines

The default document supplies values for attributes for documents submitted to this logical destination. These values override server defaults but are overridden by document attribute values specified on the command line.

destination-initial-value-job

This **resettable, single-valued** attribute associates a default job with this logical destination.

Logical Destination

Input Synonym

You can use the synonym **printer-initial-value-job**.

Allowed Values

You can enter a text string of up to 255 characters that contains the name of the default job.

Default Value

No default value.

Usage Guidelines

The associated default job supplies values for attributes of jobs submitted to this logical destination. These values override server defaults but are overridden by job attribute values specified on the command line.

destination-locations

This **resettable, multi-valued** attribute identifies the locations of output devices, or the areas they service, that this logical destination allows for jobs.

Input Synonyms

You can use the synonym **printer-locations** or **locations**.

Allowed Values

You can enter a text string of up to 4095 characters, per value, that contains the locations of the output devices associated with this logical destination.

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the job attribute **destination-locations-requested** to this attribute for validation.
- You can use this attribute to restrict use of this logical destination.
- You can query this attribute to find where destinations are located.

destination-model

This **resettable, single-valued** attribute identifies the make and model ID of an output device that can accept jobs submitted through this logical destination.

Input Synonyms

You can use the synonym **printer-model** or **model**.

Allowed Values

You can enter a text string of up to 4095 characters, per value, that contains the make and model of an output device.

Default Value

No default value (all valid values supported).

Usage Guidelines

- If this logical destination is associated with an AIX physical printer or a PSF direct-attached physical printer, any value you enter for this attribute must match the file name, without the extension, of the destination model definition file in the directory `/usr/lpd/pio/predef`. For example, if the file name is **ibm4029.asc**, the value, if any, of the **destination-model** attribute must be **ibm4029**.
- InfoPrint compares the job attribute **destination-models-requested** to this attribute for validation.

destination-name

This **non-settable, single-valued** attribute identifies this logical destination.

Input Synonyms

You can use the synonym **printer-name**, **printer**, or **logical-printer**.

Allowed Values

InfoPrint sets this value to the *DestinationName* portion of the argument specified by the **pdcreate** command used to create this logical destination.

Default Value

No default value.

Usage Guidelines

- The logical destination name must be unique within the namespace.
- InfoPrint compares the job attribute **actual-destination-requested** to this attribute for validation.

destination-realization

This **initially settable, single-valued** attribute indicates whether the destination is an actual destination or a logical destination.

Input Synonym

You can use the synonym **printer-realization**.

Allowed Values

You can enter one of these values:

actual
logical

Default Value

logical

destination-support-system

This **resettable, single-valued** attribute identifies the DSS (type of device driver) allowed for jobs submitted to this logical destination.

Input Synonym

You can use the synonym **device-support-system**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
aix	piobe
bsd	
psf	
3170	
email	
fax	

Default Value

No default value (all valid values supported).

Usage Guidelines

InfoPrint compares the job attribute **dss-requested** to this attribute for validation.

destinations-ready

This **non-settable, multi-valued** attribute identifies the actual destinations associated with this logical destination that are ready to process a job.

Input Synonym

You can use the synonym **printers-ready**.

Allowed Values

InfoPrint sets this value with the name of an actual destination when a registered actual destination is ready.

A ready actual destination is one that is enabled and whose state is **idle**, **connecting-to-printer**, or **printing**.

Default Values

No default value.

device-support-system

See **destination-support-system**.

document-formats-supported

This **resettable, multi-valued** attribute identifies the document formats that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
ascii	
dbcs-ascii	
ditroff	
d630	
gif	
hpgl	hp-gl
iso-6429	
jpeg	
line-data	
modca-p	afpds
passthru	
pcl	hppcl, hp-pcl
pdf	
postscript	ps
ppds	
sap	
sap-abap	
simple-text	text
tiff	

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **document-format** to this attribute for job validation.
- All documents in a job must have the same format.
- You can use this attribute to restrict use of this logical destination.

document-types-supported

This **resettable, multi-valued** attribute identifies the types of documents that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

cover-sheet
document-definition
email-body
email-signature
file-reference
font
form-definition
formatted-job-ticket
insert
job-ticket
overlay
page-definition
page-segment

Logical Destination

page-shift-file
printable
resource
variable-data

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **document-type** to this attribute for job validation.
- You can use this attribute to restrict use of this logical destination.

enabled

This **non-settable**, **single-valued** attribute indicates whether this logical destination is enabled and can accept jobs.

Allowed Values

InfoPrint sets and resets this value to one of these fixed values:

true
false

InfoPrint sets and resets this value based on the **pdenable** and **pddisable** commands.

Default Value

false

end-message-supported

This **resettable**, **single-valued** attribute indicates whether this logical destination supports the job attribute **job-end-message**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value (all valid values supported).

Usage Guidelines

- When you set this attribute value to **true**, operators can receive messages that users specify with the **job-end-message** job attribute when they submit the job. InfoPrint sends the message to the operators specified by the **notify-operator** attribute for this actual destination when the job finishes printing.
- InfoPrint compares the job attribute **job-end-message** to this attribute for validation.
- You can use this attribute to restrict use of this logical destination.

image-out-formats-supported

This **resettable, multi-valued** attribute specifies the formats of the image data, produced by the program that converts line data to AFP data, that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

ioca-uncompressed
im1
io1
io1-g4
io1-mmr
asis

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **image-out-format** to this attribute for job validation. You should use the document attribute when you print line-data documents.
- The value **io1-g4** applies only to the destination. You cannot request this value with the document attribute **image-out-format**. If the document format is **postscript** and the value **io1-g4** for this attribute is:

Present The PostScript transform produces IO1-G4 images.

Not present

The PostScript transform produces IM1 images instead of IO1-G4 images, which the printer device associated with an actual destination that receives jobs from the queue associated with this logical destination cannot print.

input-trays-supported

This **resettable, multi-valued** attribute specifies the types of input trays that this logical destination supports.

Allowed Values

You can enter any of these fixed values:

auto-envelope-feed
bottom
continuous-form-feed
envelope
large-capacity
manual
manual-envelope-feed
middle
top
tray-1
tray-2

or any input tray name, for example:

Logical Destination

alternate
auto-envelope-feed
bottom
continuous-form-feed
envelope
insert
large-capacity
manual
manual-envelope-feed
middle
top

Default Values

No default values (all valid values supported).

Usage Guidelines

- You can use this attribute to restrict the use of this logical destination.
- If you do not specify a value for this attribute, the corresponding actual destination attribute determines which input trays the actual destination supports and users can request.
- InfoPrint compares the document attribute **default-input-trays** or **input-tray-select** to this attribute for job validation.

job-size-range-supported

This **resettable, single-valued complex** attribute defines the range of job sizes in bytes (octets) that this logical destination will accept.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each limit can be an integer from 0 to 9223372036854775800. The first integer is the lower limit and the second integer is the upper limit. The lower limit must be less than or equal to the upper limit. Separate the limits by a colon (:). The unit value is bytes (octets).

Syntax

lower-limit:upper-limit

For example:

0:1000000000

Usage Guidelines

- InfoPrint compares the job attribute **total-job-octets** to this attribute for validation.
- You can use this attribute to restrict the use of this logical destination.

Components and Values

This attribute has two components:

lower-limit: This **single-valued** component provides the lower limit of the job size range. You can enter the number of octets (bytes) that you want set as the lower limit, a value from 0 to 9223372036854775800. The first integer you enter identifies the lower limit and must be less than or equal to the second integer (the upper limit). If you only supply the lower limit, the upper limit defaults to 9223372036854775800. The default is to have no value for this component.

upper-limit: This **single-valued** component provides the upper limit of the job size range. You can enter the number of octets (bytes) that you want set as the upper limit, a value from 0 to 9223372036854775800. The second integer you enter identifies the upper limit and must be equal to or greater than the first integer (the lower limit). If you only supply the upper limit, the lower limit defaults to 0. The default is to have no value for this component.

Note: If you enter an integer with or without a following colon (*integer:*), it is considered the first integer. If you enter *:integer*, the integer is considered the second integer.

list-of-managers

This **resettable, multi-valued** attribute lists the people responsible for the configuration and operation of this logical destination.

Input Synonym

You can use the synonym **managers**.

Allowed Values

You can enter a text string up to 255 characters long, per value, that contains the name or user ID of the person responsible for this logical destination.

Default Values

No default value.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

locations

See **destination-locations**.

logical-printer

See **destination-name**.

managers

See **list-of-managers**.

maximum-copies-supported

This **resettable, single-valued** attribute indicates the number of document copies, in a single job, that this logical destination allows.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

No default value (all valid values supported).

Usage Guidelines

- You can use this attribute to restrict the use of this logical destination by limiting the number of document copies that a user can request for jobs submitted to this logical destination.
- If you do not specify a value for this attribute, the corresponding actual destination attribute controls the number of copies allowed.
- InfoPrint compares the document attribute **copy-count** to this attribute for job validation.

media-supported

This **resettable, multi-valued** attribute identifies the types of media that this logical destination supports.

Allowed Values

You can enter a text string up to 255 characters long that contains the names of the media. These can be:

- The medium identifiers of medium objects created by the **pdcrmed** utility. For these fixed values, see the medium **medium-identifier** attribute.
- The medium identifiers of medium objects you created yourself.
- Any names that describe the media, even if no medium objects with those names exist.

Default Values

No default values (all valid values supported).

Usage Guidelines

- You can restrict the use of this logical destination by limiting the type of media that a user can request for jobs submitted to actual destinations.
- If you do not specify a value for this attribute, the corresponding actual destination attribute determines which media the actual destination supports and users can request.
- InfoPrint compares the document attribute **default-medium** or **page-media-select** to this attribute for job validation.

message

This **resettable, single-valued** attribute provides information associated with this logical destination.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about this logical destination.

Default Value

No default value.

model

See **destination-model**.

notification-profile

This **resettable, multi-valued complex** attribute designates which persons InfoPrint notifies of specific events related to this logical destination, and how InfoPrint notifies them.

Allowed Values

This complex attribute has these components for each value:

- event-identifiers**
- delivery-address**
- delivery-method**
- event-comment**
- locale**

Syntax

```
-x "notification-profile={event-identifiers=event ...
  delivery-address=name@node delivery-method=value
  event-comment='some text' locale=locale}"
```

For example:

```
-x "notification-profile={event-identifiers=class-logical-destination-status
  delivery-address=jim@staff delivery-method=e-mail
  event-comment='everything ok' locale=En_US.IBM-850}"
```

Components and Values

This attribute has five components:

event-identifiers: This **multi-valued** component specifies the events for which InfoPrint issues notification messages. You can enter any of the values listed for the server **events-supported** attribute. The default events for this component are:

- object-deleted**
- object-cleaned**

delivery-address: This **single-valued** component identifies the address of the person who receives event messages or the directory and file name where InfoPrint stores messages. You can enter a name and node or a path and file name. The default for this component is the login ID of the user who created this logical destination.

Logical Destination

delivery-method: This **single-valued** component specifies how event messages are received. You can enter one of these fixed values:

Fixed Value	Input Synonym
electronic-mail	e-mail, email
file	
file-add-to	
message	
none	

The default for this component is **message**.

If you specify a value of **file** or **file-add-to** for this component, you must specify a value for the **delivery-address** component.

event-comment: This **single-valued, optional** attribute provides a text string that provides a comment that InfoPrint appends to the event message. You can enter a text string of up to 4095 characters that contains the comment. There is no default value for this component.

locale: This **single-valued** component defines the language and code page of notification messages. The default for this component is the locale of the person who created this logical destination.

Note: The InfoPrint messages in the language corresponding to the locale must be installed.

nt-drivers

See **windows-nt-driver-names**.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **destination**.

Default Value

destination

orientations-supported

See **content-orientations-supported**.

os2-driver-names

This **resettable, multi-valued** attribute identifies the OS/2 print drivers that can submit a data stream to this logical destination.

Input Synonym

You can use the synonym **os2-drivers**.

Allowed Values

You can enter a text string that contains the name of the OS/2 print driver in this format:

'filename.descriptive name'

Begin and end the string with single quotation marks.

Default Values

No default values.

Usage Guidelines

- Perform the following procedure on the OS/2 workstation to determine the valid OS/2 driver names:

1. Open the OS/2 **Templates** folder.
2. Drag the **Printer** icon to your Desktop. The OS/2 **Create a Printer** window displays.
3. Select the **Install new destination driver...** push button. The **Install New Printer Driver** window displays listing the names of destination drivers shipped with OS/2.

Note: If OS/2 does not provide the destination driver that you want to use, select the **Other OS/2 destination driver** radio button and load the diskette containing the driver. OS/2 refreshes the list with the drivers contained on the diskette.

4. Locate the destination driver or drivers you want to use for jobs submitted through the OS/2 client and record the names you will assign to the **os2-driver-names** logical destination attribute. The format of the name you will assign as a value for the logical destination attribute differs from the format in the OS/2 list. First, record the file name of the driver followed by a period, such as **LASERJET**. (all driver files listed have the **DRV** file extension). Next, record the descriptive name of the driver, such as **IBM 4019 LaserPrinter E**. For each driver listed by OS/2, the descriptive name appears twice on the same line, separated by a colon. Finally, surround the driver name and descriptive name with single quotation marks.

See the following examples of how to construct values for the **os2-driver-names** logical destination attribute:

- To use the destination driver listed as **IBM 4019 LaserPrinter E: IBM 4019 LaserPrinter E (IBM4019.DRV)**, record the name **'IBM4019.IBM 4019 LaserPrinter E'**
 - To use the destination driver listed as **IBM 4019 v52_1 (17 Fonts): IBM 4019 v52_1 (17 Fonts) (PSCRIPT.DRV)**, record the name **'PSCRIPT.IBM 4019 v52_1 (17 Fonts)'**
 - To use the destination driver listed as **IBM 4029 (39 Fonts 600 Dpi): IBM 4029 (39 Fonts 600 Dpi) (PSCRIPT.DRV)**, record the name **'PSCRIPT.IBM 4029 (39 Fonts 600 Dpi)'**
5. You must have any driver that you specify as a value for the **os2-driver-names** logical destination attribute installed on the OS/2 workstation. To determine if the driver is installed, select the **Install** push button.
 - If the driver is installed, OS/2 displays a message indicating this.

Logical Destination

- If the driver is not installed, OS/2 displays a window requesting that you load the media containing the driver. You must install the destination driver if you want to use it. Select the **Help** button in the window to access the OS/2 help information for installing destination drivers.

Note: In most cases, you select the driver based on the data stream required by the output device. However, if you will be submitting jobs from the OS/2 client to a PSF physical printer, you should select a generic destination driver, such as **PSCRIPT.DRV**, instead of one for a specific device. Otherwise, the driver may generate device-specific data streams that InfoPrint cannot transform correctly.

6. After you have recorded the OS/2 driver names and ensured that the drivers you want to use are installed, close all OS/2 windows that you opened during this procedure.
- You can use this attribute to restrict use of this logical destination.

os2-drivers

See **os2-driver-names**.

page-select-supported

This **resettable, multi-valued** attribute specifies the type of page number that this logical destination supports.

Allowed Values

You can enter a fixed value of **numeric**. This means that the value for the document attribute **page-select** can only be numeric.

Default Value

numeric

Usage Guidelines

InfoPrint compares the document attribute **page-select** against this attribute for job validation and scheduling.

plexes-supported

This **resettable, multi-valued** attribute identifies the plexes that this destination supports. Plex indicates whether the page images of the output document are conditioned for eventual one-sided or two-sided printing, and the relative orientation of consecutive pages.

Allowed Values

You can enter any of these fixed values:

simplex
tumble

Default Values

No default values (all valid values supported).

Usage Guidelines

InfoPrint compares the document attribute **plex** to this attribute for job validation.

print-qualities-supported

This **resettable, multi-valued** attribute identifies the levels of print quality that this logical destination supports.

Input Synonym

You can use the synonym **qualities-supported**.

Allowed Values

You can enter any of these fixed values:

draft
high
normal

Default Values

No default values (all valid values supported).

Usage Guidelines

- InfoPrint compares the document attribute **print-quality** to this attribute for job validation.
- You can use this attribute to restrict use of this logical destination.

printer

See **destination-name**.

printer-associated-printers

See **destination-associated-destinations**.

printer-initial-value-document

See **destination-initial-value-document**.

printer-initial-value-job

See **destination-initial-value-job**.

printer-locations

See **destination-locations**.

printer-model

See **destination-model**.

Logical Destination

printer-name

See **destination-name**.

printer-realization

See **destination-realization**.

printers-ready

See **destinations-ready**.

protected-attributes

This **resettable, multi-valued** attribute specifies one or more logical destination attributes that DCE prevents InfoPrint operators from setting or changing.

Allowed Values

You can enter one or more logical destination attribute names.

Default Values

This attribute always specifies itself, **protected-attributes**, as a value.

Usage Guidelines

Normally, anyone with DCE **write** permission for logical destinations can set values for logical destination attributes. By default, the **pd_admin** and **pd_operator** DCE groups both have **write** permission. Once you define a logical destination attribute as a protected attribute, you must have DCE **delete** permission to modify the attribute. Members of the **pd_operator** DCE group do not have **delete** permission unless the DCE administrator has modified the default permissions for that group.

qualities-supported

See **print-qualities-supported**.

sides-supported

This **resettable, multi-valued** attribute identifies whether this logical destination supports printing on one or both sides of the media.

Allowed Values

You can enter an value of **1** or **2**.

Default Values

No default values (all valid values supported).

Usage Guidelines

- You can use this attribute to restrict use of this logical destination.
- If you do not specify a value for this attribute, the corresponding actual destination attribute controls the printable sides that users can request.
- InfoPrint compares the document attribute **sides** to this attribute for job validation.

start-message-supported

This **resettable, single-valued** attribute indicates whether this logical destination supports the job attribute **job-start-message**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value (all valid values supported).

Usage Guidelines

- When you set this attribute value to **true**, operators can receive messages that users specify with the **job-start-message** job attribute when they submit the job. InfoPrint sends the message to the operators specified by the **notify-operator** attribute for this actual destination when the job starts printing. Sending a start message does not stop the job from printing; normally the job prints without operator intervention.
- InfoPrint compares the job attribute **job-start-message** to this attribute for validation.
- You can use this attribute to restrict use of this logical destination.

table-reference-characters-supported

This **resettable, single-valued** attribute identifies whether this logical destination supports table-reference characters. Some line-data applications produce table-reference characters to specify font changes.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

No default value (all valid values supported).

Usage Guidelines

- If you do not specify a value for this attribute, the corresponding actual destination attribute determines whether the actual destination can process table reference characters.

Note: The corresponding document attribute, **table-reference-characters**, defaults to no value. The user specifies **true** only if the line data contains table reference characters that should be processed. Validation fails only if the user sets **table-reference-characters** to **true** and either this logical destination value or the actual destination attribute value is **false**.

- InfoPrint compares the document attribute **table-reference-characters-supported** to this attribute for job validation.

Logical Destination

- You can use this attribute to restrict use of this logical destination.

windows-driver-names

This **resettable, multi-valued** attribute identifies the Windows 3.1.1 or WIN-OS/2 print drivers that can submit a data stream to this logical destination.

Input Synonym

You can use the synonym **windows-drivers**.

Allowed Values

You can enter a text string that contains the string form of the Windows print driver for each permitted Windows print driver. Begin and end the string with single quotation marks.

Default Values

No default value.

Usage Guidelines

- Perform the following procedure to determine the valid Windows driver names.
 1. For WIN-OS/2, start a WIN-OS/2 full-screen session to access the Windows **Program Manager**.
 2. Select and open the **Control Panel** icon from the main window.
 3. Select and open the **Printers** icon.
 4. Select the **Add >>** push button from the **Printers** dialog box.
 5. The values listed in the **List of Printers:** list box are the names of the Windows destination drivers that you can install on the workstation; for example, **IBM 4039 LaserPrinter PS**.

Notes:

1. Other destination drivers are available and may not display in the list for a particular workstation.
 2. If you will be submitting jobs from the Windows client to a PSF physical printer, you should select a generic device driver, such as a PostScript driver, instead of one for a specific device. Otherwise, the driver may generate device-specific data streams that InfoPrint cannot transform correctly.
- You can use this attribute to restrict use of this logical destination.

windows-drivers

See **windows-driver-names**.

windows-nt-driver-names

This **resettable, multi-valued** attribute identifies the 32-bit Windows print drivers that can submit a data stream to this logical destination.

Input Synonyms

You can use the synonym **windows-nt-drivers** or **nt-drivers**.

Allowed Values

You can enter a text string that contains the string form of the Windows print driver for each permitted Windows print driver. Begin and end the string with single quotation marks.

Default Values

No default value.

Usage Guidelines

- Perform the following procedure to determine the valid Windows driver names:
 1. Select **My Computer** from the desktop.
 2. Select and open the **Control Panel** icon.
 3. Select and open the **Printers** icon,
 4. Select and open the **Add Printer** icon.
 5. The values listed in the **Printers:** list box in the **Add Printer Wizard** are the names of the Windows destination drivers that you can install on the workstation; for example, **IBM 4039 LaserPrinter PS**.

Notes:

1. Other destination drivers are available and may not display in the list for a particular workstation.
 2. If you will be submitting jobs from the Windows client to a PSF physical printer, you should select a generic destination driver, such as a PostScript driver, instead of one for a specific type of destination. Otherwise, the driver may generate device-specific data streams that InfoPrint cannot transform correctly.
- You can use this attribute to restrict use of this logical destination.

windows-nt-drivers

See **windows-nt-driver-names**.

x-image-shift-range-supported

This **resettable, single-valued complex** attribute specifies, in millimeters, the lower and upper numeric boundaries for the X offset of a page. The X offset, along with the Y offset, sets the origin of the logical page on the physical page.

Allowed Values

This complex attribute has these components:

lower-limit
upper-limit

Each component can have a numeric value from 0 through 2147483647. Separate the values with a colon.

Logical Destination

Syntax

lower-limit:upper-limit

Each value uses a format of *nnnn.nnn* where *nnnn.nnn* is the decimal millimeter value. For example,

1:10

InfoPrint uses millimeters for the unit of measure.

Default Values

0:2147483647

Usage Guidelines

You can use this attribute to restrict use of this logical destination.

Components and Values

This attribute has two components:

lower-limit: This **single-valued** component defines the minimum amount of image shift that the document or default document attribute **x-image-shift** or **x-image-shift-back** can specify.

upper-limit: This **single-valued** component defines the maximum amount of image shift that the document or default document attribute **x-image-shift** or **x-image-shift-back** can specify.

y-image-shift-range-supported

This **resettable, single-valued complex** attribute specifies, in millimeters, the lower and upper numeric boundaries for the Y offset of a page. The Y offset, along with the X offset, sets the origin of the logical page on the physical page.

Allowed Values

This is a complex attribute, which has these components:

lower-limit

upper-limit

Each component can have a numeric value from 0 through 2147483647. Separate the values with a colon.

Syntax

lower-limit:upper-limit

Each value uses a format of *nnnn.nnn* where *nnnn.nnn* is the decimal millimeter value. For example,

1:20

InfoPrint uses millimeters for the unit of measure.

Default Values

0:2147483647

Usage Guidelines

You can use this attribute to restrict use of this logical destination.

Components and Values

This attribute has two components:

lower-limit: This **single-valued** component defines the minimum amount of image shift that the document or default document attribute **y-image-shift** or **y-image-shift-back** can specify.

upper-limit: This **single-valued** component defines the maximum amount of image shift that the document or default document attribute **y-image-shift** or **y-image-shift-back** can specify.

Attributes for Media

A medium represents the type of media, that is, paper, envelopes, transparencies, or multi-part forms, on which a printer device prints.

InfoPrint uses the names of media as values for actual destination attributes, such as **media-supported**. Actual destination attributes that reference media can use any name as long as the name is within syntax limits. The AIX and 3170 DSSs validate any actual destination attribute that references a medium to ensure that the object exists. The BSD and PSF DSSs accept values that are not the names of existing media.

You must create at least the default medium objects. The **startsrv** utility normally creates the default medium objects. If it fails to do so, use the **pdcrdflt** utility to create the default medium and auxiliary sheet objects.

Attributes Not Displayed in the InfoPrint Administrator's GUI

While all medium attributes are supported for both basic and advanced InfoPrint installations, the basic InfoPrint administrator's GUI displays only the medium attributes of greatest interest to InfoPrint administrators. The advanced InfoPrint administrator's GUI does not display media.

You can list the values of attributes not displayed in the InfoPrint administrator's GUI using the **pdls** command. You can set the values of initially settable and resettable attributes using the **pdcreate** command. You can change the values of resettable attributes using the **pdset** command.

Initially Settable Attribute Listing

There are no initially settable attributes for a medium.

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create a medium or modify them with the **pdset** command after you create the medium.

- descriptor**
- medium-color**
- medium-dimensions**
- medium-form-parts**
- medium-holes-count**
- medium-sides**
- medium-size**
- medium-type**
- message**

associated-server

This **non-settable, single-valued** attribute indicates the name of the server in which this medium resides.

Allowed Values

InfoPrint sets this value to the value of the *ServerName* portion of the argument when you create the medium using the **pdcreate** command.

Default Value

No default.

descriptor

This **resettable, single-valued** attribute provides a description of the medium.

Allowed Values

You can enter a text string up to 4095 characters long that describes this medium.

Default Value

No default.

Usage Guidelines

The use of this attribute is optional. However, a detailed description of this medium and its use is helpful to users who want to determine if this is the medium that they want to use.

medium-color

This **resettable, single-valued** attribute indicates the color of this medium.

Allowed Values

You can enter one of these fixed values or some other color:

<i>Fixed Value</i>	<i>Input Synonym</i>
blue	
buff	
goldenrod	
green	
pink	
transparent	untinted
white	
yellow	

Default Value

No default value.

Usage Guidelines

Specifying the color can be useful if you have configured a large number of AIX physical printers and have used the **media-supported** and **input-trays-medium** attributes to identify the different types of media that the actual destination supports and the media currently loaded in the input trays of each printer device. This allows a user to query and filter for the colors of various medium objects to determine the medium to use for a job.

medium-dimensions

This **resettable, single-valued complex** attribute specifies the physical size (width and length), in millimeters, of the medium.

Allowed Values

You can enter two positive real numbers separated by a colon.

x-dimension:y-dimension

For example:

100.8:200.4

Default Value

No default value.

Usage Guidelines

- The medium must contain this value if AIX physical printers use the medium.
- The **pio** backend uses the value of this attribute to determine the printable area of the medium.

Components and Values

This is a complex attribute with two components:

Component	Value
<i>x-dimension</i>	Integer in millimeters. The x-dimension specifies the width of the medium, which is usually the shorter dimension in respect to how the medium is loaded into the printer device.
<i>y-dimension</i>	Integer in millimeters. The y-dimension specifies the height of the medium, which is usually the longer dimension in respect to how the medium is loaded into the printer device.

How you specify the dimensions depends on the printer model and how the medium is loaded. If you get unexpected output from a printer device, try reversing the order in which you specify the dimensions for a medium that the actual destination references.

medium-form-parts

This **resettable, single-valued** attribute indicates the number of form parts for this multi-part form medium.

Allowed Values

You can enter an integer from 1 through 2147483647.

Default Value

No default value.

Usage Guidelines

This attribute only applies to media whose **medium-type** is **multi-part-forms**.

medium-holes-count

This **resettable, single-valued** attribute indicates the number of holes (if any), pre-punched in the medium.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

No default value.

medium-identifier

This **non-settable, single-valued** attribute uniquely identifies a particular medium within a server.

Allowed Values

InfoPrint sets this value to the *MediumName* portion of the argument when you create this medium. The value is either a text string up to **255** characters that you enter or one of these fixed values:

A0	B6	jis-b6-white
A1	B7	jis-b7-white
A2	B8	jis-b10-white
A3	B9	ledger
A3-colored	B10	legal
A4	C4-envelope	letter
A4-colored	C5-envelope	medium-jis-b8-white
A4-transparent	a	medium-jis-b9-white
A5	b	monarch-envelope
A5-colored	c	na-legal-colored
A6	d	na-letter-colored
A7	designated-long-envelope	na-letter-transparent
A8	e	na-number-9-envelope
A9	executive	na-number-10-envelope
A10	folio	na-6x9-envelope
B0	invoice	na-7x9-envelope
B1	jis-b0-white	na-9x11-envelope
B2	jis-b1-white	na-9x12-envelope
B4	jis-b2-white	na-10x13-envelope
B4-colored	jis-b4-colored	na-10x14-envelope
B4-envelope	jis-b4-white	na-10x15-envelope
B5	jis-b5-colored	quarto
B5-colored	jis-b5-white	tabloid
B5-envelope		

Medium

Default Value

No default value.

medium-sides

This **resettable, single-valued** attribute indicates the number of printable sides for the medium.

Allowed Values

You can enter an integer of **1** or **2**.

Default Value

No default value.

medium-size

This **resettable, single-valued** attribute specifies the size of the medium by means of a predefined name for the size. Examples of values include **invoice**, which specifies a medium of 5.5 inches by 8.5 inches, and **ledger**, which specifies a size of 11 inches by 17 inches.

Allowed Values

You can enter one of these fixed values:

A0	B5	folio
A1	B5-envelope	invoice
A2	B6	ledger
A3	B7	legal
A4	B8	letter
A5	B9	na-number-9-envelope
A6	B10	na-number-10-envelope
A7	C4-envelope	na-6x9-envelope
A8	C5-envelope	na-7x9-envelope
A9	a	na-9x11-envelope
A10	b	na-9x12-envelope
B0	c	na-10x13-envelope
B1	d	na-10x14-envelope
B2	designated-long-envelope	na-10x15-envelope
B3	e	quarto
B4	executive	tabloid
B4-envelope		

Default Value

No default value.

medium-type

This **resettable, single-valued** attribute identifies the medium type.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Description</i>
continuous-long	Continuous-forms paper with the forms connecting along the long edge of the form.
continuous-short	Continuous-forms paper with the forms connecting along the short edge of the form.
envelope	Standard envelopes that may or may not have preprinted information and that do not have windows.
labels	Any type of label.
multi-part-form	Forms containing multiple layers that are not attached to one another.
stationery	Separately cut sheets of paper
tab-stock	Paper that has tabs.
transparency	Separate sheets of a transparent material.

Default Value

No default value.

message

This **resettable**, **single-valued** attribute provides a message associated with this medium object.

Allowed Values

You can enter a text string up to 4095 characters long that contains information about this medium object.

Default Value

No default value.

object-class

This **non-settable**, **single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **medium**.

Default Value

medium

Attributes for Queues

A queue is an InfoPrint object that manages a collection of jobs that are waiting to print. A queue receives jobs from one or more logical destinations and sends jobs to one or more actual destinations.

Initially Settable Attribute Listing

There are no initially settable attributes for queues.

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create the queue or modify them with the **pdset** command after you create the queue.

- assign-to-destination**
- backlog-lower-bound**
- backlog-update-interval**
- backlog-upper-bound**
- descriptor**
- list-of-managers**
- message**
- notification-profile**
- notify-operator**
- protected-attributes**
- requeue-failed-jobs**

actual-destinations-assigned

This **non-settable**, **multi-valued** attribute lists the actual destinations that receive jobs from this queue.

Input Synonym

You can use the synonym **physical-printers-assigned**.

Allowed Values

InfoPrint adds the actual destination name to this value when each actual destination registers and its **associated-queue** attribute value is the name of this queue.

Default Values

No default values.

actual-destinations-ready

This **non-settable**, **multi-valued** attribute lists the ready actual destinations that can receive jobs from this queue.

Input Synonym

You can use the synonym **physical-printers-ready**.

Allowed Values

InfoPrint adds an actual destination name to this value for each actual destination that can receive a job from this queue. An actual destination becomes ready when it is enabled and the state is either **idle**, **connecting-to-destination**, or **printing**.

Default Values

No default values.

assign-to-destination

This **resettable**, **single-valued** attribute indicates whether the queue assigns jobs to actual destinations as soon as they are accepted or waits until an actual destination is available.

Input Synonym

You can use the synonym **assign-to-printer**.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

Basic **true**

Advanced **false**

Usage Guidelines

- When the value of **assign-to-destination** is **true**, the queue assigns jobs to an actual destination as soon as the server accepts them (early binding), unless no actual destination supports a job's required attribute values. If something prevents the assigned actual destination from printing the job, or if another actual destination becomes available first, you must reassign the job using the InfoPrint administrator's GUI.

Early binding is the defining characteristic of a basic InfoPrint installation.

- When the value of **assign-to-destination** is **false**, the queue waits until a job is next to be scheduled to print, then assigns it to the first suitable actual destination to become available (late binding).

Late binding is the defining characteristic of an advanced InfoPrint installation.

- A job must be assigned to an actual destination before InfoPrint can calculate the estimated completion time for the job.

assign-to-printer

See **assign-to-destination**.

associated-server

This **non-settable, single-valued** attribute indicates the name of the server in which this queue resides.

Allowed Values

InfoPrint sets this value to the *ServerName* portion of the argument you specify when you create this queue with the **pdcreate** command.

Default Value

No default value.

backlog

See **queue-backlog**.

backlog-lower-bound

This **resettable, single-valued** attribute identifies the limit (time to print jobs within the queue) below which you do not consider the queue backlogged. InfoPrint resets a backlogged condition when the **queue-backlog** value is less than this value, if you enable backlog computing.

Allowed Values

You can enter a value using *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Syntax

backlog-lower-bound=[HH:]MM

For example:

```
backlog-lower-bound=70  
backlog-lower-bound=1:10
```

Default Value

No default value.

Usage Guidelines

- You must set the value for this attribute to less than or equal to the value you specify for the **backlog-upper-bound** attribute.
- InfoPrint sets the value for the attribute **backlogged** to **false** when the value for the **queue-backlog** attribute becomes less than this value if you enable backlog computing (**backlog-update-interval** value not equal to 0).

backlog-update-interval

This **resettable, single-valued** attribute specifies how often InfoPrint computes the queue backlog.

Allowed Values

You can enter a value using `[HH:]MM`. The unit is minutes or hours and minutes, separated by a colon.

Setting this value to 0 disables backlog computing.

Default Value

The greater value of the following:

1 minute

The value of the **backlog-upper-bound** attribute divided by 30.

Usage Guidelines

- You must set the value for this attribute to be less than or equal to the value you specify for the **backlog-upper-bound** attribute.
- InfoPrint sets this default value when you create the queue. If you change the value for the **backlog-upper-bound** attribute later with the **pdset** command, InfoPrint does not change the value for this attribute.

backlog-upper-bound

This **resettable, single-valued** attribute identifies the limit (time to print the jobs in the queue) above which you consider the queue backlogged.

Allowed Values

You can enter a value using `[HH:]MM`. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

Usage Guidelines

- You must set the value for this attribute to be greater than or equal to the value you specify for the **backlog-lower-bound** attribute.
- InfoPrint sets the value for the attribute **backlogged** to **true** when the value for the **queue-backlog** attribute exceeds this value if you enable backlog computing.

backlogged

This **non-settable, single-valued** attribute identifies whether the queue is backlogged.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

Default Value

false

Usage Guidelines

- InfoPrint sets this attribute value to **true** when you enable backlog computing (**backlog-update-interval** not equal to 0) and the **queue-backlog** value exceeds the **backlog-upper-bound** value.
- InfoPrint sets this attribute value to **false** when the **queue-backlog** value falls below the **backlog-lower-bound** value.

current-backlog

See **queue-backlog**.

descriptor

This **resettable, single-valued** attribute provides a description of this queue.

Allowed Values

You can enter a text string of up to 4095 characters that describes this queue. You may want to specify such things as:

- The name of the department or the account number for the users of this queue.
- Any other information that is unique to your company or organization.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description of this queue is helpful to users who want to determine where to submit a given job or administrators who want to determine which queue to associate with a logical destination.

list-of-managers

This **resettable, multi-valued** attribute lists the people responsible for the configuration and operation of this queue.

Input Synonym

You can use this synonym **managers**.

Allowed Values

You can enter a text string up to 255 characters long, per value, that contains the name or ID of the person responsible for this queue.

Default Values

No default values.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

logical-destinations-assigned

This **non-settable, multi-valued** attribute lists the logical destinations associated with this queue.

Input Synonym

You can use the synonym **logical-printers-assigned**.

Allowed Values

InfoPrint adds to this value the logical destination name of a newly created logical destination if the **associated-queue** attribute value for that logical destination identifies this queue.

Default Values

No default values.

logical-destinations-ready

This **non-settable, multi-valued** attribute lists the enabled logical destinations that can send jobs to this queue.

Input Synonym

You can use the synonym **logical-printers-ready**.

Allowed Values

InfoPrint adds a logical destination name to this value for each logical destination that is assigned to the queue and that is enabled.

Default Values

No default values.

Usage Guidelines

InfoPrint changes this value as you enable or disable logical destinations.

logical-printers-assigned

See **logical-destinations-assigned**.

logical-printers-ready

See **logical-destinations-ready**.

managers

See **list-of-managers**.

Queue

message

This **resettable, single-valued** attribute provides a message associated with this queue.

Allowed Values

You can enter a text string of up to 4095 characters that contains information about this queue.

Default Value

No default value.

notification-profile

This **resettable, multi-valued complex** attribute designates which persons InfoPrint notifies of specific events related to this queue, and how InfoPrint notifies them.

Allowed Values

This complex attribute has these components for each value:

- event-identifiers**
- delivery-address**
- delivery-method**
- event-comment**
- locale**

Syntax

```
-x "notification-profile={event-identifiers=event ...  
  delivery-address=name@node delivery-method=value  
  event-comment='some text' locale=locale}"
```

For example:

```
-x "notification-profile={event-identifiers=queue-state-changed  
  object-cleaned delivery-address=Kathy@test delivery-method=message  
  event-comment='Better check' locale=En_US.IBM-850}"
```

Components and Values

This attribute has five components:

event-identifiers: This **multi-valued** component specifies the events for which the person receives messages. You can enter queue events listed for the server **events-supported** attribute. These are the default values for this component:

- object-deleted**
- object-cleaned**
- queue-backlogged**

delivery-address: This **single-valued** component specifies the address of the person who receives the event messages or the directory location and file name where InfoPrint stores the message. You enter the login ID and node of the person who is to receive the messages or the path of the directory and a file name. The default value is the login ID of the person who created this queue.

delivery-method: This **single-valued** component specifies how the user receives the event messages. You can enter one of these fixed values:

Fixed Value	Input Synonym
electronic-mail	e-mail, email
file	
file-add-to	
message	
none	

The default value is **message**.

If you specify a value of **file** or **file-add-to** for this component, you must specify a value for the **delivery-address** component.

event-comment: This **single-valued, optional** component provides textual information that InfoPrint appends to the event message. You can enter a text string of up to 4095 characters that contains the information about the event. There is no default value for this component.

locale: This **single-valued** component defines the language and code page of notification messages. The default for this component is the locale of the person who created this queue.

Note: The InfoPrint messages in the language corresponding to the locale must be installed.

notify-operator

This **resettable, multi-valued complex** attribute identifies people that are to receive the message defined by the job attribute **job-message-to-operator**.

Input Synonym

You can use the synonym **operators**.

Allowed Values

This complex attribute has these components for each value:

delivery-method
delivery-address

Syntax

delivery-method:delivery-address

For example:

message:op3@fastpr

Components and Values

This attribute has two components:

delivery-method: This **single-valued** component specifies how the person is to receive the messages. You can enter one of these fixed values:

electronic-mail
message
none

Queue

The default value is **message**.

delivery-address: This **single-valued** component specifies the address of the person who receives the message. You enter a text string that contains the login ID and node of the person who receives the message. The default value for this component is the login ID of the person who created this queue.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **queue**.

Default Value

queue

operators

See **notify-operator**.

physical-printers-assigned

See **actual-destinations-assigned**.

physical-printers-ready

See **actual-destinations-ready**.

protected-attributes

This **resettable, multi-valued** attribute specifies one or more queue attributes that DCE prevents InfoPrint operators from setting or changing.

Allowed Values

You can enter one or more queue attribute names.

Default Values

This attribute always specifies itself, **protected-attributes**, as a value.

Usage Guidelines

Normally, anyone with DCE **write** permission for queues can set values for queue attributes. By default, the **pd_admin** and **pd_operator** DCE groups both have **write** permission. Once you define a queue attribute as a protected attribute, you must have DCE **delete** permission to modify the attribute. Members of the **pd_operator** DCE group do not have **delete** permission unless the DCE administrator has modified the default permissions for that group.

queue-backlog

This **non-settable, single-valued** attribute specifies the amount of time that this queue might be backlogged. This is a computed estimate of time it takes to print all of the jobs currently in the queue.

Input Synonyms

You can use the synonyms **backlog** or **current-backlog**.

Allowed Values

InfoPrint sets this value to *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

No default value.

queue-name

This **non-settable, single-valued** attribute uniquely identifies this queue object.

Allowed Values

InfoPrint set this value to the *QueueName* portion of the argument from the **pdcreate** command when this queue is created.

Default Value

No default value.

Usage Guidelines

This queue name must be unique within the namespace.

queue-state

This **non-settable, single-valued** attribute identifies the current state of the queue.

Allowed Values

InfoPrint sets this value to one of these fixed values:

<i>Fixed Value</i>	<i>Explanation</i>
paused	InfoPrint will not schedule jobs in the queue to the actual destinations associated with this queue. The queue will still receive jobs from its associated logical destinations if they are enabled.
ready	InfoPrint can schedule jobs in the queue to the actual destinations associated with this queue.

Default Value

No default value.

requeue-failed-jobs

This **resettable, single-valued** attribute indicates whether jobs that fail to RIP, impose, or print should be replaced in the queue.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

Basic **true**

Advanced **false**

Usage Guidelines

- When the value of **requeue-failed-jobs** is **true**, jobs that fail to print for any of these reasons:
 - The server cancels the job.
 - InfoPrint fails to RIP the job.
 - InfoPrint fails to impose the job.are replaced in the queue in the **held** state.
- When the value of **requeue-failed-jobs** is **false**, jobs that fail to print for these reasons are retained if there is a value for the **job-retain-until** or **job-retention-period** job attribute. Otherwise, these jobs are discarded.
- For any value of **requeue-failed-jobs**, jobs that fail to print because of actual destination problems are replaced in the queue in the **pending** state. If another actual destination is available, these jobs are rescheduled.

Attributes for Resource Contexts

InfoPrint uses resource contexts to determine the location of PSF resources. Actual destination attributes, such as **resource-context**, **resource-context-font**, or **resource-context-overlay**, reference the names of resource contexts.

The different types of AFP resources are:

Fonts	A font is a single size and typeface in a particular type family including letters, numerals, punctuation marks, special characters, and ligatures.
Form definitions	Form definitions provide instructions on how output devices position data on the page. Form definitions can specify overlays, a paper source for cut-sheet printer devices, duplexing, text suppression, data position, and the number and modifications of pages.
Overlays	Overlays are collections of predefined data such as lines, shading, text boxes, or logos, that an output device can merge with variable data on a page or a form.
Page definitions	Page definitions contain the formatting controls for line data. Page definitions can include controls for the number of lines per logical page, font selection, print direction, and the mapping of individual fields to positions on the logical page.
Page segments	Page segments contain text and images that an output device can include at any addressable point on a page or an electronic overlay.

The resource context attribute **context-address** identifies the path name of the directory that contains the corresponding PSF resource. Instead of entering the full path name as the value of an actual destination attribute, you can reference the resource context. You can also reference resource contexts during print submission using certain document attributes.

Only PSF, fax, and email actual destinations use resource contexts.

Initially Settable Attribute Listing

There are no initially settable attributes for a resource context.

Resettable Attribute Listing

You can set these attributes with the **pdcreate** command when you create a resource context or modify them with the **pdset** command after you create the resource context.

context-address
descriptor

associated-server

This **non-settable, single-valued** attribute indicates the server in which this resource context resides.

Resource Context

Allowed Values

InfoPrint sets this value to the *ServerName* portion of the argument specified with the **pdcreate** command when this resource context is created.

Default Value

No default value.

context-address

This **resettable, single-valued** attribute defines the path for the location of this PSF resource.

Allowed Values

You enter a text string up to 4095 characters long that contains the path name. Separate multiple path names with colons.

Syntax

For multiple paths:

path:path

For example:

`/fonts:/dept123/fonts`

Default Value

No default value.

descriptor

This **resettable, single-valued** attribute provides a description of this resource context.

Allowed Values

You can enter a text string up to 4095 characters long that describes this resource context.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description of the resource that this resource context references can be helpful to a users who need to determine which resource context to use.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **resource-context**.

Default Value

resource-context

resource-context-identifier

This **non-settable, single-valued** attribute uniquely identifies this resource context within a server.

Allowed Values

InfoPrint sets this value to the *ResourceContextName* portion of the argument specified with the **pdcreate** command when this resource context is created.

Default Value

No default value.

Attributes for Servers

An InfoPrint server is an object that represents the server that manages the validation, routing, and scheduling of jobs.

Initially Settable Attribute Listing

There are no specifiable attributes for a server.

Resettable Attribute Listing

You can modify these attributes with the **pdset** command after you create a server.

accept-unsupported-jobs
descriptor
job-submission-timer
list-of-managers
log-accounting-data
maximum-barco-rips
maximum-non-raster-rips
maximum-raster-rips
message
notification-profile
npm-server-ip-address
npm-server-port-number
protected-attributes
save-rip-files
security-level
snmp-normal-poll-interval
snmp-problem-poll-interval

accept-unsupported-jobs

This **resettable**, **single-valued** attribute indicates whether the server accepts jobs even when no actual destination supports the required attribute values.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

Basic **true**
 Advanced **false**

Usage Guidelines

- When the value of the **accept-unsupported-jobs** is **true**, the server accepts jobs even when no actual destination supports the required attribute values. InfoPrint holds these jobs and sets the **required-resources-not-supported** job attribute to a list of the unsupported values.

Note: Even when **accept-unsupported-jobs** is **true**, the server rejects jobs when the **actual-destinations-requested** job attribute specifies nonexistent actual destinations.

- When the value of **accept-unsupported-jobs** is **false**, the server rejects jobs that require unsupported attribute values.
- If changes to job or actual destination attributes after the job has been accepted produce unsupported attribute values, InfoPrint holds the job and sets the **required-resources-not-supported** job attribute to the list of unsupported values.

actual-destinations-ready

This **non-settable**, **multi-valued** attribute identifies the supported actual destinations that are ready to receive jobs from queues in this server.

Input Synonym

You can use the synonym **physical-printers-ready**.

Allowed Values

InfoPrint sets this value to the names of the actual destinations that are ready to accept jobs. A actual destination name is:

- Added when actual destinations associated with queues in this server are enabled and are in the **idle**, **connecting-to-printer**, or **printing** state.
- Removed when you disable or pause an actual destination and one of these destination states (**timed-out**, **needs-attention**, or **needs-key-operator**) exists.

Default Values

No default values.

actual-destinations-supported

This **non-settable**, **multi-valued** attribute identifies the actual destinations that this server supports.

Input Synonym

You can use the synonym **physical-printers-supported**.

Allowed Values

InfoPrint sets this value to the names of the actual destinations associated with the queues contained in this server. InfoPrint adds the destination name when an actual destination associated with queues in this server registers with this server.

Default Values

No default values.

cancel-individual-document-supported

This **non-settable**, **single-valued** attribute indicates whether the server is capable of cancelling individual documents within a multi-document job.

Allowed Values

InfoPrint sets this value to **false**.

Default Value

false

descriptor

This **resettable, single-valued** attribute provides a description of this server.

Allowed Values

You can enter a text string up to 4095 characters long that contains a description of this server. You may want to specify things such as:

- The purpose of the server; which users, user groups, or departments will use the objects contained in this server.
- Any other information that is unique to your company or organization.

Default Value

No default value.

Usage Guidelines

The use of this attribute is optional. However, a detailed description is useful if you have a large number of servers or if you have many people managing your network printing system.

destination-states-supported

This **non-settable, multi-valued** attribute identifies the destination states that this server supports.

Input Synonym

You can use the synonym **printer-states-supported**.

Allowed Values

InfoPrint sets this value to any of these fixed values:

connecting-to-printer
idle
needs-attention
needs-key-operator
paused
printing
shutdown
timed-out

Default Values

No default values.

document-attributes-supported

This **non-settable, multi-valued** attribute identifies the document attributes that the server supports.

Allowed Values

InfoPrint sets these values to include all the document attributes supported by any actual destination registered with the server. These values are dynamic; InfoPrint adds and removes values based on the values of registered actual destinations.

Default Values

No default values.

events-supported

This **non-settable, multi-valued** attribute lists the events that the server or the objects in the server support.

Allowed Values

InfoPrint sets these values to the following events:

- checkpoint-taken**
- class-aborted**
- class-actual-destination-attention**
- class-actual-destination-configuration**
- class-actual-destination-default**
- class-actual-destination-status**
- class-error**
- class-job-attention**
- class-job-default**
- class-job-problem**
- class-job-status**
- class-logical-destination-attention**
- class-logical-destination-configuration**
- class-logical-destination-default**
- class-logical-destination-status**
- class-queue-attention**
- class-queue-configuration**
- class-queue-default**
- class-queue-status**
- class-report**
- class-server-attention**
- class-server-configuration**
- class-server-default**
- class-server-status**
- class-state-changed**
- class-warning**
- close-to-discard-time**
- destination-disabled**
- destination-enabled**
- destination-function-unavailable**
- destination-needs-administrator**
- destination-needs-attention**
- destination-needs-operator**
- destination-registered**

destination-shutdown-job-queued
destination-state-changed
destination-timed-out
destination-unregistered
destinations-not-ready-for-job
detailed-messages
document-aborted-by-destination
document-aborted-by-server
document-cancelled-at-destination
document-content
file-transferred
internal-server-error
job-aborted-by-server
job-assigned-to-destination
job-assigned-to-destination-at-end
job-assigned-to-queue
job-cancelled-by-operator
job-cancelled-by-user
job-cannot-be-scheduled
job-discarded
job-modified
job-paused
job-promoted
job-reordered
job-queued
job-resubmitted
job-resumed
job-retained
job-state-changed
job-submission-not-complete
job-unassigned
no-document
no-resource
object-cleaned
object-created
object-deleted
object-modified
object-paused
object-resumed
other-error
other-warning
past-discard-time
processing-started
queue-backlogged
queue-no-longer-backlogged
queue-state-changed
resource-needs-attention
resource-needs-operator
server-shutdown-complete
server-shutdown-started
server-startup-complete
server-state-changed
unable-to-register
unrecognized-resource

Default Values

No default values.

hostname

See **server-hostname**.

i-p-address

See **server-ip-address**.

ip-address

See **server-ip-address**.

job-attributes-supported

This **non-settable**, **multi-valued** attribute identifies the job attributes that this server supports.

Allowed Values

InfoPrint sets these values to include all the job attributes supported by any actual destination registered with the server. These values are dynamic; InfoPrint adds and removes values based on the values of registered actual destinations.

Default Values

No default values.

job-state-reasons-supported

This **non-settable**, **multi-valued** attribute identifies the job-state reasons that this server supports.

Allowed Values

InfoPrint sets the value of this attribute to any of these fixed values:

- aborted-by-system**
- cancelled-by-operator**
- cancelled-by-user**
- deadline-in-jeopardy**
- imposition-failed**
- job-hold-set**
- job-print-after-specified**
- required-resource-not-ready**
- required-resource-not-supported**
- rip-and-hold-complete**
- rip-completed-media-hold**
- rip-failed**
- successful-completion**

job-states-supported

This **non-settable, multi-valued** attribute identifies the job states that this server supports.

Allowed Values

InfoPrint sets the value of this attribute to any of these fixed values:

- cancelled
- held
- imposing
- paused
- pending
- pre-processing
- printing
- processing
- retained
- ripping
- terminating
- unknown

job-submission-timer

This **resettable, single-valued** attribute specifies the maximum time that the server will try to assemble a job before it will time out if it has not assembled all the documents.

Allowed Values

You can enter a value using *[HH:]MM*. The unit is minutes or hours and minutes, separated by a colon.

Default Value

30

Usage Guidelines

If the server has not completed the assembly of a job within the specified time, it identifies the job submission as complete and sends the job to the queue.

list-of-managers

This **resettable, multi-valued** attribute lists the people that are responsible for the configuration and operation of this server.

Input Synonym

You can use the synonym **managers**.

Allowed Values

You can enter a text string up 255 characters long, per value, that contains the name or user ID of the person responsible for this server. You may also want to include the telephone number and office location of the person.

Default Values

No default values.

Usage Guidelines

This attribute is useful if a user needs to contact someone to report a problem or to request a change.

locale

This **non-settable, single-valued** attribute identifies the locale for this server.

Allowed Values

InfoPrint sets this value based on the environment variables for this server at startup time. The priority sequence to obtain the language for the locale from the environment variables is:

1. **LC_ALL**
2. **LC_MESSAGES**
3. **LANG**

Default Value

No default value.

log-accounting-data

This **resettable, single-valued** attribute defines whether the accounting logs for all associated actual destinations are activated or deactivated by default. The actual destination attribute **log-accounting-data** setting overrides the setting of this value for that actual destination.

Allowed Values

You can enter one of these values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

false

Usage Guidelines

If the value for any actual destination associated with this server is set to the default attribute value (no value), the value set for this server attribute sets the condition for that actual destination.

The accounting log for each actual destination contains the following job attributes and values for each job submitted to that actual destination.

job-identifier
submission-time
completion-time
pages-complete
job-owner

logical-destinations-ready

This **non-settable, multi-valued** attribute identifies which logical destinations within this server are ready to accept jobs.

Input Synonym

You can use the synonym **logical-printers-ready**.

Allowed Values

InfoPrint sets and resets this value as administrators enable or disable logical destinations within this server.

Default Values

No default values.

logical-destinations-supported

This **non-settable, multi-valued** attribute identifies the logical destinations that this server supports.

Input Synonym

You can use the synonym **logical-printers-supported**.

Allowed Values

InfoPrint sets and resets this value as administrators create or delete logical destinations within this server.

Default Values

No default values.

logical-printers-ready

See **logical-destinations-ready**.

logical-printers-supported

See **logical-destinations-supported**.

managers

See **list-of-managers**.

maximum-barco-rips

This **resettable, single-valued** attribute indicates the maximum number of PostScript jobs that InfoPrint can RIP at one time for printing on a 3170 physical printer.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

4

Usage Guidelines

- For good performance, this value should be the same as the number of AIX systems specified as values of the **rip-server** actual destination attribute.
- InfoPrint reads this value the first time that a job is RIPPed after the server is started. Therefore, whenever you change this value, you must restart the server.

maximum-non-raster-rips

This **resettable, single-valued** attribute indicates the maximum number of jobs other than TIFF, GIF, or JPEG jobs that InfoPrint can RIP at one time for printing on a PSF physical printer.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

No default value.

Usage Guidelines

- You can limit the number of concurrent RIPs to improve performance.
- InfoPrint reads this value the first time that a job is RIPPed after the server is started. Therefore, whenever you change this value, you must restart the server.

maximum-raster-rips

This **resettable, single-valued** attribute indicates the maximum number of TIFF, GIF, and JPEG jobs that InfoPrint can RIP at one time for printing on a PSF physical printer.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

No default value.

Usage Guidelines

- You can limit the number of concurrent RIPs to improve performance.
- InfoPrint reads this value the first time that a job is RIPPed after the server is started. Therefore, whenever you change this value, you must restart the server.

message

This **resettable, single-valued** attribute provides information associated with this server.

Allowed Values

You can enter a text string up to 4095 characters long that contains information about this server.

Default Value

No default value.

modify-individual-document-supported

This **non-settable, single-valued** attribute indicates whether this server is capable of modifying individual documents within a multiple document job.

Allowed Values

InfoPrint sets this value to **true**.

Default Value

true

multiple-documents-supported

This **non-settable, single-valued** attribute indicates whether this server supports multiple documents in a single job.

Allowed Values

InfoPrint sets this value to **true**.

Default Value

true

notification-delivery-methods-supported

This **non-settable, multi-valued** attribute identifies the methods this server supports for sending messages to the person specified to receive the messages.

Allowed Values

InfoPrint sets this value to any of these fixed values:

- electronic-mail**
- message**
- file**
- file-add-to**
- sapcb**
- none**

Default Values

No default values.

Usage Guidelines

The **sapcb** notification method causes the SAP callback daemon to return messages about job events to the SAP database. It is used only for jobs submitted by SAP users.

notification-profile

This **resettable, multi-valued complex** attribute designates which users InfoPrint notifies of specific events related to this server, and how InfoPrint notifies them.

Allowed Values

This complex attribute has these components for each value:

- event-identifiers**
- delivery-address**
- delivery-method**
- event-comment**
- locale**

Syntax

```
-x "notification-profile={event-identifiers=event ...
  delivery-address=name@node delivery-method=value
  event-comment='some text' locale=locale}"
```

For example:

```
-x "notification-profile={events-identifiers=class-server-status
  delivery-address=Tom@master delivery-method=message
  event-comment='Too much data' locale=En_US.IBM-850}"
```

Components and Values

This attribute has five components:

event-identifiers: This **multi-valued** component specifies the events for which the person receives messages. You can enter any of the values listed for the **events-supported** attribute. The default values for this component are:

- internal-server-error**
- object-cleaned**
- object-deleted**
- server-shutdown-complete**

delivery-address: This **single-valued** component specifies the address of the person who receives event messages concerning this server or the directory location and file name where InfoPrint stores messages. You can enter a text string that contains the login ID and node or the path to the directory and file name. The default value for this component is the login ID of the user who created this server.

delivery-method: This **single-valued** component specifies how the user receives the event messages. You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
electronic-mail	e-mail, email
message	
file	
file-add-to	

none

The default value for this component is **message**.

If you specify a value of **file** or **file-add-to** for this attribute, you must specify a value for the **delivery-address** component.

event-comment: This **single-valued, optional** component provides a text string of information that InfoPrint appends to the event message. You can enter a text string up to 4095 characters long that contains the comment. There is no default value for this component.

locale: This **single-valued** component defines the language and code page of notification messages. The default for this component is the locale of the person who created this server.

Note: The InfoPrint messages in the language corresponding to the locale must be installed.

npm-server-ip-address

This **resettable, single-valued** attribute identifies the Internet Protocol address (IP Address parameter) of the system where the Network Print Manager (NPM) server is running.

Allowed Values

You can enter a text string up to 4095 characters long that is either of these types of address:

Dotted decimal address

A series of integers within the range of 0 to 255, each separated by a period, . (decimal address). For example:

9.99.12.85

Hostname

For example:

leo.boulder.IBM.com

Default Value

127.0.0.1

Usage Guidelines

You must enter a value in order to display the Simple Network Management Protocol (SNMP) Printer Status dialog from the InfoPrint job and printer management GUI.

npm-server-port-number

This **resettable, single-valued** attribute identifies the Port Number parameter on the system where the NPM server is running.

Allowed Values

You can enter an integer from 1 through 2147483647, but you typically enter an integer from 5001 to 65535.

Default Value

6795

Usage Guidelines

You must enter a value in order to display the SNMP Printer Status dialog from the InfoPrint job and printer management GUI.

object-class

This **non-settable, single-valued** attribute identifies the object class to which this object belongs.

Allowed Values

InfoPrint sets this value to **server**.

Default Value

server

object-classes-supported

This **non-settable, multi-valued** attribute lists the object classes that this server supports.

Allowed Values

InfoPrint sets this value to any of these fixed values:

- auxiliary-sheet
- destination
- document
- initial-value-document
- initial-value-job
- job
- log
- medium
- queue
- resource-context
- server

Default Values

No default values.

physical-printers-ready

See **actual-destinations-ready**.

physical-printers-supported

See **actual-destinations-supported**.

printer-states-supported

See **destination-states-supported**.

problem-child

This **non-settable, single-valued** attribute identifies whether one of the objects that this server manages has a problem or not.

Allowed Values

InfoPrint sets this value to one of these fixed values:

true
false

Default Value

No default value.

Usage Guidelines

The InfoPrint administrator's GUI uses this attribute value to determine the problem status of this server.

protected-attributes

This **resettable, multi-valued** attribute specifies one or more server attributes that DCE prevents InfoPrint operators from setting or changing.

Allowed Values

You can enter one or more server attribute names.

Default Values

This attribute always specifies itself, **protected-attributes**, as a value.

Usage Guidelines

Normally, anyone with DCE **write** permission for server can set values for server attributes. By default, the **pd_admin** and **pd_operator** DCE groups both have **write** permission. Once you define a server attribute as a protected attribute, you must have DCE **delete** permission to modify the attribute. Members of the **pd_operator** DCE group do not have **delete** permission unless the DCE administrator has modified the default permissions for that group.

queues-supported

This **non-settable, multi-valued** attribute identifies the queues contained in this server.

Allowed Values

InfoPrint sets and resets this value when you create or delete queues.

Default Values

No default values.

save-rip-files

This **resettable, single-valued** attribute indicates whether this server saves the output files from jobs converted to raster image patterns.

Allowed Values

You can enter one of these fixed values:

<i>Fixed Value</i>	<i>Input Synonym</i>
true	yes
false	no

Default Value

Basic **true**
Advanced **false**

Usage Guidelines

- If you move a RIPped job from a server with **save-rip-files=true** to one with **save-rip-files=false**, the new server keeps the RIP files only until the job is printed, then discards them.
- RIPped files are saved in the directory specified by the **PDBASE** environment variable or in one of its subdirectories. No single user can create a file larger than the amount of free space in the file system containing this directory. If many users are submitting RIPped jobs, the directory may fill up and prevent all users from successfully RIPping files.

security-level

This **resettable, single-valued** attribute identifies the security level for this server.

Allowed Values

You can enter one of these fixed values:

none	AIX clients can execute all commands if the user has read permission for the command file in the acl subdirectory of the directory defined by the PDNAME environment variable. No security checking is performed for workstation clients.
low	Clients can execute all commands if the client and server are in the same namespace. If they are not in the same namespace, the client can execute only the pdl , pdpr , and pdq commands.

In either case, AIX users must have **read** permission for the command file in the **acl** subdirectory of the directory defined by the **PDNAME** environment variable. Workstation clients can execute commands only if the command file in the **acl** subdirectory of the directory defined by the **PDNAME** environment variable has universal **read** permission.

Server

medium DCE controls access to objects. Clients can execute all commands if the client and server are in the same namespace. If they are not in the same namespace, the client can execute only the **pdls**, **pdpr**, and **pdq** commands.

Default Value

Without DCE	low
With DCE	medium

server-hostname

This **non-settable**, **single-valued** attribute identifies the name of the host processor on which this server is running.

Input Synonym

You can use the synonym **hostname**.

Allowed Values

InfoPrint sets this value to the host name of the processor where this server is created.

Syntax

node.node.node

For example:

`boxer.denver.gym.`

server-ip-address

This **non-settable**, **single-valued** attribute identifies the Internet Address of the host processor on which this server is running.

Input Synonyms

You can use the synonym **ip-address** or **i-p-address**.

Allowed Values

InfoPrint sets this value to the IP address of the host on which this server is created. The value is in the format of integers in series within the range of 0 to 255. A period, `.`, separates each integer from the others in the format

nn.nn.nn.nn

For example:

`9.99.9.143`

server-name

This **non-settable**, **single-valued** attribute uniquely identifies this server.

Allowed Values

InfoPrint sets this value to the name you enter when you create this server.

server-state

This **non-settable, single-valued** attribute identifies the current state of this server.

Allowed Values

InfoPrint sets this value to one of these fixed values:

initializing
ready
terminating
unavailable

Default Value

No default value.

snmp-aix-printer-models

This **non-settable, multi-valued** attribute identifies the SNMP descriptive printer model names that the AIX DSS recognizes.

Allowed Values

InfoPrint sets this value to a list of recognized SNMP printer models.

Default Values

A list of recognized SNMP printer models.

snmp-normal-poll-interval

This **resettable, single-valued** attribute indicates the number of seconds that the server should wait between polling output devices that use SNMP and that are not known to have a problem.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

300

Usage Guidelines

- When normal polling finds that an output device has a problem, InfoPrint disables the actual destination if necessary and transfers the device to the list of devices to be polled at the problem interval.
- Output devices with which the server has not established, or has lost, SNMP communication, are polled at the normal interval, not the problem interval.
- Set a value of **0** to disable normal polling.

snmp-problem-poll-interval

This **resettable, single-valued** attribute indicates the number of seconds that the server should wait between polling output devices that use SNMP and that are known to have a problem.

Allowed Values

You can enter an integer from 0 through 2147483647.

Default Value

60

Usage Guidelines

- When problem polling finds that an output device no longer has a problem, InfoPrint reenables the actual destination if necessary and transfers the device to the list of devices to be polled at the normal interval. To prevent InfoPrint from reenabling the actual destination, manually disable it.
- Output devices with which the server has not established, or has lost, SNMP communication, are polled at the normal interval, not the problem interval.
- Set a value of **0** to disable problem polling.

transfer-methods-supported

This **non-settable, multi-valued** attribute identifies the transfer methods that this server supports.

Allowed Values

InfoPrint sets this value to any of these fixed values:

pipe-pull
with-request

Default Values

pipe-pull, with-request

Usage Guidelines

InfoPrint compares the document attribute **transfer-method** to this attribute for validation.

Chapter 8. InfoPrint and AIX Environment Variables

Table 13, Table 14 on page 579, and Table 15 on page 580 describe the environment variables that affect how InfoPrint processes commands and utilities.

Table 13 (Page 1 of 3). InfoPrint Environment Variables Defaulted or Set in the /etc/environment File

Variable	Description
GIF2AFP_option	Specifies options for the GIF2AFP transform command. See "gif2afp Command: Transforms GIF Data to AFP" on page 191.
IPR_PREDPROD	Used during migration to specify the product that preceded InfoPrint. Value: PSF (PSF for AIX)
JPEG2AFP_option	Specifies options for the JPEG2AFP transform command. See "jpeg2afp Command: Transforms JPEG Data to AFP" on page 206.
MANPATH	A path of directories that AIX searches for man pages. Separate multiple directories by a colon, : . Commands: man
PATH	The directories that AIX searches for command files. Separate multiple directories by a colon, : . Commands: All Default: \$PATH:/usr/lpp/pd/bin:/usr/lpp/psf/bin , where \$PATH is the value when InfoPrint is installed
PDBASE	Specifies the root directory where the InfoPrint server stores all of its working files, such as log or trace files. Each server has its own subdirectory under this directory to avoid name conflicts when multiple servers are on the same AIX processor. Utilities: start_server, startsrv Default: /var/pd
PDIDTABLE	Defines the upper limit (boundary) of local job identifiers that InfoPrint can assign for each user before wrapping to 1. The maximum valid integer is 32767. If you do not set a value, InfoPrint uses 100 as the upper limit. Setting the value to a lower value decreases memory usage but increases the chances of duplicate local job identifiers.
PDNAMESP	Specifies the namespace. Commands: All Default: /var/pddir/default_cell (without DCE) ./:subsys/ipr (with DCE)

Table 13 (Page 2 of 3). InfoPrint Environment Variables Defaulted or Set in the `/etc/environment` File

Variable	Description
PDPATH	<p>A path of directories that InfoPrint searches for the file name specified by the <code>-X attributes file name</code> flag. Separate multiple directories by a colon, <code>:</code>. If the PDPATH environment variable does not exist, InfoPrint uses the current working directory of the person submitting the command.</p> <p>Commands: All</p>
PDPRINTER	<p>Used as the default logical destination when you do not specify the <code>-d DestinationName</code>, the <code>-p DestinationName</code> flag, or the destination-name-requested job attribute.</p> <p>Commands: pdls, pdq, pdpr</p> <p>InfoPrint also uses this variable to identify the server for other commands.</p>
PD_CONFIRM_DELETE	<p>Specifies whether InfoPrint issues a confirmation message before deleting an object.</p> <p>Commands: pdclean, pddelete, pdrm</p> <p>Values: yes, no</p> <p>Default: yes</p>
PD_ENABLE_TIMEOUT	<p>Specifies the number of seconds that a server waits for an actual destination to register when the actual destination is enabled.</p> <p>Default: 15</p>
PD_LISTEN_COUNT	<p>Specifies the number of simultaneous requests that a server can process. If this number is exceeded, the server issues an error message.</p> <p>Default: 10</p>
PD_SOCKET	<p>Identifies the port number used by the InfoPrint communications daemon. Internet services reserve socket numbers up to 255. Other non-InfoPrint services reserve socket numbers in the range 256 through 1023. To determine the socket numbers already reserved before assigning a socket number to an InfoPrint communications daemon, look at the contents of the /etc/services file.</p> <p>Default: 6874</p>
PPO_DEFAULT_ENV	<p>The fully qualified name of the InfoPrint SMIT production print operations interface environment file, which contains a shell script that defines all other InfoPrint SMIT production print operations interface environment variables.</p> <p>Default: /usr/lpp/pd/bin/ppo.env</p>

Table 13 (Page 3 of 3). InfoPrint Environment Variables Defaulted or Set in the /etc/environment File

Variable	Description
PSFDBLANG	The language and code page used by the db2afp transform program. Values: j (Japanese, code page 932), c (Traditional Chinese, code page 938), je (Japanese EUC), ce (Traditional Chinese EUC), ke (Korean EUC)
PSFPATH	A path of directories that InfoPrint searches for print resources (fonts, form definitions, overlays, page definitions, and page segments). Separate multiple directories by a colon, : . Commands: pdpr
TIFF2AFP_option	Specifies options for the TIFF2AFP transform command. See “tiff2afp Command: Transforms TIFF Data to AFP” on page 292.
TYPESETTER	Determines how troff files are processed for printing. Values: afp, hplj, psc
XBMLANGPATH	A path of directories that AIX searches for the icons used by graphical user interfaces. Separate multiple directories by a colon, : .

Table 14 (Page 1 of 2). InfoPrint Environment Variables Set in the InfoPrint SMIT Production Print Operations Interface Environment File

Variable	Description
PPO_CANCEL_ALL_OPTION	Specifies whether operators have the option of cancelling all jobs. Values: 0 (no), 1 (yes) Default: 1 (yes)
PPO_FORM	The list of forms (media) that your printing operation can use. Separate form names by blanks.
PPO_JOB_BATCH	The list of job batches that your printing operation can use. Separate job batch names by blanks.
PPO_JOB_DETAILS_ATTRS	The job and document attributes that are displayed in the InfoPrint SMIT production print operations interface job status window. Separate attribute names by commas.
PPO_LP	The name of the default logical destination to which the InfoPrint SMIT production print operations interface resubmits print jobs.
PPO_LPS	The names of logical destinations that are available for job submission. Separate logical destination names by blanks.
PPO_PP_ATTRS	The actual destination attributes that are displayed in the InfoPrint SMIT production print operations interface destination status window. Separate attribute names by commas.

Environment Variables

Table 14 (Page 2 of 2). InfoPrint Environment Variables Set in the InfoPrint SMIT Production Print Operations Interface Environment File

Variable	Description
PPO_PPS	The names of the actual destinations that the InfoPrint SMIT production print operations interface manages. Separate actual destination names by blanks.
PPO_QUEUE	The name of the queue that the InfoPrint SMIT production print operations interface manages.
PPO_QUEUE_ATTRS	The queue attributes that are displayed in the InfoPrint SMIT production print operations interface queue status window. Separate attribute names by commas.
PPO_QUEUE_INFO_FILE	In installations that use multiple queues, the name of the file that maps queues to their environment files.
PPO_SERVER	The name of the server that the InfoPrint SMIT production print operations interface manages.
PPO_TRACE_FILE	The name of the file containing trace records for the InfoPrint SMIT production print operations interface manages. Use this environment variable only under the direction of IBM service.

Table 15 (Page 1 of 2). AIX Environment Variables

Variable	Description
LANG	The name of the locale to use for locale categories when neither LC_ALL nor the corresponding environment variable beginning with LC_ specifies a locale. Used to determine the language, territory, or character set of messages and other information that InfoPrint sends to a person. Commands: All
LC_ALL	The name of the locale used to override any values for locale categories specified by the setting of LANG or any environment variables beginning with LC_ . Commands: All
LC_CTYPE	The name of the locale for character classification. Commands: All
LC_MONETARY	The name of the locale containing monetary-related numeric editing information. Commands: All
LC_NUMERIC	The name of the locale containing numeric editing, such as radix and character information. Commands: All
LC_TIME	The name of the locale for date and time formatting information. Commands: All
LC_MESSAGES	The name of the locale for STDERR messaging. Commands: All

Table 15 (Page 2 of 2). AIX Environment Variables

Variable	Description
NLSPATH	A path of directories that AIX searches for locale-dependent files. Separate multiple directories by a colon, : .

Querying Environment Variables

You can use the **echo** command to query the value of an environment variable. For example, to determine the default logical destination, enter:

```
echo $PDPRINTER
```

To query all environment variables that have values set, enter:

```
env
```

Setting Environment Variables

You can use the **export** command to set environment variables:

- If you are an administrator, in an environment file.
 - You can set AIX environment variables and many InfoPrint environment variables in the **/etc/environment** file.
 - You can set some InfoPrint environment variables that affect the InfoPrint SMIT production print operations interface in the InfoPrint SMIT production print operations interface environment file. The **PPO_DEFAULT_ENV** environment variable defines the name of this file.

Settings in the environment files apply to all sessions for all users, unless a user resets the environment variables in the **.profile** file or on the command line.

Note: These settings do not apply to processes that are already running when you edit the file. For example, a server is a process. To make your changes effective, stop and restart the server.

- In the **.profile** file in your home directory. Settings in the **.profile** file override settings in the **/etc/environment** file and the InfoPrint SMIT production print operations interface environment file. These settings apply only to you and are in effect for all your AIX sessions, unless you reset the environment variables on the command line.
- On the command line for a single AIX session. Command line settings override settings in the **/etc/environment** file, the InfoPrint SMIT production print operations interface environment file, and your **.profile** file. These settings apply only to you and are in effect only until you exit the session.

In a File

To set an environment variable in a file, you need to edit the file with an editor. If you do not know how to use an editor, or the editor you are using is not capable of saving in the plain text (ASCII) file format, do not start. Ask your administrator for assistance.

Environment Variables

The following example shows how to set the **PDPRINTER** environment variable in your **.profile** file, using the **vi** editor.

1. Enter the following command to change to your home directory:

```
cd
```

2. Make a backup copy of the file:

```
cp -p .profile .profile.org
```

The **-p** flag gives the copy the same file permissions and modification date and time as the original file.

3. Enter the following command:

```
vi .profile
```

4. A typical **.profile** file contains lines similar to the following:

```
PATH=.:$HOME/bin:/bin:/usr/bin:/etc:/usr/ucb:/usr/bin/X11:tools/  
usr/bin:/usr/lpp/cmvc/bin:/usr/OV/bin:/usr/local/tools/rs6/bin:/usr  
/local/tools/rs6:/usr/dt/bin  
  
export PATH  
export EDITOR=vi
```

5. Insert or modify the following line in the **.profile** file:

```
export PDPRINTER=LogicalDestinationName
```

where *LogicalDestinationName* is the name of the logical destination you want to set as your default.

6. Save the change in plain text format and exit from the editor.

7. Make the change effective by entering the following command:

```
. .profile
```

8. Verify the change by entering the command:

```
echo $PDPRINTER
```

The logical destination name you entered displays.

On the Command Line

To set the value of the environment variable **PDPRINTER** to **Destination3** for a single AIX session, enter:

```
export PDPRINTER=Destination3
```


Chapter 9. Notification Events and Event Classes

Table 16 alphabetically lists the names of individual events that you can specify as values for the **event-identifiers** component of the **notification-profile** attribute. The information for each event includes a description, the event class or classes to which the event belongs, the InfoPrint objects that support the notification of the event, and the text of the notification message that InfoPrint generates for the event. Items in the message text shown in *italics* are variables for which InfoPrint supplies values when it issues the message.

Table 16 (Page 1 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
checkpoint-taken	class-job-status class-report	Job
	The server saved checkpoint information (where it can restart this job, if necessary) for this job.	
	5010-218 The server saved checkpoint information for job <i>JobID</i> (<i>ServerName:GlobalID</i>).	
close-to-discard-time	class-job-attention class-warning	Job Server
	The date and time specified by the job-discard-time or the job-retention-period attribute is approaching. InfoPrint will delete the job at the discard time.	
	5010-234 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) is close to being discarded.	
destination-disabled	class-actual-destination-attention class-logical-destination-attention class-warning	Actual destination Logical destination Queue Server
	InfoPrint disabled a logical destination or actual destination and it will not accept new jobs.	
	5010-240 Successfully disabled destination <i>ServerName:DestinationName</i> .	
destination-enabled	class-actual-destination-attention class-logical-destination-attention class-warning	Actual destination Logical destination Queue Server
	InfoPrint enabled a logical destination or actual destination and it now accepts jobs.	
	5010-226 Successfully enabled destination <i>ServerName:DestinationName</i> .	

Notification Events

Table 16 (Page 2 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
destination-function-unavailable	class-actual-destination-status class-job-attention class-warning	Actual destination Server
	The actual destination requires an output device function, such as duplex or offset stacking, that is not available. The function is disabled, but processing continues.	
	5010-307 The destination <i>ServerName:DestinationName</i> requires a function that is not available.	
destination-needs-administrator	class-actual-destination-attention class-actual-destination-default class-job-attention class-warning	Actual destination Job Server
	The server or actual destination detected a condition requiring administrator intervention. The actual destination is disabled.	
	5010-306 The destination <i>ServerName:DestinnationName</i> needs administrator attention.	
destination-needs-attention	class-actual-destination-attention class-actual-destination-default class-job-attention class-job-default class-warning	Actual destination Job Server
	The actual destination needs attention from a person, not necessarily the operator. The actual destination cannot process jobs until it receives attention.	
	5010-245 Actual destination <i>ServerName:destinnationname</i> needs attention.	
destination-needs-operator	class-actual-destination-attention class-actual-destination-default class-job-attention class-job-default class-warning	Actual destination Job Server
	An actual destination needs operator attention. The actual destination cannot process jobs until it receives attention.	
	5010-246 Actual destination <i>ServerName:DestinationName</i> needs operator attention.	
destination-registered	class-actual-destination-status class-report	Actual destination Queue Server
	An actual destination has registered with this queue. The queue can now schedule jobs to this actual destination.	
	5010-223 Actual destination <i>ServerName:DestinationName</i> registered with queue <i>ServerName:QueueName</i> .	

Table 16 (Page 3 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
destination-shutdown-job-requeued	class-actual-destination-attention class-job-attention class-warning	Actual destination Job Server
	The actual destination shut down after this job started processing. The job was requeued and will be scheduled again.	
	5010-237 Actual destination <i>ServerName:DestinationName</i> was shut down after job <i>JobID (ServerName:GlobalID)</i> started processing.	
destination-state-changed	class-actual-destination-status class-state-changed	Actual destination
	The actual destination state changed. Processing continues.	
	5010-228 The state of actual destination <i>ServerName:DestinationName</i> changed to <i>State</i> .	
destination-timed-out	class-actual-destination-attention class-actual-destination-default class-warning	Actual destination Server
	The actual destination did not connect or get a response from the output device in the time specified by the destination-timeout-period actual destination attribute. Another application is using the output device or job progress at the output device has stopped. The actual destination continues its attempts to connect or print to the output device. The actual destination cannot process jobs until it connects to the device. Check the server error log for additional information.	
	5010-247 Actual destination <i>ServerName:DestinationName</i> has timed out.	
destination-unregistered	class-actual-destination-status class-warning	Actual destination Queue Server
	This actual destination is no longer registered with this queue and the queue no longer sends jobs to this actual destination.	
	5010-243 Actual destination <i>ServerName:DestinationName</i> is no longer registered with <i>ServerName:QueueName</i> .	
destinations-not-ready-for-job	class-job-attention class-job-default class-warning	Job Queue Server
	There are no actual destinations currently available that can support the "ready" attributes for the job. Ready attributes include job-batch , total-job-octets , default-medium , and page-media-select .	
	5010-702 The job <i>JobID (ServerName:GlobalID)</i> cannot be scheduled to an actual destination because resources are not currently ready.	
detailed-messages	class-job-attention class-report	Actual destination Job Server
	The print backend has sent a message.	
	5010-302 <i>Message from the print backend program</i>	

Notification Events

Table 16 (Page 4 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
document-aborted-by-destination	class-aborted class-job-attention class-job-default	Actual destination Job Server
	The actual destination deleted the document without printing or transmitting it. Errors occurred during processing.	
	5010-292 Document <i>DocNum FileName</i> in job <i>JobID</i> (<i>ServerName:GlobalID</i>) was aborted by the actual destination.	
document-aborted-by-server	class-aborted class-job-attention class-job-default	Actual destination Job (AIX DSS only) Server
	The server aborted this document and deleted it.	
	5010-206 Document <i>DocNum (FileName)</i> in print job <i>JobID</i> (<i>ServerName:GlobalID</i>) was aborted by the server.	
document-cancelled-at-destination	class-aborted class-job-attention class-job-default	Actual destination Job Server
	The document was cancelled at the actual destination.	
	5010-293 Document <i>DocNum (FileName)</i> in job <i>JobID</i> (<i>ServerName:GlobalID</i>) was cancelled at the actual destination.	
document-content	class-error class-job-problem	Actual destination Server
	The server detected an error in the content of this file during printing. An example of this type of error is a syntax error in the page description language for this file.	
	5010-208 An error was detected in document <i>DocNum (FileName)</i> of job <i>JobID</i> (<i>ServerName:GlobalID</i>) during printing.	
file-transferred	class-job-status class-report	Job
	A file transfer completed successfully. The file may now be modified without affecting the output.	
	5010-219 Server (<i>ServerName</i>) completed the transfer of document <i>DocNum (FileName)</i> in job <i>JobID</i> (<i>ServerName:GlobalID</i>).	
internal-server-error	class-error class-server-attention class-server-default	Server
	A server error occurred. The process failed.	
	5010-215 An internal error was detected in server <i>ServerName</i> .	

Table 16 (Page 5 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
job-aborted-by-server	class-aborted class-job-attention class-job-default	Actual destination Job Queue Server
	The server aborted this job because job or output device errors occurred during printing or transmission.	
	5010-204 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) stopped printing due to job or device errors.	
job-assigned-to-destination	class-report	Job
	This job was assigned to this actual destination.	
	5010-660 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) is assigned to destination <i>ServerName:DestinationName</i>	
job-assigned-to-destination-at-end	class-report	Job
	This job is the last job assigned to this actual destination.	
	5010-659 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) is the last job assigned to destination <i>ServerName:DestinationName</i>	
job-assigned-to-queue	class-job-status class-report	Job Queue Server
	This job was assigned to this queue in this state. Processing continues.	
	5010-301 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) is assigned to queue <i>ServerName:QueueName</i> and is in the <i>State</i> state.	
job-cancelled-by-operator	class-aborted class-job-attention class-job-default	Actual destination Job Queue Server
	The operator or administrator deleted the job.	
	5010-196 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was cancelled by the operator or administrator.	
job-cancelled-by-user	class-aborted class-job-attention	Actual destination Job Queue Server
	The user deleted the job.	
	5010-197 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was cancelled by the user.	

Notification Events

Table 16 (Page 6 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
job-cannot-be-scheduled	class-job-attention class-job-default class-warning	Job Queue Server
	<p>There are no longer any actual destinations available that can support the attributes for the job. The actual destination that supported the attributes for the job at submission is no longer available. The job remains in the queue. Resubmit the job to a logical destination that supports the attributes for the job.</p>	
	<p>5010-103 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) cannot be scheduled to an actual destination.</p>	
job-completed	class-job-default class-job-status class-report	Actual destination Job Queue Server
	<p>The job completed processing. If more than one actual destination processed this job, the last actual destination is identified in the message. It may or may not have completed successfully. Check the output.</p>	
	<p>5010-055 Job name <i>jobname</i> with ID <i>JobID</i> (<i>ServerName:GlobalID</i>) completed on <i>DestinationName</i>.</p>	
job-discarded	class-job-attention class-job-default class-report	Job Queue Server
	<p>The date and time specified by the job-discard-time, the job-retain-until, or the job-retention-period attribute passed. InfoPrint deleted the job. The job may or may not have printed if it was discarded because of the job-retain-until or job-retention-period value.</p>	
	<p>5010-220 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was discarded by the server after it printed or the retention period expired.</p>	
job-modified	class-job-status class-warning	Job
	<p>The job was modified. Processing continues.</p>	
	<p>5010-202 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was modified.</p>	
job-paused	class-job-attention class-warning	Job
	<p>The job was paused. If the job state was processing or printing, it stopped. InfoPrint cannot schedule the job until it is resumed.</p>	
	<p>5010-203 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was paused.</p>	
job-promoted	class-job-status class-report	Job Queue Server
	<p>The job was promoted to the highest position in the queue.</p>	
	<p>5010-198 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was promoted.</p>	

Table 16 (Page 7 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
job-reordered	class-job-status class-report	Job Queue Server
	The job was successfully moved to a different actual destination or to the unassigned jobs area.	
	5010-846 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was moved from <i>ServerName1:DestinationName1</i> to <i>ServerName2:DestinationName2</i> .	
job-reqeued	class-job-status class-warning	Job
	InfoPrint added to the job to the queue for rescheduling because the actual destination that accepted the job can no longer print the job.	
	5010-322 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) is added to the queue to be scheduled again.	
job-resubmitted	class-job-status class-report	Job Queue Server
	The job was successfully resubmitted to a different logical destination. Processing continues.	
	5010-222 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was resubmitted to logical destination <i>ServerName:DestinationName</i> from queue <i>ServerName:QueueName</i> .	
job-resumed	class-job-status class-report	Job Queue Server
	The job was resumed. If the job state is pending, InfoPrint can schedule the job to an actual destination.	
	5010-199 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was resumed.	
job-retained	class-report	Job
	The job is retained.	
	5010-199 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) is retained.	
job-state-changed	class-job-status class-state-changed	Job
	The state of the job has changed. Processing continues.	
	5010-201 The state of job <i>JobID</i> (<i>ServerName:GlobalID</i>) changed to <i>State</i> .	

Notification Events

Table 16 (Page 8 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
job-submission-not-complete	class-error	Job
	class-job-problem	Server
	<p>The server waited for the amount of time specified in its job-submission-timer attribute to receive an indication that all of the document objects in a job have been sent. It did not receive that indication. The server will process the documents it has received as a complete job.</p> <p>5010-209 The final document indication for job <i>JobID</i> (<i>ServerName:GlobalID</i>) was not received by the server within the server's job-submission-timer interval. Job processing will continue.</p>	
job-unassigned	class-report	Job
	<p>This job has been placed in the server's unassigned jobs area.</p> <p>5010-661 The job <i>JobID</i> (<i>ServerName:GlobalID</i>) is not assigned to any destination.</p>	
no-document	class-error	Actual destination
	class-job-problem	Job Server
	<p>The server could not access the document. The document and possibly the entire job have been aborted. Check the error log for messages related to this failure.</p> <p>5010-210 Document <i>DocNum</i> (<i>FileName</i>) in job <i>JobID</i> (<i>ServerName:GlobalID</i>) could not be accessed by the server.</p>	
no-resource	class-error	Actual destination
	class-job-problem	Server
	<p>A resource needed by this job is unavailable. InfoPrint aborted the job. Check the error log for messages related to this failure.</p> <p>5010-211 The resource <i>Resource</i> needed by job <i>JobID</i> (<i>ServerName:GlobalID</i>) was not available.</p>	
object-cleaned	class-actual-destination-default	Actual destination
	class-actual-destination-status	Logical destination
	class-logical-destination-default	Queue
	class-logical-destination-status	Server
	class-queue-default	
	class-queue-status	
	class-server-default	
	class-server-status	
	class-warning	
	<p>InfoPrint deleted jobs from this object. Processing continues.</p> <p>5010-244 Successfully cleaned object <i>ObjectClass</i> <i>ServerName:ObjectName</i>.</p>	

Table 16 (Page 9 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
object-created	class-actual-destination-configuration class-logical-destination-configuration class-queue-configuration class-report	Actual destination Logical destination Queue Server
	The object was created.	
	5010-224 Successfully created object <i>ObjectClass</i> <i>ServerName:ObjectName.</i>	
object-deleted	class-actual-destination-configuration class-actual-destination-default class-logical-destination-configuration class-logical-destination-default class-queue-configuration class-queue-default class-server-configuration class-server-default class-report	Actual destination Logical destination Queue Server
	The object was deleted.	
	5010-225 Successfully deleted object <i>ObjectClass</i> <i>ServerName:ObjectName.</i>	
object-modified	class-actual-destination-configuration class-logical-destination-configuration class-queue-configuration class-server-configuration class-server-default class-warning	Actual destination Logical destination Queue Server
	The object was modified.	
	5010-241 Successfully modified object <i>ObjectClass</i> <i>ServerName:ObjectName.</i>	
object-paused	class-actual-destination-attention class-queue-attention class-warning	Actual destination Job Queue Server
	InfoPrint paused an actual destination or queue and it cannot process jobs.	
	5010-242 Successfully paused object <i>ObjectClass</i> <i>ServerName:ObjectName.</i>	
object-resumed	class-actual-destination-status class-queue-status class-report	Actual destination Job Queue Server
	InfoPrint resumed an actual destination or queue.	
	5010-227 Successfully resumed object <i>ObjectClass</i> <i>ServerName:ObjectName.</i>	

Notification Events

Table 16 (Page 10 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
other-error	class-error class-server-attention	Actual destination Server
	An error occurred for this object that no other message describes. Check the error log for messages related to this failure.	
	5010-217 Server <i>ServerName</i> encountered an error.	
other-warning	class-server-attention class-warning	Actual destination Server
	The object encountered a warning condition that no other event describes. This warning condition may precede an error. Check the error log for messages related to this failure.	
	5010-236 Server <i>ServerName</i> has encountered a warning condition.	
past-discard-time	class-error class-job-attention	Job Queue Server
	The date and time specified by the job-discard-time job attribute passed before the job printed and InfoPrint discarded the job.	
	5010-213 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) was discarded before it printed.	
processing-started	class-job-status class-report	Actual destination Job Queue Server
	The server has begun to process the job. InfoPrint has scheduled the job to print on an actual destination.	
	5010-200 Job <i>JobID</i> (<i>ServerName:GlobalID</i>) is processing.	
queue-backlogged	class-queue-attention class-queue-default class-warning	Job Queue Server
	InfoPrint calculates that there are too many jobs in this queue for all jobs to print within the amount of time specified for the object-class-backlog-upper-bound attribute. The queue continues to accept jobs, but there is a delay before they print.	
	5010-304 The queue <i>ServerName:QueueName</i> is backlogged.	
queue-no-longer-backlogged	class-queue-status class-report	Job Queue Server
	The queue is no longer backlogged. InfoPrint calculates that the jobs currently in the queue will print within the amount of time specified for the object-class-backlog-lower-bound attribute.	
	5010-299 The queue <i>ServerName:QueueName</i> is no longer backlogged.	

Table 16 (Page 11 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
queue-state-changed	class-queue-status class-state-changed	Queue
	The queue state changed. Processing continues.	
	5010-230 The state of queue <i>ServerName:QueueName</i> changed to <i>State</i> .	
resource-needs-attention	class-actual-destination-attention class-warning	Actual destination Server
	This resource needs attention from a person, not necessarily the operator. InfoPrint cannot process jobs requiring this resource until someone corrects the problem.	
	5010-238 Resource <i>Resource</i> on actual destination <i>ServerName:DestinationName</i> needs attention.	
resource-needs-operator	class-actual-destination-attention class-warning	Actual destination Server
	This resource needs attention from an operator. InfoPrint cannot process jobs requiring this resource until an operator corrects the problem.	
	5010-239 Resource <i>Resource</i> on actual destination <i>ServerName:DestinationName</i> needs operator attention.	
server-shutdown-complete	class-server-attention class-server-default class-report	Server
	This server has shut down and is no longer available.	
	5010-295 Successfully shut down server <i>ServerName</i> .	
server-shutdown-started	class-server-attention class-warning	Server
	This server has begun to shut down. It does not accept jobs.	
	5010-305 The server <i>ServerName</i> is shutting down.	
server-startup-complete	class-report class-server-configuration	Server
	InfoPrint started this server.	
	5010-294 Successfully started server <i>ServerName</i> .	
server-state-changed	class-server-status class-state-changed	Server
	The state of the server has changed.	
	5010-299 The state of server <i>ServerName</i> changed to <i>State</i> .	

Notification Events

Table 16 (Page 12 of 12). Notification Events

Event	Event Class	Objects Supported
	Description	
	Message	
unable-to-register	class-warning	Actual destination Server
	The actual destination could not register with the queue within the amount of time specified for the destination-register-threshold actual destination attribute. InfoPrint cannot schedule jobs to the actual destination.	
	5010-437 The actual destination <i>ServerName:DestinationName</i> cannot register with the queue <i>QueueName</i> .	
unrecognized-resource	class-error class-job-problem	Actual destination Server
	A resource required for this job is not known to the server. The job was aborted. Check the server error log for messages related to this failure.	
	5010-214 Resource <i>Resource</i> that is required for job <i>JobID</i> (<i>ServerName:GlobalID</i>) is not known to the server.	

An event class is an easy way to include multiple events in a value. Event classes group events based on the functions for which they provide notification. For example, some classes are specific to configuration tasks while other classes provide information about the status of InfoPrint objects. Each event class name begins with **class**.

Note: An event identifier can occur in more than one class. For example, **object-cleaned** occurs in **class-logical-destination-default**, **class-logical-destination-status**, **class-actual-destination-default**, **class-actual-destination-status**, **class-object-class-default**, **class-object-class-status**, **class-server-default**, **class-server-status**, and **class-warning**. If the notification profile values list any of these event classes and you clean a logical destination, actual destination, queue, or server, InfoPrint sends a message to the person identified in that value.

Table 17 (Page 1 of 6). Notification Event Classes

Event Class	Description
	Events
class-aborted	An aborted event occurs whenever a server aborts a job or document object, or when the user or operator cancels a job.
	document-aborted-by-destination document-aborted-by-server document-cancelled-at-destination job-aborted-by-server job-cancelled-by-operator job-cancelled-by-user

Table 17 (Page 2 of 6). Notification Event Classes

Event Class	Description
	Events
class-actual-destination-attention	<p>These events indicate that problems exist with the actual destination. Such problems usually require an operator or administrator to intervene.</p> <p>destination-disabled destination-needs-administrator destination-needs-attention destination-needs-operator destination-shutdown-job-requeued destination-timed-out object-paused resource-needs-attention resource-needs-operator</p>
class-actual-destination-configuration	<p>These events have to do with the creation or deletion of an actual destination, or with modification of the attributes of an actual destination.</p> <p>object-created object-deleted object-modified</p>
class-actual-destination-default	<p>This is the default event class for actual destinations.</p> <p>destination-needs-administrator destination-needs-attention destination-needs-operator destination-timed-out object-cleaned object-deleted</p>
class-actual-destination-status	<p>This event class includes events that give detailed status about the actual destination. These changes in status are often routine and do not require intervention.</p> <p>destination-enabled destination-function-unavailable destination-registered destination-state-changed destination-unregistered object-cleaned object-resumed</p>
class-error	<p>An error event occurs whenever an error occurs. Generally, an error event signals a condition that may prevent the job from completing successfully, depending on the settings of other parameters.</p> <p>document-content internal-server-error job-submission-not-complete no-document no-resource other-error past-discard-time unrecognized-resource</p>

Notification Events

Table 17 (Page 3 of 6). Notification Event Classes

Event Class	Description
class-job-attention	<p>These events indicate that problems exist with a job. They usually require an operator or administrator to intervene.</p> <p>close-to-discard-time destination-function-unavailable destination-needs-administrator destination-needs-attention destination-needs-operator destination-shutdown-job-requeued destinations-not-ready-for-job detailed-messages document-aborted-by-destination document-aborted-by-server document-cancelled-at-destination job-aborted-by-server job-cancelled-by-operator job-cancelled-by-user job-cannot-be-scheduled job-discarded job-paused past-discard-time</p>
class-job-default	<p>This is the default event class for jobs.</p> <p>document-aborted-by-destination document-aborted-by-server document-cancelled-at-destination destination-needs-attention destination-needs-operator destinations-not-ready-for-job job-aborted-by-server job-cancelled-by-operator job-cannot-be-scheduled job-completed past-discard-time</p>
class-job-problem	<p>These are events in which the job has encountered a problem but will attempt to proceed.</p> <p>document-content job-submission-not-complete no-document no-resource unrecognized-resource</p>

Table 17 (Page 4 of 6). Notification Event Classes

Event Class	Description
	Events
class-job-status	This event class includes events that give detailed status about the job. These changes in status are often routine and do not require intervention. checkpoint-taken file-transferred job-assigned-to-queue job-completed job-modified job-promoted job-reordered job-queued job-resubmitted job-resumed job-state-changed processing-started
class-logical-destination-attention	This event indicates that a problem exists with the logical destination. An operator or administrator usually has to intervene. destination-disabled
class-logical-destination-configuration	These events have to do with the creation or deletion of a logical destination, or with modification of the attributes of a logical destination. object-created object-deleted object-modified
class-logical-destination-default	This is the default event class for logical destinations. object-cleaned object-deleted
class-logical-destination-status	This event class includes events that give detailed status about the logical destination. These changes in status are often routine and do not require intervention. destination-enabled object-cleaned
class-queue-attention	These events indicate that problems exist with the queue. An operator or administrator usually has to intervene. object-paused queue-backlogged
class-queue-configuration	These events have to do with the creation or deletion of a queue, or with the modification of the attributes of a queue. object-created object-deleted object-modified
class-queue-default	This is the default event class for queues. object-cleaned object-deleted queue-backlogged

Notification Events

Table 17 (Page 5 of 6). Notification Event Classes

Event Class	Description
	Events
class-queue-status	<p>This event class includes events that give detailed status about the queue. These changes in status are often routine and do not require intervention.</p> <p>object-cleaned object-resumed queue-no-longer-backlogged queue-state-changed</p>
class-report	<p>A report event occurs whenever a significant point in processing occurs.</p> <p>checkpoint-taken destination-enabled destination-registered detailed-messages file-transferred job-assigned-to-destination job-assigned-to-destination-at-end job-assigned-to-queue job-completed job-discarded job-promoted job-reordered job-resubmitted job-resumed job-retained job-unassigned object-created object-deleted object-resumed processing-started queue-no-longer-backlogged server-shutdown-complete server-startup-complete</p>
class-server-attention	<p>These events indicate that problems exist with the server. They usually require an administrator to intervene.</p> <p>internal-server-error other-error other-warning server-shutdown-complete server-shutdown-started</p>
class-server-configuration	<p>These events have to do with the creation or deletion of a server or with modification of the attributes for a server.</p> <p>object-deleted object-modified server-startup-complete</p>
class-server-default	<p>This is the default event class for servers.</p> <p>internal-server-error object-cleaned object-deleted server-shutdown-complete</p>

Table 17 (Page 6 of 6). Notification Event Classes

Event Class	Description
	Events
class-server-status	This event class includes events that give detailed status about the server. These changes in status are often routine and do not require intervention.
	object-cleaned server-state-changed
class-state-changed	A state-change event occurs whenever the state of an actual destination, job, queue, or server changes.
	destination-state-changed job-state-changed queue-state-changed server-state-changed
class-warning	A warning event occurs whenever a condition arises which affects processing. Generally, a warning event signals a condition that does not prevent completion of the processing, but it may require some action by the operator or user.
	close-to-discard-time destination-disabled destination-function-unavailable destination-needs-administrator destination-needs-attention destination-needs-operator destination-shutdown-job-requeued destination-timed-out destination-unregistered destinations-not-ready-for-job job-cannot-be-scheduled job-modified job-paused job-requeued object-cleaned object-modified object-paused other-warning queue-backlogged resource-needs-attention resource-needs-operator server-shutdown-started unable-to-register

Notification Events

Appendix A. Attribute-to-Object Listing

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
accept-jobs	Actual destination	313
accept-unsupported-jobs	Server	558
account-text	Default document Document	408 408
accounting-exit	Actual destination	314
ack-interval	Actual destination	314
actual-destinations-assigned	Queue	544
actual-destinations-ready	Queue Server	544 559
actual-destinations-requested	Default job Job	465 465
actual-destinations-supported	Server	559
add-carriage-returns	Actual destination	314
add-line-feeds	Actual destination	315
address1-text	Default document Document	408 408
address2-text	Default document Document	408 408
address3-text	Default document Document	409 409
address4-text	Default document Document	409 409
ascii-character-mapping	Actual destination	315
ascii-font-map	Actual destination	315
assign-to-destination	Queue	545
assign-to-printer	Queue	545
associated-queue	Actual destination Logical destination	316 512
associated-server	Actual destination Auxiliary sheet Default document Default job Log Logical destination Medium Queue Resource context	317 399 410 466 506 512 538 546 555
attachment-type	Actual destination	317
attribute-map	Actual destination	318
audit-exit	Actual destination	318
authorize-jobs	Logical destination	513
automatic-postscript-mode-switch	Actual destination	319

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
auxiliary-sheet-identifier	Auxiliary sheet	399
auxiliary-sheet-selection	Default job Job	466 466
auxiliary-sheet-selections-supported	Actual destination Logical destination	319 513
backlog	Queue	552
backlog-lower-bound	Queue	546
backlog-update-interval	Queue	546
backlog-upper-bound	Queue	547
backlogged	Queue	547
base-printer	Actual destination	410
bits-per-spot	Default document Document	410 410
black-overprint	Default document Document	411 411
building-text	Default document Document	411 411
cancel-individual-document-supported	Actual destination Server	320 559
callback-number	Default document Document	411 411
carriage-control-type	Default document Document	412 412
carriage-control-types-supported	Actual destination Logical destination	320 514
character-mappings-supported	Actual destination Logical destination	320 514
chars	Default document Document	412 412
checkpoint-at-stacker	Actual destination	321
checkpoint-formats-supported	Actual destination	322
cms-proclink	Default document Document	413 413
cms-product	Default document Document	413 413
command	Actual destination	326
comment	Default job Job	476 476
completion-time	Job	467
compressed-output	Default document Document	414 414
connection-timeout	Actual destination	322
content-orientation	Default document Document	414 414

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
content-orientations-supported	Actual destination	322
	Logical destination	515
context-address	Resource context	556
control-strip	Default document	415
	Document	415
convert-to-ebcdic	Default document	415
	Document	415
convert-to-ebcdic-supported	Actual destination	323
	Logical destination	515
copies	Default document	415
	Document	415
copy-count	Default document	415
	Document	415
current-backlog	Queue	552
current-job-state	Job	467
current-page-printing	Job	468
d-s-s-requested	Default job	473
	Job	473
data-fidelity-problem-reported	Default document	416
	Document	416
data-fidelity-problem-reported-supported	Actual destination	323
	Logical destination	516
deadline-in-jeopardy	Job	469
default-character-mapping	Default document	416
	Document	416
default-font-fidelity-action	Actual destination	324
default-font-resolution	Actual destination	324
default-input-tray	Actual destination	325
	Default document	417
	Document	417
default-medium	Default document	418
	Document	418
default-printer-resolution	Default document	418
	Document	418
delete-segment-list	Default job	469
	Job	469
department-text	Default document	419
	Document	419

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
descriptor	Actual destination	325
	Auxiliary sheet	400
	Default document	419
	Default job	469
	Log	506
	Logical destination	516
	Medium	539
	Queue	548
	Resource context	556
Server	560	
destination-associated-destinations	Logical destination	517
destination-command	Actual destination	326
destination-company-text	Default document	420
	Document	420
destination-data-stream	Actual destination	327
destination-initial-value-document	Document	420
	Logical destination	517
destination-initial-value-job	Job	470
	Logical destination	517
destination-locations	Actual destination	327
	Logical destination	518
destination-locations-requested	Default job	470
	Job	470
destination-model	Actual destination	327
	Logical destination	518
destination-models-requested	Default job	471
	Job	471
destination-name	Actual destination	328
	Logical destination	519
destination-name-requested	Job	471
destination-needs-attention-time	Actual destination	329
destination-needs-key-operator-attention-time	Actual destination	329
destination-pass-through	Actual destination	329
	Default document	420
	Document	420
destination-realization	Actual destination	330
	Logical destination	519
destination-register-threshold	Actual destination	330
destination-release-timer	Actual destination	331
destination-state	Actual destination	331
destination-states-supported	Server	560
destination-support-system	Actual destination	332
	Logical destination	520
destination-tcpip-internet-address	Actual destination	333
destination-tcpip-port-number	Actual destination	333
destinations-assigned	Job	472

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
destinations-ready	Logical destination	520
destinations-used	Job	472
device-name	Actual destination	334
device-support-system	Actual destination	332
	Logical destination	520
device-support-system-requested	Default job	473
	Job	473
discard-time	Job	478
document-attributes-supported	Actual destination	335
	Server	561
document-comment	Default document	420
	Document	420
document-content	Document	421
document-content-list	Document	421
document-file-name	Document	421
document-finishing	Default document	422
	Document	422
document-finishings-supported	Actual destination	336
document-format	Default document	422
	Document	422
document-formats-supported	Actual destination	337520
	Logical destination	
document-number	Document	423
document-sequence-number	Document	423
document-type	Document	423
document-types-supported	Actual destination	338
	Logical destination	521
dot-shape	Default document	425
	Document	425
dss-job-message-disposition	Actual destination	339
dss-job-message-log-size	Actual destination	339
dss-job-message-log-wrap	Actual destination	339
dss-requested	Default job	473
	Job	473
ebcdic-character-mapping	Actual destination	340
email-from-address	Default document	425
	Document	425
email-to-address	Default document	426
	Document	426
enable-settrap	Default document	426
	Document	426
enabled	Actual destination	340
	Log	507
	Logical destination	522

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
end-message	Default job	478
	Job	478
end-message-supported	Actual destination	340
	Logical destination	522
end-sheets-supported	Actual destination	341
estimated-completion-time	Job	473
estimated-processing-time	Job	474
events-supported	Server	561
fax-number	Default document	426
	Document	426
fax-to-name	Default document	427
	Document	427
file-name	Document	421
font-fidelity-action	Default document	427
	Document	427
font-processing-messages	Default document	427
	Document	427
font-resolution	Default document	428
	Document	428
font-resolutions-supported	Actual destination	342
force-destination-setup	Actual destination	342
force-printer-setup	Actual destination	342
form-definition	Actual destination	343
	Default document	428
	Document	428
format	Default document	422
	Document	422
formatted-job-ticket-content	Job	474
global-id	Job	480
hold	Default job	479
	Job	479
hostname	Server	574
i-p-address	Server	574
image-center-x	Default document	429
	Document	429
image-center-y	Default document	429
	Document	429
image-fit	Default document	430
	Document	430
image-fit-supported	Actual destination	343
image-length	Actual destination	344
	Default document	430
	Document	430
image-out-format	Default document	431
	Document	431

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
image-out-formats-supported	Actual destination	345
	Logical destination	523
image-scale	Default document	432
	Document	432
image-width	Actual destination	345
	Default document	432
	Document	432
initial-value-document	Document	433
initial-value-document-identifier	Default document	434
initial-value-job	Job	475
initial-value-job-identifier	Default job	475
input-data-user-exit	Actual destination	346
input-exit	Default document	434
	Document	434
input-tray-select	Default document	435
	Document	435
input-trays-medium	Actual destination	347
input-trays-supported	Actual destination	348
	Logical destination	523
intervening-jobs	Job	475
intervention-timer	Actual destination	349
ip-address	Server	574
job-attributes-supported	Actual destination	349
	Server	563
job-batch	Default job	476
	Job	476
job-batches-ready	Actual destination	350
job-client-id	Job	476
job-comment	Default job	476
	Job	476
job-complexity	Default job	477
	Job	477
job-copies-completed	Job	477
job-deadline-time	Job	477
job-discard-time	Job	478
job-end-message	Default job	478
	Job	478
job-finishing	Default job	478
	Job	478
job-finishings-supported	Actual destination	350
job-hold	Default job	479
	Job	479
job-identifier	Job	480
job-log	Job	480

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
job-media-sheet-count	Job	481
job-message-from-administrator	Job	481
job-message-to-operator	Default job Job	481 481
job-name	Default job Job	482 482
job-originator	Job	482
job-owner	Job	483
job-page-count	Job	483
job-print-after	Job	484
job-priority	Default job Job	484 484
job-retain-until	Job	484
job-retention-period	Default job Job	485 485
job-retry-count-limit	Actual destination	350
job-retry-interval	Actual destination	351
job-rip-action	Default job Job	485 485
job-rip-actions-supported	Actual destination	351
job-size	Job	504
job-size-range-ready	Actual destination	352
job-size-range-supported	Actual destination Logical destination	353 524
job-start-message	Default job Job	486 486
job-start-wait	Default job Job	487 487
job-start-wait-supported	Actual destination	353
job-state	Job	467
job-state-reasons	Job	487
job-state-reasons-supported	Server	563
job-states-supported	Server	564
job-submission-complete	Job	489
job-submission-timer	Server	564
job-ticket-content	Job	474
last-accessor	Job	492
last-modifier	Job	492
list-of-managers	Actual destination Default document Default job Logical destination Queue Server	354 435 489 525 548 564

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
locale	Server	565
locations	Actual destination Logical destination	327 518
locations-requested	Default job Job	470 470
log-accounting data	Actual destination Server	354 565
log-address	Log	507
log-identifier	Log	507
log-messages	Log	508
log-severity	Log	508
log-size	Log	509
log-trace-groups	Log	509
log-type	Log	510
log-wrap	Log	510
logical-destinations-assigned	Queue	549
logical-destinations-ready	Default document Default job Queue Server	435 490 549 566
logical-destinations-supported	Server	566
logical-printer	Logical destination	519
logical-printer-requested	Job	471
logical-printers-assigned	Queue	549
logical-printers-ready	Default document Default job Queue Server	435 490 549 566
logical-printers-supported	Server	566
managers	Actual destination Default document Default job Logical destination Queue Server	354 435 489 525 548 564
maximum-barco-rips	Server	566
maximum-concurrent-jobs	Actual destination	355
maximum-copies-supported	Actual destination Logical destination	356 526
maximum-fonts-to-keep	Actual destination	356
maximum-messages-printed	Default document Document	436 436
maximum-non-raster-rips	Server	567
maximum-overlays-to-keep	Actual destination	356
maximum-raster-rips	Server	567

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
maximum-segments-to-keep	Actual destination	357
maximum-transform-pages-ahead	Default document Document	436 436
media-ready	Actual destination	357
media-sheet-count	Job	481
media-sheets-completed	Job	491
media-supported	Actual destination Logical destination	358 526
medium-color	Medium	539
medium-dimensions	Medium	540
medium-form-parts	Medium	540
medium-holes-count	Medium	541
medium-identifier	Medium	541
medium-sides	Medium	542
medium-size	Medium	542
medium-type	Medium	542
message	Actual destination Default document Default job Logical destination Medium Queue Server	359 436 491 527 543 550 568
message-font-type	Actual destination	359
message-form-definition	Actual destination	359
message-from-administrator	Job	481
message-to-operator	Default job Job	481 481
model	Actual destination Logical destination	327 518
models-requested	Default job Job	471 471
modification-time	Job	492
modify-individual-document-supported	Server	568
multiple-documents-supported	Server	568
mvs-class	Default document Document	437 437
mvs-destination	Default document Document	437 437
mvs-forms	Default document Document	437 437
mvs-segment-id	Default document Document	438 438
name	Default job Job	482 482

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
name-of-last-accessor	Job	492
name-text	Default document Document	438 438
new-job-identifier	Job	492
new-line-option	Default document Document	439 439
node-id-text	Default document Document	439 439
non-process-runout-timer	Actual destination	360
notification-delivery-methods-supported	Server	568
notification-profile	Actual destination Default job Job Logical destination Queue Server	360 492 492 527 550 569
notify-operator	Actual destination Queue	361 551
npm-server-ip-address	Server	570
npm-server-port-number	Server	570
nt-drivers	Logical destination	534
number-of-documents	Job	494
number-up	Document	440
number-up-supported	Actual destination	362
object-class	Actual destination Auxiliary sheet Default document Document Default job Job Log Logical destination Medium Queue Resource context Server	363 400 440 440 495 495 510 528 543 552 556 571
object-classes-supported	Server	571
octet-count	Document	440
octets-completed	Job	495
offset-stacking-available	Actual destination	363
operators	Actual destination Queue	361 551
optimize-for-multiple-copies	Actual destination Default job Job	363 495 495
orientation	Default document Document	414 414

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
orientations-supported	Actual destination	322
	Logical destination	515
originating-company-text	Default document	441
	Document	441
originator	Job	482
os2-driver-names	Logical destination	528
os2-drivers	Logical destination	528
other-options	Actual destination	329
	Default document	420
	Document	420
other-transform-options	Default document	441
	Document	441
output-appearance	Default document	441
	Document	441
output-appearances-supported	Actual destination	364
output-bin	Actual destination	365
	Default document	442
	Document	442
output-bin-numbers	Actual destination	365
output-bins-supported	Actual destination	366
output-data-user-exit	Actual destination	366
output-face-up	Default document	442
	Document	442
output-format	Default document	443
	Document	443
output-format-supported	Actual destination	367
overlay	Actual destination	367
	Default document	444
	Document	444
overprint	Default document	445
	Document	445
owner	Job	483
page-clip	Default document	445
	Document	445
page-count	Document	445
page-definition	Default document	446
	Document	446
page-media-select	Default document	446
	Document	446
page-select	Document	446
page-select-supported	Actual destination	368
	Logical destination	530
pages-completed	Job	496
pcl-server-address	Actual destination	368
pcl-server-port	Actual destination	369

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
physical-printer	Actual destination	328
physical-printers-assigned	Queue	544
physical-printers-ready	Queue	544
	Server	559
physical-printers-requested	Default job	465
	Job	465
physical-printers-supported	Server	559
plex	Actual destination	369
	Default document	447
	Document	447
plexes-supported	Actual destination	370
	Logical destination	530
position-in-queue	Job	475
postscript-server-address	Actual destination	370
postscript-server-port	Actual destination	371
presentation-fidelity-problem-reported	Actual destination	371
previous-job-state	Job	497
previous-state	Job	497
print-after	Job	484
print-edge-marks	Actual destination	372
print-qualities-supported	Actual destination	372
	Logical destination	531
print-quality	Default document	448
	Document	448
print-queue	Actual destination	372
print-queue-name	Actual destination	372
printer	Actual destination	328
	Logical destination	519
printer-associated-printers	Logical destination	517
printer-command	Actual destination	326
printer-data-stream	Actual destination	327
printer-end-sheet	Actual destination	373
printer-escape-codes	Actual destination	374
printer-hot-folder	Actual destination	375
printer-initial-value-document	Document	420
	Logical destination	517
printer-initial-value-job	Job	470
	Logical destination	517
printer-locations	Actual destination	327
	Logical destination	518
printer-locations-requested	Default job	470
	Job	470
printer-memory	Actual destination	375

Attribute	Objects	See Page
printer-model	Actual destination	327
	Logical destination	518
printer-models-requested	Default job	471
	Job	471
printer-name	Actual destination	328
	Logical destination	519
printer-name-requested	Job	471
printer-needs-attention-time	Actual destination	329
printer-needs-key-operator-attention-time	Actual destination	329
printer-pass-through	Actual destination	329
	Default document	420
	Document	420
printer-realization	Actual destination	330
	Logical destination	519
printer-register-threshold	Actual destination	330
printer-release-timer	Actual destination	331
printer-requested	Job	471
printer-resolutions-ready	Actual destination	376
printer-resolutions-supported	Actual destination	377
printer-separator-sheet	Actual destination	377
printer-start-sheet	Actual destination	378
printer-state	Actual destination	331
printer-states-supported	Server	560
printer-s370-channel-device-address	Actual destination	379
printer-s370-channel-slot-number	Actual destination	379
printer-tcpip-internet-address	Actual destination	333
printer-tcpip-port-number	Actual destination	333
printer-timeout-period	Actual destination	380
printers-assigned	Job	472
printers-ready	Logical destination	520
printers-used	Job	472
problem-child	Server	572
problem-message	Actual destination	380
processing-time	Job	498
programmer-text	Default document	448
	Document	448
protected-attributes	Actual destination	381
	Logical destination	532
	Queue	552
	Server	572
psf-exit-form-definition	Auxiliary sheet	400
psf-exit-page-mark	Auxiliary sheet	401
psf-exit-program-name	Auxiliary sheet	401

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
psf-tray-characteristics	Actual destination	381
qualities-supported	Actual destination	372
	Logical destination	531
queue-assigned	Job	498
queue-backlog	Queue	552
queue-name	Queue	553
queue-position	Job	475
queue-state	Queue	553
queues-supported	Server	572
reasons	Job	487
register-threshold	Actual destination	330
registered-with-spooler	Actual destination	383
remote-queue	Actual destination	384
requeue-failed-jobs	Queue	553
required-resources-not-ready	Job	499
required-resources-not-supported	Job	499
resource-context	Default document	449
	Document	449
resource-context-font	Actual destination	384
	Default document	450
	Document	450
resource-context-form-definition	Actual destination	385
	Default document	451
	Document	451
resource-context-identifier	Resource context	557
resource-context-overlay	Actual destination	386
	Default document	451
	Document	451
resource-context-page-definition	Actual destination	386
	Default document	452
	Document	452
resource-context-page-segment	Actual destination	387
	Default document	453
	Document	453
resource-context-user	Default document	453
	Document	453
resource-exit	Default document	454
	Document	454
results-profile	Default job	500
	Job	500
retention-period	Default job	485
	Job	485
reverse-output	Actual destination	388
rip-ini-file	Actual destination	388
rip-server	Actual destination	388

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
room-text	Default document	454
	Document	454
save-rip-files	Server	573
scanner-correction	Default document	455
	Document	455
scanner-corrections-supported	Actual destination	389
scheduler-sort-primary-order	Actual destination	389
scheduler-sort-secondary-order	Actual destination	389
schedulers-supported	Actual destination	390
screen-frequencies-supported	Actual destination	390
screen-frequency	Default document	455
	Document	455
security-level	Server	573
segment-file-size	Default document	456
	Document	456
separator-sheets-supported	Actual destination	390
sequence-number	Document	423
server-hostname	Server	574
server-ip-address	Server	574
server-name	Server	574
server-state	Server	575
shared-formdef	Default document	456
	Document	456
shift-out-shift-in	Default document	457
	Document	457
sides	Actual destination	391
	Default document	457
	Document	457
sides-supported	Actual destination	392
	Logical destination	532
snmp-active	Actual destination	392
snmp-aix-printer-models	Server	575
snmp-community-name	Actual destination	392
snmp-normal-poll-interval	Server	575
snmp-problem-poll-interval	Server	576
snmp-retry-count	Actual destination	393
snmp-timeout	Actual destination	393
start-message	Default job	486
	Job	486
start-message-supported	Actual destination	394
	Logical destination	533
start-on-new-sheet	Default document	458
	Document	458

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
start-sheets-supported	Actual destination	394
started-printing-time	Job	501
state-reasons	Job	487
subject-text	Default document Document	459 459
submission-time	Job	501
table-reference-characters	Default document Document	459 459
table-reference-characters-supported	Actual destination Logical destination	395 533
tape-exit	Job	501
tape-format	Job	502
tape-labeled	Job	502
tape-max-block-size	Job	502
tape-rewind-before	Job	503
tape-rewind-unload	Job	503
ticket-content	Job	474
timeout-period	Actual destination	380
title-text	Default document Document	459 459
total-job-octets	Job	504
transfer-method	Document	460
transfer-methods-supported	Server	576
transform-message-file-name	Default document Document	460 460
transform-output-file-name	Default document Document	460 460
transform-output-location	Actual destination	395
type	Document	423
use-snmp	Actual destination	396
user-id-text	Default document Document	461 461
user-locale	Job	504
user-name	Job	504
warning-message	Actual destination	396
windows-driver-names	Logical destination	534
windows-drivers	Logical destination	534
windows-nt-driver-names	Logical destination	534
windows-nt-drivers	Logical destination	534
x-image-shift	Default document Document	461 461

<i>Attribute</i>	<i>Objects</i>	<i>See Page</i>
x-image-shift-back	Default document	462
	Document	462
x-image-shift-range-supported	Actual destination	397
	Logical destination	535
y-image-shift	Default document	462
	Document	462
y-image-shift-back	Default document	463
	Document	463
y-image-shift-range-supported	Actual destination	397
	Logical destination	536

Appendix B. Migrating PSF for AIX Job Script Keywords to InfoPrint Equivalents

Table 18 and Table 19 on page 621 list the PSF for AIX job script keywords that the **jsmigr** utility (see “jsmigr Utility: Migrates PSF for AIX Job Scripts” on page 139) migrates to InfoPrint document and job attributes, or to flags and arguments of the **pdpr** command.

Notes:

1. See “jsmigr Utility: Migrates PSF for AIX Job Scripts” on page 139 for notes on migration.
2. Keywords not listed in this table have no equivalent.

Table 18 (Page 1 of 3). PSF for AIX Keywords Used in Job Script Files and InfoPrint Equivalents

PSF Keyword	InfoPrint Attribute, Flag, or Argument
a_Cc a_Cctype	carriage-control-type
Note: cc and cctype are examined together to generate carriage-control-type . If jsmigr encounters cctype before cc , it assumes the default value of yes for cc .	
a_Chars	chars
a_Fileformat	new-line-option
a_Imageout	image-out-format
a_InpExit	input-exit
a_OtherOptions	other-transform-options
a_Pagedef	page-definition
a_Parmdd	Attributes file
a_Pdeflib	resource-context-page-definition
a_Prmode	shift-out-shift-in
a_Trc	table-reference-characters
db_euc db_language	default-character-mapping
Note: db_euc and db_language must be used together to generate default-character-mapping .	
e_ConsoleMsg	job-start-message job-start-wait
e_FileMsg	job-start-message job-start-wait
e_Notify	notification-profile (delivery-method component)
e_PrintQueue	-p flag of pdpr command
e_Priority	job-priority
i_Exit	tape-exit

Table 18 (Page 2 of 3). PSF for AIX Keywords Used in Job Script Files and InfoPrint Equivalents

PSF Keyword	InfoPrint Attribute, Flag, or Argument
i_FileNames	Job scripts invoked by this keyword (extension .js) are migrated to attributes files invoked with the -X flag of the pdpr command. Print files are migrated to arguments of the pdpr command in the pdpr script.
i_Fileformat	new-line-option
i_Format	No equivalent
i_InputDevice	-f, -T, or - flag of pdpr command
i_Labeled	tape-labeled
i_MaxBlockSize	tape-max-block-size
i_OutExit	No equivalent
i_PgsAhead	maximum-transform-pages-ahead
i_RewindBefore	tape-rewind-before
i_RewindUnload	tape-rewind-unload
JsFileType	document-format
oa_Formdef	form-definition
oa_SrchAFP	resource-context
oa_SrchFd	resource-context-form-definition
oa_SrchOvly	resource-context-overlay
oa_SrchPs	resource-context-page-segment
oa_SrchFO	resource-context-font
oa_SrchSf	No equivalent
o_Account	account-text
o_Address1	address1-text
o_Address2	address2-text
o_Address3	address3-text
o_Address3	address3-text
o_Bin	destination-pass-through to ainbe
o_Building	building-text
o_Codeset	default-character-mapping
o_Copies	results-profile (job-copies component)
o_DataCk	data-fidelity-problem-reported
o_Department	department-text
o_Distribution	results-profile (delivery-address component)
o_Duplex	plex sides
o_Header	auxiliary-sheet-selection
Note: o_Header , o_Separator , and o_Trailer are examined together to generate auxiliary-sheet-selection .	
o_JobName	job-name

Table 18 (Page 3 of 3). PSF for AIX Keywords Used in Job Script Files and InfoPrint Equivalents

PSF Keyword	InfoPrint Attribute, Flag, or Argument
o_MsgCount	maximum-messages-printed
o_Name	name-text
o_Nodeid	node-id-text
o_Outbin	output-bin
o_Overlay	overlay
o_PassThru	mvs-class mvs-dest mvs-forms mvs-segment-id
o_Programmer	programmer-text
o_Room	room-text
o_Separator	auxiliary-sheet-selection
Note: o_Header , o_Separator , and o_Trailer are examined together to generate auxiliary-sheet-selection .	
o_SetupFile	No equivalent
o_Title	title-text
o_Trailer	auxiliary-sheet-selection
Note: o_Header , o_Separator , and o_Trailer are examined together to generate auxiliary-sheet-selection .	
o_Userid	user-id-text
o_Xoffset	x-image-shift
o_Yoffset	y-image-shift
p_Config	Attributes file other-transform-options
p_Length	image-length
p_OtherOptions	other-transform-options
p_OutputType	image-out-format
Note: There is no equivalent for some values of p_OutputType .	
p_Resolution	default-printer-resolution
p_Width	image-width
s_SegSize	segment-file-size

Table 19 (Page 1 of 2). PSF for AIX Keywords Used in parmdd Files

PSF Keyword	InfoPrint Attribute, Flag, or Argument
cc cctype	carriage-control-type
Note: cc and cctype are examined together to generate carriage-control-type . If jsmigr encounters cctype before cc , it assumes the default value of yes for cc .	
chars	chars
dfelib	resource-context-form-definition
fileformat	new-line-option

Table 19 (Page 2 of 2). PSF for AIX Keywords Used in parmdd Files

PSF Keyword	InfoPrint Attribute, Flag, or Argument
fontlib	resource-context-font
formdef	form-definition
imageout	image-out-format
inpexit	input-exit
inputdd	No equivalent
msgdd	transform-message-file-name
outexit	No equivalent
outputdd	transform-output-file-name
ovlylib	resource-context-overlay
pagedef	page-definition
parmdd	Attributes file
pdeflib	resource-context-page-definition
prmode	shift-out-shift-in
pseglib	resource-context-page-segment
resexit	resource-exit
reslib	resource-context
trc	table-reference-characters
userlib	resource-context-user

Appendix C. Job Validation and Scheduling

Table 20 on page 624 and Table 21 on page 625 list the document, job, and destination attributes used to validate and schedule each job.

1. InfoPrint validates the value of the document or job attribute in the first column against the values of the logical destination attribute in the second column. If the logical destination does not support the document or job attribute value, InfoPrint rejects the job.

Note: If the logical destination attribute has no value, the logical destination supports all valid values of the document or job attribute.

2. If the value of the server attribute **accept-unsupported-jobs** is **false**, InfoPrint validates the value of the document or job attribute in the first column against the values of the actual destination attribute in the second column. If no actual destination supports the document or job attribute value, InfoPrint rejects the job.
3. If the value of the queue attribute **assign-to-destination** is **true**, InfoPrint assigns the job to an actual destination that supports all the job's attribute values.

Note: If the value of the **force-destination-setup** actual destination attribute is **true**, InfoPrint assumes that the actual destination supports all valid attribute values.

4. InfoPrint checks the attribute (or, for rescheduling, the checkpoint) in the first column against the attributes in the third column to determine if any actual destinations can process the job.

- If the job has been assigned to an actual destination, InfoPrint checks only that actual destination.
- If the job has not been assigned to an actual destination, InfoPrint checks all actual destinations that receive jobs from the queue.

Note: If the value of the **force-destination-setup** actual destination attribute is **true**, InfoPrint assumes that the actual destination can process any job with valid attribute values.

5. InfoPrint acts according to the result of step 4:

- If a required resource is not ready, InfoPrint holds the job. The **required-resources-not-ready** job attribute indicates the resources that a job or document attribute specifies and that are not ready on the actual destination to which the job is assigned, or, if the job is not assigned, on the most suitable actual destination.
 - If the value of the job attribute **job-rip-action** is **rip-and-print-ignore-ready**, InfoPrint RIPs the job before placing it in the **held** state and sets the value of the **job-state-reasons** job attribute to **rip-completed**. The job is automatically released and scheduled for printing or transmission when the resources become ready.
 - Otherwise, InfoPrint sets the value of the **job-state-reasons** job attribute to **required-resource-not-ready**. You must release the job after making the resources ready. InfoPrint will not release it automatically.

- If a required resource is not supported, InfoPrint holds the job and sets the value of the **job-state-reasons** job attribute to **required-resource-not-supported**. The **required-resources-not-supported** job attribute indicates the resources that a job or document attribute specifies and that are not supported on the actual destination to which the job is assigned, or, if the job is not assigned, on the most suitable actual destination.

This situation can arise when the value of the server attribute **accept-unsupported-jobs** is **true** or when you change document, job, or actual destination attribute values after InfoPrint accepts a job.

You can change job, document, or actual destination attribute values so that at least one actual destination supports the job. You must then release the job before it can be printed or transmitted. InfoPrint will not release it automatically.

- If at least one actual destination can handle the job, InfoPrint schedules the job for printing or transmission.
6. If the job has not already been assigned to an actual destination, InfoPrint assigns it to the first suitable actual destination to become available after the job reaches the top of the queue.
 7. If the job is assigned to an actual destination with a value of **true** for the **force-destination-setup** attribute, InfoPrint checks the attributes in the third column when the job is about to be printed or transmitted. If any resources are not ready or not supported, InfoPrint disables the actual destination and sends a message to the operator. The operator changes the destination setup and enables the actual destination.
 8. The job is printed or transmitted.

Table 20 (Page 1 of 2). Document and Destination Attributes Used for Validation and Scheduling

<i>Document Attribute</i>	<i>Validation Attribute</i>	<i>Scheduling Attribute</i>
carriage-control-type	carriage-control-types-supported	carriage-control-types-supported
content-orientation	content-orientation-supported	content-orientation-supported
convert-to-ebcdic	convert-to-ebcdic-supported	convert-to-ebcdic-supported
copy-count	maximum-copies-supported	maximum-copies-supported
data-fidelity-problem-reported	data-fidelity-problem-reported-supported	data-fidelity-problem-reported-supported
default-character-mapping	character-mappings-supported	character-mappings-supported
default-input-tray	input-trays-supported	input-trays-supported
default-medium	media-supported	media-ready media-supported
default-printer-resolution	printer-resolutions-supported	printer-resolutions-ready printer-resolutions-supported
document-finishing	document-finishings-supported ¹	document-finishings-supported
document-format	document-formats-supported	document-formats-supported
document-type	document-types-supported	document-types-supported
font-resolution	font-resolutions-supported ¹	font-resolutions-supported
image-fit	image-fit-supported ¹	image-fit-supported
image-out-format	image-out-formats-supported	image-out-formats-supported
input-tray-select	input-trays-supported	input-trays-supported
number-up	number-up-supported ¹	number-up-supported

Table 20 (Page 2 of 2). Document and Destination Attributes Used for Validation and Scheduling

Document Attribute	Validation Attribute	Scheduling Attribute
output-appearance	output-appearances-supported¹	output-appearances-supported
output-bin	output-bins-supported¹	output-bins-supported
output-format	output-formats-supported¹	output-formats-supported
page-media-select	media-supported	media-ready media-supported
page-select	page-select-supported	page-select-supported
plex	plexes-supported	plexes-supported
print-quality	print-qualities-supported	print-qualities-supported
scanner-correction	scanner-corrections-supported¹	scanner-corrections-supported
screen-frequency	screen-frequencies-supported¹	screen-frequencies-supported
sides	sides-supported	sides-supported
table-reference-characters	table-reference-characters-supported	table-reference-characters-supported
x-image-shift	x-image-shift-range-supported	x-image-shift-range-supported
x-image-shift-back	x-image-shift-range-supported	x-image-shift-range-supported
y-image-shift	y-image-shift-range-supported	y-image-shift-range-supported
y-image-shift-back	y-image-shift-range-supported	y-image-shift-range-supported
All document attributes affecting the actual destination	document-attributes-supported¹	document-attributes-supported

1. This attribute applies only to actual destinations, not logical destinations.

Table 21. Job and Destination Attributes Used for Validation and Scheduling

Job Attribute	Validation Attribute	Scheduling Attribute
actual-destinations-requested	destination-name²	destination-name
auxiliary-sheet-selection	auxiliary-sheet-selections-supported	auxiliary-sheet-selections-supported
destination-locations-requested	destination-locations	destination-locations
destination-models-requested	destination-model	destination-model
dss-requested	destination-support-system	destination-support-system
job-batch		job-batches-ready
job-end-message	end-message-supported	end-message-supported
job-finishing	job-finishings-supported¹	job-finishings-supported
job-rip-action	job-rip-actions-supported¹	job-rip-actions-supported
job-start-message	start-message-supported	start-message-supported
job-start-wait	job-start-wait-supported¹	job-start-wait-supported
total-job-octets	job-size-range-supported¹	job-size-range-ready job-size-range-supported
All job attributes affecting the actual destination	job-attributes-supported¹	job-attributes-supported
Checkpoint where the job was paused		checkpoint-formats-supported³

1. This attribute applies only to actual destinations, not logical destinations.

2. This attribute applies to both logical destinations and actual destinations, but only the actual destination attribute is used for validation. If validation fails, InfoPrint rejects the job even if the value of **accept-unsupported-jobs** is **true**.

3. This attribute is used to reschedule paused jobs.

Appendix D. Form Definitions and Page Definitions Supplied with InfoPrint

This section describes the form definitions and page definitions that are supplied with InfoPrint. Form definitions provide instructions on how printers position data on the page and are located in directory `/usr/lpp/psf/reslib`. Page definitions contain formatting controls for jobs and are also located in directory `/usr/lpp/psf/reslib`.

Default Form Definitions

Default form definitions are determined by the output data stream format accepted by the printer that InfoPrint assigns to print the job:

Data Stream	Default Form Definition
Intelligent Printer Data Stream (IPDS)	F1ACIF
Personal Printer Data Stream (PPDS)	F1PP0110
Printer Control Language 4 (PCL4)	F1HP0111
PCL5 and PCL5C	F1H50111

Table 22 describes the characteristics controlled by these form definitions.

Table 22. Default Form Definition Characteristics

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F1ACIF	1	2	Portrait	Across	0.165, 0.165
F1PP0110	1	1	Portrait	Across	0.25, 0.165
F1HP0111	1	2	Portrait	Across	0.165, 0.2
F1H50111	1	2	Portrait	Across	0.165, 0.165

General-Purpose Form Definitions

You can specify different form definitions with jobs if the default form definitions do not satisfy your requirements. Table 23 lists the general-purpose form definitions that you can select.

Table 23 (Page 1 of 2). General-Purpose Form Definitions

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F1A10110 ¹	1	1	Portrait	Across	0.165, 0.165
F1A10111 ¹	1	2	Portrait	Across	0.165, 0.165
F1A10112 ¹	1	Tumble	Portrait	Across	0.165, 0.165
F1A10120 ¹	2	1	Portrait	Across	0.165, 0.165
F1A10121 ¹	2	2	Portrait	Across	0.165, 0.165
F1A10122 ¹	2	Tumble	Portrait	Across	0.165, 0.165
F1A10130	3	1	Portrait	Across	0.165, 0.165
F1A10131	3	2	Portrait	Across	0.165, 0.165

Table 23 (Page 2 of 2). General-Purpose Form Definitions

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F1A10132	3	Tumble	Portrait	Across	0.165, 0.165
F1A10140	4	1	Portrait	Across	0.165, 0.165
F1A10141	4	2	Portrait	Across	0.165, 0.165
F1A10142	4	Tumble	Portrait	Across	0.165, 0.165
F1ACIF ¹	1	2	Portrait	Across	0.165, 0.165
F1H50110 ²	1	1	Portrait	Across	0.165, 0.165
F1H50111 ²	1	2	Portrait	Across	0.165, 0.165
F1H50120 ²	2	1	Portrait	Across	0.165, 0.165
F1H50121 ²	2	2	Portrait	Across	0.165, 0.165
F1HP0110 ³	1	1	Portrait	Across	0.165, 0.2
F1HP0111 ³	1	2	Portrait	Across	0.165, 0.2
F1HP0120 ³	2	1	Portrait	Across	0.165, 0.2
F1HP0121 ³	2	2	Portrait	Across	0.165, 0.2
F1MG0110 ⁴	1	1	Portrait	Across	0.33, 0.33
F1MG0111 ⁴	1	2	Portrait	Across	0.33, 0.33
F1MG0120 ⁴	2	1	Portrait	Across	0.33, 0.33
F1MG0121 ⁴	2	2	Portrait	Across	0.33, 0.33
F1PP0110 ⁵	1	1	Portrait	Across	0.25, 0.165
F1PP0111 ⁵	1	2	Portrait	Across	0.25, 0.165
F1PP0120 ⁵	2	1	Portrait	Across	0.25, 0.165
F1PP0121 ⁵	2	2	Portrait	Across	0.25, 0.165

1. Designed for use with IBM 3820, 3827, and 3835 printers.
2. These form definitions are recommended for printer devices that support the PCL5 and PCL5C data streams. They position the page of data so that the data is not placed in the unprintable area.
3. These form definitions are recommended for printer devices that support the PCL4 and PCL5 data streams. They position the page of data so that the data is not placed in the unprintable area.
4. These form definitions are recommended for the message pages printed by InfoPrint supported printers.
5. These form definitions are recommended for printer devices that support the PPDS data stream. They position the page of data so that the data is not placed in the unprintable area.

Form Definitions for Printing Envelopes

Use the form definitions in Table 24 to print envelopes and use the manual input bin on the IBM LaserPrinter 4028. You can use these form definitions with other printers that use bin 65 as the envelope bin and bin 100 as the manual feed bin.

Table 24. Form Definitions Supplied with InfoPrint for Printing Envelopes

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the paper edge)
F1A000E0	Envelope	1	Landscape	Across	0, 0
F1A000M0	Manual	1	Landscape	Across	0, 0
F1A101E0	Envelope	1	Landscape	Across	0.165, 0.165
F1A101M0	Manual	1	Landscape	Across	0.165, 0.165

Form Definitions for 17 by 11 Inch Paper

Use the form definitions in Table 25 for jobs that require 17 by 11 inch paper.

Table 25. Form Definitions Supplied for 17 by 11 Paper

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F100LS	1, 2, 3, 4	1	Landscape	Across	0, 0
F100LD	1, 2, 3, 4	2	Landscape	Across	0, 0
F100LT	1, 2, 3, 4	Tumble	Landscape	Across	0, 0
F100LAND ¹	1, 2, 3, 4	2	Landscape	Across	0, 0

1. Used for N_UP of 1.

Form Definitions Specifying a 0, 0 Offset

The form definitions in Table 26 specify a 0, 0 offset from the upper-left corner of the page. Use these form definitions if images or data in the job prints off-center or appears to be shifting on the page.

Table 26. Form Definitions Supplied with InfoPrint Specifying a 0, 0 Offset

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F100S	1, 2, 3, 4	1	Portrait	Across	0, 0
F100D	1, 2, 3, 4	2	Portrait	Across	0, 0
F100T	1, 2, 3, 4	Tumble	Portrait	Across	0, 0
F1A00010	1	1	Portrait	Across	0, 0
F1A00011	1	2	Portrait	Across	0, 0
F1A00012	1	Tumble	Portrait	Across	0, 0
F1A00020	2	1	Portrait	Across	0, 0
F1A00021	2	2	Portrait	Across	0, 0
F1A00022	2	Tumble	Portrait	Across	0, 0
F1A00030	3	1	Portrait	Across	0, 0
F1A00031	3	2	Portrait	Across	0, 0
F1A00032	3	Tumble	Portrait	Across	0, 0
F1A00040	4	1	Portrait	Across	0, 0
F1A00041	4	2	Portrait	Across	0, 0
F1A00042	4	Tumble	Portrait	Across	0, 0

Form Definitions Specifying N_UP Page Positioning

The form definitions in Table 27 have various N_UP values and page placement. Refer to *IBM Page Printer Formatting Aid: User's Guide* more information about N_UP printing.

Table 27. Form Definitions for N_UP Page Positioning

Form Definition	Bin	Sides	N_UP	Page Placement	Presentation Mode	Print Direction	Page Position ¹
F1BOOK ²	1	2	2	Page 1 at 1 Front Page 2 at 2 Front Page 3 at 2 Back Page 4 at 1 Back	Portrait	Across	0, 0
F1N2SST1 ²	1, 2, 3, 4	Tumble	2	Page 1 at 1 Front Page 2 at 1 Back Page 3 at 2 Front Page 4 at 2 Back	Portrait	Across	0, 0
F1N2SS11 ²	1, 2, 3, 4	2	2	Page 1 at 1 Front Page 2 at 2 Back Page 3 at 2 Front Page 4 at 1 Back	Portrait	Across	0, 0
F1N2SS12 ²	1, 2, 3, 4	2	2	Page 1 at 1 Front Page 2 at 2 Front Page 3 at 1 Back Page 4 at 2 Back	Portrait	Across	0, 0
F1N2SS13 ²	1, 2, 3, 4	2	3	Page 1 at 1 Front Page 2 at 2 Front Page 3 at 3 Front Page 4 at 1 Back Page 5 at 2 Back Page 6 at 3 Back	Portrait	Across	0, 0
F1N20010	1	1	2	Default	Portrait	Across	0, 0
F1N20011	1	2	2	Default	Portrait	Across	0, 0
F1N20012	1	Tumble	2	Default	Portrait	Across	0, 0
F1N20110	1	1	2	Default	Portrait	Across	0.165, 0.165
F1N20111	1	2	2	Default	Portrait	Across	0.165, 0.165
F1N20112	1	Tumble	2	Default	Portrait	Across	0.165, 0.165
F1N20130	3	1	2	Default	Portrait	Across	0.165, 0.165
F1N20131	3	2	2	Default	Portrait	Across	0.165, 0.165
F1N20132	3	Tumble	2	Default	Portrait	Across	0.165, 0.165
F1N201LA	1	1	2	Default	Landscape	Across	0.0, 0.5
F1N201LD	1	1	2	Default	Landscape	Down	0.0, 0.5
F1N201PA	1	1	2	Default	Portrait	Across	0.0, 0.5
F1N201PD	1	1	2	Default	Portrait	Down	0.0, 0.5

1. Specified in inches from the top-left corner of the page.

2. Used with printers that support enhanced N_UP values.

Form Definitions for Printing on Prepunched Paper

Use the form definitions in Table 28 for jobs that require prepunched paper.

Table 28. Form Definitions for Prepunched Paper

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F1H10110	1	1	Portrait	Across	1.000, 0.165
F1H10111	1	2	Portrait	Across	1.000, 0.165, 0.165, 0.165
F1H10112	1	Tumble	Portrait	Across	1.000, 0.165, 1.000, 0.165
F1H10120	2	1	Portrait	Across	1.000, 0.165
F1H10121	2	2	Portrait	Across	1.000, 0.165, 0.165, 0.165
F1H10122	2	Tumble	Portrait	Across	1.000, 0.165, 1.000, 0.165
F1H10130	3	1	Portrait	Across	1.000, 0.165
F1H10131	3	2	Portrait	Across	1.000, 0.165, 0.165, 0.165
F1H10132	3	Tumble	Portrait	Across	1.000, 0.165, 1.000, 0.165
F1H10140	4	1	Portrait	Across	1.000, 0.165
F1H10141	4	2	Portrait	Across	1.000, 0.165, 0.165, 0.165
F1H10142	4	Tumble	Portrait	Across	1.000, 0.165, 1.000, 0.165

Form Definitions for Specific Models of IBM Printers

Use the form definitions in Table 29 with the IBM 3831 Page Printer, IBM 3835, and IBM 3900 Advanced Function Printers.

Table 29. Form Definitions Supplied for IBM 3831, 3835, and 3900 Printers

Form Definition	Printer Type Compatible with	Bin	Sides	Presentation Mode	Print Direction	Page Position ¹
F1OGL ²	3800	1	1	Landscape	Across	0.0, 0.0
F10101LA	3800 wide forms	1	1	Landscape	Across	0.00, 0.50
F10101LD	3800 narrow forms	1	1	Landscape	Down	0.00, 0.50
F10101PA	3800 narrow forms	1	1	Portrait	Across	0.00, 0.50
F10101PD	3800 wide forms	1	1	Portrait	Down	0.00, 0.50
F1C10110 ³	Cut-sheet	1	1	Landscape	Down	0.165, 0.165
F1C10111 ⁴	Cut-sheet	1	2	Landscape	Down	0.165, 0.165
F1C10112 ⁴	Cut-sheet	1	Tumble	Landscape	Down	0.165, 0.165

1. Specified in inches from the paper edge.

2. Created using Overlay Generation Language (OGL). Positions sample overlays.

3. Designed for use with the IBM 3835 printer.

4. Designed for use with advanced function printers. Specify these form definitions when printing data that has been formatted for cut-sheet printers.

Use the form definitions in Table 30 with the IBM 3935 Advanced Function Printer and the IBM 3160 Advanced Function Printer.

Table 30. Form Definition Supplied for IBM 3935 and 3160 Printers

Form Definition	Bin	Sides	Presentation Mode	Print Direction	Page Position (in inches from the top-left corner of the page)
F1A1BIN2	2	1	Portrait	Across	0.165, 0.165
F1A1BIN3	3	1	Portrait	Across	0.165, 0.165
F1A1BIN4	4	1	Portrait	Across	0.165, 0.165

Page Definitions Supplied with InfoPrint

Table 31 through Table 35 on page 636 list the page definitions that are supplied with InfoPrint. The page definitions are grouped by the size of the paper on which the job prints.

Page Definitions for Letter-Sized Paper

Table 31. Page Definitions for Letter-Sized Paper

Page Definition	Printable Area (Width by Height, In Inches)	Print Lines per Page	Print Position: Down/Across	Recommended Font	Printing Direction	Page Presentation
P1A06462 ^{1, 2}	8.17 by 10.67	64 at 6.0 lpi	30/0	GT10	Across	Portrait
P1A08682 ³	8.17 by 10.67	86 at 8.2 lpi	24/0	GT12	Across	Portrait

1. This page definition is also valid for 9.5 by 11.0 inch continuous-form paper.

2. Designed for use with IBM 3812, 3816, 3820, 3825, 3827, 3835, 3900, 4028, 4224, and 4234 printers.

3. Designed for use with IBM 3820, 3827, and 3835 printers.

Page Definitions for A4-Sized Paper

Table 32. Page Definitions for A4-Sized Paper

Page Definition	Printable Area (Width by Height, In Inches)	Print Lines per Page	Print Position: Down/Across	Recom- mended Font	Printing Direction	Page Presentation
P1C09182 ¹	7.94 by 11.36	91 at 8.2 lpi	25/0	GT12	Across	Portrait
P1V0436B ²	10.67 by 7.11	43 at 6.1 lpi	30/0	GT10	Up	Landscape
P1V04863 ^{1, 2}	10.67 by 7.94	48 at 6.1 lpi	30/0	GT10	Down	Landscape
P1V0588B ²	10.67 by 7.11	58 at 8.2 lpi	24/0	GT12	Up	Landscape
P1V0598B ²	10.67 by 7.11	59 at 8.2 lpi	24/0	GT12	Up	Landscape
P1V0608B ^{2, 3}	10.67 by 7.11	60 at 8.5 lpi	24/224	GT15	Up	Landscape
P1V0618B ^{2, 3}	10.67 by 7.11	61 at 8.5 lpi	24/224	GT15	Up	Landscape
P1V06483 ^{1, 2}	10.67 by 7.94	64 at 8.2 lpi	24/0	GT12	Down	Landscape
P1V06683 ^{1, 2, 3}	10.67 by 7.94	66 at 8.5 lpi	24/224	GT15	Down	Landscape
P1X04763 ^{2, 4}	10.60 by 7.77	47 at 6.1 lpi	30/0	GT10	Down	Landscape

1. Designed to work with 3820, 3827, 3835 printers.

2. Designed to work for letter-sized and A4-sized paper.

3. The printable area is 9.74 by 7.94 inches because of the 224 logical unit offset in the "Print Position: Down/Across" column.

4. Designed for use with HPCL and PPDS data streams.

Page Definitions for Letter- and A4-Sized Paper with Multiple-Up of 2 and 4

Table 33. Page Definitions for Letter- and A4-Sized Paper with Multiple-Up of 2 and 4

Page Definition	Printable Area (Width by Height, In Inches)	Print Lines per Page	Print Position: Down/Across	Recommended Font	Printing Direction	Page Presentation
P1W1168B	10.67 by 7.11	58 at 8.2 lpi	Page 1 24/0 Page 2 24/1281	GT15	Up	Landscape
P1W1188B	10.67 by 7.11	59 at 8.2 lpi	Page 1 24/0 Page 2 24/1281	GT15	Up	Landscape
P1W120C2 ¹	7.94 by 10.67	60 at 12.0 lpi	Page 1 16/160 Page 2 1344/160	GT20	Across	Portrait
P1W12883 ¹	10.67 by 7.94	64 at 8.2 lpi	Page 1 24/0 Page 2 24/1281	GT15	Down	Landscape
P1W216FB	10.67 by 7.11	54 at 15.2 lpi	Page 1 16/48 Page 2 890/48 Page 3 16/1322 Page 4 890/1322	GT24	Up	Landscape
P1W220FB	10.67 by 7.11	55 at 15.2 lpi	Page 1 16/48 Page 2 890/48 Page 3 16/1322 Page 4 890/1322	GT24	Up	Landscape
P1W240F3 ¹	10.67 by 7.94	60 at 15.2 lpi	Page 1 16/48 Page 2 968/48 Page 3 16/1322 Page 4 968/1322	GT24	Down	Landscape

1. Designed to work with 3820, 3827, 3835 printers.

Page Definitions for Legal-Sized Paper

Table 34. Page Definitions for Legal-Sized Paper

Page Definition	Printable Area (Width by Height, In Inches)	Print Lines per Page	Print Position: Down/Across	Recom- mended Font	Printing Direction	Page Presentation
P1B0446B	13.67 by 7.34	44 at 6.0 lpi	30/0	GT10	Up	Landscape
P1B04963 ¹	13.67 by 8.17	49 at 6.0 lpi	30/0	GT10	Down	Landscape
P1B0608B	13.67 by 7.34	60 at 8.2 lpi	24/0	GT12	Up	Landscape
P1B06683 ¹	13.67 by 8.17	66 at 8.2 lpi	24/0	GT12	Down	Landscape
P1B08262 ²	8.17 by 13.67	82 at 6.0 lpi	30/0	GT10	Across	Portrait
P1B11082 ¹	8.17 by 13.67	110 at 8.2 lpi	24/0	GT12	Across	Portrait
P1R04763 ³	13.6 by 8.0	47 at 6.0 lpi	30/0	GT10	Down	Landscape

1. Designed for use with IBM 3820, 3827, and 3835 printers.

2. Designed for use with IBM 3812, 3816, 3820, 3825, 3827, 3828, 3835, 3900, 4028, and 4224 printers.

3. Designed for use with HPCL and PPDS data streams.

Page Definitions for B4-Sized Paper

Table 35. Page Definitions for B4-Sized Paper

Page Definition	Printable Area (Width by Height, In Inches)	Print Lines per Page	Print Position: Down/Across	Recom- mended Font	Printing Direction	Page Presentation
P1D0556B	14.0 by 8.96	55 at 6.1 lpi	30/0	GT10	Up	Landscape
P1D06063 ¹	14.0 by 9.79	60 at 6.1 lpi	30/0	GT10	Down	Landscape
P1D0748B	14.0 by 8.96	74 at 8.2 lpi	24/0	GT12	Up	Landscape
P1D08083 ¹	14.0 by 9.79	80 at 8.2 lpi	24/0	GT12	Down	Landscape
P1D08462 ¹	9.79 by 14.0	84 at 6.0 lpi	30/0	GT10	Across	Portrait
P1D11382 ¹	9.79 by 14.0	113 at 8.2 lpi	24/0	GT12	Across	Portrait

1. Designed for use with IBM 3820, 3827, and 3835 printers.

Glossary

This glossary provides definitions of specialized terms used by IBM InfoPrint Control (InfoPrint). This glossary does not define terms that are defined in non-technical dictionaries or that have no special meaning in the production printing environment.

Sources and References

This glossary includes definitions from the following sources:

- Definitions reprinted from a published section of the International Organization for Standardization's (ISO) *Vocabulary—Information Processing* or from a published section of the ISO *Vocabulary—Office Machines* are identified by the symbol (I) following the definition.
- Definitions reprinted from working documents, draft proposals, or draft international standards of ISO Technical Committee 97, Subcommittee 1 (Vocabulary) are identified by (T), indicating that final agreement has not yet been reached among its participating members.
- Definitions from *Introduction to OSF DCE*, by Open Systems Foundation, published by Prentice-Hall, are identified by (OSF).
- Definitions from *Portable Operating System Interface (POSIX) System Administration Interface/Printing Standards Project* are identified by (P).
- Definitions from *Information technology—Document printing application (DPA)—Part 1: Abstract-service definition and procedures* are identified by (D).
- Definitions from *AIX Version 4.1 Topic Index and Glossary* are identified by (X).
- Definitions from *IBM Dictionary of Computing*.
- Definitions that are specific to IBM products are so labeled, for example, "in InfoPrint," or "In DCE."

This glossary uses the following cross references:

Contrast with. This refers to a term that has an opposed or substantively different meaning.

Synonym for. This indicates that the term has the same meaning as a preferred term, which is defined in its proper place in the glossary.

Synonymous with. This is a backward reference from a defined term to all other terms that have the same meaning.

See. This refers you to multiple-word terms that have the same last word.

See also. This refers you to terms that have a related, but not synonymous, meaning.

Special Characters

.Guidefaults file. A file created by InfoPrint in the home directory of a person using the InfoPrint GUI. InfoPrint uses this file to save and reference information about the servers you are monitoring and the windows you are working in.

A

Access Control List (ACL). (1) In computer security, a collection of all access rights for one object. (2) In DCE, a list associated with each object in the namespace that specifies the access authorization level for each user or user group.

ACL. Access control list.

acl editor. A command line interface that allows you to view, add, update, and delete access authorization records in an ACL.

action. In the InfoPrint GUI, an icon that represents an operation that you can perform on an InfoPrint object. You drag and drop the action onto an object to initiate the operation for that object; for example, using the **Enable** action to enable a disabled actual destination.

actual destination. In InfoPrint, an object that represents the output device that performs the printing or transmission function. See *email destination*, *fax destination*; see also *physical printer*, *printer device*; contrast with *logical destination*.

additive color system. A system that reproduces an image by mixing (adding) appropriate quantities of red, green, and blue light (the additive primary colors) to create all other colors of light, either direct or transmitted. When the additive primaries are superimposed on one another, they create white light. Contrast with *subtractive color system*.

administrator. In InfoPrint, the person who creates and manages one or more components of a printing system, such as servers and actual destinations. By default, InfoPrint gives administrators authorization to perform some InfoPrint operations and to access certain information that is not available to the operators or job submitters.

Adobe Acrobat. An Adobe software program that provides instant access to documents in their original format, independent of computer platform. With the Adobe Reader, you can view, navigate, print, and present any Portable Document Format (.pdf) file.

Adobe PageMaker. A desktop publishing program that produces PostScript documents.

Adobe PostScript Raster to Image Transform (RIP). See *raster image processor (RIP)*.

ADSM/6000. *Advanced Distributed Storage Manager.*

Advanced Distributed Storage Manager (ADSM/6000). A program that provides storage management for archived files.

Advanced Function Common Control Unit (AFCCU). An IBM RISC-based control unit with code common to all printers that use the AFCCU.

Advanced Function Presentation (AFP). A set of licensed programs, together with user applications, that use the all-points-addressable concept to print data on a wide variety of printers or to display data on a wide variety of display devices. AFP includes creating, formatting, archiving, retrieving, viewing, distributing, and printing information.

Advanced Function Presentation data stream (AFP data stream). (1) The printer data stream used for printing AFP data. The AFP data stream includes composed text, page segments, electronic overlays, form definitions, and fonts downloaded from the operating system to the printer. (2) A presentation data stream that is processed in AFP environments. The AFP data stream includes MO:DCA-P-based data streams.

Advanced Interactive Executive (AIX). An operating system used with RS/6000 computers. The AIX operating system is IBM's implementation of the UNIX operating system.

AFCCU. Advanced Function Common Control Unit.

AFP. Advanced Function Presentation.

AFP data stream. Advanced Function Presentation data stream.

ainbe. The printer input/output backend program used by the PSF DSS to send jobs to printer devices. Depending on the incoming data stream of the job, the PSF DSS may have transformed the data stream of the job prior to the backend program sending it to the printer device.

AIX. Advanced Interactive Executive.

AIX-attached printer. (1) A printer device, attached to an RS/6000 through the network or through a serial or parallel port, that receives jobs from an AIX print queue. (2) In InfoPrint, a PSF physical printer that represents an AIX-attached printer device. See also *channel-attached printer, direct-attached printer, TCP/IP-attached printer, upload-SNA-attached printer, upload-TCP/IP-attached printer.*

AIX destination support system. In InfoPrint, the destination support system that communicates with the standard AIX print backend (**piobe**), or with certain variations of the **rembak** print backend, to print jobs.

AIX physical printer. In InfoPrint, the object representing a printer device that uses the AIX destination support system.

aliasing. In a digitized image, the creation of diagonal lines by combining short, horizontal, and vertical line segments that approximate the path of the desired line.

all-points-addressability (APA). The capability to address, reference, and position text, overlays, and images at any defined point of the printable area of the paper or display medium.

alphameric. Synonym for *alphanumeric*.

alphanumeric. Pertaining to a character set containing letters, digits, and other symbols such as punctuation marks. Synonymous with *alphameric*.

AMPV. Average monthly print volume.

analog. Pertaining to a continuous variable sampling of information between two points that achieves an even smooth transition of photographic material.

analog color proof. An off-press color proof made from separation films.

anti-aliasing. (1) The rendering of hard-edged objects so that they blend smoothly into the background. PhotoShop offers anti-aliasing when rasterizing an EPS file. (2) Removing the jagged "stairstep" quality in diagonal lines produced on a computer screen by aliasing. This removal is affected by creating less densely shaded fields parallel to the diagonal line.

APA. All-points-addressability.

API. Application Program Interface.

Application Program Interface (API). The call interface between a client program and the procedures that implement the printing system, as defined by the specification. Clients use the API to access servers. (P)

architecture. The set of rules and conventions that govern the creation and control of data types such as

text, image, graphics, font, fax, color, audio, bar code, and multimedia.

archiving. The transfer of digital information from an online system onto magnetic tape, floppy disk, compact disc, or other media for offline storage. The original copy is deleted from the online system. See also *retrieval*.

array inkjet. An ordered collection of multiple print heads used in an inkjet printer.

ASCII. American National Standard Code for Information Interchange. The standard code, using a coded character set consisting of 7-bit coded characters (8-bits including a parity check), that is used for information interchange among data processing systems, data communications systems, and associated equipment. The ASCII set consists of control characters and graphic characters.

asynchronous. (1) Pertaining to two or more processes that do not depend upon the occurrence of specific events, such as common timing signals. (T) (2) In InfoPrint, occurring without a regular or predictable time relationship to a specified action. Contrast with *synchronous*.

attachment type. Defines the method by which a printer device is attached to the system from which it receives data. See *AIX-attached printer*, *channel-attached printer*, *TCP/IP-attached printer*, *direct-attached printer*, *upload-SNA-attached printer*, *upload-TCP/IP-attached printer*.

attribute. A defined characteristic of an object, such as the number of copies required of a job, or the document formats accepted by a physical printer.

attribute name. A string that identifies an attribute. Typically, in InfoPrint attribute names consist of two or more words separated by hyphens.

attribute value. The element of an attribute that specifies the characteristics relating to the attribute.

authorization. In computer security, verification of the eligibility of a user to access an object.

authorized user. A person with the appropriate permissions to access an object or to issue a command.

automatic recovery. A function of printer logic that permits the printer to reprint a job if the job is misprinted or damaged or if a component has failed.

auxiliary sheet. In InfoPrint, an object that represents a particular sheet of paper, blank or otherwise, that can

precede a job, separate documents within a job, or follow a job.

auxiliary-sheet selections. A particular combination of start, separator, and end sheets that print with jobs on a particular printer device.

B

backend. In AIX, the program that is invoked by the **qdaemon** process to run a print or batch job. Synonymous with *backend program*.

backend program. Synonym for *backend*.

backlog. In InfoPrint, the amount of time calculated by InfoPrint that is required to print all of the jobs currently in a queue.

backspace. In InfoPrint, the action used to back up and reprint pages in a job.

bar code. (1) A code representing characters by sets of parallel bars of varying thickness and separation that are read optically by transverse scanning. (2) In architecture, an array of parallel rectangular bars and spaces that together represent data elements or characters in a particular symbology. The bars and spaces are arranged in a predetermined pattern following unambiguous rules defined by the symbology.

BCOCA. Bar code object content architecture.

Bezier curves. A method of defining curves using anchor points, control handles, and tangent lines. The PostScript path passes through anchor points, and its approach direction is along the tangent lines that are controlled by the control handles. Many PC programs use this drawing method. Type 1 PostScript fonts are defined using Bezier curves.

binding. (1) The cover and materials that hold a book together. See *edition binding*, *perfect binding*, *spiral binding*, *wire-o binding*. (2) The process of applying the binding to a book. (3) In InfoPrint, assigning a job to an actual destination. See *early binding*, *late binding*. (4) In DCE, pointers stored in a DCE cell that are used to connect clients to servers.

bitmapped. Pertaining to an image formed by a rectangular grid of pixels. Each pixel is assigned a value to denote its color. One-bit images are black and white; 8-bit images have 256 colors (or grays); 24-bit images have full color. CMYK images have 32 bits per pixel to encode 256 levels in each of four channels. Bitmapped images are also called raster images.

bleed. An extra amount of printed image that extends beyond the trim edge of the sheet. Bleed ensures that no white gap appears at the edge of the sheet.

boot. To prepare a computer for operating by loading an operating system.

BSD. Berkeley Software Distribution.

BSD destination support system. In InfoPrint, the destination support system that generates a print command string that the shell runs to print jobs.

BSD physical printer. In InfoPrint, the object representing a printer device that uses the BSD destination support system.

burn. (1) In platemaking, an exposure. Burn is named because of the extremely bright ultraviolet lamps used to transfer images from film to plate. (2) In photography, to lengthen the exposure time to increase the final density of print.

C

cathode ray tube (CRT). A vacuum tube in which a beam of electrons can be moved to draw lines or form characters or symbols on its luminescent (phosphor-coated) screen. CRTs are the heart of all modern computer display screens. Black and white displays have only white phosphor scanned by one electron beam, while color displays have RGB phosphors scanned by three beams.

CDE. Common Desktop Environment.

cell. Synonym for *DCE cell*.

Cell Directory Service. A DCE component that manages a database of information about resources within a cell.

channel-attached printer. (1) A printer attached to an RS/6000 by cables, rather than through telecommunication lines. (2) In InfoPrint, a PSF physical printer that represents a channel-attached printer device. See also *AIX-attached printer*, *direct-attached printer*, *TCP/IP-attached printer*, *upload-SNA-attached printer*, *upload-TCP/IP-attached printer*.

child. See *parent/child relationship*.

choke. In color printing, an area whose dimensions have been reduced to avoid overlapping another color. Contrast with *spread*.

class. Synonym for *object class*.

clean. In InfoPrint, an action used to remove all the jobs from specified servers, actual destinations, or queues, or all the jobs submitted to specified logical destinations.

CLI. Command Line Interface.

client. In InfoPrint, the component of the print system that assembles a print request and submits the request to a server. The client generates the local ID numbers for each job, submits the jobs to the servers, and keeps track of where each user's jobs have been submitted. IBM InfoPrint Control and IBM InfoPrint Submit include clients; you can also install the IBM InfoPrint Select clients on workstations.

CMY. Cyan, magenta, yellow.

CMYK. Cyan, magenta, yellow, black.

collator. In some printers, for example, the IBM InfoColor 70, a special-purpose hard drive disk array used to store RIPped files and later transfer them to the LED print heads for imaging.

color balance. The relative levels of cyan, magenta, and yellow channels in an image to produce accurate color rendition of an original image.

color correction. The adjustment of the color balance in an image to produce accurate color rendition of an original image. Color correction is used for two- or three-spot-color jobs.

color key. A color proof similar to Cromalin, but typically not laminated and not necessarily accurate in color. Color keys are used to verify that breaks or color assignments and traps have been made accurately.

Command Line Interface (CLI). A type of user interface where commands are specified on the command line. Contrast with *Graphical User Interface*.

Common Desktop Environment (CDE). A graphical user interface running on a UNIX operating system.

complex attribute. In InfoPrint, an attribute that can have multiple values with each value containing multiple components.

constant data. Data that does not change between jobs and that is merged with variable data to produce personalized copies of documents. For example, a form letter (constant data) can be merged with a customer's name and address (variable data).

contextual help. A type of online help that provides specific information about each selectable object, menu choice, notebook tab, field, control and pushbutton in a window.

control strip. A strip of information that can be attached to a print job and used to measure registration and density.

Cromalin. The Dupont color proofing system. Four layers (CMYK) of light-sensitive material are exposed through final halftone negative films, then laminated together on an opaque backing to produce a color and trap-accurate final proof showing actual half-tone dot structure. Cromalin is sometimes called an analog proof.

crop. To remove unwanted areas of an image, usually indicated by crop marks on the original.

CRT. Cathode ray tube.

CTS. Cutter-trimmer-stacker.

cutter-trimmer-stacker (CTS). A post-processing device attached to a printer device and used for paper handling.

cyan, magenta, yellow (CMY). The subtractive primary colors.

cyan, magenta, yellow, black (CMYK). The four basic colors used in offset printing, as opposed to the three basic colors of light: red, green, and blue. Magenta, yellow, and cyan are the subtractive primaries. Black is added to provide better density and to produce a true black.

D

daemon. A program that runs unattended to perform a standard service. Some daemons are triggered automatically to perform their task; others operate periodically. Daemon processes generally provide service that must be available at all times to more than one task or user, such as sending data to a printer.

DAT. Digital audio tape.

DataBase 2/6000 (DB2*/6000). The component of the InfoPrint Library that indexes data for easy retrieval.

data stream. (1) All information (data and control commands) sent over a data link. (2) A continuous stream of data that has a defined format. (3) In InfoPrint, pertaining to the incoming format of the job and the output format required by the printer device. InfoPrint transforms the incoming format into the output format, as required. See also *document format*.

DB2*/6000. DataBase 2/6000.

DCE. Distributed Computing Environment.

DCE authority. The permission granted by DCE to access an object.

DCE cell. The basic unit of operation and administration in DCE. A group of DCE machines that

work together and are administered as a unit. A cell represents a group of users, systems, and resources that typically have a common purpose and share common DCE services.

DCE login ID. The identifier of a person logging into DCE. DCE uses this ID to determine a user's authenticity and authorization levels for accessing and modifying data in the DCE cell.

DCE ticket. The time-limited DCE authority granted whenever a user logs into DCE. When the DCE ticket expires, the user must log into DCE again in order to access objects protected by DCE.

deadline. In InfoPrint, a queuing technique where the next job assigned to the first position in the queue is the one whose deadline is closest. Contrast with *fifo (first-in-first-out)*, *job-priority*, *longest-job-first*, and *shortest-job-first*.

default document. In InfoPrint, an object that represents default attribute values for a document within a job. Synonymous with *initial value document*.

default job. In InfoPrint, an object that represents default attribute values for a job. Synonymous with *initial value job*.

default object. In InfoPrint, a general term that refers either to an *default document* or an *default job*. Synonymous with *initial value object*.

default value. A value stored in the system that is used when no other value is specified.

delete. In InfoPrint, an action used to delete default objects, jobs, logical destinations, actual destinations, or queues from the server.

desktop publishing. Performing print-related activities on a personal computer, including but not limited to layout, design, photo manipulation, creating fonts, editing text, color separation, scanning, and animation.

destination. See *actual destination*, *logical destination*.

destination support system (DSS). In InfoPrint, the programs that an actual destination uses to communicate with the output device. Synonymous with *device support system*. See *AIX destination support system*, *BSD destination support system*, *email destination support system*, *fax destination support system*, *PSF destination support system*, *3170 destination support system*.

device. An individual piece of equipment (hardware) that attaches to a computer, such as a printer device.

device address. The identification of an input or output device by its channel and unit number.

device driver. A file that communicates with a specific device such as a printer, disk drive, or display. An application that sends output to a device controls the actions of the device through the device driver. See *printer driver*.

device support system (DSS). Synonym for *destination support system*.

DFS. Distributed File Service.

digital. Pertaining to data represented by digits, sometimes with special characters and the space character.

digital audio tape (DAT). A high-capacity, low-cost megabyte bulk storage system used for archiving, copying (for backup purposes), and transferring large files. Typical DAT units store 1.3 GB on inexpensive cassette tapes.

digital color proof. An off-press color proof made from a color printer attached to a computer.

digital printing. A filmless and plateless printing process in which digital data for each page is transferred directly to a light-sensitive drum and then to paper for a final image.

direct-attached printer. (1) A printer device, attached to an RS/6000 through the network or through a serial or parallel port. (2) In InfoPrint, a PSF physical printer that represents a direct-attached printer device. See also *AIX-attached printer*, *channel-attached printer*, *TCP/IP-attached printer*, *upload-SNA-attached printer*, *upload-TCP/IP-attached printer*.

disable. In InfoPrint, an action used to stop the acceptance of jobs on destinations, queues, or servers, or to stop writing information to logs.

Distributed Computing Environment (DCE). A software system from the Open Software Foundation (OSF). DCE provides the services that allow a distributed application to interact with a collection of possibly heterogeneous computers, operating systems, and networks as if they were a single system.

Distributed File System (DFS). A DCE component consisting of a single, integrated file system that is shared among all DCE users and host computers in a DCE cell. DFS allows users to access and share files stored in a network, without having to know the physical location of the files. It also prevents users from simultaneously modifying the same information.

distributed print system. A computer system with the ability to interchange print data and controls among different computing environments with the intent of printing the data on a different system from the one where the print request was generated. For example, in

host-to-LAN distributed printing, data that resides on the host is printed on printers attached to a local area network.

dithering. A technique of filling the gap between two pixels with another pixel having an average value of the two to minimize the difference or add detail to smooth the result.

document. In InfoPrint, an object representing a grouping of data within a job. A job can contain one or more documents. The documents in a job can differ from each other in some ways. For example, they can contain different data and can have different document formats. A document within a job can contain printable data or a resource that is not printable by itself. See *file-reference document*, *printable document*, and *resource document*.

document element. A portion of a document at least a single page in size.

document format. In InfoPrint, a document format describes the type of the data and control characters in the document, such as line data or PostScript. The format of the data determines which printer devices are capable of printing the document and whether InfoPrint must transform the format.

document identifier. A string that identifies a document within a job. It consists of a job ID followed by a period (.) and a document sequence number. For example, 12.2. Document sequence numbers are integers starting at 1.

Document Printing Application (DPA). An ISO/IEC 10175 standard that addresses those aspects of document processing that enable users in a distributed open systems environment to send electronic documents to shared, possibly geographically-dispersed printers. InfoPrint supports the DPA standard.

document transfer method. In InfoPrint, the transfer method describes how documents are transferred to, or acquired by, servers. See *pipe-pull* and *with-request*.

document type. In InfoPrint, the document type describes the kind of data in the document. A *printable document* can only contain printable data. A *resource document* can only contain data such as fonts or form definitions that are not printable. A *file reference document* can only contain names of files entered on separate lines.

dot. The individual elements of a halftone.

dot gain. An increase in the size of a halftone dot during printing, caused by ink spreading. Generally, this value is known precisely, and the scanning and filming production process is calibrated to compensate

for it. The Cromalin proofing system simulates this effect.

dots per inch (dpi). A measure of data density per unit distance. Typical values for desktop publishing work range from 200 to 300 dpi. Values for printing with the IBM InfoColor 70 range as high as 600 dpi.

DPA. Document Printing Application.

dpi. Dots per inch.

drag and drop. In graphical user interfaces, a procedure by which you perform actions and tasks. Using the mouse, you drag (move) an action or object icon to a new position where you want the action or task to occur.

DSS. Destination support system.

dummy. A rough paste-up or hand-drawn representation of the anticipated finished product. A dummy is used for basic design and pagination.

duplex printing. (1) Printing on both sides of the paper. Contrast with *simplex printing (1)*. (2) Printing on both sides of the paper, placing output images on the media in a head-to-head format, so that the top of one image is at the same edge as the top of the next image. Contrast with *tumble duplex printing*; see also *simplex printing (2)*.

E

early binding. In InfoPrint, assigning a job to an actual destination as soon as it is accepted. Early binding permits InfoPrint to estimate the time when the job will be completed. Contrast with *late binding*.

edition binding. A type of book binding in which printed sheets are folded into 16- or 32-page signatures. Four-page endleaves are pasted on the outside of the first and last signature. The signatures are then collated by machine and sewn together using special sewing machines. Contrast with *perfect binding*, *spiral binding*, *wire-o binding*.

electronic document. A document stored in a computer instead of printed on paper.

electronic mail. Correspondence in the form of messages transmitted between workstations over a network. Synonymous with *email*.

electrophotographic. Pertaining to a type of printer technology that creates an image on paper by uniformly charging the photoconductor, creating an electrostatic image on the photoconductor, attracting negatively charged toner to the discharged areas of the

photoconductor, and transferring and fusing the toner to paper.

em. In composition, a unit of measurement exactly as wide and as high as the point size of the font being set. The name is derived from the fact that the letter M in early typefaces was usually cast on a square body.

email. Electronic mail.

email destination. In InfoPrint, an actual destination representing an electronic mailing system.

email destination support system. In InfoPrint, the destination support system that supports email destinations.

embellishments. Variable data added to all copies of assembled pages to make the unit seem like a whole; for example, headers, footers, page numbers, a table of contents, and chapter separations.

en. In composition, exactly one half an em.

enable. In InfoPrint, the action that makes a destination, queue, or server able to accept jobs, or a log able to accept information.

end sheet. The sheet of paper, blank or otherwise, that can follow a job. See also *auxiliary sheet*.

Enhanced X-Windows. A tool designed to permit multiple application processes to operate within multiple windows displayed on a virtual terminal. See *X-Windows*.

environment variable. Any one of a number of variables that describe the way an operating system runs and the devices it recognizes.

error log. A data set or file in a product or system where error information is stored for later access.

estimate. The professional cost analysis made by a print shop in response to a customer's request for a price quotation on a print job.

event. In InfoPrint, an occurrence in the printing system during an operation; for example, the completion of a command.

event log. In InfoPrint, a collection of messages about events that have occurred.

event notification. The notification that is sent by InfoPrint for an event.

extensions. An IBM program-provided software component that enables users to incorporate variable data into fixed-text documents to produce personalized or customized documents.

F

fax destination. In InfoPrint, an actual destination representing a fax device.

fax destination support system. In InfoPrint, the destination support system that supports fax destinations.

FIFO (first-in-first-out). In InfoPrint, a queuing technique where the next job assigned to the first position in the queue is the job that has been in the queue for the longest time. InfoPrint processes jobs in the order in which they are received. Contrast with *deadline*, *job-priority*, *longest-job-first*, and *shortest-job-first*.

file-reference document. In InfoPrint, a file containing the names of other files, each entered on a separate line. Job submitters can specify this file for printing when they specify a document type of **file-reference**. InfoPrint prints each file listed in the reference document.

File Transfer Protocol. In TCP/IP, the application protocol that makes it possible to transfer data to and from host computers and to use foreign hosts indirectly.

finisher. A hardware device attached to a printer that performs such operations as folding or stapling the printed page.

finishing. In a print shop, the final operations on a printed product, such as stapling, trimming, drilling, folding, embossing, varnishing, gluing, shrink wrapping, perforating, laminating, collating, and so on.

flag. A modifier of a command that specifies the action of the command. A dash usually precedes a flag. Synonymous with *option*. See also *keyword*.

FOCA. Font object content architecture.

folder. In the InfoPrint GUI, an object that represents a container for a collection of similar objects. For example, the Retained Jobs folder contains retained jobs.

font. (1) A family of characters of a given size and style; for example, 9-point Helvetica. (2) One size and one typeface in particular type family, including letters, numerals, punctuation marks, special characters, and ligatures. (3) A paired character set and code page that can be used together for printing a string of text characters. A double-byte font can consist of multiple pairs of character sets and code pages.

form definition. A resource object used by InfoPrint that defines the characteristics of the form or printed media, which include: overlays to be used, the paper

source (for cut-sheet printers), duplex printing, text suppression, and the position of composed-text data on the form.

forward space. In InfoPrint, the action used to move ahead and skip the printing of a specified number of pages in a job.

FPO. Low-quality (sometimes photographic) images placed in a dummy to represent final images. Desktop publishing software produces images as display-screen resolution FPOs.

front panel. In the CDE, a workspace area containing controls that represent various tasks you can perform and workspace switches. In basic InfoPrint installations, the front panel has been customized for InfoPrint.

FTP. File Transfer Protocol.

G

GCR. Gray component replacement.

GIF. Graphics Interchange Format.

global change. In the InfoPrint GUI, an action used to make changes to one or more attributes of several objects at once. You can also perform the same action on several objects of the same object class at the same time; for example, disabling two or more actual destinations at the same time.

global character. A character or set of characters used to specify an unknown number or set of characters in a search string. In InfoPrint, a global character is represented by an asterisk (*).

global ID. Global job identifier.

global job identifier. An unambiguous job identifier. In InfoPrint, it is represented as the name of the server managing the job followed by a colon (:) and a generated integer. This ID uniquely identifies the job within the InfoPrint server.

glyph. An image, usually of a character, in a font.

GOCA. Graphics object content architecture.

graphic character. A visual representation of a character, other than a control character, that is normally produced by writing, printing, or displaying.

Graphical User Interface (GUI). A type of user interface that takes advantage of a high-resolution monitor and includes a combination of graphics to implement an object-action paradigm, the use of pointing devices, menu bars, overlapping windows, and icons. Contrast with *Command Line Interface*.

Graphics Interchange Format (GIF). A compresses graphics format widely used on the Internet.

gray component replacement (GCR). Synonym for *under color removal (UCR)*.

gray scale. A strip of standard gray tones, ranging from white to black, placed at the side of the original copy during photography to measure the tonal range and contrast obtained.

GUI. Graphical User Interface.

gutter. The blank area or inner margin from the printing area to the binding.

H

halftone. A printing method that simulates continuous-tone shading using dots of varying sizes laid out on a regular grid. Larger dots simulate darker tones and smaller dots simulate lighter tones. Typical grid spacings are 85 lines per inch (lpi) (newspaper), 133 lpi (low end), 150 lpi (midrange), and 175+ lpi (high quality).

help. (1) In the InfoPrint GUI, an action used to display the online help for a specific template, object, action, button, control or area in an application window. (2) The name of a button used to access the online help.

hold. An indication determined by the **job-hold** attribute that is used to keep a job in the queue and prevent InfoPrint from scheduling it.

hostname. The name given to an AIX system.

hot folder. A workstation directory where users copy jobs to submit them to print.

hypertext. A way of presenting information online with connections between one piece of information and another. These connections are called hypertext links. See also *hypertext link*.

hypertext link. A connection between one piece of information and another. Selecting a link displays the target piece of information.

I

IBM InfoColor 70. A duplex, process color, web-fed printer with 600 dpi pel resolution.

IBM InfoPrint. A solution of software and hardware products that can supplement or replace the offset presses and copiers in print shops with high-quality, non-impact, black and white, or process color printers.

InfoPrint takes documents from creation to the published, kitted, and shipped product.

IBM InfoPrint Control. The administration and management component of IBM InfoPrint Manager for AIX. It runs on AIX and provides a complete set of system administrator and operator functions to control all aspects of a print environment, as well as job submitter printing functions to submit and control jobs.

IBM InfoPrint Library. A component of IBM InfoPrint Manager for AIX. IBM InfoPrint Library is a document archival and retrieval system in which job tickets and their associated resource files (graphics, fonts, images, and PostScript data) are stored and from which these data types can be retrieved for reuse.

IBM InfoPrint Manager for AIX. The software component of IBM InfoPrint. IBM InfoPrint Manager for AIX handles the scheduling, archiving, retrieving, and assembly of a print job and its related resource files. It also tracks the finishing and packaging of the printed product.

InfoPrint is based on Palladium technology developed at MIT/Project Athena. It conforms to the ISO DPA and POSIX standards.

IBM InfoPrint Network. The local area network running TCP/IP protocol that InfoPrint uses to communicate among servers, clients, and output devices.

IBM InfoPrint Scan. The component of IBM InfoPrint Manager for AIX that allows users to scan images as TIFF files to be included in jobs submitted by InfoPrint Submit from a Windows workstation.

IBM InfoPrint Select. The component of IBM InfoPrint Manager for AIX that allows users to submit jobs from an OS/2 or Windows workstation.

IBM InfoPrint Submit. The component of IBM InfoPrint Manager for AIX that allows users to submit jobs with a job ticket from a Windows or Macintosh workstation.

IBM InfoPrint 20. A black and white, large-format, cut-sheet workgroup laser printer with optional duplexing and 600-dpi resolution.

IBM InfoPrint 4000. A duplex, black and white, continuous-forms printer with 600-dpi resolution.

IBM InfoPrint 60. A duplex, black and white, cut-sheet printer with 600-dpi resolution.

icon. A graphic symbol displayed on a screen that a user can select to invoke a function or software application.

image. Toned and untoned pels arranged in a pattern.

image data. Rectangular arrays of raster information that define an image.

imagesetter. A high resolution (1270 dpi–3600+ dpi) printer that uses an Argon (green) laser to write to film using digital input. Imagesetting is the step before Cromalin proofing and platemaking.

imposition. The process of arranging pages on a press sheet to ensure the correct order during final cutting, folding, and binding. Electronic imposition builds press sheets automatically during the RIP and outputs film formatted for immediate use in platemaking.

InfoPrint. (1) IBM InfoPrint (2) In IBM InfoPrint software publications, IBM InfoPrint Manager for AIX or any of its components, especially IBM InfoPrint Control.

initial value document. Synonym for *default document*.

initial value job. Synonym for *default job*.

initial value object. Synonym for *default object*.

initially settable attribute. An attribute whose value can be established when an object is created but cannot be subsequently set or modified. See also *resettable attribute*; contrast with *non-settable attribute*.

input focus. The area of a window where user interaction is possible from either the keyboard or the mouse.

input tray. For a printer device, the container that holds the medium upon which the printer prints its output.

Intelligent Printer Data Stream (IPDS). (1) An all-points-addressable data stream that enables users to position text, images, and graphics at any defined point on a printed page. (2) Information that the host sends to IBM IPDS printers. This information generally contains basic formatting, error recovery, and character data and enables the printers to make decisions. (3) An architected host-to-printer data stream that contains both data (text, image, graphics, and bar codes) and controls defining how the data is to be presented. IPDS provides a device-independent interface for controlling and managing all-points-addressable (APA) printers.

International Organization for Standardization (ISO). An organization of national standards bodies from various countries established to promote development standards to facilitate international exchange of goods and services, and develop cooperation in intellectual, scientific, technological, and economic activity.

Internet. A wide area network connecting thousands of disparate networks in industry, education, government, and research. The Internet network uses TCP/IP as the protocol for transmitting information.

Internet Protocol. The set of rules that determines how to route data from its source to its destination in an Internet environment.

intervening jobs. In InfoPrint, the number of jobs in a queue that are scheduled to print before the job in question.

IOCA. Image object content architecture.

IP address. The Internet Protocol address of the server in a dotted decimal format where each node is an integer. (For example, 9.99.9.143).

IPDS. Intelligent Printer Data Stream.

ISO. International Organization for Standardization.

J

job. In InfoPrint, an object that represents a request to print or transmit one or more documents together in a single printing session. A job includes the data to be printed or transmitted and resources such as fonts, images, and overlays. Depending on how it was submitted, it may also include a job ticket. Synonymous with *job bundle*, *print job*.

job bundle. Synonym for *job*.

job data. The page descriptions, merge data, and embellishments that compose a document in a job, either directly or by reference.

job ID. A local or a global identifier that identifies a job to a job submitter, administrator, operator, or InfoPrint. See *local job identifier*, *global job identifier*.

job-priority. In InfoPrint, a queuing technique where the next job assigned to the first position in the queue is the one with the highest priority. Contrast with *deadline*, *FIFO (first-in-first-out)*, *longest-job-first*, and *shortest-job-first*.

job submitter. In InfoPrint, the person who submits jobs for printing. Often, this person is an application programmer who maintains applications that generate data to be printed.

job ticket. The customer's hardcopy or electronic instructions listing all the variables describing a print job, either directly or by reference. The print shop can add specifications to the job ticket and can print the job ticket.

Joint Photographic Experts Group (JPEG). A compressed graphics format widely used on the Internet.

JPEG. Joint Photographic Experts Group.

K

kerning. In typesetting, adjusting the relative spacing of two characters to improve their appearance and readability. Kerning pairs are specific sets of characters with built-in relative spacing. Some typefaces have as many as 100 kerning pairs.

keyword. (1) A name or symbol that identifies a parameter. (2) Part of a command operand that consists of a specific character string, such as **DSNAME=**.

kitting. In the print shop environment, packaging the completed published work with attendant binders, tabs, diskettes, and other equipment or information, before shipping the finished product.

L

LAN. Local Area Network.

laser (light amplification by stimulated emission of radiation). In IBM printers, a device that emits a beam of coherent light that forms the image on the photoconductor that is subsequently transferred to the paper.

late binding. In InfoPrint, waiting to assign a job to an actual destination until it is about to be processed. Late binding permits InfoPrint to route a job to the first suitable actual destination that becomes available. Contrast with *early binding*.

LED. Light-emitting diode.

light-emitting diode (LED). The imaging device element for electrophotographic print units.

lines per inch (lpi). A measure of the density of the grid used to space halftone dots. Typical grid spacings are 85 lpi (newspaper), 133 lpi (low end), 150 lpi (midrange) and 175+ lpi (high quality).

Local Area Network (LAN). A computer network at one location that consisting of devices connected to one another and communicating. This network can also be connected to a larger network.

local ID. Local job identifier.

local job identifier. In InfoPrint, a job identifier automatically generated by the server, identifying the

job to the person who submitted it. InfoPrint maps a local job ID to a global job ID.

locale. (1) The human language and character set of information presented to a user. (2) In InfoPrint, the language InfoPrint uses when sending notification and error messages or displaying the InfoPrint graphical user interfaces.

log. (1) A collection of messages or message segments added to a file for accounting or data collection purposes. (2) To record messages in a file.

logical destination. In InfoPrint, an object to which users submit their jobs. The destination routes jobs to one or more actual destinations representing output devices such as printers, electronic mail systems, or fax machines. See also *logical printer*; contrast with *actual destination*.

logical printer. In InfoPrint, a type of logical destination. The logical printer routes jobs to one or more physical printers representing printing devices.

logical unit (LU). A type of network accessible unit that enables end users to gain access to network resources and communicate with each other.

logical unit (LU) 6.2. A type of logical unit that supports general communication between programs in a distributed processing environment. LU 6.2 is characterized by (a) a peer relationship between session partners, (b) efficient utilization of a session for multiple transactions, (c) comprehensive end-to-end error processing, and (d) a generic application program interface (API) consisting of structured verbs that are mapped into a product implementation.

longest-job-first. In InfoPrint, a queuing technique where the next job assigned to the first position in the queue is the longest job in the queue. Contrast with *deadline*, *FIFO (first-in-first-out)*, *job-priority*, and *shortest-job-first*.

lpi. Lines per inch.

LU. Logical unit.

M

magnetic-ink character recognition (MICR). Identification of characters printed with ink that contain particles of magnetic material.

mainframe processor. A functional unit that interprets and executes instructions in a large computer to which other computers are connected so that they can share the facilities the mainframe provides.

makeready. All the setup work involved in preparing a press for a print run.

manage. In the InfoPrint GUI, the action used to put an object into a mode where its icon reflects changes of status.

mechanical. A camera-ready layout. The mechanical can consist of multiple sheets or overlays for each spot or process color used. Final images, if not stripped in later, should be at final size, cropped and screened to the correct final-line frequency.

medium. In InfoPrint, an object representing the physical material upon which a job is printed.

merge data. Data that is unique to each copy of a document and that customizes the document; for example, serial numbers or mailing information. Merge data is typically a small percentage of the total data in a document.

message catalog. A file of all the possible messages than can display during the processing of an application.

MICR. Magnetic ink character recognition.

Mixed Object Document Content Architecture (MO:DCA). An architected, device-independent data stream for interchanging documents.

MO:DCA-P. Mixed Object Document Content Architecture Presentation.

modify. In InfoPrint, an action used to modify the values of attributes within the object attributes notebook.

moire. Undesirable interference patterns caused by two overprinting halftone screens with incorrect halftone dot angles.

monospaced. In typesetting, a typeface in which all the characters have equal widths. Monospaced typefaces are useful for tabulating figures.

Multiple Virtual Storage (MVS). An operating system developed by IBM. The design of MVS incorporates an addressing architecture that provides a unique address space to each job in the system.

MVS. Multiple Virtual Storage.

N

N_UP. Pertaining to the number of forms placed together in a layout. Typical layouts are 2_UP, 4_UP, 8_UP, 16_UP, and so on. N_UP printing is done to use the maximum area of the print sheet.

name service. The DCE service that administers the namespace and provides the network binding information that a client requires to access the server.

namespace. A global name repository available to all utilities and API procedures. The namespace contains mappings of object names to other related objects. For example, the namespace provides the mapping of a logical destination to the server in which it resides.

Network File System (NFS). A protocol developed by Sun Microsystems that uses Internet Protocol to allow a set of cooperating computers to access each other's file systems as if they were local.

newline options. The different ways in which the printer determines how lines are delimited in a document data stream.

NFS. Network File System.

non-process-runout (NPRO). A printer function that moves the last printed sheet to the stacker of the printer device.

non-settable attribute. An attribute that is neither initially settable nor resettable. The values for these attributes are controlled by InfoPrint. Contrast with *initially settable attribute*, *resettable attribute*.

notification. (1) The act of reporting the occurrence of events. (2) In InfoPrint, notification of events appears as messages in event logs or messages sent to administrators, operators, and job submitters. In the InfoPrint GUI, notification of events also appears as changes to the appearance of icons.

notification-profile. In InfoPrint, an attribute associated with an object that contains information designating the people to whom InfoPrint sends notification about events for that object, which event information it sends, and how it sends the information.

NPRO. Non-process-runout.

O

object. A collection of attributes that represent a physical or logical entity in the print system. For example, a specific printer device is represented by an actual destination (physical printer) object. An object is identified by its object name. Objects are grouped into classes. See also *object class*.

object class. A group of objects that share a common definition and therefore share common properties, operations, and behavior as defined by their attributes. For example, all InfoPrint queue objects are in the same object class and each queue has the same set of queue attributes. However, the values for those attributes can differ for each queue within the queue object class.

Object Identifier (OID). In architecture, a notation that assigns a globally unambiguous identifier to an object or a document component. The notation is defined in international standard ISO.IEC 8824(E).

object name. The alphanumeric term that identifies an object.

object state. The state of an object indicates its availability and readiness for performing its functions. An object can be in one of a number of states such as ready, busy, or unknown.

OCR. Optical character recognition.

octet. A byte that consists of eight binary digits (bits).

offset stacking. In certain printer devices, a function that allows the printer to offset the printed output pages for easy separation of the jobs.

OID. Object Identifier.

open destinations window. In the InfoPrint GUI, the action used to open a new application window displaying the logical and actual destinations associated with a queue.

Open Prepress Interface (OPI). An industry standard for replacing low-resolution images in review documents with high-resolution images needed for high-quality final output.

Open Software Foundation (OSF). A nonprofit research and development organization created by a consortium of companies that work together to develop software in the open systems market. OSF developed the Distributed Computing Environment (DCE).

open window. In the InfoPrint GUI, the action used to open a new application window representing one or

more objects displayed in the currently open application window.

operation. An action performed on one or more data items.

operator. In InfoPrint, the person responsible for printer devices. Also, this person performs a subset of tasks for InfoPrint queues and actual destinations, and performs some job-related tasks.

OPI. Open Prepress Interface.

optical character recognition (OCR). Conversion of scanned text to editable ASCII characters.

option. A modifier of a command that specifies the action of the command. A dash usually precedes an option. Synonymous with *flag*. See also *keyword*.

orphan logical destination. In the InfoPrint GUI, an object that represents a logical destination that is not associated with an existing queue.

orphan logical printer. In the InfoPrint GUI, an object that represents a logical printer that is not associated with an existing queue.

OSF. Open Software Foundation

overlay. A collection of constant data, such as lines, shading, text, boxes, or logos, that is electronically composed in the host processor and stored in a library, and that can be merged with variable data during printing.

P

PAC. Privilege Attribute Certificate.

page definition. (1) A resource that contains the formatting controls for line data. (2) In InfoPrint, a resource that defines the rules of transforming line data into composed pages and text controls.

page segment. A resource that contains composed text and images, prepared before formatting and included during printing.

Palladium. A distributed print system developed at MIT/Project Athena with participation from Digital Equipment Corporation (DEC), International Business Machines (IBM), and Hewlett-Packard (HP). It is a reference implementation for the OSI Document Printing Architecture (DPA) standard, ISO/IEC 10175. InfoPrint was designed using Palladium concepts.

pane. In the Work Area of the InfoPrint administrator's GUI, an area containing a group of objects of a specific type, such as an actual destinations pane.

parent/child relationship. In InfoPrint, servers, queues, and destinations are related to one another in a parent/child relationship. For example, a server is the parent of all the queues that reside in that server and these queues are its children.

pass through. In InfoPrint, referring to options submitted with a job that are used by the device driver, but not InfoPrint. InfoPrint does not process or validate this information; it passes it along to the device driver. See *device driver*.

path. The route used to locate files; the storage location of a file. A fully qualified path lists the drive identifier (if any), directory name, subdirectory name (if any), and file name with the associated extension.

pause. In InfoPrint, the action used to temporarily halt the printing of jobs on physical printers or the distribution of jobs from servers or queues.

pdcrcls. In InfoPrint, a utility used to create directories within the DCE namespace.

pdcreate. In InfoPrint, the command used to create a new object and set its attributes to specified values.

PDF. (1) Portable Document Format. (2) Printer description file.

pdmsg. In InfoPrint, a utility used to display information about a message.

pdpr. In InfoPrint, the command used to create and submit a job, consisting of one or more documents, to a server for printing or transmission.

perfect binding. A type of book binding in which the pages are held together with flexible adhesive. Contrast with *edition binding*, *spiral binding*, *wire-o binding*.

permissions. In AIX, codes that determine who can access a file and what operations they can perform on the file.

physical printer. In InfoPrint, a type of actual destination that represents a printer device. See also *printer device*.

piobe. The standard printer input/output backend program used by AIX for printing. See also *ainbe*.

pipe-pull. In InfoPrint, a document transfer method where InfoPrint saves the documents in a file and transfers the address of the file to the server. InfoPrint transfers the file to the server upon the request from the server. This is an efficient transfer method for large jobs and is the default transfer method at job submission. Contrast with *with-request*.

plex. A document or actual destination attribute used to define the placement of output images on the page. See the plex values *simplex* and *tumble*.

plug-ins. A component of Adobe PageMaker that enables users to incorporate variable data into fixed-text documents to produce personalized or customized documents.

Portable Document Format (PDF). An Adobe PostScript data format that can be viewed or printed.

Portable Operating System Interface for Computer Environments (POSIX). An Institute of Electrical and Electronics Engineers (IEEE) standard for computer operating systems.

POSIX. Portable Operating System Interface for Computer Environments.

PostScript. Adobe's page-description language. PostScript has become a standard for graphic design and layout software. PostScript files can contain both vector and raster data. Fonts are described using PostScript coding. Many desktop publishing systems produce PostScript data as their output data stream.

PostScript printer description (PPD). A file that contains options for printing PostScript data on various printer devices.

PPD. PostScript printer description.

preflight. To assess all resources for a job before the actual print run.

prepress. Work done in the print shop before printing a job, such as preparing data and art, page imposition, color retouching, electronic editing, and page layout.

print database. The set of files on disk which provide a permanent repository for the attributes of all print objects such as logical destinations, queues, and actual destinations.

print job. Synonym for *job*.

Print Quality Enhancement (PQE). A printer facility that provides edge smoothing along diagonal lines, fine fidelity protection, and independent boldness control.

Print Services Facility (PSF). Any of several programs, including PSF for AIX, PSF/MVS, PSF/VM, and PSF/VSE, that produce printer commands from the data sent to them.

print system. A group of one or more print servers and one or more printing devices, which may or may not be located in the same geographical area. The components of a print system are assumed to be interconnected in some manner, providing at least one

network interface to print clients, and acting synergistically to supply the defined document print service. (D)

printable document. In InfoPrint, an object that represents text or data to be printed by a job. Contrast with *resource document*.

printer description file (PDF). A file that contains options for printing PostScript data on a specific printer device.

printer device. The physical output device that performs the printing function. See also *physical printer*.

printer driver. A file that describes the physical characteristics of a printer or other peripheral device, and is used to convert graphics and text into device-specific data at the time of printing or plotting. Synonymous with *device driver*.

priority. In InfoPrint, a number assigned to a job that determines its precedence in being printed. Jobs with higher priority numbers are handled before jobs with lower priority numbers.

Privilege Attribute Certificate (PAC). In DCE, a certified set of access privileges that can be presented by a user or administrator to establish access rights to objects.

process color. Color made up of CMYK inks simulating a specified color. This is the traditional method of reproducing continuous tone color images (color separations). Because of the nature of color inks, certain inks do not reproduce well.

processor. In a computer, a functional unit that interprets and executes instructions. A processor consists of at least an instruction control unit and an arithmetic and logic unit. (T)

promote. In InfoPrint, an action used to advance a queued job to the beginning of the queue so it will print on the next available printer that can handle that job.

protocol. A set of semantic and syntactic rules that determines the behavior of functional units in achieving communication.

PSF. Print Services Facility.

PSF destination support system. In InfoPrint, the destination support system that communicates with PSF for AIX to print jobs.

PSF physical printer. In InfoPrint, the object representing a printer device that uses the PSF destination support system.

Q

QuarkXpress. A desktop publishing system produced by Quark, Incorporated.

queue. (1) In InfoPrint, an object that manages a collection of jobs that are waiting to print. A queue receives jobs from one or more logical destinations and sends jobs to one or more actual destinations. (2) A line or list formed by items waiting for processing.

R

raster. A pattern of dots comprised of varying data depths. Black and white images are one-bit (on/off); grayscale images are 8-bit (256 levels); RGB images are 24-bit; CMYK images are 32-bit.

raster image processor (RIP). A processor in which a PostScript data stream is converted into dot patterns that are transferred to the final print medium. InfoPrint uses an Adobe RIP to convert PostScript to IPDS for such printers as the IBM InfoPrint 4000 and IBM InfoPrint 60.

rc.pd. In InfoPrint, a utility used to start the InfoPrint servers listed in the */etc/pd.servers* file.

read-only. In InfoPrint, describes an attribute value that cannot be set by the user but may change based on other activity.

ready. (1) A state in which an object is ready and able to perform tasks. (2) An available resource, such as a value of the **media-ready** attribute. Contrast with *supported*.

red, green, blue (RGB). The colors of CRT display phosphors. RGB images are for screen display only. They must be converted to CMYK images before printing.

registration. (1) The accuracy of printing on paper relative to the edges of the paper. (2) The accuracy of printing a single color (cyan, magenta, or yellow) relative to black. (3) The accuracy of printing on one side of a page relative to printing on the reverse side of the page.

Remote Procedure Call (RPC). A DCE component that manages communication between clients and servers in a DCE environment. It allows requests from a client program to access a procedure anywhere in the network.

reprographics. The process of copying or duplicating documents or information.

requested. In InfoPrint, pertaining to the specific values of attributes requested by a job when it is submitted. The requested attribute values of a job are validated against supported attribute values for a physical printer to determine if the printer can handle that job. Contrast with *supported*.

resettable attribute. An attribute whose value can be set or modified after an object has been created, assuming the object is in an appropriate state to be modified. See also *initially settable attribute*; contrast with *non-settable attribute*.

resource. In AFP, a file containing a collection of printing instructions used when printing a job. Resources include fonts, overlays, form definitions, page definitions, and page segments.

resource context. In InfoPrint, an object that contains directory path information that helps the print system locate resources needed for printing a job. The resources include fonts, overlays, form definitions, page definitions, and page segments.

resource document. In InfoPrint, an object that represents a resource, such as graphics or fonts, used by a job to print a printable document. Contrast with *printable document*.

resubmit. In InfoPrint, an action used to reroute pending or retained jobs to a different logical destination than the one through which the job was originally submitted.

resume. In InfoPrint, the action used to resume the printing of paused jobs or resume the distribution of jobs from paused servers or queues.

retained job. In InfoPrint, an object that represents a job that is being stored in the print system, normally after the completion of printing the job, for a specified amount of time. A retained job does not reside in a queue.

retention. The process of storing data after completion of a process for a certain length of time.

retrieval. The process of bringing digital archived data out of storage and into online memory for reuse. See also *archiving*.

RGB. Red, green, blue.

RIP. (1) Raster image processor. (2) To convert data to dot patterns using a raster image processor.

root user. In the AIX environment, the system user with the most authority who can log in and execute restricted commands, shut down the system, and edit or delete protected files. Synonymous with *superuser*.

RPC. Remote Procedure Call.

RS/6000. A family of workstations and servers based on IBM's POWER architecture. They are primarily designed for running multi-user numerical computing applications that use the AIX operating system.

S

scanner. A device that converts hardcopy source data into digital format (halftone dots) to avoid retyping the data.

scheduler. In InfoPrint, the scheduling method that the queue uses when assigning a job to an actual destination.

separator sheet. The sheet of paper, blank or otherwise, that separates documents within a job. See also *auxiliary sheet*.

server. In InfoPrint, the object that accepts configuration, management, and printing requests, performs the requested operations, and sends responses back as a result of the operation.

settable attribute. See *initially settable attribute*, *resettable attribute*.

severity. An indication of how serious an error condition is.

shell. In the AIX operating system, a command interpreter that acts as an interface between the user and the operating system. In InfoPrint documentation, all shell examples use the Korn shell.

shift-out, shift-in code. Control characters used to indicate the beginning and end of a string of double-byte, ideographic characters.

shortest-job-first. In InfoPrint, a queuing technique where the next job assigned to the first position in the queue is the shortest job in the queue. Contrast with *deadline*, *FIFO (first-in-first-out)*, *job-priority*, and *longest-job-first*.

shut down. In InfoPrint, the action used to halt all server or actual destination processes without deleting the server or actual destination.

signature. A group of pages that are printed, folded, cut, and bound together. Manual placement of pages on the signature is determined using a folding dummy.

simplex. In InfoPrint, the value of the document or actual destination **plex** attribute indicating that output images are placed on the media in a head-to-head format, so that the top of one image is at the same edge as the top of the next image. Depending on the

value of the document or actual destination **sides** attribute, the document may be printed on one or both sides of the paper. Contrast with *tumble*; see also *simplex printing (2)*, *duplex printing (2)*.

simplex printing. (1) Printing on only one side of the paper. Contrast with *duplex printing (1)*. (2) Printing on one or both sides of the paper, placing output images on the media in a head-to-head format, so that the top of one image is at the same edge as the top of the next image. Contrast with *tumble duplex printing*; see also *duplex printing (2)*.

SMIT. System Management Interface Tool.

SNA. Systems Network Architecture.

spiral binding. A type of book binding in which wire or plastic coils are threaded through a series of holes or slots in the binding edge. Contrast with *edition binding*, *perfect binding*, *wire-o binding*.

spot color. Individual colored inks formulated to exactly match a specified color. Spot color is used when CMYK process color is unable to produce a reasonable facsimile of the color or when vivid color is needed. Spot color also is used when fluorescent or metallic colors are needed.

spread. In color printing, an area whose dimensions have been enlarged to eliminate white space between it and another color. Contrast with *choke*.

start sheet. The sheet of paper, blank or otherwise, that can precede a job. See also *auxiliary sheet*.

state. Synonym for *object state*.

stripping. The process of mechanically assembling film into plate layouts. Page imposition takes place during stripping.

subnet mask. A bit template indicating which part of an IP address represents the network. A 1 in the subnet mask means that the corresponding bit in the IP address is part of the network address; a 0 means that it is not. For example, if the IP address is 9.99.12.137 and the subnet mask is 255.255.255.0, the network address is 9.99.12.0.

subnetwork. (1) Any group of nodes that have common characteristics, such as the same network ID. (2) In the AIX operating system, one of a group of multiple logical divisions of another network, such as can be created by TCP/IP.

subtractive color system. A system that reproduces an image by mixing (adding) appropriate quantities of cyan, magenta, and yellow paints on white paper.

These paints reflect certain colors and absorb—or subtract—others. Contrast with *additive color system*.

superuser. Synonym for *root user*.

supported. In InfoPrint, pertaining to the specific job attribute values that the actual destination can accept during job validation. InfoPrint validates the requested attribute values of the job against the supported attribute values of the actual destination to determine whether the actual destination can handle that job. Contrast with *requested*.

synchronous. Occurring with a regular or predictable time relationship to a specified action. Contrast with *asynchronous*.

system administrator. Synonym for *administrator*.

System Management Interface Tool (SMIT). In the AIX operating system, an interface tool for installation, maintenance, configuration and diagnostic tasks. SMIT allows you to perform tasks without entering any commands.

Systems Network Architecture (SNA). The description of IBM's logical structure, formats, protocols, and operational sequences for transmitting units through, and controlling the configuration and operation of, networks.

T

table reference character (TRC). An optional control character in a print data set. The TRC identifies the font used to print the record and can be used to select a font during printing.

Tagged Image File Format (TIFF). A digital format for storing scanned images. TIFF files are also referred to as raster format files (as opposed to vector format files). When used in desktop publishing, TIFF files produce only a low-resolution FPO image; the high-resolution data remains on the hard disk.

task help. A type of online help that provides a list of tasks that can be completed with a selected object. When you select a task, the help provides step-by-step information about how to complete the task.

TCP/IP. Transmission Control Protocol/Internet Protocol.

TCP/IP-attached printer. (1) A printer device attached to an RS/6000 through telecommunication lines using the TCP/IP protocol. (2) In InfoPrint, a PSF physical printer that represents a TCP/IP-attached printer device. See also *AIX-attached printer*, *channel-attached printer*, *direct-attached printer*, *upload-SNA-attached printer*, *upload-TCP/IP-attached printer*.

template. In the InfoPrint GUI, an object that represents a set of default attribute values that has been defined for creating a particular type of object, such as an actual destination.

ticket. See *job ticket*, *DCE ticket*.

TIFF. Tagged Image File Format.

Transmission Control Protocol/Internet Protocol (TCP/IP). A set of communication rules used in the Internet and in any network that follows the U.S. Department of Defense standards for inter-network protocol. TCP provides a reliable host-to-host protocol between hosts in packet-switched communications networks and in interconnected systems of such networks. It assumes that the Internet Protocol (IP) is the underlying protocol. See also *Internet Protocol*.

trapping. In desktop publishing, the amount of overlap in overprinting colors. Trapping prevents white paper showing through gaps caused by normal errors in registration. On sheet-fed presses, trapping is usually 0.25 point. See also *choke*, *spread*.

TRC. Table reference character.

tumble. In InfoPrint, the value of the document or actual destination **plex** attribute indicating that output images are placed on the media in a head-to-toe format, so that the top of one image is at the same edge as the bottom of the next image. The document must be printed on both sides of the paper. Contrast with *simplex*.

tumble duplex printing. Printing on both sides of the paper, placing output images on the media in a head-to-toe format, so that the top of one image is at the same edge as the bottom of the next image. Contrast with *simplex printing (2)*, *duplex printing (2)*.

U

UCR. Under color removal.

under color removal (UCR). Conversion of neutral color areas to black ink that reduces use of CMY inks, improves trapping, and reduces setup time. Generally, UCR is performed during image scanning, but some RIPs perform it during processing. Synonymous with *gray component replacement (GCR)*.

unmanage. In the InfoPrint GUI, the action used to put an object into a mode where its icon does not reflect the changes of status for the object.

upload printer. See *upload-SNA-attached printer*, *upload-TCP/IP-attached printer*.

upload-SNA-attached-printer. In InfoPrint, a PSF physical printer that represents a printer device attached to an MVS system and managed by PSF/MVS. InfoPrint communicates with the MVS system through the SNA network. See also *AIX-attached printer*, *channel-attached printer*, *direct-attached printer*, *TCP/IP-attached printer*, *upload-TCP/IP-attached printer*.

upload-TCP/IP-attached-printer. In InfoPrint, a PSF physical printer that represents a printer device attached to an MVS system and managed by PSF/MVS. InfoPrint communicates with the MVS system through the TCP/IP network. See also *AIX-attached printer*, *channel-attached printer*, *direct-attached printer*, *TCP/IP-attached printer*, *upload-SNA-attached printer*.

V

validate. In InfoPrint, to compare the attribute values requested by a job with the supported attribute values of the actual destinations in the system and to determine whether there is an actual destination capable of printing or transmitting the job.

value. A specific characteristic of an attribute.

variable. A name used to represent a data item whose value can change while the program is running.

variable data. Data that can be changed between jobs. For example, a form letter (constant data) can be merged with variable data such as a customer's name and address to produce personalized copies of documents.

varnish. A protective layer applied to a finished sheet, usually for photos, but sometimes used as a design element due to its reflective nature. Varnishes can be tinted.

vector. An absolute coordinate point and line in space. PostScript files can contain vector artwork. Vector files are converted to rasters during the RIP process.

velox. A black and white photographic print made from a halftone negative, to be used as a proof copy.

vignette. An image with soft, fade-away edges.

Virtual Machine (VM). (1) An IBM licensed product that manages the resources of a single computer so that multiple computing systems appear to exist. (2) A virtual data processing system that appears to be at the exclusive disposal of a particular user, but whose functions are accomplished by sharing the resources of a real data processing system. (T)

Virtual Storage Extended (VSE). An IBM licensed program whose full name is the Virtual Storage

Extended/Advanced Function. It is a software operating system controlling the execution of programs.

Visual Systems Management (VSM). In AIX, a type of graphical user interface that allows system management through the direct manipulation of objects.

VM. Virtual Machine.

VSE. Virtual Storage Extended.

VSM. Visual Systems Management.

W

web. A roll of paper used in web or rotary printing.

well. In the InfoPrint administrator's GUI, an area within a pane that contains a group of objects related to the objects in the pane; for example, a queues well within a servers pane.

what you see is what you get (WYSIWYG). Refers to the fact that the composite image displayed on the screen at a computer workstation has the appearance of the final printed image.

window. A rectangular area of the screen that you can move about, place on top of, or pull under other windows, or reduce to an icon.

wire-o binding. A continuous double series of wire loops run through punched slots along the binding side of a booklet. Contrast with *edition binding*, *perfect binding*, *spiral binding*.

with-request. In InfoPrint, a document transfer method where the client transfers the documents directly to the server. Contrast with *pipe-pull*.

workstation. A terminal or microcomputer, usually one that is connected to a mainframe or to a network, at which a user can use applications.

write access. A level of authorization that grants the ability to modify data.

WYSIWYG. What you see is what you get.

X

X-Windows. A network-transparent windowing system developed by MIT. It is the basis for Enhanced X-Windows, which runs on the AIX Operating System.

xerography. A dry printing process using corona-charged photoconductive surfaces to hold latent images that are developed with a dry toner and then transferred to paper and fused with heat.

Xstation. A terminal that is connected through a network to an RS/6000 system, from which a user can perform command-line functions and run X-Windows based applications.

Xtensions. A UNIX-provided software component that enables users to incorporate variable data into fixed-text documents to produce personalized or customized documents.

Numerics

3170 destination support system. The destination support system used by the IBM InfoColor 70 to print jobs.

3170 physical printer. A physical printer representing an IBM InfoColor 70 printer device.

Index

Special Characters

/etc/services file 164, 167, 578
/usr/lib/lpd/pio/predef directory 328
/usr/lpd/pio/predef directory 337
/usr/lpp/pd/attr directory 310
/usr/lpp/psf/reslib directory 384, 385, 386, 387
* (wildcard) 8

Numerics

00000000.tab file 289
240-pel
 output for PDF 273
 output for PostScript 273
300-pel
 output for PDF 273
 output for PostScript 273
40010000.tab file 289
40040000.tab file 289
480-pel
 output for PDF 273
 output for PostScript 273
600-pel
 output for PDF 273
 output for PostScript 273

A

accept-jobs attribute
 actual destination 313
accept-unsupported-jobs attribute
 server 558
account-text attribute
 default document 408
 document 408
accounting data
 reporting by destination 130
 reporting by job 128
 reporting by user
 for all users 127, 131
 for specified user 129, 132
accounting-exit attribute
 actual destination 314
ack-interval attribute
 actual destination 314
actual destinations, attributes of
 accept-jobs 313
 accounting-exit 314
 ack-interval 314
 add-carriage-returns 314
 add-line-feeds 315
 ascii-character-mapping 315

actual destinations, attributes of (*continued*)
 ascii-font-map 315
 associated-queue 316
 associated-server 317
 attachment-type 317
 attribute-map 318
 audit-exit 318
 automatic-postscript-mode-switch 319
 auxiliary-sheet-selections-supported 319
 cancel-individual-document-supported 320
 carriage-control-types-supported 320
 character-mappings-supported 320
 checkpoint-at-stacker 321
 checkpoint-formats-supported 322
 command 326
 connection-timeout 322
 content-orientations-supported 322
 convert-to-ebcdic-supported 323
 data-fidelity-problem-reported-supported 323
 default-font-fidelity-action 324
 default-font-resolution 324
 default-input-tray 325
 descriptor 325
 destination-command 326
 destination-data-stream 327
 destination-locations 327
 destination-model 327
 destination-name 328
 destination-needs-attention-time 329
 destination-needs-key-operator-attention-time 329
 destination-pass-through 329
 destination-realization 330
 destination-register-threshold 330
 destination-release-timer 331
 destination-state 331
 destination-support-system 332
 destination-tcpip-internet-address 333
 destination-tcpip-port-number 333
 device-name 334
 device-support-system 332
 document-attributes-supported 335
 document-finishing-supported 336
 document-formats-supported 337
 document-types-supported 338
 dss-job-message-disposition 339
 dss-job-message-log-size 339
 dss-job-message-log-wrap 339
 ebcdic-character-mapping 340
 enabled 340
 end-message-supported 340
 end-sheets-supported 341
 font-resolutions-supported 342

actual destinations, attributes of (*continued*)

- force-destination-setup 342
- force-printer-setup 342
- form-definition 343
- image-fit-supported 343
- image-length 344
- image-out-formats-supported 345
- image-width 345
- input-data-user-exit 346
- input-trays-medium 347
- input-trays-supported 348
- intervention-timer 349
- job-attributes-supported 349
- job-batches-ready 350
- job-finishings-supported 350
- job-retry-count-limit 350
- job-retry-interval 351
- job-rip-actions-supported 351
- job-size-range-ready 352
- job-size-range-supported 353
- job-start-wait-supported 353
- list-of-managers 354
- locations 327
- log-accounting-data 354
- managers 354
- maximum-concurrent-jobs 355
- maximum-copies-supported 356
- maximum-fonts-to-keep 356
- maximum-overlays-to-keep 356
- maximum-segments-to-keep 357
- media-ready 357
- media-supported 358
- message 359
- message-font-type 359
- message-form-definition 359
- model 327
- non-process-runout-timer 360
- notification-profile 360
- notify-operator 361
- number-up-supported 362
- object-class 363
- offset-stacking-available 363
- operators 361
- optimize-for-multiple-copies 363
- orientations-supported 322
- other-options 329
- output-appearances-supported 364
- output-bin 365
- output-bin-numbers 365
- output-bins-supported 366
- output-data-user-exit 366
- output-format-supported 367
- overlay 367
- page-select-supported 368
- pcl-server-address 368
- pcl-server-port 369

actual destinations, attributes of (*continued*)

- physical-printer 328
- plex 369
- plexes-supported 370
- postscript-server-address 370
- presentation-fidelity-problem-reported 371
- print-edge-marks 372
- print-qualities-supported 372
- print-queue 373
- print-queue-name 373
- printer 328
- printer-command 326
- printer-data-stream 327
- printer-end-sheet 373
- printer-escape-codes 374
- printer-hot-folder 375
- printer-locations 327
- printer-memory 375
- printer-model 327
- printer-name 328
- printer-needs-attention-time 329
- printer-needs-key-operator-attention-time 329
- printer-pass-through 329
- printer-realization 330
- printer-register-threshold 330
- printer-release-timer 331
- printer-resolutions-ready 376
- printer-resolutions-supported 377
- printer-s370-channel-device-address 379
- printer-s370-channel-slot-number 379
- printer-separator-sheet 377
- printer-start-sheet 378
- printer-state 331
- printer-tcpip-internet-address 333
- printer-tcpip-port-number 333
- printer-timeout-period 380
- problem-message 380
- protected-attributes 381
- psf-tray-characteristics 381
- qualities-supported 372
- register-threshold 330
- registered-with-spooler 383
- remote-queue 384
- resource-context-font 384
- resource-context-form-definition 385
- resource-context-overlay 386
- resource-context-page-definition 386
- resource-context-page-segment 387
- reverse-output 388
- rip-ini-file 388
- rip-server 388
- scanner-corrections-supported 389
- scheduler-sort-primary-order 389
- scheduler-sort-secondary-order 389
- schedulers-supported 390
- screen-frequencies-supported 390

- actual destinations, attributes of *(continued)*
 - separator-sheets-supported 390
 - sides 391
 - sides-supported 392
 - snmp-active 392
 - snmp-community-name 392
 - snmp-retry-count 393
 - snmp-timeout 393
 - start-message-supported 394
 - start-sheets-supported 394
 - table-reference-characters-supported 395
 - timeout-period 380
 - transform-output-location 395
 - use-snmp 396
 - used for job scheduling 623
 - used for job validation 623
 - warning-message 396
 - x-image-shift-supported 397
 - y-image-shift-supported 397
- actual-destinations-assigned attribute
 - queue 544
- actual-destinations-ready attribute
 - queue 544
 - server 559
- actual-destinations-requested attribute
 - default job 465
 - job 465
- actual-destinations-supported attribute
 - server 559
- add-carriage-returns attribute
 - actual destination 314
- add-line-feeds attribute
 - actual destination 315
- address1-text attribute
 - default document 408
 - document 408
- address2-text attribute
 - default document 408
 - document 408
- address3-text attribute
 - default document 409
 - document 409
- address4-text attribute
 - default document 409
 - document 409
- admingui utility
 - arguments 124
 - description 124
 - examples 124
 - flags 124
 - syntax 124
- administrative utilities
 - See utilities
- advancing a job to the top of a queue 66
- afpsplit utility
 - arguments 125
- afpsplit utility *(continued)*
 - description 125
 - examples 126
 - flags 125
 - syntax 125
- ainurpt1 utility
 - description 127, 130
 - examples 127, 130
 - syntax 127, 130
- ainurpt2 utility
 - description 128, 131
 - examples 128, 131
 - syntax 128, 131
- ainurpt3 utility
 - description 129, 132
 - examples 129, 132
 - syntax 129, 132
- ainurpt4 utility
 - description 133
 - examples 133
 - syntax 133
- ainurpt5 utility
 - description 134
 - examples 134
 - syntax 134
- ainurpt6 utility
 - description 135
 - examples 135
 - syntax 135
- AIX commands
- ANSI carriage-control characters
 - encoded in ASCII 224
 - encoded in EBCDIC 224
- apka2e exit program 231
- arguments
 - general description of 6
 - of commands
 - lprafp 12
 - mkfntmap 14
 - pdclean 16
 - pdcreate 21
 - pddelete 25
 - pddisable 29
 - pdenable 32
 - pdls 39
 - pdmod 47
 - pdpause 53
 - pdpr 60
 - pdpromote 67
 - pdq 71
 - pdreorder 74
 - pdresubmit 77
 - pdresume 80
 - pdrm 84
 - pdset 89
 - pdshutdown 94
 - pdspace 98

arguments (*continued*)

of utilities

- admingui 124
- afpsplit 125
- cfu 137
- jsmigr 140
- opergui 141
- pdcrfilt 145
- pdcrmed 146
- pdinitports 147
- pdmigpp 149
- pdmincfg 151
- pdnetifspri 155
- sense 158
- start_server 165
- startsvr 167
- stop_server 168

ASCII characters

- conversion table for sap2afp transform 283

ascii-character-mapping attribute

- actual destination 315

ascii-font-map attribute

- actual destination 315

asciinp exit program 231

asciinpe exit program 231

assign-to-destination attribute

- queue 545

assign-to-printer attribute

- queue 545

associated-queue attribute

- actual destination 316
- logical destination 512

associated-server attribute

- actual destination 317
- auxiliary sheet 399
- default document 410
- log 506
- logical destination 512
- medium 538
- queue 546
- resource context 555

attachment-type attribute

- actual destination 317

attribute operators for filters on the pdls command 37

attribute-map attribute

- actual destination 318

attributes

- accept-jobs
 - actual destination 313
- accept-unsupported-jobs
 - server 558
- account-text
 - default document 408
 - document 408
- accounting-exit
 - actual destination 314

attributes (*continued*)

ack-interval

- actual destination 314

actual-destinations-assigned queue 544

actual-destinations-ready

- queue 544
- server 559

actual-destinations-requested

- default job 465
- job 465

actual-destinations-supported

- server 559

add-carriage-returns

- actual destination 314

add-line-feeds

- actual destination 315

address1-text

- default document 408
- document 408

address2-text

- default document 408
- document 408

address3-text

- default document 409
- document 409

address4-text

- default document 409
- document 409

ascii-character-mapping

- actual destination 315

ascii-font-map

- actual destination 315

assign-to-destination

- queue 545

assign-to-printer

- queue 545

associated-queue

- actual destination 316
- logical destination 512

associated-server

- actual destination 317
- auxiliary sheet 399
- default document 410
- log 506
- logical destination 512
- medium 538
- queue 546
- resource context 555

attachment-type

- actual destination 317

attribute-map

- actual destination 318

audit-exit

- actual destination 318

authorize-jobs

- logical destination 513

attributes (*continued*)

- automatic-postscript-mode-switch
 - actual destination 319
- auxiliary-sheet-identifier
 - auxiliary sheet 399
- auxiliary-sheet-selection
 - default job 466
 - job 466
- auxiliary-sheet-selections-supported
 - actual destination 319
 - logical destination 513
- backlog
 - queue 552
- backlog-lower-bound
 - queue 546
- backlog-update-interval
 - queue 546
- backlog-upper-bound
 - queue 547
- backlogged
 - queue 547
- base-printer
 - default document 410
 - document 410
- bits-per-spot
 - default document 410
 - document 410
- black-overprint
 - default document 411
 - document 411
- building-text
 - default document 411
 - document 411
- callback-number
 - default document 411
 - document 411
- cancel-individual-document-supported
 - actual destination 320
 - server 559
- carriage-control-type
 - default document 412
 - document 412
- carriage-control-types-supported
 - actual destination 320
 - logical destination 514
- character-mappings-supported
 - actual destination 320
 - logical destination 514
- chars
 - default document 412
 - document 412
- checkpoint-at-stacker
 - actual destination 321
- checkpoint-formats-supported
 - actual destination 322
- cms-proclink
 - default document 413

attributes (*continued*)

- cms-proclink (*continued*)
 - document 413
- cms-product
 - default document 413
 - document 413
- command
 - actual destination 326
- comment
 - default job 476
 - job 476
- completion-time
 - job 467
- complex, specifying 4
- compressed-output
 - default document 414
 - document 414
- connection-timeout
 - actual destination 322
- content-orientation
 - default document 414
 - document 414
- content-orientations-supported
 - actual destination 322
 - logical destination 515
- context-address
 - resource context 556
- control-strip
 - default document 415
 - document 415
- convert-to-ebcdic
 - default document 415
 - document 415
- convert-to-ebcdic-supported
 - actual destination 323
 - logical destination 515
- copies
 - default document 415
 - document 415
- copy-count
 - default document 415
 - document 415
- current-backlog
 - queue 552
- current-job-state
 - job 467
- current-page-printing
 - job 468
- d-s-s-requested
 - default job 473
 - job 473
- data-fidelity-problem-reported
 - default document 416
 - document 416
- data-fidelity-problem-reported-supported
 - actual destination 323
 - logical destination 516

attributes (*continued*)

- deadline-in-jeopardy
 - job 469
- default document 446
- default-character-mapping
 - default document 416
 - document 416
- default-font-fidelity-action
 - actual destination 324
- default-font-resolution
 - actual destination 324
- default-input-tray
 - actual destination 325
 - default document 417
 - document 417
- default-medium
 - default document 418
 - document 418
- default-printer-resolution
 - default document 418
 - document 418
- delete-segment-list
 - default job 469
 - job 469
- department-text
 - default document 419
 - document 419
- descriptor
 - actual destination 325
 - auxiliary sheet 400
 - default document 419
 - default job 469
 - log 506
 - logical destination 516
 - medium 539
 - queue 548
 - resource context 556
 - server 560
- destination-associated-printers
 - logical destination 517
- destination-command
 - actual destination 326
- destination-company-text
 - default document 420, 441
 - document 420, 441
- destination-data-stream
 - actual destination 327
- destination-initial-value-document
 - logical destination 517
- destination-initial-value-job
 - job 470
 - logical destination 517
- destination-locations
 - actual destination 327
 - logical destination 518
- destination-locations-requested
 - default job 470

attributes (*continued*)

- destination-locations-requested (*continued*)
 - job 470
- destination-model
 - actual destination 327
 - logical destination 518
- destination-models-requested
 - default job 471
 - job 471
- destination-name
 - actual destination 328
 - logical destination 519
- destination-name-requested
 - job 471
- destination-needs-attention-time
 - actual destination 329
- destination-needs-key-operator-attention-time
 - actual destination 329
- destination-pass-through
 - actual destination 329
 - default document 420
 - document 420
- destination-realization
 - actual destination 330
 - logical destination 519
- destination-register-threshold
 - actual destination 330
- destination-release-timer
 - actual destination 331
- destination-state
 - actual destination 331
- destination-states-supported
 - server 560
- destination-support-system
 - actual destination 332
 - logical destination 520
- destination-tcpip-internet-address
 - actual destination 333
- destination-tcpip-port-number
 - actual destination 333
- destinations-assigned
 - job 472
- destinations-ready
 - logical destination 520
- destinations-used
 - job 472
- device-name
 - actual destination 334
- device-support-system
 - actual destination 332
 - logical destination 520
- device-support-system-requested
 - default job 473
 - job 473
- discard-time
 - job 478

attributes (*continued*)

- document-attributes-supported
 - actual destination 335
 - server 561
- document-comment
 - default document 420
 - document 420
- document-content
 - document 421
- document-content-list
 - document 421
- document-file-name
 - document 421
- document-finishing
 - default document 422
 - document 422
- document-finishings-supported
 - actual destination 336
- document-format
 - default document 422
 - document 422
- document-formats-supported
 - actual destination 337
 - logical destination 520
- document-number
 - document 423
- document-sequence-number
 - document 423
- document-type
 - default document 423
 - document 423
- document-types-supported
 - actual destination 338
 - logical destination 521
- dot-shape
 - default document 425
 - document 425
- dss-job-message-disposition
 - actual destination 339
- dss-job-message-log-size
 - actual destination 339
- dss-job-message-log-wrap
 - actual destination 339
- dss-requested
 - default job 473
 - job 473
- ebcdic-character-mapping
 - actual destination 340
- email-from-address
 - default document 425
 - document 425
- email-to-address
 - default document 426
 - document 426
- enable-settrap
 - default document 426
 - document 426

attributes (*continued*)

- enabled
 - actual destination 340
 - log 507
 - logical destination 522
- end-message
 - default job 478
 - job 478
- end-message-supported
 - actual destination 340
 - logical destination 522
- end-sheets-supported
 - actual destination 341
- estimated-completion-time
 - job 473
- estimated-processing-time
 - job 474
- events-supported
 - server 561
- fax-number
 - default document 426
 - document 426
- fax-to-name
 - default document 427
 - document 427
- file-name
 - document 421
- font-fidelity-action
 - default document 427
 - document 427
- font-processing-messages
 - default document 427
 - document 427
- font-resolution
 - default document 428
 - document 428
- font-resolutions-supported
 - actual destination 342
- force-destination-setup
 - actual destination 342
- force-printer-setup
 - actual destination 342
- form-definition
 - actual destination 343
 - default document 428
 - document 428
- format
 - default document 422
 - document 422
- formatted-job-ticket-content
 - job 474
- global-id
 - job 480
- hold
 - default job 479
 - job 479

attributes (*continued*)

- hostname
 - server 574
- i-p-address
 - server 574
- image-center-x
 - default document 429
 - document 429
- image-center-y
 - default document 429
 - document 429
- image-fit
 - default document 430
 - document 430
- image-fit-supported
 - actual destination 343
- image-length
 - actual destination 344
 - default document 430
 - document 430
- image-out-format
 - default document 431
 - document 431
- image-out-formats-supported
 - actual destination 345
 - logical destination 523
- image-scale
 - default document 432
 - document 432
- image-width
 - actual destination 345
 - default document 432
 - document 432
- initial-value-document
 - document 433
- initial-value-document-identifier
 - default document 434
- initial-value-job
 - job 475
- initial-value-job-identifier
 - default job 475
- input-data-user-exit
 - actual destination 346
- input-exit
 - default document 434
 - document 434
- input-tray-select
 - default document 435
 - document 435
- input-trays-medium
 - actual destination 347
- input-trays-supported
 - actual destination 348
 - logical destination 523
- intervening-jobs
 - job 475

attributes (*continued*)

- intervention-timer
 - actual destination 349
- ip-address
 - server 574
- job-attributes-supported
 - actual destination 349
 - server 563
- job-batch
 - default job 476
 - job 476
- job-batches-ready
 - actual destination 350
- job-client-id
 - job 476
- job-comment
 - default job 476
 - job 476
- job-complexity
 - job 477
- job-copies-completed
 - job 477
- job-deadline-time
 - job 477
- job-discard-time
 - job 478
- job-end-message
 - default job 478
 - job 478
- job-finishing
 - default job 478
 - job 478
- job-finishings-supported
 - actual destination 350
- job-hold
 - default job 479
 - job 479
- job-identifier
 - job 480
- job-log
 - job 480
- job-media-sheet-count
 - job 481
- job-message-from-administrator
 - job 481
- job-message-to-operator
 - default job 482
 - job 482
- job-name
 - job 482
- job-originator
 - default job 482
 - job 482
- job-owner
 - job 483
- job-page-count
 - job 483

attributes (*continued*)

- job-print-after
 - job 484
- job-priority
 - default job 484
 - job 484
- job-retain-until
 - job 484
- job-retention-period
 - default job 485
 - job 485
- job-retry-count-limit
 - actual destination 350
- job-retry-interval
 - actual destination 351
- job-rip-action
 - default job 485
 - job 485
- job-rip-actions-supported
 - actual destination 351
- job-size
 - job 504
- job-size-range-ready
 - actual destination 352
- job-size-range-supported
 - actual destination 353
 - logical destination 524
- job-start-message
 - default job 486
 - job 486
- job-start-wait
 - job 487
- job-start-wait-supported
 - job 353
- job-state
 - job 467
- job-state-reasons
 - job 487
- job-state-reasons-supported
 - server 563
- job-states-supported
 - server 564
- job-submission-complete
 - job 489
- job-submission-timer
 - server 564
- job-ticket-content
 - job 474
- last-accessor
 - job 492
- last-modifier
 - job 492
- list-of-managers
 - actual destination 354
 - default document 435
 - default job 490
 - logical destination 525

attributes (*continued*)

- list-of-managers (*continued*)
 - queue 548
 - server 564
- locale
 - server 565
- locations
 - actual destination 327
 - logical destination 518
- locations-requested
 - default job 470
 - job 470
- log-accounting-data
 - actual destination 354
 - server 565
- log-address
 - log 507
- log-identifier
 - log 507
- log-message
 - log 508
- log-severity
 - log 508
- log-size
 - log 509
- log-trace-groups
 - log 509
- log-type
 - log 510
- log-wrap
 - log 510
- logical-destinations-assigned
 - queue 549
- logical-destinations-ready
 - default document 435
 - default job 490
 - queue 549
 - server 566
- logical-destinations-supported
 - server 566
- logical-printer
 - logical destination 519
- logical-printer-requested
 - job 471
- logical-printers-assigned
 - queue 549
- logical-printers-ready
 - default document 435
 - default job 490
 - queue 549
 - server 566
- logical-printers-supported
 - server 566
- managers
 - actual destination 354
 - default document 435
 - default job 490

- attributes (*continued*)
 - managers (*continued*)
 - logical destination 525
 - queue 548
 - server 564
 - maximum-barco-rips
 - server 566
 - maximum-concurrent-jobs
 - actual destination 355
 - maximum-copies-supported
 - actual destination 356
 - logical destination 526
 - maximum-fonts-to-keep
 - actual destination 356
 - maximum-messages-printed
 - default document 436
 - document 436
 - maximum-non-raster-rips
 - server 567
 - maximum-overlays-to-keep
 - actual destination 356
 - maximum-raster-rips
 - server 567
 - maximum-segments-to keep
 - actual destination 357
 - maximum-transform-pages-ahead
 - default document 436
 - document 436
 - media-ready
 - actual destination 357
 - media-sheet-count
 - job 481
 - media-sheets-completed
 - job 491
 - media-supported
 - actual destination 358
 - logical destination 526
 - medium-color
 - medium 539
 - medium-dimensions
 - medium 540
 - medium-form-parts
 - medium 540
 - medium-holes-count
 - medium 541
 - medium-identifier
 - medium 541
 - medium-sides
 - medium 542
 - medium-size
 - medium 542
 - medium-type
 - medium 542
 - message
 - actual destination 359
 - default document 436
 - default job 491

- attributes (*continued*)
 - message (*continued*)
 - logical destination 527
 - medium 543
 - queue 550
 - server 568
 - message-font-type
 - actual destination 359
 - message-form-definition
 - actual destination 359
 - message-from-administrator
 - job 481
 - message-to-operator
 - default job 482
 - job 482
 - model
 - actual destination 327
 - logical destination 518
 - models-requested
 - default job 471
 - job 471
 - modification-time
 - job 492
 - modify-individual-document-supported
 - server 568
 - multiple-documents-supported
 - server 568
 - mvs-class
 - default document 437
 - document 437
 - mvs-destination
 - default document 437
 - document 437
 - mvs-forms
 - default document 437
 - document 437
 - mvs-segment-id
 - default document 438
 - document 438
 - name
 - job 482
 - name-of-last-accessor
 - job 492
 - name-text
 - default document 438
 - document 438
 - new-job-identifier
 - job 492
 - new-line-option
 - default document 439
 - document 439
 - node-id-text
 - default document 439
 - document 439
 - non-process-runout-timer
 - actual destination 360

attributes (*continued*)

- notification-delivery-methods-supported
 - server 568
- notification-profile
 - actual destination 360
 - default job 492
 - job 492
 - logical destination 527
 - queue 550
 - server 569
- notify-operator
 - actual destination 361
 - queue 551
- npm-server-ip-address
 - server 570
- npm-server-port-number
 - server 570
- nt-drivers
 - logical destination 534
- number-of-documents
 - job 494
- number-up
 - document 440
- number-up-supported
 - actual destination 362
- object-class
 - actual destination 363
 - auxiliary sheet 400
 - default document 440
 - default job 495
 - document 440
 - job 495
 - log 510
 - logical destination 528
 - medium 543
 - queue 552
 - resource context 556
 - server 571
- object-classes-supported
 - server 571
- octet-count
 - document 440
- octets-completed
 - job 495
- of actual destinations 310
- of commands
 - See commands, attributes
- of default documents 403
- of documents 403
- of jobs 464
- of logical destinations 511
- of logs 506
- of media 538
- of queues 544
- of resource contexts 555
- of servers 558

attributes (*continued*)

- offset-stacking-available
 - actual destination 363
- operators
 - actual destination 361
 - queue 551
- optimize-for-multiple-copies
 - actual destination 363
 - default job 495
 - job 495
- orientation
 - default document 414
 - document 414
- orientations-supported
 - actual destination 322
 - logical destination 515
- originating-company-text
- originator
 - default job 482
 - job 482
- os2-driver-names
 - logical destination 528
- os2-drivers
 - logical destination 528
- other-options
 - actual destination 329
 - default document 420
 - document 420
- other-transform-options
 - default document 441
 - document 441
- output-appearance
 - default document 441
 - document 441
- output-appearances-supported
 - actual destination 364
- output-bin
 - actual destination 365
 - default document 442
 - document 442
- output-bin-numbers
 - actual destination 365
- output-bins-supported
 - actual destination 366
- output-data-user-exit
 - actual destination 366
- output-face-up
 - default document 442
 - document 442
- output-format
 - default document 443
 - document 443
- output-format-supported
 - actual destination 367
- overlay
 - actual destination 367
 - default document 444

attributes (*continued*)

- overlay (*continued*)
 - document 444
- overprint
 - default document 445
 - document 445
- owner
 - job 483
- page-clip
 - default document 445
 - document 445
- page-count
 - document 445
- page-definition
 - default document 446
 - document 446
- page-media-select
 - document 446
- page-select
 - document 446
- page-select-supported
 - actual destination 368
- pages-completed
 - job 496
- pcl-server-address
 - actual destination 368
- pcl-server-port
 - actual destination 369
- physical-printer
 - actual destination 328
- physical-printers-assigned
 - queue 544
- physical-printers-ready
 - queue 544
 - server 559
- physical-printers-requested
 - default job 465
 - job 465
- physical-printers-supported
 - server 559
- plex
 - actual destination 369
 - default document 447
 - document 447
- plexes-supported
 - actual destination 370
 - logical destination 530
- position-in-queue
 - job 475
- postscript-server-address
 - actual destination 370
 - logical destination 530
- postscript-server-port
 - actual destination 371
- presentation-fidelity-problem-reported
 - actual destination 371

attributes (*continued*)

- previous-job-state
 - job 497
- previous-state
 - job 497
- print-after
 - job 484
- print-edge-marks
 - actual destination 372
- print-qualities-supported
 - actual destination 372
 - logical destination 531
- print-quality
 - default document 448
 - document 448
- print-queue
 - actual destination 373
- print-queue-name
 - actual destination 373
- printer
 - actual destination 328
 - logical destination 519
- printer-associated-printers
 - logical destination 517
- printer-command
 - actual destination 326
- printer-data-stream
 - actual destination 327
- printer-end-sheet
 - actual destination 373
- printer-escape-codes
 - actual destination 374
- printer-hot-folder
 - actual destination 375
- printer-initial-value-document
 - document 420
 - logical destination 517
- printer-initial-value-job
 - job 470
 - logical destination 517
- printer-locations
 - actual destination 327
 - logical destination 518
- printer-locations-requested
 - default job 470
 - job 470
- printer-memory
 - actual destination 375
- printer-model
 - actual destination 327
 - logical destination 518
- printer-models-requested
 - default job 471
 - job 471
- printer-name
 - actual destination 328
 - logical destination 519

attributes (*continued*)

- printer-name-requested
 - job 471
- printer-needs-attention-time
 - actual destination 329
- printer-needs-key-operator-attention-time
 - actual destination 329
- printer-pass-through
 - actual destination 329
 - default document 420
 - document 420
- printer-realization
 - actual destination 330
 - logical destination 519
- printer-register-threshold
 - actual destination 330
- printer-release-timer
 - actual destination 331
- printer-requested
 - job 471
- printer-resolutions-ready
 - actual destination 376
- printer-resolutions-supported
 - actual destination 377
- printer-s370-channel-device-address
 - actual destination 379
- printer-s370-channel-slot-number
 - actual destination 379
- printer-separator-sheet
 - actual destination 377
- printer-start-sheet
 - actual destination 378
- printer-state
 - actual destination 331
- printer-states-supported
 - server 560
- printer-tcpip-internet-address
 - actual destination 333
- printer-tcpip-port-number
 - actual destination 333
- printer-timeout-period
 - actual destination 380
- printers-assigned
 - job 472
- printers-ready
 - logical destination 520
- printers-used
 - job 472
- problem-child
 - server 572
- problem-message
 - actual destination 380
- processing-time
 - job 498
- programmer-text
 - default document 448
 - document 448

attributes (*continued*)

- protected-attributes
 - actual destination 381
 - logical destination 532
 - queue 552
 - server 572
- psf-exit-form-definition
 - auxiliary sheet 400
- psf-exit-page-mark
 - auxiliary sheet 401
- psf-exit-program-name
 - auxiliary sheet 401
- psf-tray-characteristics
 - actual destination 381
- qualities-supported
 - actual destination 372
 - logical destination 531
- queue-assigned
 - job 498
- queue-backlog
 - queue 552
- queue-name
 - queue 553
- queue-position
 - job 475
- queue-state
 - queue 553
- queues-supported
 - server 572
- reasons
 - job 487
- register-threshold
 - actual destination 330
- registered-with-spooler
 - actual destination 383
- remote-queue
 - actual destination 384
- requeue-failed-jobs
 - queue 553
- required-resources-not-ready
 - job 499
- required-resources-not-supported
 - job 499
- resource-context
 - default document 449
 - document 449
- resource-context-font
 - actual destination 384
 - default document 450
 - document 450
- resource-context-form-definition
 - actual destination 385
 - default document 451
 - document 451
- resource-context-identifier
 - resource context 557

attributes (*continued*)

- resource-context-overlay
 - actual destination 386
 - default document 451
 - document 451
- resource-context-page-definition
 - actual destination 386
 - default document 452
 - document 452
- resource-context-page-segment
 - actual destination 387
 - default document 453
 - document 453
- resource-context-user
 - default document 453
 - document 453
- resource-exit
 - default document 454
 - document 454
- results-profile
 - default job 500
 - job 500
- retention-period
 - default job 485
 - job 485
- reverse-output
 - actual destination 388
- rip-ini-file
 - actual destination 388
- rip-server
 - actual destination 388
- room-text
 - default document 454
 - document 454
- save-rip-files
 - server 573
- scanner-correction
 - default document 455
 - document 455
- scanner-corrections-supported
 - actual destination 389
- scheduler-sort-primary-order
 - actual destination 389
- scheduler-sort-secondary-order
 - actual destination 389
- schedulers-supported
 - actual destination 390
- screen-frequencies-supported
 - actual destination 390
- screen-frequency
 - default document 455
 - document 455
- security-level
 - server 573
- segment-file-size
 - default document 456
 - document 456

attributes (*continued*)

- separator-sheets-supported
 - actual destination 390
- sequence-number
 - document 423
- server-hostname
 - server 574
- server-ip-address
 - server 574
- server-name
 - server 574
- server-state
 - server 575
- shared-formdef
 - default document 456
 - document 456
- shift-out-shift-in
 - default document 457
 - document 457
- sides
 - actual destination 391
 - default document 457
 - document 457
- sides-supported
 - actual destination 392
 - logical destination 532
- snmp-active
 - actual destination 392
- snmp-aix-printer-models
 - server 575
- snmp-community-name
 - actual destination 392
- snmp-normal-poll-interval
 - server 575
- snmp-problem-poll-interval
 - server 576
- snmp-retry-count
 - actual destination 393
- snmp-timeout
 - actual destination 393
- start-message
 - default job 486
 - job 486
- start-message-supported
 - actual destination 394
 - logical destination 533
- start-on-new-sheet
 - default document 458
 - document 458
- start-sheets-supported
 - actual destination 394
- started-printing-time
 - job 501
- state-reasons
 - job 487
- subject-text
 - default document 459

- attributes (*continued*)
 - subject-text (*continued*)
 - document 459
 - submission-time
 - job 501
 - table-reference-characters
 - default document 459
 - document 459
 - table-reference-characters-supported
 - actual destination 395
 - logical destination 533
 - tape-exit
 - job 501
 - tape-format
 - job 502
 - tape-labeled
 - default job 502
 - job 502
 - tape-max-block-size
 - default job 502
 - job 502
 - tape-rewind-before
 - job 503
 - tape-rewind-unload
 - job 503
 - ticket-content
 - job 474
 - timeout-period
 - actual destination 380
 - title-text
 - default document 459
 - document 459
 - total-job-octets
 - job 504
 - transfer-method
 - document 460
 - transfer-methods-supported
 - server 576
 - transform-message-file-name
 - default document 460
 - document 460
 - transform-output-file-name
 - document 460
 - transform-output-location
 - actual destination 395
 - type
 - default document 423
 - document 423
 - use-snmp
 - actual destination 396
 - used for job scheduling 623
 - used for job validation 623
 - user-id-text
 - default document 461
 - document 461
 - user-locale
 - job 504
- attributes (*continued*)
 - user-name
 - job 504
 - warning-message
 - actual destination 396
 - windows-driver-names
 - logical destination 534
 - windows-drivers
 - logical destination 534
 - windows-nt-driver-names
 - logical destination 534
 - windows-nt-drivers
 - logical destination 534
 - x-image-shift
 - default document 461
 - document 461
 - x-image-shift-back
 - default document 462
 - document 462
 - x-image-shift-range-supported
 - actual destination 397
 - logical destination 535
 - y-image-shift
 - default document 462
 - document 462
 - y-image-shift-back
 - default document 463
 - document 463
 - y-image-shift-range-supported
 - actual destination 397
 - logical destination 536
 - attributes files, creating 139
 - audit data
 - reporting by destination 133
 - reporting by user
 - for all users 134
 - for specified user 135
 - audit-exit attribute
 - actual destination 318
 - authorize-jobs attribute
 - logical destination 513
 - automatic-postscript-mode-switch attribute
 - actual destination 319
 - auxiliary sheets, attributes of
 - associated-server 399
 - auxiliary-sheet-identifier 399
 - descriptor 400
 - object-class 400
 - psf-exit-form-definition 400
 - psf-exit-page-mark 401
 - psf-exit-program-name 401
 - resettable attribute listing 399
 - summary of 399
 - auxiliary-sheet-identifier attribute
 - auxiliary sheet 399

- auxiliary-sheet-selection attribute
 - default job 466
 - job 466
- auxiliary-sheet-selections-supported attribute
 - actual destination 319
 - logical destination 513

B

- backlog attribute
 - queue 552
- backlog-lower-bound attribute
 - queue 546
- backlog-update-interval attribute
 - queue 546
- backlog-upper-bound attribute
 - queue 547
- backlogged attribute
 - queue 547
- barcode.tab file 281
- bars in commands xxxviii
- base-printer attribute
 - default document 410
 - document 410
- bin-name component
 - output-bin-numbers attribute, actual destination 365
- bin-number component
 - output-bin-numbers attribute, actual destination 365
- bits-per-spot attribute
 - default document 410
 - document 410
- black-overprint attribute
 - default document 411
 - document 411
- braces in commands xxxviii, xxxix
- brackets in commands xxxviii
- BSD-flag component
 - attribute-map attribute, actual destination 318
- building-text attribute
 - default document 411
 - document 411

C

- callback-number attribute
 - default document 411
 - document 411
- cancel-individual-document-supported attribute
 - actual destination 320
 - server 559
- carriage control characters
 - specifying presence 223
 - specifying type 223
- carriage-control-type attribute
 - default document 412
 - document 412

- carriage-control-types-supported attribute
 - actual destination 320
 - logical destination 514
- cc option 223
- cctype option 223
- cfu utility
 - arguments 137
 - build file format 136
 - description 136
 - examples 137
 - flags 136
 - syntax 136
- channel-attached printers, sensing 158
- character-mappings-supported attribute
 - actual destination 320
 - logical destination 514
- chars attribute
 - default document 412
 - document 412
- chars option 224, 238
- checkpoint-at-stacker attribute
 - actual destination 321
- checkpoint-formats-supported attribute
 - actual destination 322
- cms-proclink attribute
 - default document 413
 - document 413
- cms-product attribute
 - default document 413
 - document 413
- code page
 - mapping ASCII to EBCDIC for sap2afp 289
- coded fonts, building 136
- colons in commands xxxviii
- command attribute
 - actual destination 326
- command attributes 2, 6
 - See also* commands, attributes
- command attributes, default values for 3
- command introduction 1
- command scripts, creating 139
- commands
 - See also* transforms, utilities
 - AIX
 - arguments
 - lprafp 12
 - mkfntmap 14
 - pdclean 16
 - pdcreate 21
 - pddelete 25
 - pddisable 29
 - pdenable 32
 - pdl 39
 - pdmod 47
 - pdpause 53
 - pdpr 60
 - pdpromote 67

commands (*continued*)

arguments (*continued*)

pdq 71
pdreorder 74
pdresubmit 77
pdresume 80
pdrm 84
pdset 89
pdshutdown 94
pdspace 98

attributes

general description of 6

pdclean 16
pdcreate 20, 21
pddelete 24
pddisable 28
pdenable 32
pdls 36
pdmod 46
pdpause 51
pdpr 59, 60
pdpromote 67
pdq 70
pdreorder 74
pdresubmit 76
pdresume 80
pdrm 84
pdset 88
pdshutdown 93
pdspace 97

description

lprafp 12
mkfntmap 14
pdclean 15
pdcreate 18
pddelete 23
pddisable 27
pdenable 31
pdls 34
pdmod 44
pdpause 49
pdpr 56
pdpromote 66
pdq 68
pdresubmit 75
pdresume 79
pdrm 83
pdset 86
pdshutdown 91
pdspace 96
preorder 73

examples

lprafp 13
mkfntmap 14
of documents, pdcreate 21
of jobs, pdcreate 21
pdclean 17

commands (*continued*)

examples (*continued*)

pdcreate 21
pddelete 26
pddisable 29
pdenable 33
pdls 39
pdmod 47
pdpause 55
pdpr 61
pdpromote 67
pdq 71
pdreorder 74
pdresubmit 78
pdresume 81
pdrm 85
pdset 89
pdshutdown 94
pdspace 98

flags

lprafp 12
pdclean 15
pdcreate 19
pddelete 23
pddisable 27
pdenable 31
pdls 35
pdmod 45
pdpause 50
pdpr 57
pdpromote 66
pdq 68
pdreorder 73
pdresubmit 75
pdresume 79
pdrm 83
pdset 87
pdshutdown 92
pdspace 97

flags, general description of 6

lprafp

description 12

mkfntmap

operators, filters

pdls, filters 37

pdclean

description 15

pdcreate

description 18

pddelete

description 23

pddisable

description 27

pdenable

description 31

pdls

description 34

commands (*continued*)
 pdmod
 description 44
 pdpause
 description 49
 pdpr
 description 56
 pdpromote
 description 66
 pdq
 description 68
 pdreorder
 description 73
 pdresubmit
 description 75
 pdresume
 description 79
 pdrm
 description 83
 pdset
 description 86
 pdshutdown
 description 91
 pdspace
 description 96
 syntax
 lprafp 12
 mkfntmap 14
 pdclean 15
 pdcreate 18
 pddelete 23
 pddisable 27
 pdenable 31
 pdls 34
 pdmod 44
 pdpause 49
 pdpr 56
 pdpromote 66
 pdq 68, 73
 pdresubmit 75
 pdresume 79
 pdrm 83
 pdset 86
 pdshutdown 91
 pdspace 96
 syntax, general description of 6
 commands, attributes
 object attributes
 pdcreate, documents 21
 pdcreate, jobs 21
 pdpr 60
 comment attribute
 default job 476
 job 476
 comments in option file 234
 completion-time attribute
 job 467
 complex attributes
 ascii-font-map attribute, actual destination 315
 attribute-map attribute, actual destination 318
 input-trays-medium attribute, actual destination 347
 job-size-range-ready attribute
 actual destination 352
 job-size-range-supported attribute
 actual destination 352
 logical destination 524
 notification-profile attribute
 actual destination 360
 default job 492
 job 492
 logical destination 527
 queue 550
 server 569
 notify-operator attribute
 actual destination 361
 queue 551
 operators attribute
 actual destination 361
 queue 551
 output-bin-numbers attribute, actual destination 365
 printer-resolutions-supported, actual destination 377
 psf-tray-characteristics attribute, actual
 destination 381
 results-profile attribute
 default job 500
 job 500
 specifying 4
 components, complex attributes
 bin name component, output-bin-numbers attribute,
 actual destination 365
 bin number component, output-bin-numbers attribute,
 actual destination 365
 BSD-flag component, attribute-map attribute, actual
 destination 318
 delivery-address component
 notification-profile attribute, actual
 destination 361
 notification-profile attribute, default job 493
 notification-profile attribute, job 493
 notification-profile attribute, logical
 destination 527
 notification-profile attribute, queue 550
 notification-profile attribute, server 569
 notify-operator attribute, actual destination 361
 notify-operator attribute, queue 551
 operators attribute, actual destination 361
 operators attribute, queue 551
 results-profile attribute, default job 500
 results-profile attribute, job 500
 delivery-method component
 notification-profile attribute, actual
 destination 361

components, complex attributes (*continued*)
 delivery-method component (*continued*)
 notification-profile attribute, default job 494
 notification-profile attribute, job 494
 notification-profile attribute, logical destination 528
 notification-profile attribute, queue 551
 notification-profile attribute, server 569
 notify-operator attribute, actual destination 361
 notify-operator attribute, queue 551
 operators attribute, actual destination 361
 operators attribute, queue 551
 results-profile attribute, default job 500
 results-profile attribute, job 500
 duplex-supported component, psf-tray-characteristics attribute, actual destination 383
 event-comment component
 notification-profile attribute, actual destination 361
 notification-profile attribute, default job 494
 notification-profile attribute, job 494
 notification-profile attribute, logical destination 528
 notification-profile attribute, queue 551
 notification-profile attribute, server 570
 event-identifier component
 notification-profile attribute, actual destination 360
 notification-profile attribute, default job 493
 notification-profile attribute, job 493
 notification-profile attribute, logical destination 527
 notification-profile attribute, queue 550
 notification-profile attribute, server 569
 first-page component
 page-select attribute, document 446
 font-escape component, actual destination 315
 font-name component, actual destination 315
 InfoPrint-attribute component, attribute-map attribute, actual destination 318
 input-tray component, psf-tray-characteristics attribute, actual destination 382
 job-bin-number component, psf-tray-characteristics attribute, actual destination 382
 job-copies component
 results-profile attribute, default job 500
 results-profile attribute, job 500
 last-page component
 page-select attribute, document 446
 locale component
 notification-profile attribute, actual destination 361
 notification-profile attribute, default job 494
 notification-profile attribute, job 494
 notification-profile attribute, logical destination 528
 notification-profile attribute, queue 551
 components, complex attributes (*continued*)
 locale component (*continued*)
 notification-profile attribute, server 570
 lower-limit component
 job-size-range-ready attribute, actual destination 352
 job-size-range-supported attribute, actual destination 353
 job-size-range-supported attribute, logical destination 524
 x-image-shift-range-supported attribute, actual destination 397
 x-image-shift-range-supported attribute, logical destination 536
 y-image-shift-range-supported attribute, actual destination 398
 y-image-shift-range-supported attribute, logical destination 537
 media-loaded component, psf-tray-characteristics attribute, actual destination 382
 medium-identifier component, input-trays-medium attribute, actual destination 347
 output-bin component
 results-profile attribute, default job 501
 results-profile attribute, job 501
 results-set-comment component
 results-profile attribute, default job 500
 results-profile attribute, job 500
 tray-identification component, input-trays-medium attribute, actual destination 347
 tray-number component, psf-tray-characteristics attribute, actual destination 383
 upper-limit component
 job-size-range-ready attribute, actual destination 352
 job-size-range-supported attribute, actual destination 353
 job-size-range-supported attribute, logical destination 524
 x-image-shift-range-supported attribute, actual destination 397
 x-image-shift-range-supported attribute, logical destination 536
 y-image-shift-range-supported attribute, actual destination 398
 y-image-shift-range-supported attribute, logical destination 537
 x-dimension component, medium-dimensions attribute, medium 540
 y-dimension component, medium-dimensions attribute, medium 540
 compressed-output attribute
 default document 414
 document 414
 configuration files
 barcode.tab 281

- configuration files (*continued*)
 - defcp.tab 283
 - fonts.tab 283
 - for gif2afp transform 196
 - for jpeg2afp transform 211
 - for pcl2afp transform 256
 - for pcl2afpd daemon 256
 - for pdf2afp transform 276
 - for ps2afp transform 276
 - for ps2afpd daemon 276
 - for sap2afp transform 280
 - for tiff2afp transform 297
 - gif2afp.cfg 196
 - image.tab 287
 - jpeg2afp.cfg 211
 - pagedef.tab 288
 - pcl2afp 256
 - pcl2afpd 256
 - printer.tab 289
 - ps2afp 276
 - ps2afpd 276
 - tiff2afp.cfg 297
 - xxxxyyyy.tab 289
- configuring servers 144
- connection-timeout attribute
 - actual destination 322
- content-orientation attribute
 - default document 414
 - document 414
- content-orientations-supported attribute
 - actual destination 322
 - logical destination 515
- context-address attribute
 - resource context 556
- control currently printing sheets 96
- control-strip attribute
 - default document 415
 - document 415
- convert-to-ebcdic attribute
 - default document 415
 - document 415
- convert-to-ebcdic-supported attribute
 - actual destination 323
 - logical destination 515
- copies attribute
 - default document 415
 - document 415
- copy-count attribute
 - default document 415
 - document 415
- creating
 - actual destinations 149
 - commonly used media 146
 - default objects 144
 - InfoPrint attributes files 139
 - InfoPrint command scripts 139

- creating (*continued*)
 - InfoPrint directories 143
 - InfoPrint objects 18
- current-backlog attribute
 - queue 552
- current-job-state attribute
 - job 467
- current-page-printing attribute
 - job 468
- customer fonts 285

D

- d-s-s-requested attribute
 - default job 473
 - job 473
- d2afp transform
 - description 188
 - flags 189
 - limitations 188
 - syntax 188
- daemon utilities
 - See utilities
- daemons
 - mvsprsd 174
 - pcl2afpd 177
 - ps2afpd 180
- dashes in commands xxxviii
- data-fidelity-problem-reported attribute
 - default document 416
 - document 416
- data-fidelity-problem-reported-supported attribute
 - logical destination 516
- db2afp transform
 - description 184
 - files 187
 - flags 184
 - limitations 184
 - syntax 184
- deadline-in-jeopardy attribute
 - job 469
- default documents, attributes of
 - account-text 408
 - address2-text 408
 - address3-text 409
 - address4-text 409
 - associated-server 410
 - base-printer 410
 - bits-per-spot 410
 - black-overprint 411
 - building-text 411
 - callback-number 411
 - carriage-control-type 412
 - chars 412
 - cms-proclink 413
 - cms-product 413

default documents, attributes of *(continued)*

- compressed-output 414
- content-orientation 414
- control-strip 415
- convert-to-ebcdic 415
- copies 415
- copy-count 415
- data-fidelity-problem-reported 416
- default-character-mapping 416
- default-input-tray 417
- default-medium 418
- default-printer-resolution 418
- department-text 419
- descriptor 419
- destination-company-text 420
- destination-pass-through 420
- document-comment 420
- document-finishing 422
- document-format 422
- document-type 423
- dot-shape 425
- email-from-address 425
- email-to-address 426
- enable-settrap 426
- fax-number 426, 427
- font-fidelity-action 427
- font-processing-messages 427
- font-resolution 428
- form-definition 428
- format 422
- image-center-x 429, 432
- image-center-y 429
- image-fit 430
- image-length 430
- image-out-format 431
- image-width 432
- initial-value-document-identifier 434
- input-exit 434
- input-tray-select 435
- job-start-wait 487
- list-of-managers 435
- logical-destinations-ready 435
- logical-printers-ready 435
- managers 435
- maximum-messages-printed 436
- maximum-transform-pages-ahead 436
- message 436
- mvs-class 437
- mvs-destination 437
- mvs-forms 437
- mvs-segment-id 438
- name-text 438
- new-line-option 439
- node-id-text 439
- object-class 440
- orientation 414

default documents, attributes of *(continued)*

- originating-company-text 441
- other-options 420
- other-transform options 441
- output-appearance 441
- output-bin 442
- output-face-up 442
- output-format 443
- overlay 444
- overprint 445
- page-clip 445
- page-definition 446
- page-media-select 446
- plex 447
- print-quality 448
- printer-pass-through 420
- programmer-text 448
- resource-context 449
- resource-context-font 450
- resource-context-form-definition 451
- resource-context-overlay 451
- resource-context-page-definition 452
- resource-context-page-segment 453
- resource-context-user 453
- resource-exit 454
- room-text 454
- scanner-correction 455
- screen-frequency 455
- segment-file-size 456
- shared-formdef 456
- shift-out-shift-in 457
- sides 457
- start-on-new-sheet 458
- subject-text 459
- table-reference-characters 459
- title-text 459
- transform-message-file-name 460
- type 423
- user-id-text 461
- x-image-shift 461
- x-image-shift-back 462
- y-image-shift 462
- y-image-shift-back 463

default jobs, attributes of

- actual-destinations-requested 465
- associated-server 466
- auxiliary-sheet-selection 466
- comment 476
- d-s-s-requested 473
- delete-segment-list 469
- descriptor 469
- destination-locations-requested 470
- destination-models-requested 471
- device-support-system-requested 473
- dss-requested 473
- end-message 478

- default jobs, attributes of (*continued*)
 - hold 479
 - initial-value-job-identifier 475
 - job-batch 476
 - job-comment 476
 - job-end-message 478
 - job-finishing 478
 - job-hold 479
 - job-message-to-operator 482
 - job-originator 482
 - job-priority 484
 - job-retention-period 485
 - job-rip-action 485
 - job-start-message 486
 - list-of-managers 490
 - locations-requested 470
 - logical-destinations-ready 490
 - logical-printers-ready 490
 - managers 490
 - message 491
 - message-to-operator 482
 - models-requested 471
 - notification-profile 492
 - object-class 495
 - optimize-for-multiple-copies 495
 - originator 482
 - physical-printers-requested 465
 - printer-locations-requested 470
 - printer-models-requested 471
 - results-profile 500
 - retention-period 485
 - start-message 486
- default objects, creating 144
- default values for command and object attributes 3
- default-character-mapping attribute
 - default document 416
 - document 416
- default-font-fidelity-action attribute
 - actual destination 324
- default-font-resolution attribute
 - actual destination 324
- default-input-tray attribute
 - actual destination 325
 - default document 417
 - document 417
- default-medium attribute
 - default document 418
 - document 418
- default-printer-resolution attribute
 - default document 418
 - document 418
- defcp.tab file 283
- defining the attribute values of an object 86
- delete-segment-list attribute
 - default job 469
 - job 469
- deleting InfoPrint objects 23
- delivery-address component
 - notification-profile attribute
 - actual destination 361
 - default job 493
 - job 493
 - logical destination 527
 - queue 550
 - server 569
 - notify-operator attribute
 - actual destination 361
 - queue 551
 - operators attribute
 - actual destination 361
 - queue 551
 - results-profile attribute
 - default job 500
 - job 500
- delivery-method component
 - notification-profile attribute
 - actual destination 361
 - default job 494
 - job 494
 - logical destination 528
 - queue 551
 - server 569
 - notify-operator attribute
 - actual destination 361
 - queue 551
 - results-profile attribute
 - default job 500
 - job 500
- department-text attribute
 - default document 419
 - document 419
- description
 - of commands
 - lprfp 12
 - mkfntmap 14
 - pdclean 15
 - pdcreate 18
 - pddelete 23
 - pddisable 27
 - pdenable 31
 - pdls 34
 - pdmod 44
 - pdpause 49
 - pdpr 56
 - pdpromote 66
 - pdq 68
 - pdreorder 73
 - pdresubmit 75
 - pdresume 79
 - pdrm 83
 - pdset 86
 - pdshutdown 91

description (*continued*)

of commands (*continued*)

pdspc 96

of transforms

d2afp 188
gif2afp 191
jpeg2afp 206
line2afp 221
pcl2afp 243
pdf2afp 266
ps2afp 266
tiff2afp 292

of utilities

admingui 124
afpsplit 125
ainupod1 127
ainupod2 128
ainupod3 129
ainurpt1 130
ainurpt2 131
ainurpt3 132
ainurpt4 133
ainurpt5 134
ainurpt6 135
cfu 136
ipguiadv 138
ipguibasic 138
ipguidist 138
jsmigr 139
mvsprsd 174
opergui 141
pcl2afpd 177
pdadmin 142
pdcrcds 143
pdcdrflt 144
pdcrrmed 146
pdinitports 147
pdmigpp 149
pdmincfg 151
pdmsg 153
pdnetifspri 155
ps2afpd 180
rc.pd 157
setup 160
start_server 164
startppo 163
startsvr 166
stop_server 168
t2file 172
tdump 169
tlist 171

descriptor attribute

actual destination 325
auxiliary sheet 400
default document 419
default job 469

descriptor attribute (*continued*)

log 506
logical destination 516
medium 539
queue 548
resource context 556
server 560

destination-associated-destinations attribute

logical destination 517

destination-command attribute

actual destination 326

destination-company-text attribute

default document 420, 441
document 420, 441

destination-data-stream attribute

actual destination 327

destination-initial-value-document attribute

logical destination 517

destination-initial-value-job attribute

job 470
logical destination 517

destination-locations attribute

actual destination 327
logical destination 518

destination-locations-requested attribute

default job 470
job 470

destination-model attribute

actual destination 327
logical destination 518

destination-models-requested attribute

default job 471
job 471

destination-name attribute

actual destination 328
logical destination 519

destination-name-requested attribute

job 471

destination-needs-attention-time attribute

actual destination 329

destination-needs-key-operator-attention-time attribute

actual destination 329

destination-pass-through attribute

actual destination 329
default document 420
document 420

destination-realization attribute

actual destination 330
logical destination 519

destination-register-threshold attribute

actual destination 330

destination-release-timer attribute

actual destination 331

destination-state attribute

actual destination 331

- destination-states-supported attribute
 - server 560
- destination-support-system attribute
 - actual destination 332
 - logical destination 520
- destination-tcpip-internet-address attribute
 - actual destination 333
- destination-tcpip-port-number attribute
 - actual destination 333
- destinations-assigned attribute
 - job 472
- destinations-ready attribute
 - logical destination 520
- destinations-used attribute
 - job 472
- destinations, attributes of
 - actual destinations
 - See actual destinations, attributes of
 - logical destinations
 - See logical destinations, attributes of
- device-name attribute
 - actual destination 334
- device-support-system attribute
 - actual destination 332
 - logical destination 520
- device-support-system-requested attribute
 - default job 473
 - job 473
- directories
 - /cdrom/books xxxv
 - font 228
 - fonts 228
 - form definition 226
 - overlay 232
 - overlays 232
 - page definition 234
 - page segment 235
 - user 238
- directories, creating 143
- disabling destinations 27
- discard-time attribute
 - job 478
- displaying information about messages 153
- document attributes
 - See documents, attributes of
- document-attributes-supported attribute
 - actual destination 335
 - server 561
- document-comment attribute
 - default document 420
 - document 420
- document-content attribute
 - document 421
- document-content-list attribute
 - document 421
- document-file-name attribute
 - document 421
- document-finishing attribute
 - default document 422
 - document 422
- document-finishing-supported attribute
 - actual destination 336
- document-format attribute
 - default document 422
 - document 422
- document-formats-supported attribute
 - actual destination 337
 - logical destination 520
- document-number attribute
 - document 423
- document-sequence-number attribute
 - document 423
- document-type attribute
 - default document 423
 - document 423
- document-types-supported attribute
 - actual destination 338
 - logical destination 521
- documents, attributes of
 - account-text 408
 - address1-text 408
 - address2-text 408
 - address3-text 409
 - address4-text 409
 - base-printer 410
 - bits-per-spot 410
 - black-overprint 411
 - building-text 411
 - callback-number 411
 - carriage-control-type 412
 - chars 412
 - cms-proclink 413
 - cms-product 413
 - compressed-output 414
 - content-orientation 414
 - control-strip 415
 - convert-to-ebcdic 415
 - copies 415
 - copy-count 415
 - data-fidelity-problem-reported 416
 - default-character-mapping 416
 - default-input-tray 417
 - default-medium 418
 - default-printer-resolution 418
 - department-text 419
 - destination-company-text 420
 - destination-initial-value-document 420
 - destination-pass-through 420
 - document-comment 420
 - document-content 421
 - document-content-list 421

documents, attributes of (*continued*)

- document-file-name 421
- document-finishing 422
- document-format 422
- document-sequence-number 423
- document-type 423
- dot-shape 425
- email-from-address 425
- email-to-address 426
- enable-settrap 426
- fax-number 426
- fax-to-name 427
- file-name 421
- font-fidelity-action 427
- font-processing-messages 427
- font-resolution 428
- form-definition 428
- format 422
- image-center-x 429
- image-center-y 429
- image-fit 430
- image-length 430
- image-out-format 431
- image-scale 432
- image-width 432
- initial-value-document 433
- input-exit 434
- input-tray-select 435
- maximum-messages-printed 436
- maximum-transform-pages-ahead 436
- mvs-class 437
- mvs-destination 437
- mvs-forms 437
- mvs-segment-id 438
- name-text 438
- new-line-option 439
- node-id-text 439
- number-up 440
- object-class 440
- octet-count 440
- orientation 414
- originating-company-text 441
- other-options 420
- other-transform options 441
- output-appearance 441
- output-bin 442
- output-face-up 442
- output-format 443
- overlay 444
- overprint 445
- page-clip 445
- page-count 445
- page-definition 446
- page-media-select 446
- page-select 446
- plex 447

documents, attributes of (*continued*)

- print-quality 448
- printer-initial-value-document 420
- printer-pass-through 420
- programmer-text 448
- resource-context 449
- resource-context-font 450
- resource-context-form-definition 451
- resource-context-overlay 451
- resource-context-page-definition 452
- resource-context-page-segment 453
- resource-context-user 453
- resource-exit 454
- room-text 454
- scanner-correction 455
- screen-frequency 455
- segment-file-size 456
- sequence-number 423
- shared-formdef 456
- shift-out-shift-in 457
- sides 457
- start-on-new-sheet 458
- subject-text 459
- table-reference-characters 459
- title-text 459
- transfer-method 460
- transform-message-file-name 460
- transform-output-file-name 460
- type 423
- used for job scheduling 623
- used for job validation 623
- user-id-text 461
- x-image-shift 461, 462
- y-image-shift 462
- y-image-shift-back 463

dot-shape attribute

- default document 425
- document 425

double quotation marks in commands xxxix

dss-job-message-disposition attribute

- actual destination 339

dss-job-message-log-size attribute

- actual destination 339

dss-job-message-log-wrap attribute

- actual destination 339

dss-requested attribute

- default job 473
- job 473

dummy form definition 230, 233

duplex-supported component

- psf-tray-characteristics attribute, actual destination 383

E

- ebcdic-character-mapping attribute
 - actual destination 340
- ellipsis in commands xxxviii
- email destinations, attributes of
 - See actual destinations, attributes of
- email-from-address attribute
 - default document 425
 - document 425
- email-to-address attribute
 - default document 426
 - document 426
- enable-settrap attribute
 - default document 426
 - document 426
- enabled attribute
 - actual destination 340
 - log 507
 - logical destination 522
- enabling destinations 31
- end-message attribute
 - default job 478
 - job 478
- end-message-supported attribute
 - actual destination 340
 - logical destination 522
- end-sheets-supported attribute
 - actual destination 341
- environment variables
 - GIF2AFP_option 577
 - IPR_PREDPROD 577
 - JPEG2AFP_option 577
 - LANG 580
 - LC_ALL 580
 - LC_CTYPE 580
 - LC_MESSAGES 580
 - LC_MONETARY 580
 - LC_NUMERIC 580
 - LC_TIME 580
 - MANPATH 577
 - NLSPATH 581
 - PATH 577
 - PD_CONFIRM_DELETE 15, 23, 83, 578
 - PD_ENABLE_TIMEOUT 578
 - PD_LISTEN_COUNT 578
 - PD_SOCKET 578
 - PDBASE 577
 - PDIDTABLE 577
 - PDNAMESP 577
 - PDPATH 9, 578
 - PDPRINTER 56, 68, 578
 - PPO_CANCEL_ALL_OPTION 579
 - PPO_DEFAULT_ENV 578
 - PPO_FORM 579
 - PPO_JOB_BATCH 579
- environment variables (*continued*)
 - PPO_JOB_DETAILS_ATTRS 579
 - PPO_LP 579
 - PPO_LPS 579
 - PPO_PP_ATTRS 579
 - PPO_PPS 580
 - PPO_QUEUE 580
 - PPO_QUEUE_ATTRS 580
 - PPO_QUEUE_INFO_FILE 580
 - PPO_SERVER 580
 - PPO_TRACE_FILE 580
 - PSFDBLANG 579
 - PSFPATH 579
 - table of 577
 - TIFF2AFP_option 579
 - TYPESETTER 579
 - XBMLANGPATH 579
- equals signs in commands xxxviii
- estimated-completion-time attribute
 - job 473
- estimated-processing-time attribute
 - job 474
- event-comment component
 - notification-profile attribute
 - actual destination 361
 - default job 494
 - job 494
 - logical destination 528
 - queue 551
 - server 570
- event-identifier component
 - notification-profile attribute
 - actual destination 360
 - default job 493
 - job 493
 - logical destination 527
 - queue 550
 - server 569
- events-supported attribute
 - server 561
- examples
 - of commands
 - lprafp 13
 - mkfntmap 14
 - pdclean 17
 - pdcreate 21
 - pddelete 26
 - pddisable 29
 - pdenable 33
 - pdls 39
 - pdmod 47
 - pdpause 55
 - pdpr 61
 - pdpromote 67
 - pdq 71
 - pdreorder 74
 - pdresubmit 78

examples (*continued*)

of commands (*continued*)

pdresume 81
pdrm 85
pdset 89
pdshutdown 94
pdspace 98

of transforms

line2afp 239
pcl2afp 258
pdf2afp 278
ps2afp 278
sap2afp 291

of utilities

admingui 124
afpsplit 126
ainupod1 127
ainupod2 128
ainupod3 129
ainurpt1 130
ainurpt2 131
ainurpt3 132
ainurpt4 133
ainurpt5 134
ainurpt6 135
cfu 137
ipguibasic 138
jsmigr 140
mvsprsd 175
opergui 141
pcl2afpd 179
pdadmin 142
pdcrcds 143
pdcrdflt 145
pdcrrmed 146
pdinitports 148
pdmigpp 150
pdmincfg 151
pdmsg 153
pdnetifspri 155
ps2afpd 182
sense 159
setup 161
start_server 165
startppo 163
startsrv 167
stop_server 168
t2file 172
tdump 169
tlist 171

exits

input 230
output 231
resource 236

F

fax destinations, attributes of

See actual destinations, attributes of

fax-number attribute

default document 426

document 426

fax-to-name attribute

default document 427

document 427

fdeflib option 226

file names

of form definitions 229

of input file 231

of output file 232

of page definitions 233

specified with inputdd option 231

specified with outputdd option 232

specified with pagedef option 233

file-name attribute

document 421

file-reference document, definition 421, 424

fileformat option 227

files

/cdrom/books/readme.txt xxxv

/etc/services 147

barcode.tab 281

defcp.tab 283

fonts.tab 283

for transforms

db2afp 187

gif2afp 196

jpeg2afp 211

line2afp 241

pcl2afp 256, 265

pdf2afp 276, 279

ps2afp 276, 279

sap2afp 280

tiff2afp 297

for utilities

pcl2afpd 179

ps2afpd 182

gif2afp.cfg 196

image.tab 287

input

for line2afp 231

jpeg2afp.cfg 211

output

for line2afp transform 232

for pdf2afp transform 272

for ps2afp transform 272

pagedef.tab 288

pcl2afp 256

pcl2afpd 256

printer.tab 289

ps2afp 276

- files (*continued*)
 - ps2afpd 276
 - readme xxxv
 - S9148.CPA 285
 - tiff2afp.cfg 297
 - xxxxyyyy.tab 289
- files, MO:DCA-P, extracting pages 125
- filters
 - operators, pdls command 37
- first-page component
 - page-select attribute
 - document 446
- flags
 - See also* options
 - general description of 6
 - line2afp 223
 - of commands
 - lprafp 12
 - pdclean 15
 - pdcreate 19
 - pddelete 23
 - pddisable 27
 - pdenable 31
 - pdls 35
 - pdmod 45
 - pdpause 50
 - pdpr 57
 - pdpromote 66
 - pdq 68
 - pdreorder 73
 - pdresubmit 75
 - pdresume 79
 - pdrm 83
 - pdset 87
 - pdshutdown 92
 - pdspace 97
 - of transforms
 - d2afp 189
 - db2afp 184
 - pcl2afp 245
 - pdf2afp 268
 - ps2afp 268
 - sap2afp 280
 - of utilities
 - admingui 124
 - afpsplit 125
 - cfu 136
 - mvsprsd 174
 - opergui 141
 - pcl2afpd 177
 - pdcrdfilt 144
 - pdinitports 147
 - pdmincfg 151
 - pdmsg 153
 - pdnetifspri 155
 - ps2afpd 180
 - setup 160

- flags (*continued*)
 - of utilities (*continued*)
 - start_server 164
 - startspl 163
 - startsrv 166
 - stop_server 168
 - t2file 172
 - tdump 169
 - tlist 171
- font map file keyword on ps2afp or pdf2afp
 - transform 269
- font-escape component
 - actual destination 315
- font-fidelity-action attribute
 - default document 427
 - document 427
- font-name component
 - actual destination 315
- font-processing-messages attribute
 - default document 427
 - document 427
- font-resolution attribute
 - default document 428
 - document 428
- font-resolutions-supported attribute
 - actual destination 342
- fontlib option 228
- fonts
 - converting ASCII to EBCDIC 231
 - directory 228
 - search path for line data transform 228
 - specifying with chars 224
- fonts.tab file 283
- force-destination-setup attribute
 - actual destination 342
- force-printer-setup attribute
 - actual destination 342
- form definitions
 - default 627
 - file name 229
 - for 11 by 17 inch paper 629
 - for envelopes 629
 - for n_up page positioning 631
 - for pre-punched paper 632
 - general purpose 627
 - inline 230
 - printer-model specific 632
 - search path for line data transform 226
 - specified with formdef option 229
 - supplied with InfoPrint 627
 - with a 0,0 offset 630
- form-definition attribute
 - actual destination 343
 - default document 428
 - document 428

format
 of input file 227
format attribute
 default document 422
 document 422
formatted-job-ticket-content attribute
 job 474
formdef option 229

G

gif2afp transform
 &I2@CITGI2.
 description 191
 limitations 197
 options 197
 syntax 191
 configuration file 196
global characters (wildcards) 8
global job identifier
 global-id, job-attribute 480
 job-identifier, job-attribute 480
 new-job-identifier, job-attribute 492
global-id attribute
 job 480
glossary 637

H

height
 PostScript image 271
highlighting conventions xxxvii
hostname attribute
 server 574
hostname of the server 574
HRI character 281
human readable interface (HRI) character 281

I

i-p-address attribute
 server 574
IBM InfoPrint Control
 See InfoPrint
image output 230
image-center-x attribute
 default document 429
 document 429
image-center-y attribute
 default document 429
 document 429
image-fit attribute
 default document 430
 document 430
image-fit-supported attribute
 actual destination 343

image-length attribute
 actual destination 344
 default document 430
 document 430
image-out-format
 default document 431
 document 431
image-out-formats-supported
 actual destination 345
 logical destination 523
image-scale attribute
 default document 432
 document 432
image-width attribute
 actual destination 345
 default document 432
 document 432
image.tab file 287
imageout option 230
images
 resolution 273
InfoPrint
 commands
 See commands
 transforms
 See transforms
 utilities
 See utilities
InfoPrint Installer, starting 160
InfoPrint operator's GUI, starting 138
InfoPrint SMIT production print operations interface,
 starting 163
initial value documents, attributes of
 See default documents, attributes of
initial value jobs, attributes of
 See default jobs, attributes of
initial-value-document attribute
 document 433
initial-value-document-identifier attribute
 default document 434
initial-value-job attribute
 job 475
initial-value-job-identifier attribute
 default job 475
initially settable attribute listing
 actual destination 310
 document 403
 job 465
 log 506
 logical destination 511
inline resources
 for PDF jobs 279
 for PostScript jobs 279
 form definition 230
 page definition 233

- inpexit option 230
- input exit 230
- input files
 - specifying file name 231
 - specifying format 227
- input-data-user-exit attribute
 - actual destination 346
- input-exit attribute
 - default document 434
 - document 434
- input-tray component
 - psf-tray-characteristics attribute, actual destination 382
- input-tray-select attribute
 - default document 435
 - document 435
- input-trays-medium attribute
 - actual destination 347
- input-trays-supported attribute
 - actual destination 348
 - logical destination 523
- inputdd option 231
- installer, starting 160
- internet address of the host processor 574
- intervening-jobs attribute
 - job 475
- intervention-timer attribute
 - actual destination 349
- ip-address attribute
 - server 574
- ipguiadv utility
 - description 138
 - syntax 138
- ipguibasic utility
 - description 138
 - examples 138
 - syntax 138
- ipguidist utility
 - description 138
 - syntax 138

J

- job attributes
 - See jobs, attributes of
- job scripts, PSF for AIX, migrating 139
- job-attributes-supported attribute
 - actual destination 349
 - server 563
- job-batch attribute
 - default job 476
 - job 476
- job-batches-ready attribute
 - actual destination 350
- job-bin-number component
 - psf-tray-characteristics attribute, actual destination 382

- job-client-id attribute
 - job 476
- job-comment attribute
 - default job 476
 - job 476
- job-complexity attribute
 - job 477
- job-copies component
 - results-profile attribute
 - default job 500
 - job 500
- job-copies-completed attribute
 - job 477
- job-deadline-time attribute
 - job 477
- job-discard-time attribute
 - job 478
- job-end-message attribute
 - default job 478
 - job 478
- job-finishing attribute
 - default job 478
 - job 478
- job-finishings-supported attribute
 - actual destination 350
- job-hold attribute
 - default job 479
 - job 479
- job-identifier attribute
 - job 480
- job-log attribute
 - job 480
- job-media-sheet-count attribute
 - job 481
- job-message-from-administrator attribute
 - job 481
- job-message-to-operator attribute
 - default job 482
 - job 482
- job-name attribute
 - job 482
- job-originator attribute
 - default job 482
 - job 482
- job-owner attribute
 - job 483
- job-page-count
 - job 483
- job-print-after attribute
 - job 484
- job-priority attribute
 - default job 484
 - job 484
- job-retain-until attribute
 - job 484

- job-retention-period attribute
 - default job 485
 - job 485
- job-retry-count-limit attribute
 - actual destination 350
- job-retry-interval attribute
 - actual destination 351
- job-rip-action attribute
 - default job 485
 - job 485
- job-rip-actions-supported attribute
 - actual destination 351
- job-size attribute
 - job 504
- job-size-range-ready attribute
 - actual destination 352
- job-size-range-supported attribute
 - actual destination 353
 - logical destination 524
- job-start-message attribute
 - default job 486
 - job 486
- job-start-wait attribute
 - job 487
- job-start-wait-supported attribute
 - job 353
- job-state attribute
 - job 467
- job-state-reasons attribute
 - job 487
- job-state-reasons-supported attribute
 - server 563
- job-states-supported attribute
 - server 564
- job-submission-complete attribute
 - job 489
- job-submission-timer attribute
 - server 564
- job-ticket-content attribute
 - job 474
- jobs, attributes of
 - actual-destinations-requested 465
 - auxiliary-sheet-selection 466
 - comment 476
 - completion-time 467
 - current-job-state 467
 - current-page-printing 468
 - d-s-s-requested 473
 - deadline-in-jeopardy 469
 - delete-segment-list 469
 - destination-initial-value-job 470
 - destination-locations-requested 470
 - destination-models-requested 471
 - destination-name-requested 471
 - destinations-assigned 472
 - destinations-used 472
- jobs, attributes of (*continued*)
 - device-support-system-requested 473
 - discard-time 478
 - dss-requested 473
 - end-message 478
 - estimated-completion-time 473
 - estimated-processing-time 474
 - formatted-job-ticket-content 474
 - global-id 480
 - hold 479
 - initial-value-job 475
 - intervening-jobs 475
 - job-batch 476
 - job-client-id 476
 - job-comment 476
 - job-complexity 477
 - job-copies-completed 477
 - job-deadline-time 477
 - job-discard-time 478
 - job-end-message 478
 - job-finishing 478
 - job-hold 479
 - job-identifier 480
 - job-log 480
 - job-media-sheet-count 481
 - job-message-from-administrator 481
 - job-message-to-operator 482
 - job-name 482
 - job-originator 482
 - job-owner 483
 - job-page-count 483
 - job-print-after 484
 - job-priority 484
 - job-retain-until 484
 - job-retention-period 485
 - job-rip-action 485
 - job-size 504
 - job-start-message 486
 - job-start-wait 487
 - job-state 467
 - job-state-reasons 487
 - job-submission-complete 489
 - job-ticket-content 474
 - last-accessor 492
 - last-modifier 492
 - locations-requested 470
 - logical-printer-requested 471
 - media-sheet-count 481
 - media-sheets-completed 491
 - message-from-administrator 481
 - message-to-operator 482
 - models-requested 471
 - modification-time 492
 - name 482
 - name-of-last-accessor 492
 - new-job-identifier 492

- jobs, attributes of (*continued*)
 - notification-profile 492
 - number-of-documents 494
 - object-class 495
 - octets-completed 495
 - optimize-for-multiple-copies 495
 - originator 482
 - owner 483
 - pages-completed 496
 - physical-printers-requested 465
 - position-in-queue 475
 - previous-job-state 497
 - previous-state 497
 - print-after 484
 - printer-initial-value-job 470
 - printer-locations-requested 470
 - printer-models-requested 471
 - printer-name-requested 471
 - printer-requested 471
 - printers-assigned 472
 - printers-used 472
 - processing-time 498
 - queue-assigned 498
 - queue-position 475
 - reasons 487
 - required-resources-not-ready 499
 - required-resources-not-supported 499
 - results-profile 500
 - retention-period 485
 - start-message 486
 - started-printing-time 501
 - state-reasons 487
 - submission-time 501
 - tape-exit 501
 - tape-format 502
 - tape-label 502
 - tape-maximum-block-size 502
 - tape-rewind-before 503
 - tape-rewind-unload 503
 - ticket-content 474
 - total-job-octets 504
 - used for job scheduling 623
 - used for job validation 623
 - user-locale 504
 - user-name 504
- jpeg2afp transform
 - configuration file 211
 - description 206
 - limitations 212
 - options 212
 - syntax 206
- jsmigr utility
 - arguments 140
 - description 139
 - examples 140
 - syntax 139

K

- keywords
 - pdf2afp transform
 - height of image 271
 - length of image 271
 - maximum memory 272
 - output file 272
 - port 272
 - quiet 273
 - resolution 273
 - selected pages 272
 - server name 273
 - server time out 273
 - width of image 274
 - X offset 274
 - Y offset 275
 - ps2afp transform
 - height of image 271
 - length of image 271
 - maximum memory 272
 - output file 272
 - port 272
 - resolution 273
 - selected pages 272
 - server name 273
 - server time out 273
 - width of image 274
 - X offset 274
 - Y offset 275

L

- last-accessor attribute
 - job 492
- last-modifier attribute
 - job 492
- last-page component
 - page-select attribute
 - document 446
- length
 - PostScript image 271
- length keyword
 - pdf2afp transform 271
 - ps2afp transform 271
- limitations
 - of transforms
 - d2afp 188
 - db2afp 184
 - gif2afp 197
 - jpeg2afp 212
 - pcl2afp 244
 - pdf2afp 268
 - ps2afp 268
 - tiff2afp 298

- line data
 - examples of printing
 - S/370 file 239
 - unformatted ASCII 239
 - search paths for resources
 - AFP resources 238
 - fonts 228
 - form definitions 226
 - overlays 232
 - page definitions 234
 - page segments 235
 - system resources 236
- line2afp transform
 - &I2@CITLI2.
 - files 241
 - examples 239
 - flags 223
 - syntax 220, 221
- list-of-managers attribute
 - actual destination 354
 - default document 435
 - default job 490
 - logical destination 525
 - queue 548
 - server 564
- listing attribute values 34
- listing of attributes used of job validation and scheduling 623
- locale attribute
 - server 565
- locale component
 - notification-profile attribute
 - actual destination 361
 - default job 494
 - job 494
 - logical destination 528
 - queue 551
 - server 570
- locations attribute
 - actual destination 327
 - logical destination 518
- locations-requested attribute
 - default job 470
 - job 470
- log attributes
 - See logs, attributes of
- log-accounting data attribute
 - actual destination 354
 - server 565
- log-address attribute
 - log 507
- log-identifier attribute
 - log 507
- log-message attribute
 - log 508
- log-severity attribute
 - log 508
- log-size attribute
 - log 509
- log-trace-groups attribute
 - log 509
- log-type attribute
 - log 510
- log-wrap attribute
 - log 510
- logical destinations, attributes of
 - associated-queue 512
 - associated-server 512
 - authorize-jobs 513
 - auxiliary-sheet-selections-supported 513
 - carriage-control-types-supported 514
 - character-mappings-supported 514
 - content-orientations-supported 515
 - convert-to-ebcdic-supported 515
 - data-fidelity-problem-reported-supported 516
 - descriptor 516
 - destination-associated-destinations 517
 - destination-initial-value-document 517
 - destination-initial-value-job 517
 - destination-locations 518
 - destination-model 518
 - destination-name 519
 - destination-realization 519
 - destination-support-system 520
 - destinations-ready 520
 - device-support-system 520
 - document-formats-supported 520
 - document-types-supported 521
 - enabled 522
 - end-message-supported 522
 - image-out-formats-supported 523
 - input-trays-supported 523
 - job-size-range-supported 524
 - list-of-managers 525
 - locations 518
 - logical-printer 519
 - managers 525
 - maximum-copies-supported 526
 - media-supported 526
 - message 527
 - model 518
 - notification-profile 527
 - nt-drivers 534
 - object-class 528
 - orientations-supported 515
 - os2-driver-names 528
 - os2-drivers 528
 - page-select-supported 530
 - plexes-supported 530
 - print-qualities-supported 531
 - printer 519

- logical destinations, attributes of (*continued*)
 - printer-associated-printers 517
 - printer-initial-value-document 517
 - printer-initial-value-job 517
 - printer-locations 518
 - printer-model 518
 - printer-name 519
 - printer-realization 519
 - printers-ready 520
 - protected-attributes 532
 - qualities-supported 531
 - sides-supported 532
 - start-message-supported 533
 - table-reference-characters-supported 533
 - used for job validation 623
 - windows-driver-names 534
 - windows-drivers 534
 - windows-nt-driver-names 534
 - windows-nt-drivers 534
 - x-image-shift-supported 535
 - y-image-shift-supported 536
- logical printers, attributes of
 - See logical destinations, attributes of
- logical-destinations-assigned attribute
 - queue 549
- logical-destinations-ready attribute
 - default document 435
 - default job 490
 - queue 549
 - server 566
- logical-destinations-supported attribute
 - server 566
- logical-printer attribute
 - logical destination 519
- logical-printer-requested attribute
 - job 471
- logical-printers-assigned attribute
 - queue 549
- logical-printers-ready attribute
 - default document 435
 - default job 490
 - queue 549
 - server 566
- logical-printers-supported attribute
 - server 566
- logs, attributes of
 - associated-server 506
 - descriptor 506
 - enabled 507
 - log-address 507
 - log-identifier 507
 - log-messages 508
 - log-severity 508
 - log-size 509
 - log-trace-groups 509
 - log-type 510

- logs, attributes of (*continued*)
 - log-wrap 510
 - object-class 510
- lower-limit component
 - job-size-range-ready attribute
 - actual destination 352
 - job-size-range-supported attribute
 - actual destination 353
 - logical destination 524
 - x-image-shift-range-supported attribute
 - actual destination 397
 - logical destination 536
 - y-image-shift-range-supported attribute
 - actual destination 398
 - logical destination 537
- lprfp command
 - arguments 12
 - examples 13
 - files 13
 - flags 12
 - syntax 12

M

- machine code carriage-control characters 224
- man pages
 - lists of available xxxiii
- managers attribute
 - actual destination 354
 - default document 435
 - default job 490
 - logical destination 525
 - queue 548
 - server 564
- manual (man) pages
 - See man pages
- margins of PDF images
 - X offset 274
 - Y offset 275
- margins of PostScript images
 - X offset 274
 - Y offset 275
- maximum memory keyword
 - pdf2afp transform 272
 - ps2afp transform 272
- maximum-barco-rips attribute
 - server 566
- maximum-concurrent-jobs attribute
 - actual destination 355
- maximum-copies-supported attribute
 - actual destination 356
 - logical destination 526
- maximum-fonts-to-keep attribute
 - actual destination 356
- maximum-messages-printed attribute
 - default document 436

- maximum-messages-printed attribute (*continued*)
 - document 436
- maximum-non-raster-rips attribute
 - server 567
- maximum-overlays-to-keep attribute
 - actual destination 356
- maximum-raster-rips attribute
 - server 567
- maximum-segments-to-keep attribute
 - actual destination 357
- maximum-transform-pages-ahead attribute
 - default document 436
 - document 436
- media-loaded component
 - psf-tray-characteristics attribute, actual destination 382
- media-ready attribute
 - actual destination 357
- media-sheet-count attribute
 - job 481
- media-sheets-completed attribute
 - job 491
- media-supported attribute
 - actual destination 358
 - logical destination 526
- media, attributes of
 - associated-server 538
 - descriptor 539
 - medium-color 539
 - medium-dimensions 540
 - medium-form-parts 540
 - medium-holes-count 541
 - medium-identifier 541
 - medium-sides 542
 - medium-size 542
 - medium-type 542
 - message 543
 - object-class 543
- media, creating commonly used 146
- medium attributes
 - See media, attributes of
- medium-color attribute
 - medium 539
- medium-dimensions attribute
 - medium 540
- medium-form-parts attribute
 - medium 540
- medium-holes-count attribute
 - medium 541
- medium-identifier attribute
 - medium 541
- medium-identifier component
 - input-trays-medium attribute, actual destination 347
- medium-sides attribute
 - medium 542
- medium-size attribute
 - medium 542
- medium-type attribute
 - medium 542
- message attribute
 - actual destination 359
 - default document 436
 - default job 491
 - logical destination 527
 - medium 543
 - queue 550
 - server 568
- message-count, command attribute
 - pdl 38
- message-font-type attribute
 - actual destination 359
- message-form-definition attribute
 - actual destination 359
- message-from-administrator attribute
- message-to-operator attribute
 - default job 482
 - job 482
- messages
 - specifying where written 231
- messages, displaying information about 153
- migrating an existing printer 149
- migrating PSF for AIX job scripts 139
- minimum configuration, setting up 151
- mkfntmap command
 - arguments 14
 - description 14
 - examples 14
 - syntax 14
- MO:DCA-P files, extracting pages 125
- model attribute
 - actual destination 327
 - logical destination 518
- models-requested attribute
 - default job 471
 - job 471
- modification-time attribute
 - job 492
- modify-individual-document-supported attribute
 - server 568
- modifying attributes of submitted jobs 44
- msgdd option 231
- multiple-documents-supported attribute
 - spooler 568
- mvs-class attribute
 - default document 437
 - document 437
- mvs-destination attribute
 - default document 437
 - document 437
- mvs-forms attribute
 - default document 437

- mvs-forms attribute (*continued*)
 - document 437
- mvs-segment-id attribute
 - default document 438
 - document 438
- mvsprsd daemon 174
- mvsprsd utility
 - description 174
 - examples 175
 - flags 174
 - syntax 174

N

- name attribute
 - job 482
- name of server 574
- name-of-last-accessor attribute
 - job 492
- name-text attribute
 - default document 438
 - document 438
- new-job-identifier attribute
 - job 492
- new-line-option attribute
 - default document 439
 - document 439
- node-id-text attribute
 - default document 439
 - document 439
- non-process-runout-timer attribute
 - actual destination 360
- notational conventions xxxvii
- notification events
 - classes 594
 - list of 583
- notification profile 4
- notification-delivery-methods-supported attribute
 - server 568
- notification-profile attribute
 - actual destination 360
 - default job 492
 - job 492
 - logical destination 527
 - queue 550
 - server 569
- notify-operator attribute
 - actual destination 361
 - queue 551
 - queue example 5
- npm-server-ip-address attribute
 - server 570
- npm-server-port-number attribute
 - server 570
- nt-drivers attribute
 - logical destination 534

- number-of-documents attribute
 - job 494
- number-up attribute
 - document 440
- number-up-supported attribute
 - actual destination 362

O

- object attributes 2
- object attributes of commands
 - pdcreate
 - documents 21
 - jobs 21
 - pdpr 60
- object attributes, default values for 3
- object classes 1
- object classes, general descriptions of 1
- object-class attribute
 - actual destination 363
 - auxiliary sheet 400
 - default document 440
 - default job 495
 - document 440
 - job 495
 - log 510
 - logical destination 528
 - medium 543
 - queue 552
 - resource context 556
 - server 571
- object-classes-supported attribute
 - server 571
- objects, general descriptions of 1
- octet-count attribute
 - document 440
- octets-completed attribute
 - job 495
- offset-stacking-available attribute
 - actual destination 363
- operators attribute
 - queue 551
- opergui utility
 - arguments 141
 - description 141
 - examples 141
 - flags 141
 - syntax 141
- optimize for-multiple-copies attribute
 - actual destination 363
 - default job 495
 - job 495
- options
 - &I2@CIOPT.
 - tiff2afp 299
 - of transforms
 - gif2afp 197

- options (*continued*)
 - of transforms (*continued*)
 - jpeg2afp 212
- orientation attribute
 - default document 414
 - document 414
- orientations-supported attribute
 - actual destination 322
 - logical destination 515
- originating-company-text attribute
- originator attribute
 - default job 482
 - job 482
- os2-driver-names attribute 529
 - logical destination 528
- os2-drivers attribute
 - logical destination 528
- other-options attribute
 - actual destination 329
 - default document 420
 - document 420
- other-transform-options attribute
 - default document 441
 - document 441
- outexit option 231
- output exit 231
- output files
 - for PostScript 272
 - specifying file name 232
- output-appearance attribute
 - default document 441
 - document 441
- output-appearances-supported attribute
 - actual destination 364
- output-bin attribute
 - actual destination 365
 - default document 442
 - document 442
- output-bin component
 - results-profile attribute
 - default job 501
 - job 501
- output-bin-numbers attribute
 - actual destination 365
- output-bins-supported attribute
 - actual destination 366
- output-data-user-exit attribute
 - actual destination 366
- output-face-up attribute
 - default document 442
 - document 442
- output-format attribute
 - default document 443
 - document 443
- output-format-supported attribute
 - actual destination 367

- outputdd option 232
- overlay attribute
 - actual destination 367
 - default document 444
 - document 444
- overlays
 - directory 232
- overprint attribute
 - default document 445
 - document 445
- ovlylib option 232
- owner attribute
 - job 483

P

- page definitions
 - directory 233, 234
 - for A4 paper 634
 - for B4 636
 - for legal-sized paper 636
 - for letter-sized paper 633
 - for multiple-up 635
 - inline 233
 - specified with pagedef option 233
 - supplied with InfoPrint 627
- page segments
 - directory 235
- page-clip attribute
 - default document 445
 - document 445
- page-count attribute
 - document 445
- page-definition attribute
 - default document 446
 - document 446
- page-media-select attribute
 - default document 446
 - document 446
- page-select attribute
 - document 446
- page-select-supported attribute
 - actual destination 368
- pagedef option 233
- pagedef.tab file 288
- pages-completed attribute
 - job 496
- pages, extracting from MO:DCA-P files 125
- parmdd option 234
- paths
 - font directory 228
 - form definition directory 226
 - overlay directory 232
 - page definition directory 234
 - page segment directory 235
 - resource directory 236

- paths (*continued*)
 - user directories 238
- pausing jobs, actual destinations, servers, or queues 49
- pcl-server-address attribute
 - actual destination 368
- pcl-server-port attribute
 - actual destination 369
- pcl2afp transform
 - configuration files
 - pcl2afp file 256
 - pcl2afpd file 256
 - description 243
 - examples, complex 259
 - examples, simple 258
 - files 256, 265
 - flags 245
 - limitations 244
 - syntax 243
- pcl2afpd daemon 177, 244
 - configuration file 256
- pcl2afpd utility
 - configuration file 177
 - description 177
 - examples 179
 - files 179
 - flags 177
 - syntax 177
- PD_CONFIRM_DELETE environment variable 15, 23, 83
- pdadmin utility
 - description 142
 - examples 142
 - syntax 142
- pdclean command
 - arguments 16
 - command attributes 16
 - description 15
 - examples 17
 - flags 15
 - syntax 15
- pdcr cds utility
 - description 143
 - examples 143
 - syntax 143
- pdcrdflt utility
 - arguments 145
 - description 144
 - examples 145
 - flags 144
 - syntax 144
- pdcreate command
 - arguments 21
 - attributes 21
 - command attributes 20
 - description 18
- pdcreate command (*continued*)
 - examples 21
 - flags 19
 - syntax 18
- pdcrmed utility
 - arguments 146
 - description 146
 - examples 146
 - syntax 146
- pddelete command
 - arguments 25
 - command attributes 24
 - description 23
 - examples 26
 - flags 23
 - syntax 23
- pddisable command
 - arguments 29
 - command attributes 28
 - description 27
 - examples 29
 - flags 27
 - syntax 27
- pdeflib option 234
- pdenable command
 - arguments 32
 - command attributes 32
 - description 31
 - examples 33
 - flags 31
 - syntax 31
- PDF
 - inline resources 279
 - margins
 - X offset 274
 - Y offset 275
 - resolution of output 273
 - transforming and printing 278
 - width of image 274
- pdf2afp transform
 - configuration files
 - ps2afp file 276
 - ps2afpd file 276
 - description 266
 - examples 278
 - files 276, 279
 - flags 268
 - keywords
 - height of image 271
 - length of image 271
 - maximum memory 272
 - output file 272
 - port 272
 - quiet 273
 - resolution 273
 - selected pages 272
 - server name 273

pdf2afp transform (*continued*)
 keywords (*continued*)
 server time out 273
 width of image 274
 Y offset 275
 limitations 268
 syntax 266
 sap2afp 280

pdf2fp transform
 keywords
 X offset 274

pdinitports utility
 arguments 147
 description 147
 examples 148
 flags 147
 syntax 147

pdls command
 arguments 39
 attribute operators for filters 37
 command attributes 36
 description 34
 examples 39
 flags 35
 syntax 34

pdmigpp utility
 arguments 149
 description 149
 examples 150
 syntax 149

pdmincfg utility
 arguments 151
 description 151
 examples 151
 flags 151
 syntax 151

pdmod command
 arguments 47
 command attributes 46
 description 44
 examples 47
 flags 45
 syntax 44

PDPATH environment variable 9

pdpause command
 arguments 53
 command attributes 51
 description 49
 examples 55
 flags 50
 syntax 49

pdpr command
 arguments 60
 command attributes 59
 description 56
 examples 61

pdpr command (*continued*)
 flags 57
 object attributes 60
 syntax 56

PDPRINTER environment variable 56, 68

pdpromote command
 arguments 67
 command attributes 67
 description 66
 examples 67
 flags 66
 syntax 66

pdq command
 arguments 71
 command attributes 70
 description 68
 examples 71
 flags 68
 syntax 68, 73

pdreorder command
 arguments 74
 command attributes 74
 description 73
 examples 74
 flags 73

pdresubmit command
 arguments 77
 command attributes 76
 description 75
 examples 78
 flags 75
 syntax 75

pdresume command
 arguments 80
 command attributes 80
 description 79
 examples 81
 flags 79
 syntax 79

pdrm command
 arguments 84
 command attributes 84
 description 83
 examples 85
 flags 83
 syntax 83

pdset command
 arguments 89
 command attributes 88
 description 86
 examples 89
 flags 87
 syntax 86

pdshutdown command
 arguments 94
 command attributes 93

- pdshutdown command (*continued*)
 - description 91
 - examples 94
 - flags 92
 - syntax 91
- pdspace command
 - arguments 98
 - command attributes 97
 - description 96
 - examples 98
 - flags 97
 - syntax 96
- pel output
 - for PostScript 273
 - output for PDF 273
- per-document attribute listing 406
- physical printers, attributes of
 - See actual destinations, attributes of
- physical-printer attribute
 - actual destination 328
- physical-printers-assigned attribute
 - queue 544
- physical-printers-ready attribute
 - queue 544
 - server 559
- physical-printers-requested attribute
 - default job 465
 - job 465
- physical-printers-supported attribute
 - server 559
- plex attribute
 - actual destination 369
 - default document 447
 - document 447
- plexes-supported attribute
 - actual destination 370
 - logical destination 530
- port number keyword
 - pdf2afp transform 272
 - ps2afp transform 272
- position-in-queue attribute
 - job 475
- PostScript
 - height of image 271
 - inline resources 279
 - length of image 271
 - margins
 - X offset 274
 - Y offset 275
 - resolution of output 273
 - transforming and printing 278
 - width of image 274
- postscript-server-address attribute
 - actual destination 370
 - logical destination 530
- postscript-server-port attribute
 - actual destination 371
- presentation-fidelity-problem-reported attribute
 - actual destination 371
- previous-job-state attribute
 - job 497
- previous-state attribute
 - job 497
- Print Administration window, opening 124
- print jobs, attributes of
 - See jobs, attributes of
- Print Management window, opening 141
- print-after attribute
 - job 484
- print-edge-marks attribute
 - actual destination 372
- print-qualities-supported attribute
 - actual destination 372
 - logical destination 531
- print-quality attribute
 - default document 448
 - document 448
- print-queue-name attribute
 - actual destination 373
- printer attribute
 - actual destination 328
 - logical destination 519
- printer-associated-printers attribute
 - logical destination 517
- printer-command attribute
 - actual destination 326
- printer-data-stream attribute
 - actual destination 327
- printer-end-sheet attribute
 - actual destination 373
- printer-escape-codes attribute
 - actual destination 374
- printer-hot-folder attribute
 - actual destination 375
- printer-initial-value-document attribute
 - document 420
 - logical destination 517
- printer-initial-value-job attribute
 - job 470
 - logical destination 517
- printer-locations attribute
 - actual destination 327
 - logical destination 518
- printer-locations-requested attribute
 - default job 470
 - job 470
- printer-memory attribute
 - actual destination 375
- printer-model attribute
 - actual destination 327
 - logical destination 518

- printer-models-requested attribute
 - default job 471
 - job 471
- printer-name attribute
 - actual destination 328
 - logical destination 519
- printer-name-requested attribute
 - job 471
- printer-needs-attention-time attribute
 - actual destination 329
- printer-needs-key-operator-attention-time attribute
 - actual destination 329
- printer-pass-through attribute
 - actual destination 329
 - default document 420
 - document 420
- printer-realization attribute
 - actual destination 330
 - logical destination 519
- printer-register-threshold attribute
 - actual destination 330
- printer-release-timer attribute
 - actual destination 331
- printer-requested attribute
 - job 471
- printer-resolutions-ready attribute
 - actual destination 376
- printer-resolutions-supported attribute
 - actual destination 377
- printer-s370-channel-device-address attribute
 - actual destination 379
- printer-s370-channel-slot-number attribute
 - actual destination 379
- printer-separator-sheet attribute
 - actual destination 377
- printer-start-sheet attribute
 - actual destination 378
- printer-state attribute
 - actual destination 331
- printer-states-supported attribute
 - server 560
- printer-tcpip-internet-address attribute
 - actual destination 333
- printer-tcpip-port-number attribute
 - actual destination 333
- printer-timeout-period attribute
 - actual destination 380
- printer.tab file 289
- printers-assigned attribute
 - job 472
- printers-ready attribute
 - logical destination 520
- printers, attributes of
 - logical printers
 - See logical destinations, attributes of
 - physical printers
 - See actual destinations, attributes of
- printers, attributes of (*continued*)
 - used for job scheduling 623
 - used for job validation 623
- printers, channel-attached, sensing 158
- prmode option 235
- problem-child attribute
 - server 572
- problem-message attribute
 - actual destination 380
- processing-time attribute
 - job 498
- programmer-text attribute
 - default document 448
 - document 448
- promoting a job to the top of a queue 66
- protected-attributes attribute
 - logical destination 532
 - queue 552
 - server 572
- ps2afp transform
 - configuration files
 - ps2afp file 276
 - ps2afpd file 276
 - description 266
 - examples 278
 - files 276, 279
 - flags 268
 - keywords
 - height of image 271
 - length of image 271
 - maximum memory 272
 - output file 272
 - port 272
 - resolution 273
 - selected pages 272
 - server name 273
 - server time out 273
 - width of image 274
 - X offset 274
 - Y offset 275
 - limitations 268
 - syntax 266
- ps2afpd daemon 180, 268
 - configuration file 276
- ps2afpd utility
 - configuration file 180
 - description 180
 - examples 182
 - files 182
 - flags 180
 - syntax 180
- pseglib option 235
- PSF for AIX job scripts, migrating 139
- psf-exit-form-definition attribute
 - auxiliary sheet 400

- psf-exit-page-mark attribute
 - auxiliary sheet 401
- psf-exit-program-name attribute
 - auxiliary sheet 401
- psf-tray-characteristics attribute
 - actual destination 381

Q

- qualities-supported attribute
 - actual destination 372
 - logical destination 531
- querying the status of jobs 68
- queue attributes
 - See queues, attributes of
- queue-assigned attribute
 - job 498
- queue-backlog attribute
 - queue 552
- queue-name attribute
 - queue 553
- queue-position attribute
 - job 475
- queue-state attribute
 - queue 553
- queues-supported attribute
 - server 572
- queues, attributes of
 - actual-destinations-assigned 544
 - actual-destinations-ready 544
 - assign-to-destination 545
 - assign-to-printer 545
 - associated-server 546
 - backlog 552
 - backlog-lower-bound 546
 - backlog-update-interval 546
 - backlog-upper-bound 547
 - backlogged 547
 - current-backlog 552
 - descriptor 548
 - list-of-managers 548
 - logical-destinations-assigned 549
 - logical-destinations-ready 549
 - logical-printers-assigned 549
 - logical-printers-ready 549
 - managers 548
 - message 550
 - notification-profile 550
 - notify-operator 551
 - object-class 552
 - operators 551
 - physical-printers-assigned 544
 - physical-printers-ready 544
 - protected-attributes 552
 - queue-backlog 552
 - queue-name 553

- queues, attributes of (*continued*)
 - queue-state 553
 - requeue-failed-jobs 553
- quiet keyword
 - pdf2afp transform 273

R

- R/3 output device
 - mapping to a logical destination 289
- rc.pd utility
 - description 157
 - syntax 157
- reasons attribute
 - job 487
- reassigning jobs to actual destination 73
- register-threshold attribute
 - actual destination 330
- registered-with-spooler attribute
 - actual destination 383
- related publications xxxi
- remote printing 12
- remote-queue attribute
 - actual destination 384
- removing jobs
 - pdclean command 15
 - pdrm command 83
- requeue-failed-jobs attribute
 - queue 553
- required-resources-not-ready attribute
 - job 499
- required-resources-not-supported attribute
 - job 499
- resettable attribute listing
 - actual destination 310
 - auxiliary sheet 399
 - default document 403
 - document 403
 - job 465
 - log 506
 - logical destination 511
 - medium 538
 - queue object 544
 - resource context 555
 - server 558
- resexit option 236
- reslib option 236
- resolution keyword
 - pdf2afp transform 273
 - ps2afp transform 273
- resource contexts, attributes of
 - associated-server 555
 - context-address 556
 - descriptor 556
 - object-class 556
 - resource-context-identifier 557

- resource directory, paths 236
- resource-context attribute
 - default document 449
 - document 449
- resource-context-font attribute
 - actual destination 384
 - default document 450
 - document 450
- resource-context-form-definition attribute
 - actual destination 385
 - default document 451
 - document 451
- resource-context-identifier attribute
 - resource context 557
- resource-context-overlay attribute
 - actual destination 386
 - default document 451
 - document 451
- resource-context-page-definition attribute
 - actual destination 386
 - default document 452
 - document 452
- resource-context-page-segment attribute
 - actual destination 387
 - default document 453
 - document 453
- resource-context-user attribute
 - default document 453
 - document 453
- restarting servers 157
- resubmitting jobs 75
- results-profile attribute
 - default job 500
 - job 500
- results-set-comment component
 - results-profile attribute
 - default job 500
 - job 500
- resuming paused objects 79
- retention-period attribute
 - default job 485
 - job 485
- reverse-output attribute
 - actual destination 388
- rip-ini-file attribute
 - actual destination 388
- rip-server attribute
 - actual destination 388
- room-text attribute
 - default document 454
 - document 454

S

- sap2afp transform
 - configuration files
 - barcode.tab 281
 - sap2afp transform (*continued*)
 - configuration files (*continued*)
 - defcp.tab 283
 - fonts.tab 283
 - image.tab 287
 - pagedef.tab 288
 - printer.tab 289
 - xxxxyyyy.tab 289
 - converting ASCII to EBCDIC 283
 - description 280
 - examples 291
 - flags 280
 - mapping bar codes to BCOCA 281
 - syntax 280
 - save-rip-files attribute
 - server 573
 - scanner-correction attribute
 - default document 455
 - document 455
 - scanner-corrections-supported attribute
 - actual destination 389
 - scheduler-sort-primary-order attribute
 - actual destination 389
 - scheduler-sort-secondary-order attribute
 - actual destination 389
 - schedulers-supported attribute
 - actual destination 390
 - scheduling of jobs, attributes used for 623
 - screen-frequencies-supported attribute
 - actual destination 390
 - screen-frequency attribute
 - default document 455
 - document 455
 - search order for resources
 - line data 226, 228, 232, 234, 235, 236, 238
 - security-level attribute
 - server 573
 - segment-file-size attribute
 - default document 456
 - document 456
 - selected pages keyword
 - pdf2afp transform 272
 - ps2afp transform 272
 - sense utility
 - examples 159
 - flags 158
 - messages 158
 - return codes 158
 - syntax 158
 - sensing channel-attached printers, sensing 158
 - separator-sheets-supported attribute
 - actual destination 390
 - sequence-number attribute
 - document 423
 - server
 - port number 272

- server (*continued*)
 - time out keyword 273
- server name 574
- server name keyword
 - pdf2afp transform 273
 - ps2afp transform 273
- server state 575
- server-hostname attribute
 - server 574
- server-ip-address attribute
 - server 574
- server-name attribute
 - server 574
- server-state attribute
 - server 575
- server, shutting down 168
- server, starting 164, 166
- Servers window, opening 142
- servers, attributes of
 - accept-unsupported-jobs 558
 - actual-destinations-ready 559
 - actual-destinations-supported 559
 - cancel-individual-document-supported 559
 - descriptor 560
 - destination-states-supported 560
 - document-attributes-supported 561
 - events-supported 561
 - hostname 574
 - i-p-address 574
 - ip-address 574
 - job-attributes-supported 563
 - job-state-reasons-supported 563
 - job-states-supported 564
 - job-submission-timer 564
 - list-of-managers 564
 - locale 565
 - log-accounting-data 565
 - logical-destinations-ready 566
 - logical-destinations-supported 566
 - logical-printers-ready 566
 - logical-printers-supported 566
 - managers 564
 - maximum-barco-rips 566
 - maximum-non-raster-rips 567
 - maximum-raster-rips 567
 - message 568
 - modify-individual-document-supported 568
 - multiple-documents-supported 568
 - notification-delivery-methods-supported 568
 - notification-profile 569
 - npm-server-ip-address 570
 - npm-server-port-number 570
 - object-class 571
 - object-classes-supported 571
 - physical-printers-ready 559
 - physical-printers-supported 559
- servers, attributes of (*continued*)
 - printer-states-supported 560
 - problem-child 572
 - protected-attributes 572
 - queues-supported 572
 - save-rip-files 573
 - security-level 573
 - server-hostname 574
 - server-ip-address 574
 - server-name 574
 - server-state 575
 - snmp-aix-printer-models 575
 - snmp-normal-poll-interval 575
 - snmp-problem-poll-interval 576
 - transfer-methods-supported 576
- servers, configuring 144
- servers, restarting 157
- setting the attribute values of an object 86
- setting up a minimum configuration 151
- setup utility
 - description 160
 - examples 161
 - flags 160
- shared-formdef attribute
 - default document 456
 - document 456
- shift-out-shift-in attribute
 - default document 457
 - document 457
- shutting down a server 168
 - syntax
 - db2afp 184
- shutting down destinations 91
- shutting down servers 91
- sides attribute
 - actual destination 391
 - default document 457
 - document 457
- sides-supported attribute 391, 392
- single quotation marks in commands xxxix
- snmp-active attribute
 - actual destination 392
- snmp-aix-printer-models attribute
 - server 575
- snmp-community-name attribute
 - actual destination 392
- snmp-normal-poll-interval attribute
 - server 575
- snmp-problem-poll-interval attribute
 - server 576
- snmp-retry-count attribute
 - actual destination 393
- snmp-timeout attribute
 - actual destination 393
- special characters in commands xxxviii

- spoolers, attributes of
 - See servers, attributes of
- start-message attribute
 - default job 486
 - job 486
- start-message-supported attribute
 - actual destination 394
 - logical destination 533
- start-on-new-sheet attribute
 - default document 458
 - document 458
- start-sheets-supported
 - actual destination 394
- start_server utility
 - arguments 165
 - description 164
 - examples 165
 - flags 164
 - syntax 164
- started-printing-time attribute
 - job 501
- starting a server 164, 166
- starting InfoPrint SMIT production print operations
 - interface 163
- starting the InfoPrint Installer 160
- starting the InfoPrint operator's GUI 138
- startppo utility
 - description 163
 - examples 163
 - flags 163
 - syntax 163
- startsrv utility
 - arguments 167
 - description 166
 - examples 167
 - flags 166
 - syntax 166
- state of the server 575
- state-reasons attribute
 - job 487
- stop_server utility
 - arguments 168
 - description 168
 - examples 168
 - flags 168
 - syntax 168
- subject-text attribute
 - default document 459
 - document 459
- submission-time attribute
 - job 501
- submitting jobs 56
- supervisors, attributes of
 - See servers, attributes of
- syntax
 - of commands
 - lprafp 12

- syntax (*continued*)
 - of commands (*continued*)
 - mkfntmap 14
 - pdclean 15
 - pdcreate 18
 - pddelete 23
 - pddisable 27
 - pdenable 31
 - pdls 34
 - pdmod 44
 - pdpause 49
 - pdpr 56
 - pdpromote 66
 - pdq 68, 73
 - pdresubmit 75
 - pdresume 79
 - pdrm 83
 - pdset 86
 - pdshutdown 91
 - pdspace 96
 - of transforms
 - d2afp 188
 - db2afp 184
 - gif2afp 191
 - jpeg2afp 206
 - line2afp 220
 - pcl2afp 243
 - pdf2afp 266
 - ps2afp 266
 - sap2afp 280
 - tiff2afp 292
 - of utilities
 - admingui 124
 - afpsplit 125
 - ainupod1 127
 - ainupod2 128
 - ainupod3 129
 - ainurpt1 130
 - ainurpt2 131
 - ainurpt3 132
 - ainurpt4 133
 - ainurpt5 134
 - ainurpt6 135
 - cfu 136
 - ipguiadv 138
 - ipguibasic 138
 - ipguidist 138
 - jsmigr 139
 - mvsprsd 174
 - operngui 141
 - pcl2afpd 177
 - pdadmin 142
 - pdcrds 143
 - pdcrdflt 144
 - pdcrmed 146
 - pdinitports 147
 - pdmigpp 149

- syntax (*continued*)
 - of utilities (*continued*)
 - pdmincfg 151
 - pdmsg 153
 - pdnetifspri 155
 - ps2afpd 180
 - rc.pd 157
 - sense 158
 - setup 160
 - start_server 164
 - startppo 163
 - startsrv 166
 - stop_server 168
 - t2file 172
 - tdump 169
 - tlist 171
- syntax for attribute values
 - complex 4
 - notification-profile, complex 4
 - overview 3
- system resource directories, paths 236

T

- t2file utility
 - description 172
 - examples 172
 - flags 172
 - syntax 172
- table reference characters 237
- table-reference-characters attribute
 - default document 459
 - document 459
- table-reference-characters-supported attribute
 - actual destination 395
 - logical destination 533
- tape-exit
 - job 501
- tape-format
 - job 502
- tape-labeled
 - job 502
- tape-max-block-size
 - job 502
- tape-rewind-before
 - job 503
- tape-rewind-unload
 - job 503
- TCP/IP
 - port number 272
- tdump utility
 - description 169
 - examples 169
 - flags 169
 - syntax 169

- ticket-content attribute
 - job 474
- tiff2afp transform
 - configuration file 297
 - description 292
 - options 298, 299
 - syntax 292
- time outs
 - server 273
- timeout-period attribute
 - actual destination 380
- title-text attribute
 - default document 459
 - document 459
- tlist utility
 - description 171
 - examples 171
 - flags 171
 - syntax 171
- total-job-octets attribute
 - job 504
- transfer-method attribute
 - document 460
- transfer-methods-supported attribute
 - server 576
- transform-message-file-name attribute
 - default document 460
 - document 460
- transform-output-file-name attribute
 - document 460
- transform-output-location attribute
 - actual destination 395
- transforms
 - See also* commands, utilities
 - d2afp 188
 - db2afp 184
 - gif2afp 191
 - jpeg2afp 206
 - line2afp 220
 - pcl2afp 243
 - pdf2afp 266
 - ps2afp 266
 - sap2afp 280
 - tiff2afp 292
- Transmission Control Protocol/Internet Protocol
 - port number 272
- tray-identification component
 - input-trays-medium attribute, actual destination 347
- tray-number component
 - psf-tray-characteristics attribute, actual destination 383
- trc option 237
- type attribute
 - default document 423
 - document 423

types of servers

U

underlines in commands xxxviii

upper-limit component

 job-size-range-ready attribute

 actual destination 352

 job-size-range-supported attribute

 actual destination 353

 logical destination 524

 x-image-shift-range-supported attribute

 actual destination 397

 logical destination 536

 y-image-shift-range-supported attribute

 actual destination 398

 logical destination 537

use-snmpp attribute

 actual destination 396

user exits

 input 230

 output 231

 resource 236

user-exit programs

 for ACIF 241

user-id-text attribute

 default document 461

 document 461

user-locale attribute

 job 504

user-name attribute

 job 504

userlib option 238

utilities

See also commands, transforms

 admingui 124

 afpsplit 125

 ainupod1 127

 ainupod2 128

 ainupod3 129

 ainurpt1 130

 ainurpt2 131

 ainurpt3 132

 ainurpt4 133

 ainurpt5 134

 ainurpt6 135

 cfu 136

 ipguiadv 138

 ipguibasic 138

 ipguidist 138

 jsmigr 139

 mkfntmap 14

 mvsprsd 174

 opergui 141

 pcl2afpd 177

 pdadmin 142

utilities (*continued*)

 pdcrcds 143

 pdcrcflt 144

 pdcrrmed 146

 pdinitports 147

 pdmigpp 149

 pdmincfg 151

 pdmsg 153

 pdnetifspri 155

 ps2afpd 180

 rc.pd 157

 sense 158

 setup 160

 start_server 164

 startppo 163

 startsrv 166

 stop_server 168

 t2file 172

 tdump 169

 tlist 171

V

validation of jobs, attributes used for 623

vertical bars in commands xxxviii

W

warning-message attribute

 actual destination 396

width

 PDF image 274

 PostScript image 274

width keyword

 pdf2afp transform 274

 ps2afp transform 274

wildcards (global characters) 8

windows-driver-names attribute

 logical destination 534

windows-drivers attribute

 logical destination 534

windows-nt-driver-names attribute

 logical destination 534

windows-nt-drivers attribute

 logical destination 534

X

X offset keyword on ps2afp or pdf2afp transform 274

x-dimension component

 medium-dimensions attribute, medium 540

x-image-shift attribute

 default document 461

 document 461

x-image-shift-back attribute

 default document 462

- x-image-shift-back attribute (*continued*)
 - document 462
- x-image-shift-range-supported attribute
 - actual destination 397
 - logical destination 535
- xxxxyyyy.tab file 289

Y

- Y offset keyword on ps2afp or pdf2afp transform 275
- y-dimension component
 - medium-dimensions attribute, medium 540
- y-image-shift attribute
 - default document 462
 - document 462
- y-image-shift-back attribute
 - default document 463
 - document 463
- y-image-shift-range-supported attribute
 - actual destination 397
 - logical destination 536

Readers' Comments — We'd Like to Hear from You

**IBM InfoPrint Manager for AIX
Reference
Version 3 Release 1
Publication No. S544-5475-00**

Use this form to provide comments about this publication, its organization, or subject matter. Understand that IBM may use the information any way it believes appropriate, without incurring any obligation to you. Your comments will be sent to the author's department for the appropriate action. Comments may be written in your language.

Note: IBM publications are not stocked at the location to which this form is addressed. Direct requests for publications or for assistance in using your IBM system, to your IBM representative or local IBM branch office.

	Yes	No
• Does the publication meet your needs?	_____	_____
• Did you find the information:		
Accurate?	_____	_____
Easy to read and understand?	_____	_____
Easy to retrieve?	_____	_____
Organized for convenient use?	_____	_____
Legible?	_____	_____
Complete?	_____	_____
Well illustrated?	_____	_____
Written for your technical level?	_____	_____
• Do you use this publication:		
As an introduction to the subject?	_____	_____
As a reference manual?	_____	_____
As an instructor in class?	_____	_____
As a student in class?	_____	_____
• What is your occupation?	_____	_____

Thank you for your input and cooperation.

Note: You may either send your comments by fax to 1-800-524-1519, or mail your comments. If mailed in the U.S.A., no postage stamp is necessary. For residents outside the U.S.A., your local IBM office or representative will forward your comments.

Comments:

Name

Address

Company or Organization


Phone No.




Fold and Tape

Please do not staple

Fold and Tape

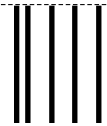

NO POSTAGE
NECESSARY
IF MAILED IN THE
UNITED STATES



BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

Information Development
The IBM Printing Systems Company
Department H7FE Building 003G
P O Box 1900
BOULDER CO 80301-9817



Fold and Tape

Please do not staple

Fold and Tape



Program Number: 5648-B34



Printed in the United States of America
on recycled paper containing 10%
recovered post-consumer fiber.

S544-5475-00

